


# AVENAR panel

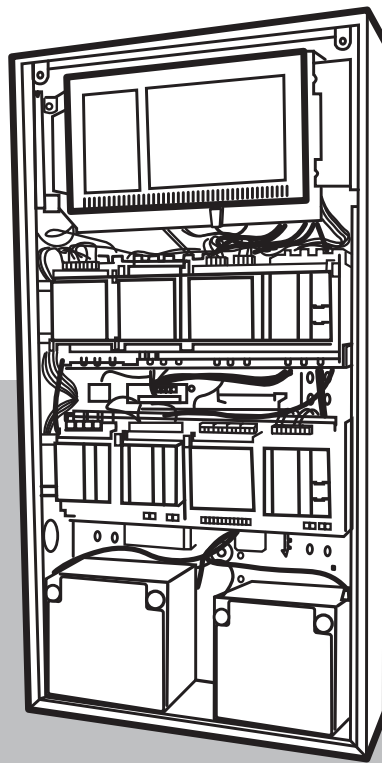



## Table of contents

<b>1</b>	<b>Notices</b>	<b>4</b>
1.1	Content	4
1.2	Product Information	5
1.3	Important Notes	5
1.4	User Notes	5
1.4.1	Chapter Symbols	7
1.4.2	Connection Symbols	7
1.4.3	Power Supply and Wiring	8
1.5	Resistance Values	8
<b>2</b>	<b>Wiring</b>	<b>10</b>
2.1	FPP-5000 Power supply	11
2.2	FPP-3000 Power supply (ZSP135-DR-5A-3/ZSP135-OUT6)	13
2.3	DIBT	15
2.4	Functional Modules	42
2.4.1	BCM-000-B	43
2.4.2	CZM 0004 A	45
2.4.3	ENO 0000 A/B	61
2.4.4	LSN 0300 A	68
2.4.5	NZM 0002 A	106
2.4.6	RMH 0002 A	119
2.4.7	IOS 0020 A	120
2.4.8	FPE-5000-UGM	122
2.5	Interface Modules	124
2.5.1	FLM-420-4/CON-D/S	125
2.5.2	FLM-420-I8R1-S	158
2.5.3	FLM-420-NAC-D/S	160
2.5.4	FLM-420-RHV	172
2.5.5	FLM-420-RLE-S	184
2.5.6	FLM-420-RLV1-E	185
2.5.7	FLM-420-RLV8-S	186
2.5.8	FMF-ADP-FBF/FMF-ADP-TTY	187
2.6	EOL	188
2.6.1	CZM 0004 A	189
2.6.2	LSN 0300 A	201
2.6.3	FLM-420/4-CON-S/D	246
	<b>Index</b>	<b>273</b>

---

# 1 Notices

## 1.1 Content

This Wiring Guide shows how the peripheral devices are connected to the fire panel in principle. National and local regulations are not taken into account. The application of national and local requirements may result in further connections.

**Notice!**

The connections laid out in this document also apply to AVENAR panel 2000, provided that the individual components are Bosch Sicherheitssysteme GmbH approved extensions of AVENAR panel 2000.

**Notice!**

The LSN 0300 A connections laid out in this document also apply to the LSN 1500 A module. Consider for the LSN 1500 A module, that for installations in Germany, where compliance to VdS 2540 is required, the AUX line and the LSN line have to be in separate cables.

---

## 1.2 Product Information

- You can find installation instructions for the individual components of the fire panel in the enclosed Installation Manual.
- More information (User manuals, Networking guide, System manual) is available on the Internet at: [www.boschsecurity.com](http://www.boschsecurity.com)

## 1.3 Important Notes

- Only use installation materials as recommended by Bosch Security Systems.
- Only perform conversion and soldering work wearing a grounding wrist strap.
- Assembly and installation must only be performed by qualified personnel.
- Note connection criteria of the regional authorities/institutions.



### **Danger!**

Touching live components can be fatal.  
Disconnect the power supply before carrying out installation.

### **Cable shield wire**

A cable shield wire is necessary for all two wire connections to CZM 0004 A and for connecting the following products:

- FBF 100 LSN
- FMF-ADP, FMF-FAT, FMF-FBF-FAT, FMF-FIBS-A4, FMF-FIBS-A3

The sample wiring following shows how to apply a cable shield wire.



### **Notice!**

If a cable shield wire for the LSN cable has to be connected, then proceed according to LSN specifications.

- Connect LSN cable shield on panel side to designated functional earth connector:
  - two connections at start and end of a loop
  - one connection at the start of a stub
- Loop through cable shield at all LSN peripheral devices using provided terminals
- No additional connection of LSN cable shield is permitted, neither to earth connectors at any location nor to other electrical potential

## 1.4 User Notes


The wiring guide is structured as follows:

- Chapter Wiring is sorted by the device to which a peripheral device is connected. A wiring shows the direct connection of one device to another device (no cascading connections).
- Find a collection of all wirings which are enriched with additional EOL modules for creeping open monitoring in the section EOL.

To find the required wiring also use:


 

 





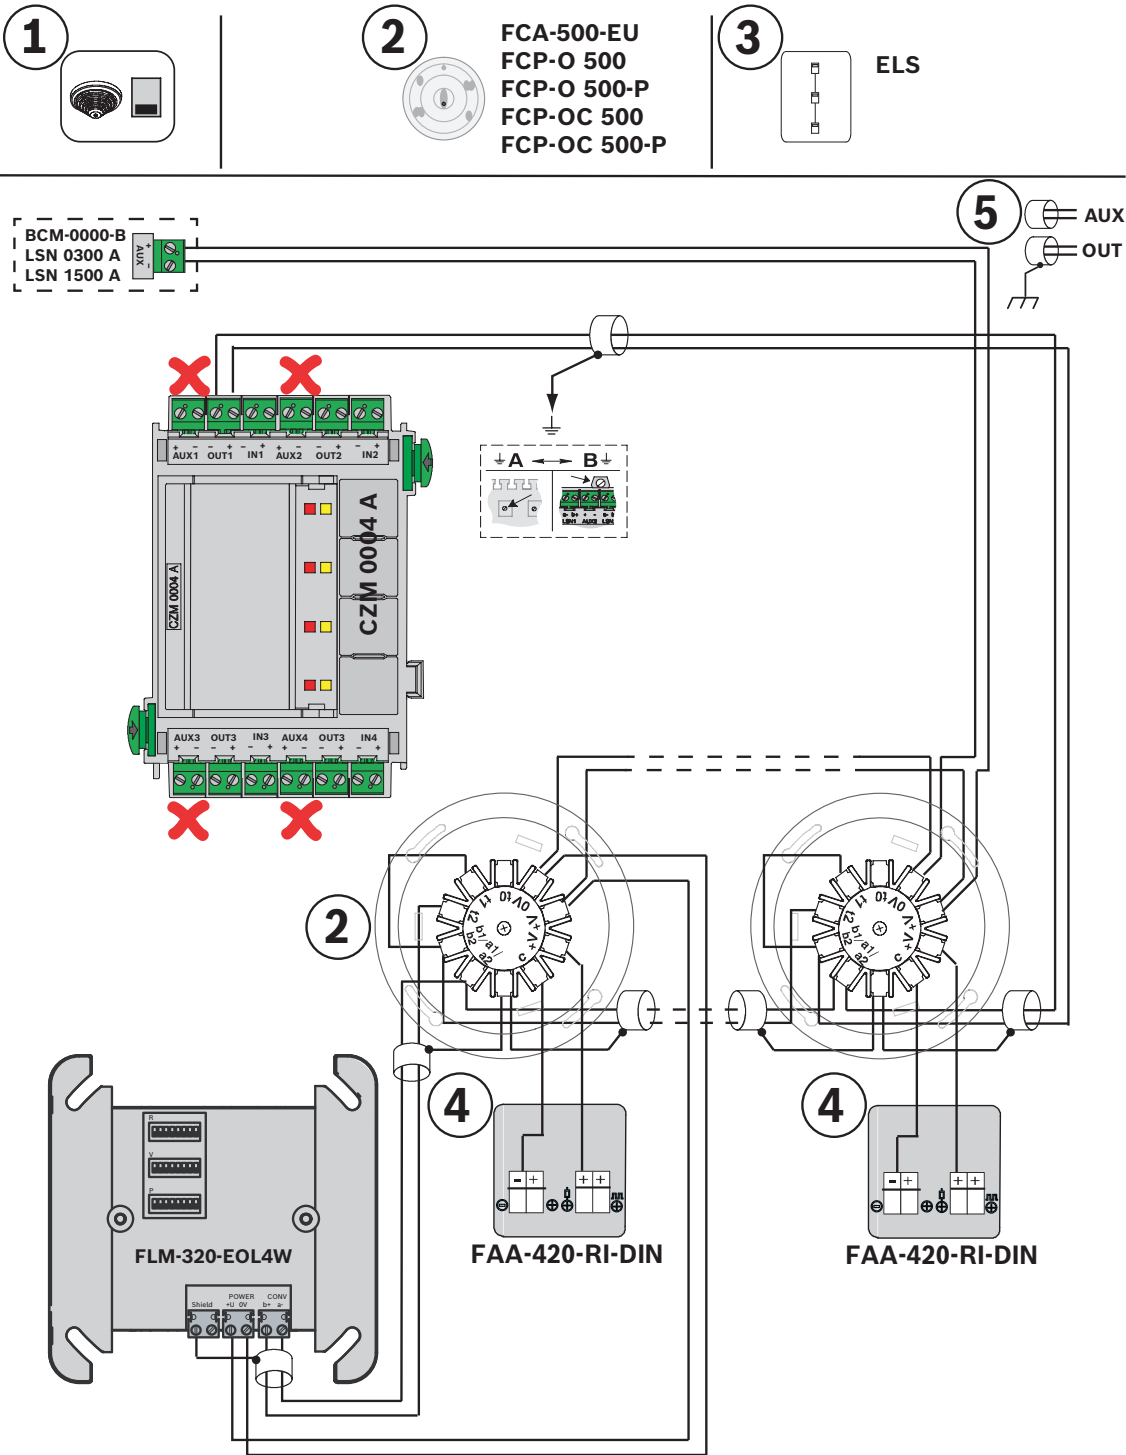


- the table of contents at the beginning of the chapter Wiring and at the beginning of the sections Functional Modules, Interface Modules, and EOL.
- the Index (language neutral),
- and the full-text search.

 See the following sample wiring:


 



 
 

 
 









1	Chapter symbols ( <i>Chapter Symbols, page 7</i> )
2	Connectable peripheral device
3	Connection symbols ( <i>Connection Symbols, page 7</i> )
4	Optional components
5	Power Supply and Wiring ( <i>Power Supply and Wiring, page 8</i> )

### 1.4.1 Chapter Symbols






	Automatic detectors		Operating and display panels		Printer
	Power supply		Functional modules		Fire service equipment
	Interface modules		Extinguishing systems		Manual call points
	Signaling devices		Door controls		Transmission units

### 1.4.2 Connection Symbols

	Mandatory wiring		Optional wiring		Not allowed
	Redundancy		Loop wiring		Loop wiring with redundant element
	Stub wiring		Redundant stub wiring		Stub wiring with redundant element
	Redundant stub wiring with redundant element	ELS	This wiring is compliant with VdS 2489 / VdS 2540 / VdS 2541 / VdS 2543. ELS stands for Extended Line Supervision, which means creeping short circuit and creeping open monitoring. This wiring offers ELS. A creeping short circuit is detected by the following modules: LSN 0300 A, LSN 1500 A, and BCM-0000-B when using FPP-5000-TI13.		This loop wiring is compliant with VdS 2489 / VdS 2540 / VdS 2541 / VdS 2543. It offers ELS. Additional EOL modules are not necessary.
	Synchronization		Areas with danger of explosion		Panel
	Standalone panel		Standalone panel with redundancy		For detector bases: The wiring is valid solely for the detector base in which the detector is installed.

EN 54-2, DIBT etc.	If compliance with this standard is required, then use the specified wiring.				
--------------------	--	--	--	--	--

### 1.4.3 Power Supply and Wiring

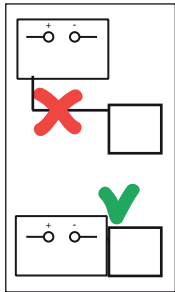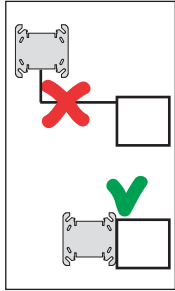	Cable, 2-wire is required.
	Shielded cable, 2-wire is required.
	The housing of the product containing the power supply must be mounted flush with the element.
	Flush mounting is required for the interface module.
 <b>Reset action</b>	See the wiring in this manual. To provide automatically resetting of the device you have to implement the reset action.

### 1.5 Resistance Values

The following table provides an overview of resistor color coding. The metal film resistors delivered with the product have 5 color bands, which indicate the resistance value.

Color	1. band	2. band	3. band	4. band (multiplier)	5. band (tolerance)
Silver				$10^{-2}$	$\pm 10\%$
Gold				$10^{-1}$	$\pm 5\%$
Black		0	0	$10^0$	
Brown	1	1	1	$10^1$	$\pm 1\%$
Red	2	2	2	$10^2$	$\pm 2\%$
Orange	3	3	3	$10^3$	$\pm 0.05\%$
Yellow	4	4	4	$10^4$	$\pm 0.02\%$
Green	5	5	5	$10^5$	$\pm 0.5\%$



<b>Color</b>	<b>1. band</b>	<b>2. band</b>	<b>3. band</b>	<b>4. band (multiplier)</b>	<b>5. band (tolerance)</b>
Blue	6	6	6	$10^6$	$\pm 0.25\%$
Violet	7	7	7	$10^7$	$\pm 0.1\%$
Gray	8	8	8	$10^8$	$\pm 0.01\%$
White	9	9	9	$10^9$	

In accordance with DIN EN 60062:2017

*Orange — white — black — brown — brown*: 3.9 k Ohm resistor with 1% tolerance,

*Red — red — black — brown — brown*: 2.2 k Ohm resistor with 1% tolerance.

## 2 Wiring



*FPP-5000 Power supply, page 11*

*FPP-3000 Power supply (ZSP135-DR-5A-3/ZSP135-OUT6), page 13*

*DIBT, page 15*

*Functional Modules, page 42*

*BCM-000-B, page 43*

*CZM 0004 A, page 45*

*ENO 0000 A/B, page 61*

*LSN 0300 A, page 68*

*NZM 0002 A, page 106*

*RMH 0002 A, page 119*

*IOS 0020 A, page 120*

*FPE-5000-UGM, page 122*

*Interface Modules, page 124*

*FLM-420-4/CON-D/S, page 125*

*FLM-420-I8R1-S, page 158*

*FLM-420-NAC-D/S, page 160*

*FLM-420-RHV, page 172*

*FLM-420-RLE-S, page 184*

*FLM-420-RLV1-E, page 185*

*FLM-420-RLV8-S, page 186*

*FMF-ADP-FBF/FMF-ADP-TTY, page 187*

 
*EOL, page 188*

*CZM 0004 A, page 189*


*LSN 0300 A, page 201*


*FLM-420/4-CON-S/D, page 246*

## 2.1 FPP-5000 Power supply




FPP-5000-TI

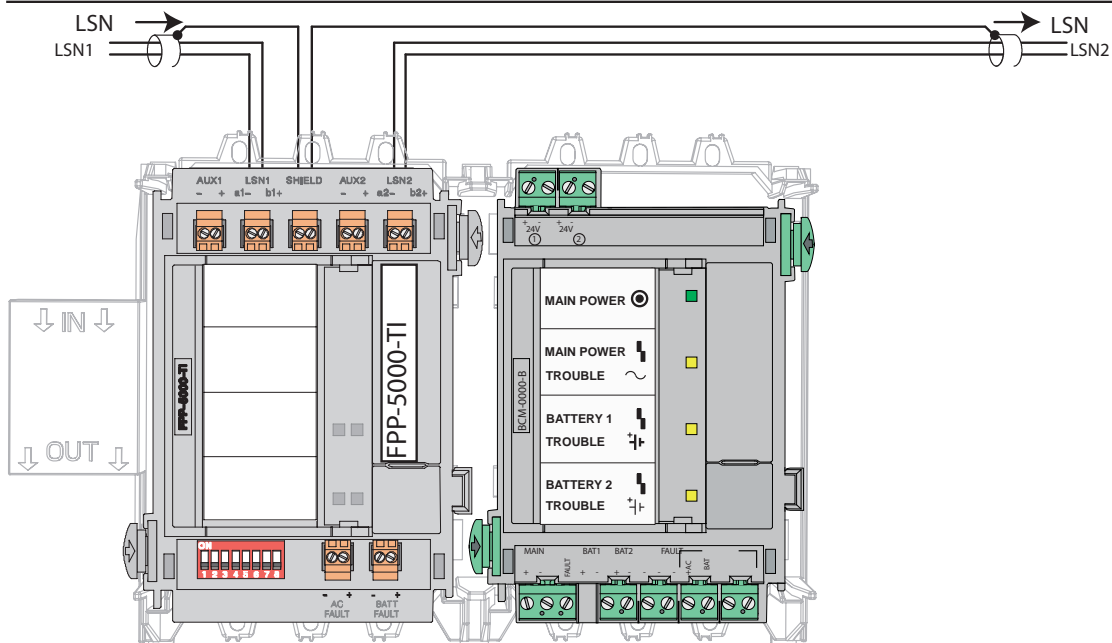


 


FPP-5000-TI13



ELS


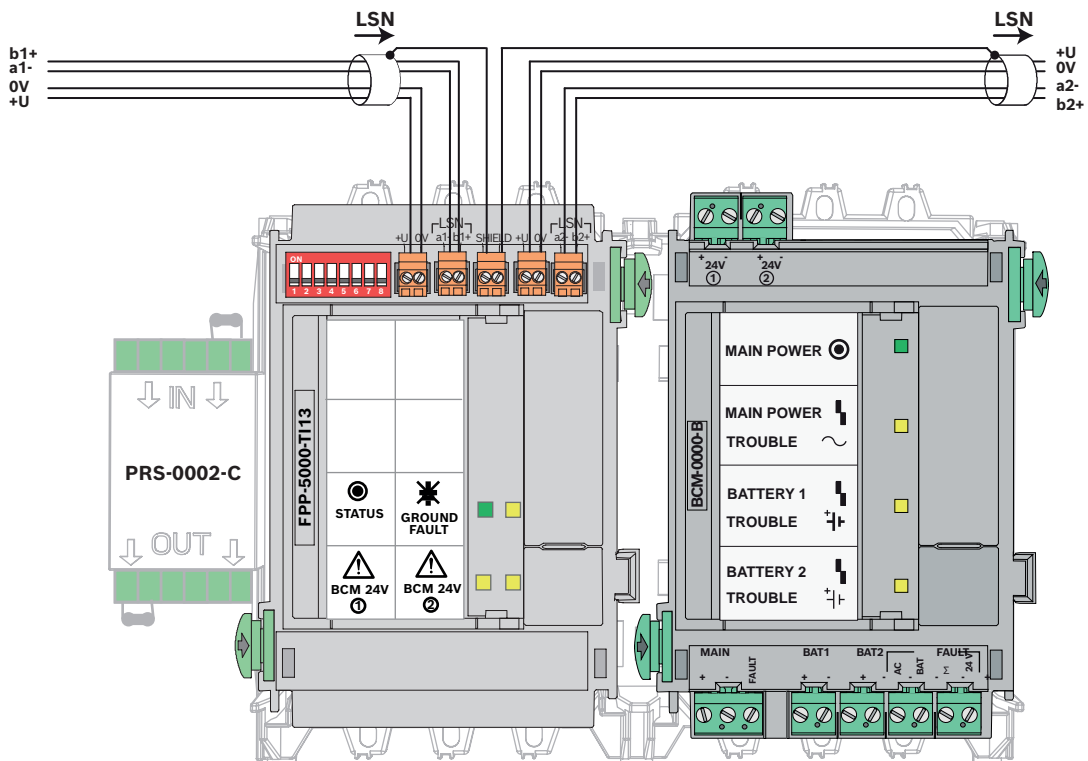


## 2.2 FPP-3000 Power supply (ZSP135-DR-5A-3/ZSP135-OUT6)

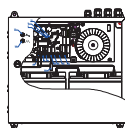 


ZSP135-DR-5A-3  
ZSP135-OUT6  
FPP-3000

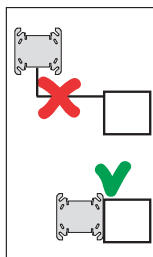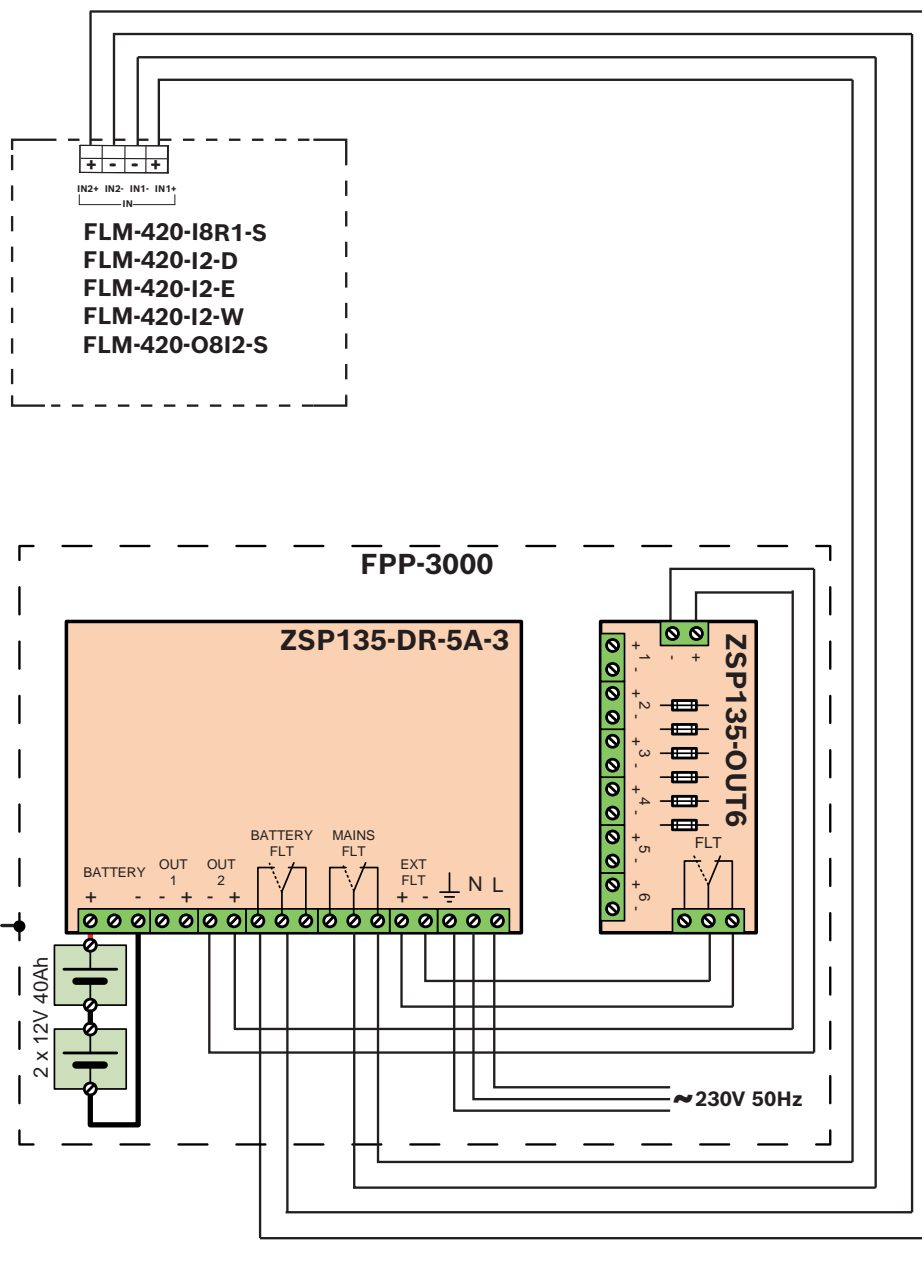


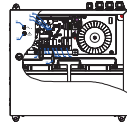 

ZSP135-DR-5A-3  
ZSP135-OUT6  
FPP-3000

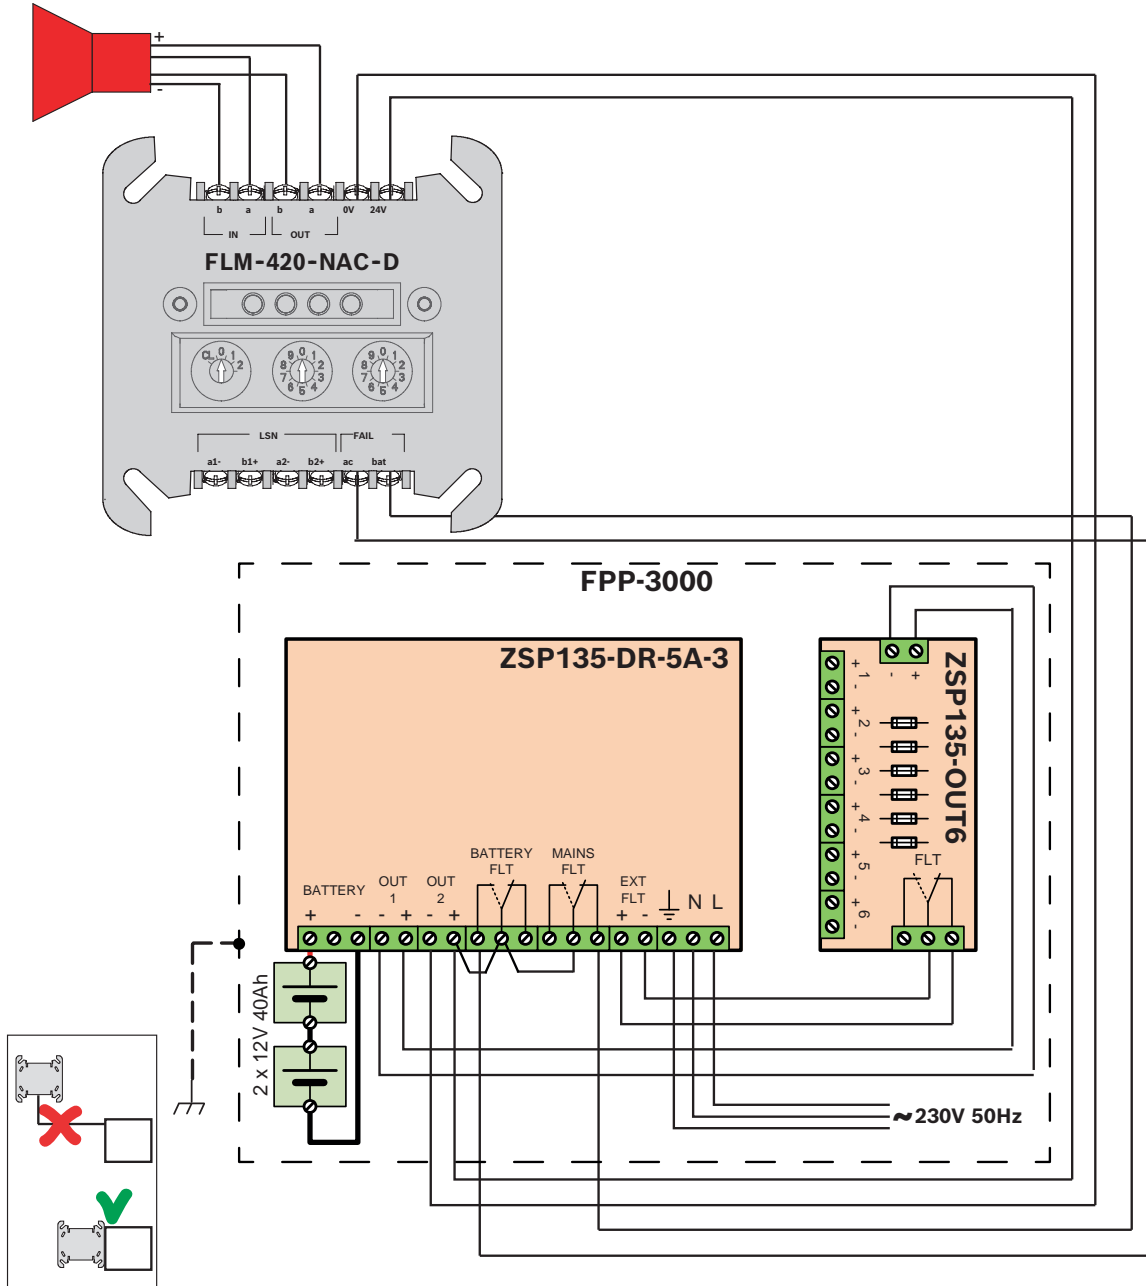



### 2.3 DIBT

 

**ED 100  
ED 250  
(+Upgrade Card B)**


**DIBT**

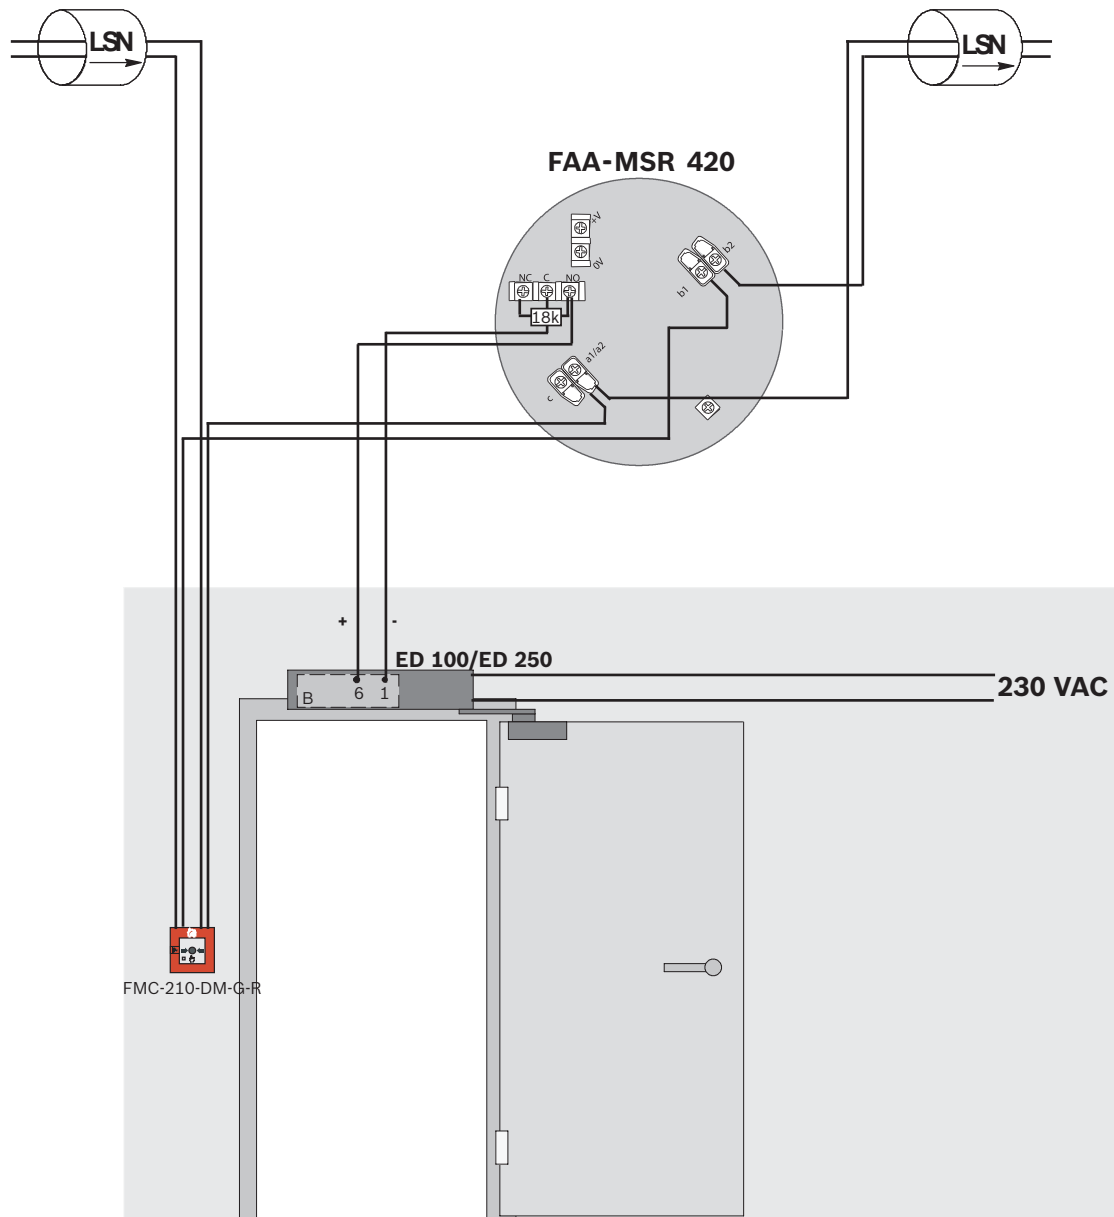

 


**ED 100  
ED 250  
(+Upgrade Card B)**

**DIBT**

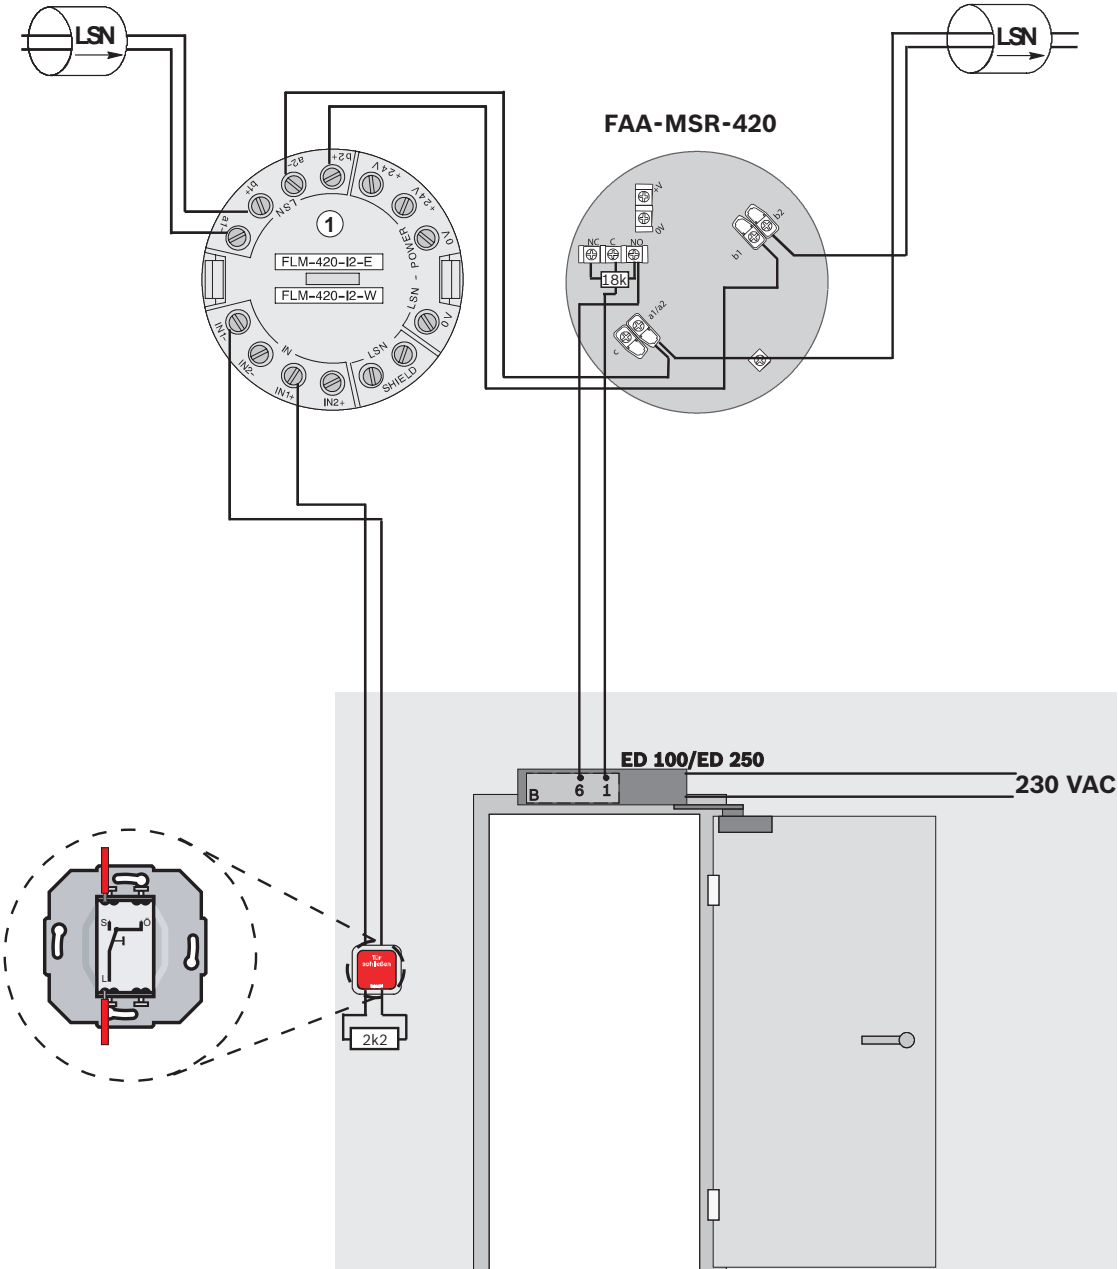





 

GT xx R  
8 xx

 DIBT

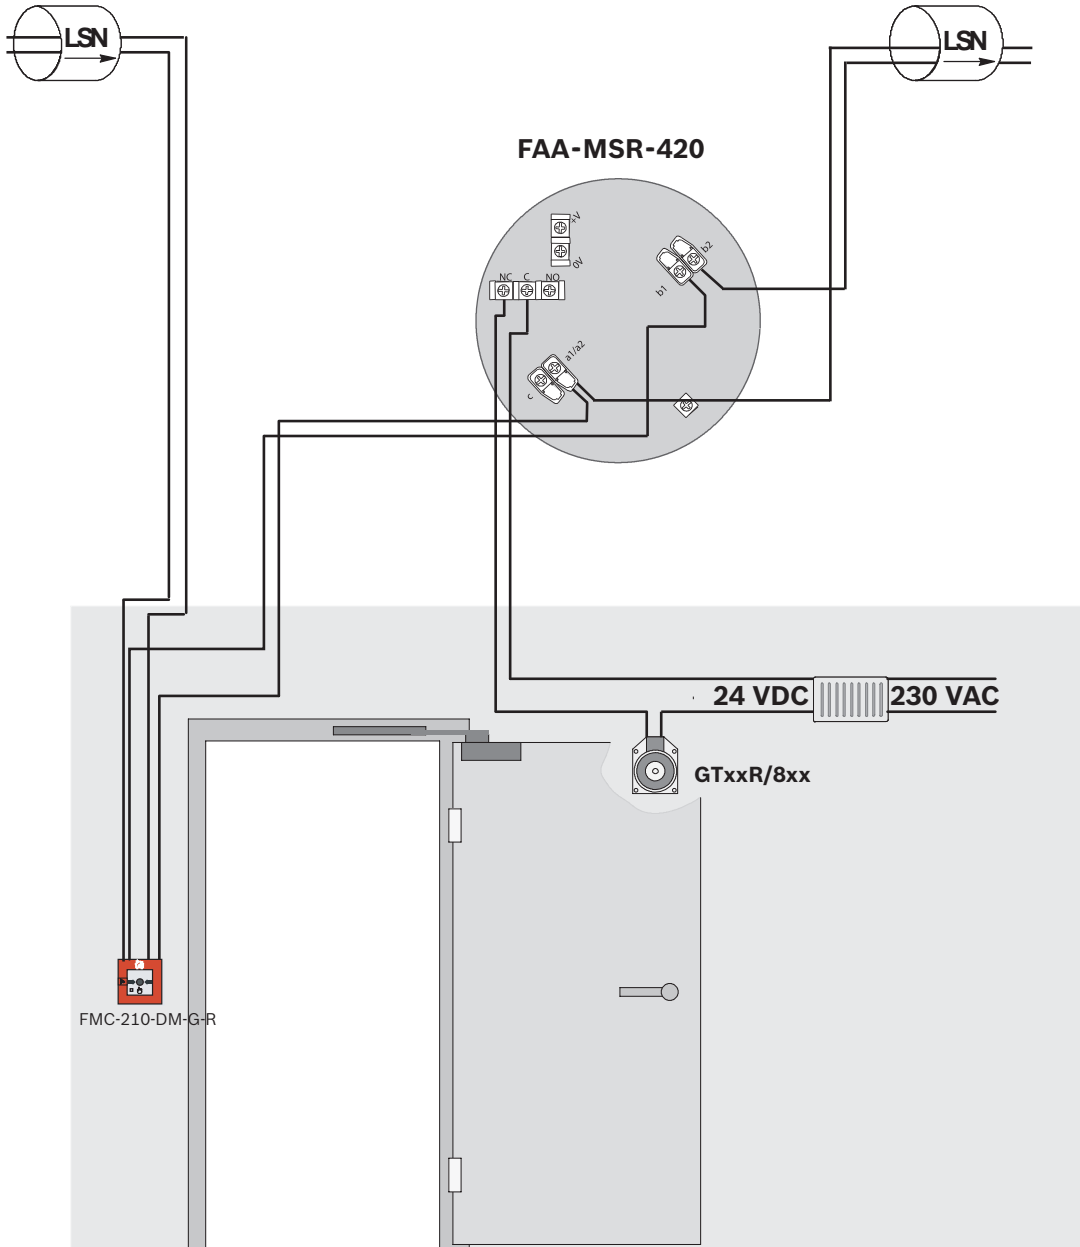





GT xx R

8 xx

 
DIBT

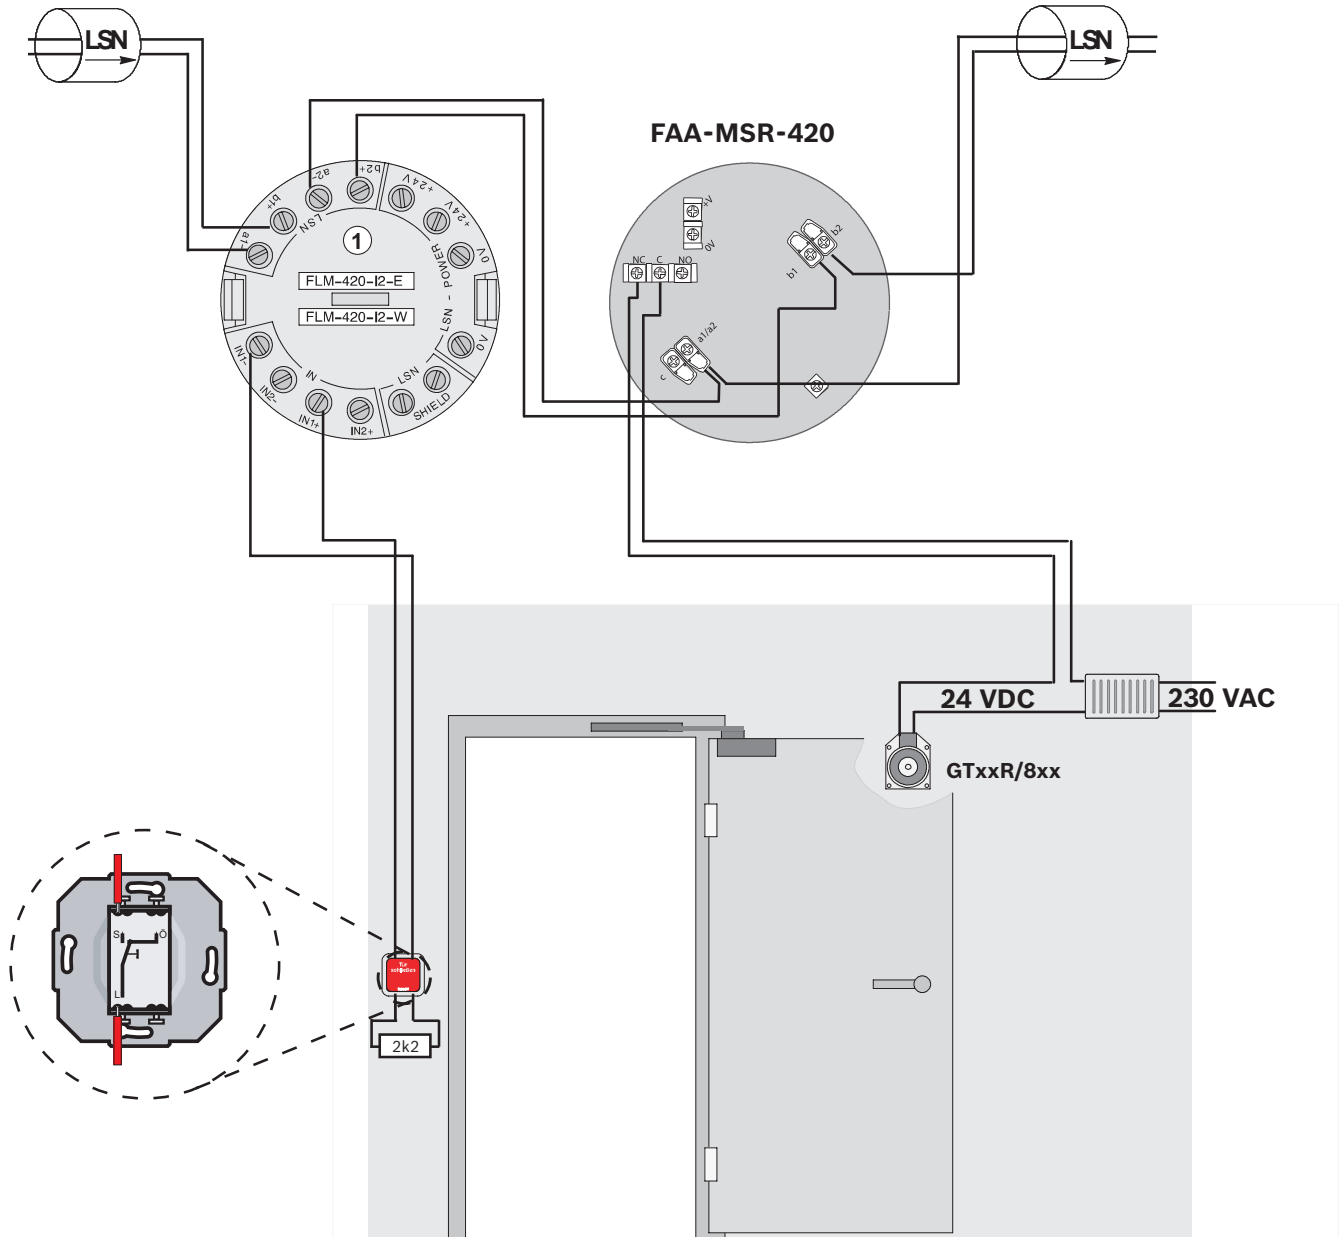




TS 73 EMF  
 TS 93 EMF  
 TS 93 GSR  
 BTS 80 EMB  
 BTS 80 FLB


**DIBT**

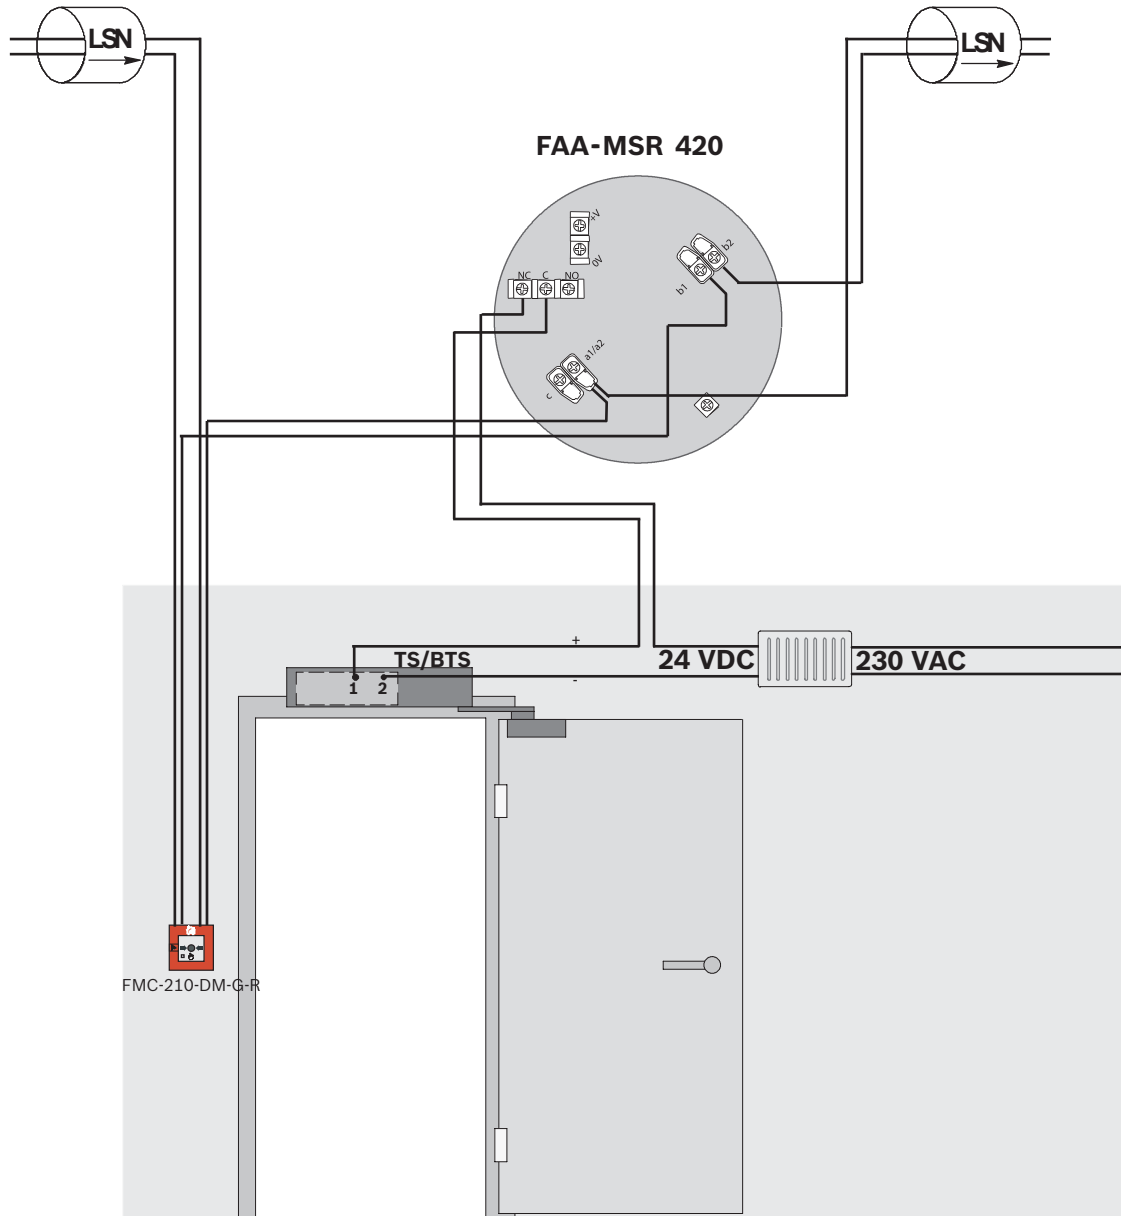


 

TS 73 EMF  
 TS 93 EMF  
 TS 93 GSR  
 BTS 80 EMB  
 BTS 80 FLB

 
DIBT

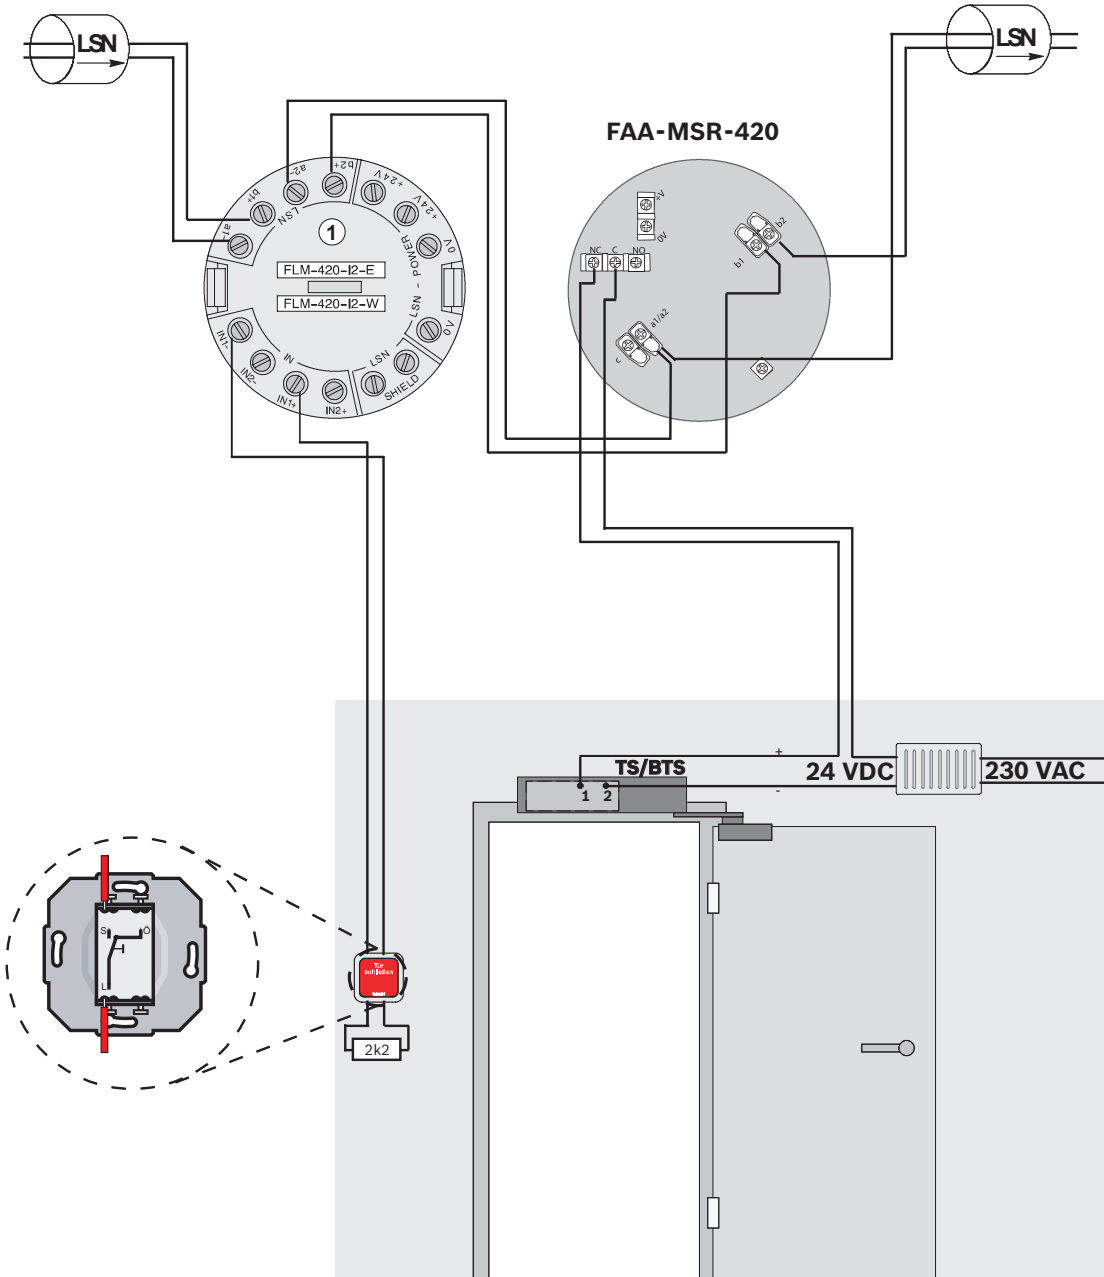




Slimdrive EMD-F/EMD F-IS

 
DIBT

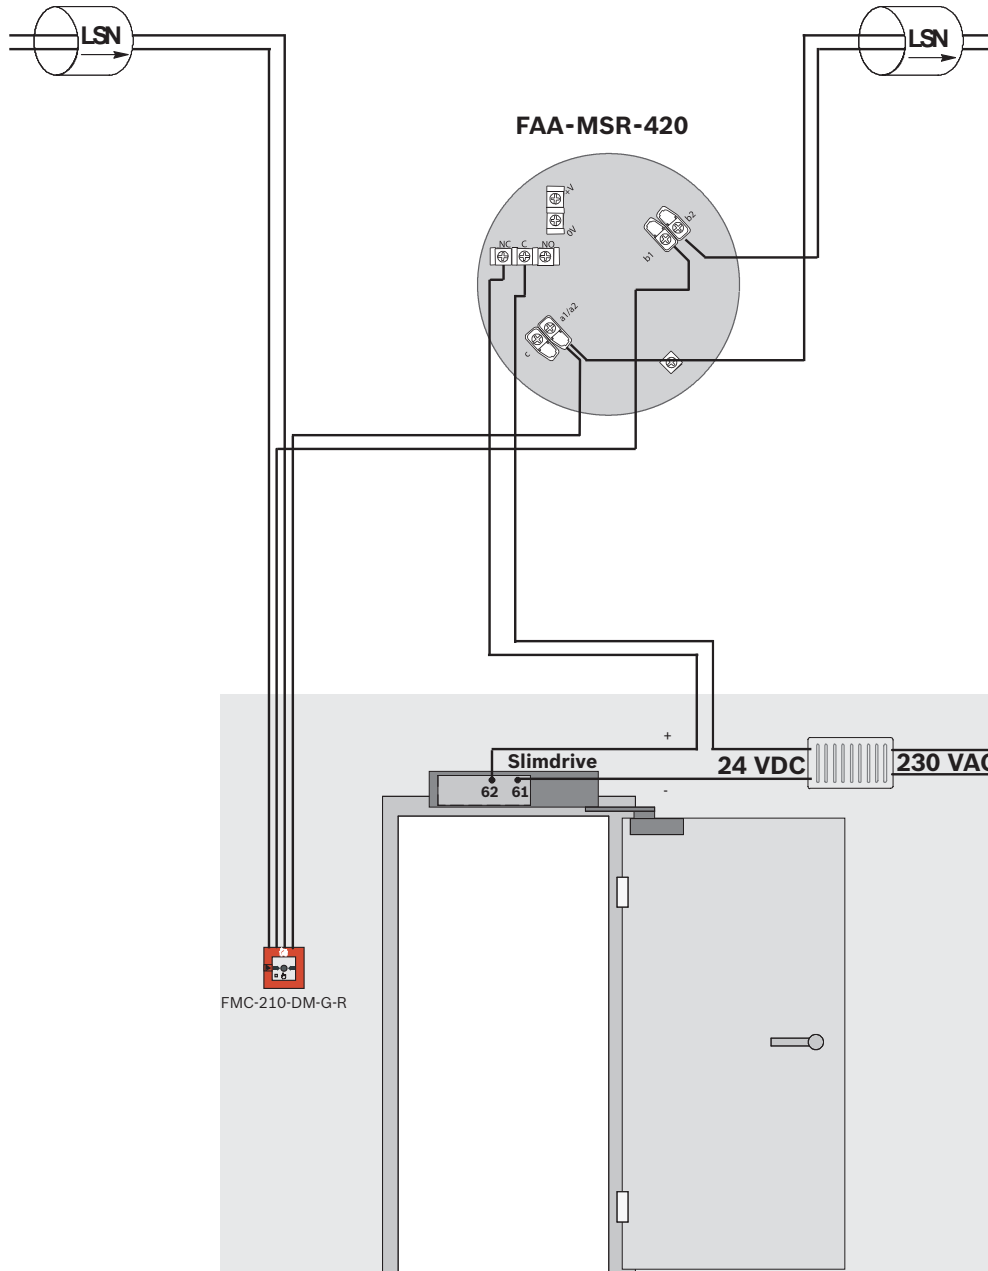



Slimdrive EMD-F/EMD F-IS


DIBT

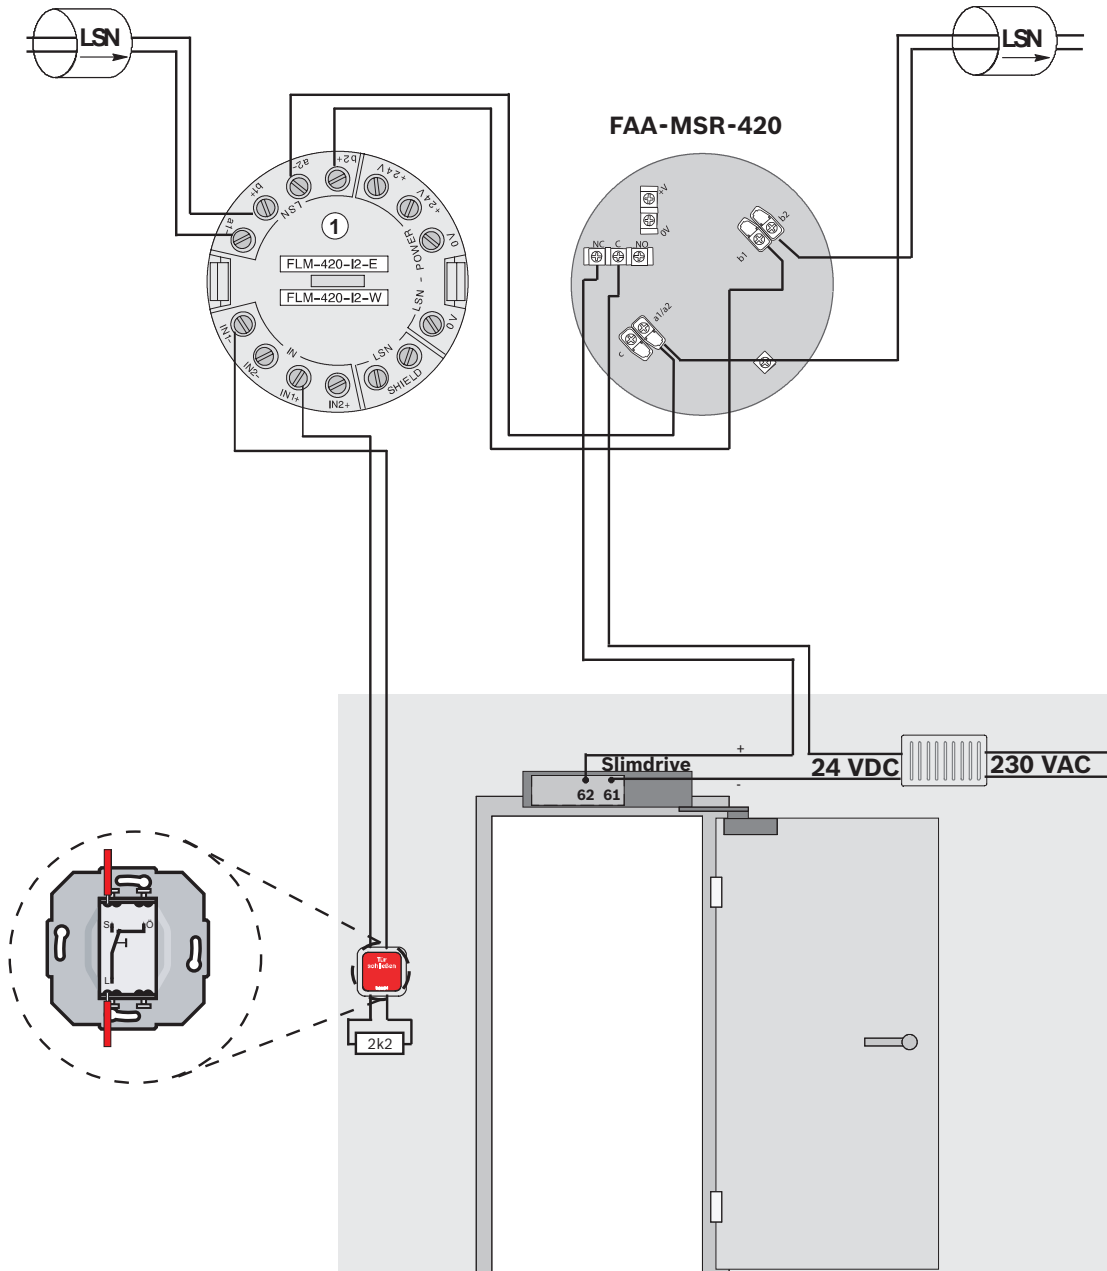




TS 4000 E/E-IS/EFS  
 TS 5000 E/E-IS/E-ISM  
 TS 550 E  
 TSA 160 NT F/F-IS/F-IS/TS

 
DIBT

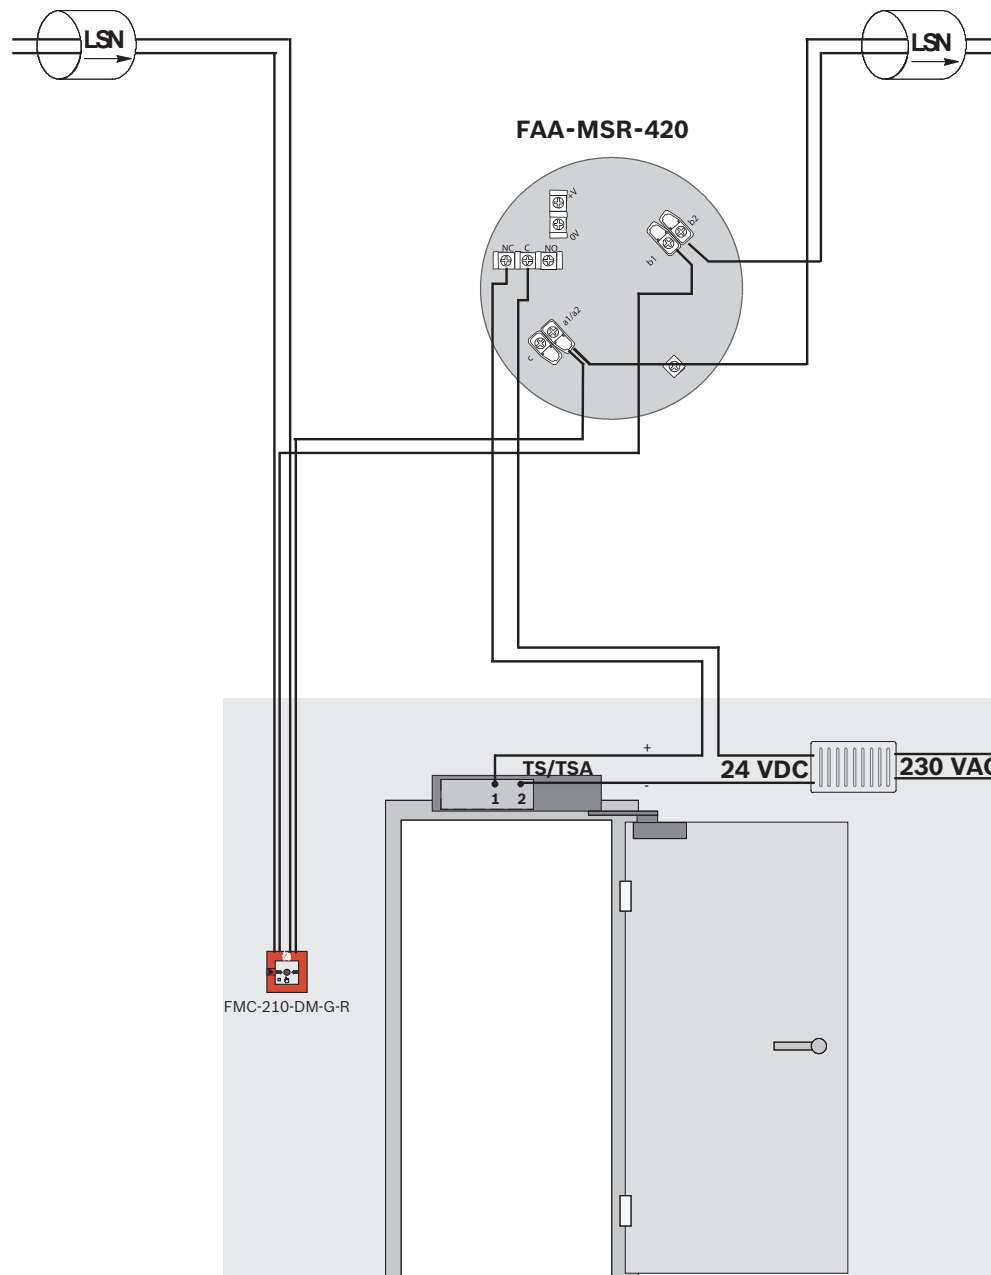




TS 4000 E/E-IS/EFS  
 TS 5000 E/E-IS/E-ISM  
 TS 550 E  
 TSA 160 NT F/F-IS/F-IS/TS

 DIBT

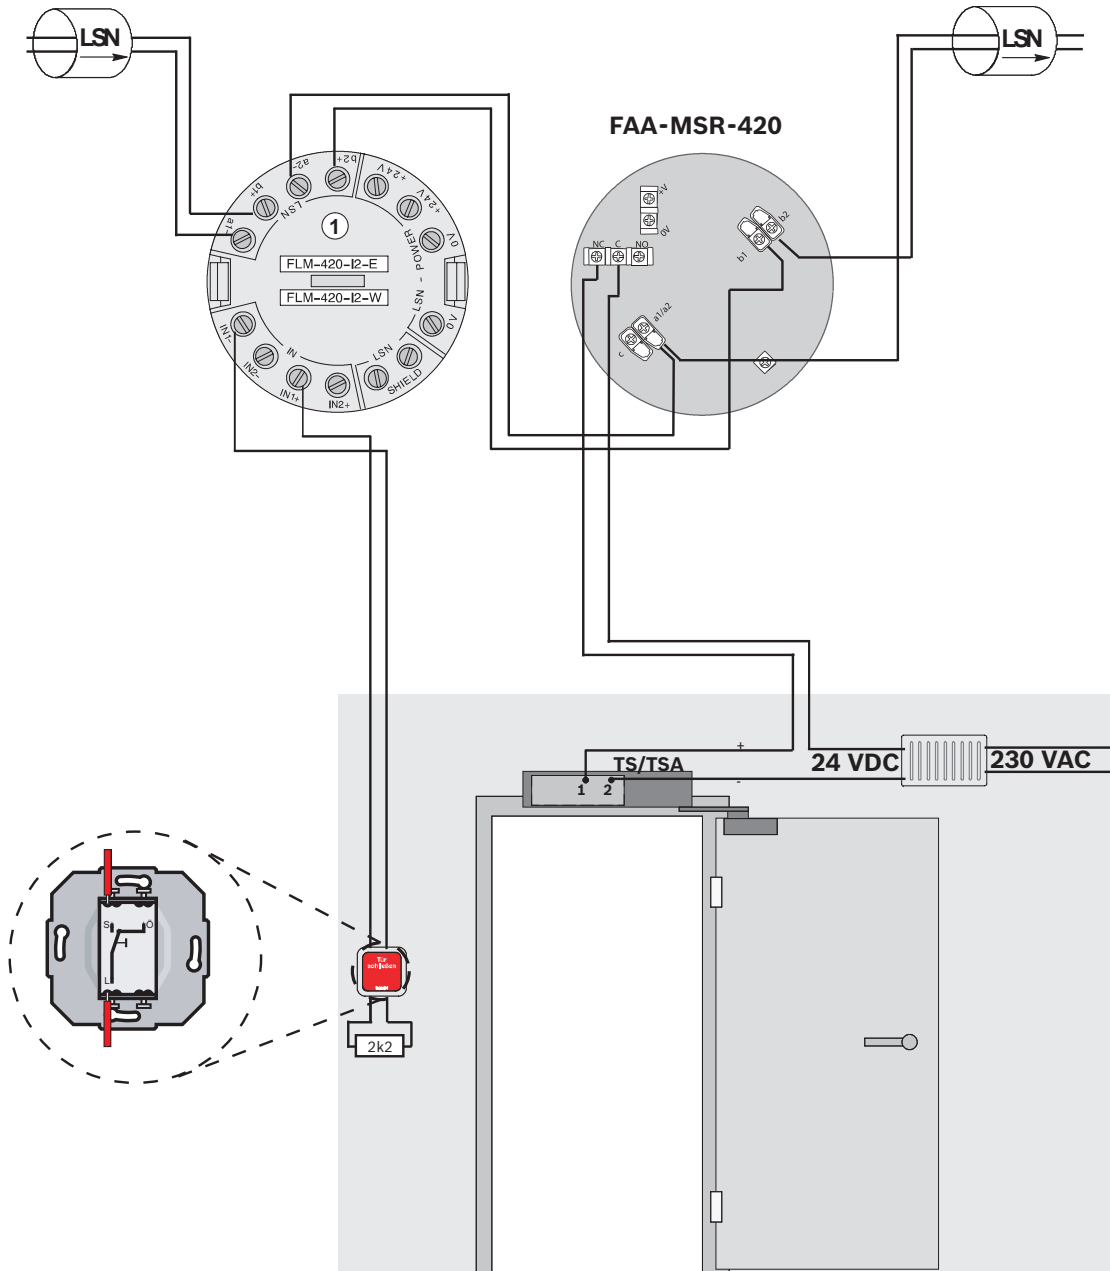







**ED 100  
ED 250  
(+Upgrade Card B**


**DIBT**

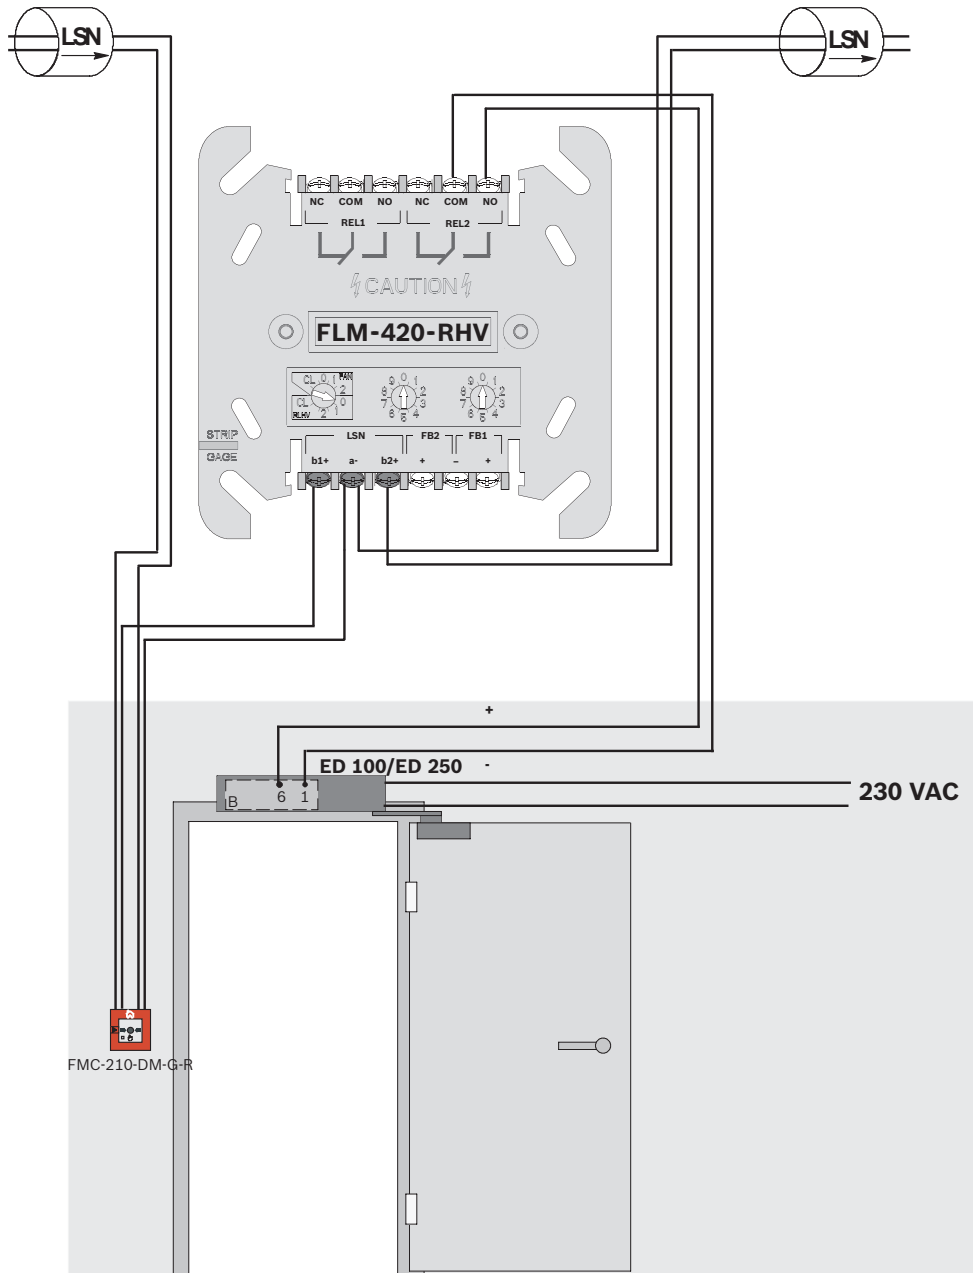


 

**ED 100  
ED 250  
(+Upgrade Card B)**

**DIBT**

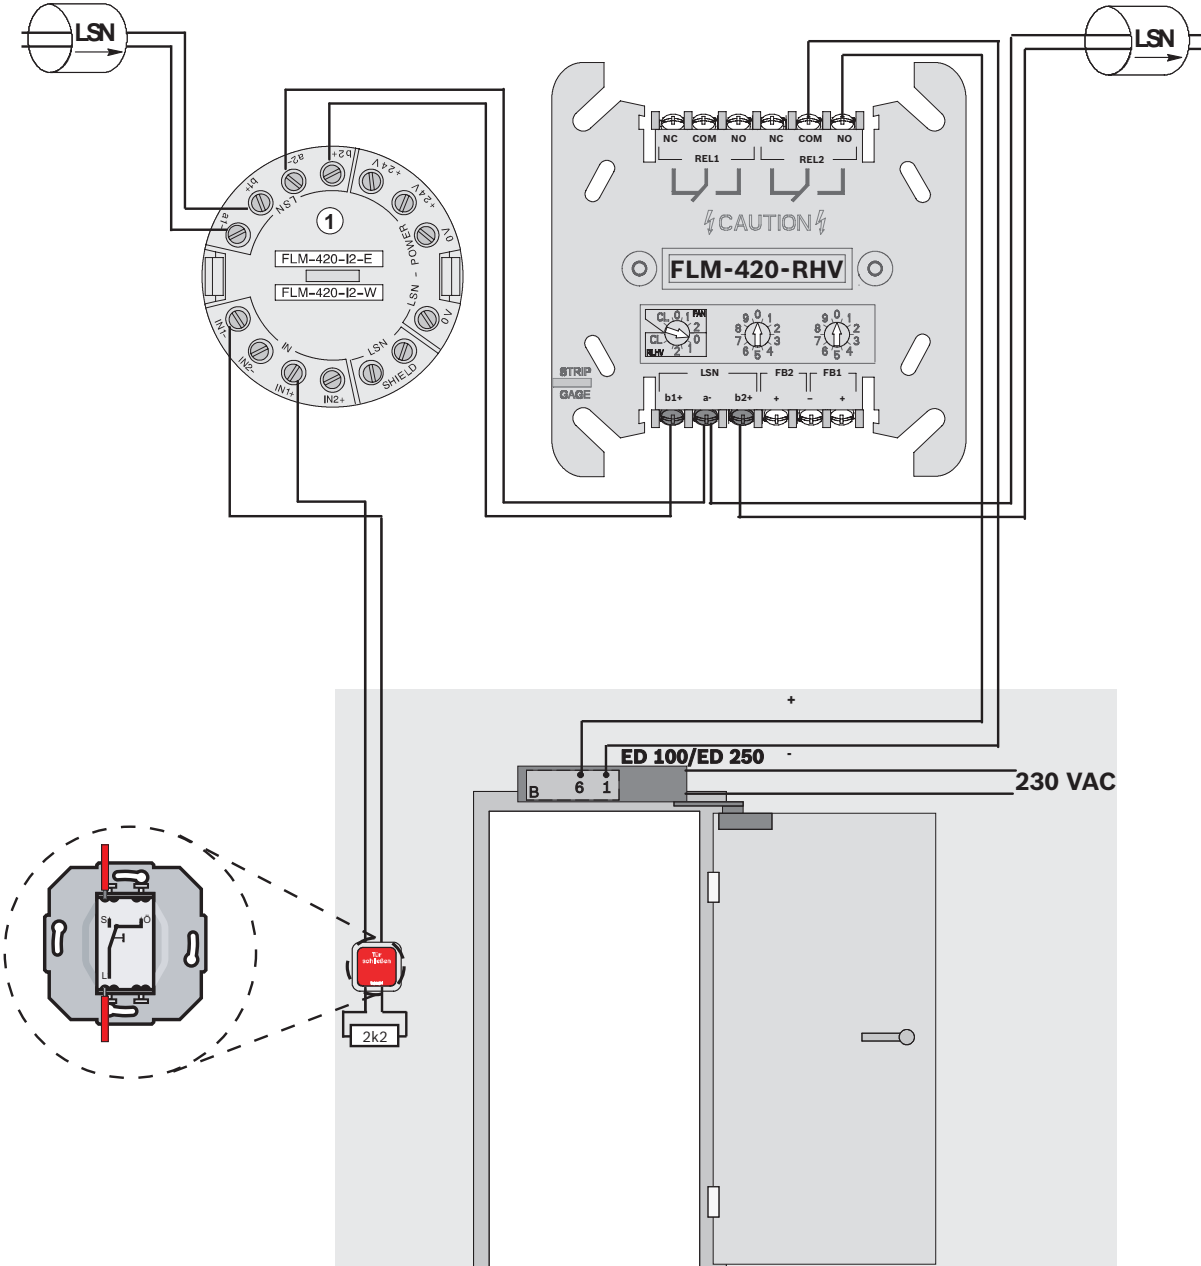


 


GT xx R

8 xx

 DIBT

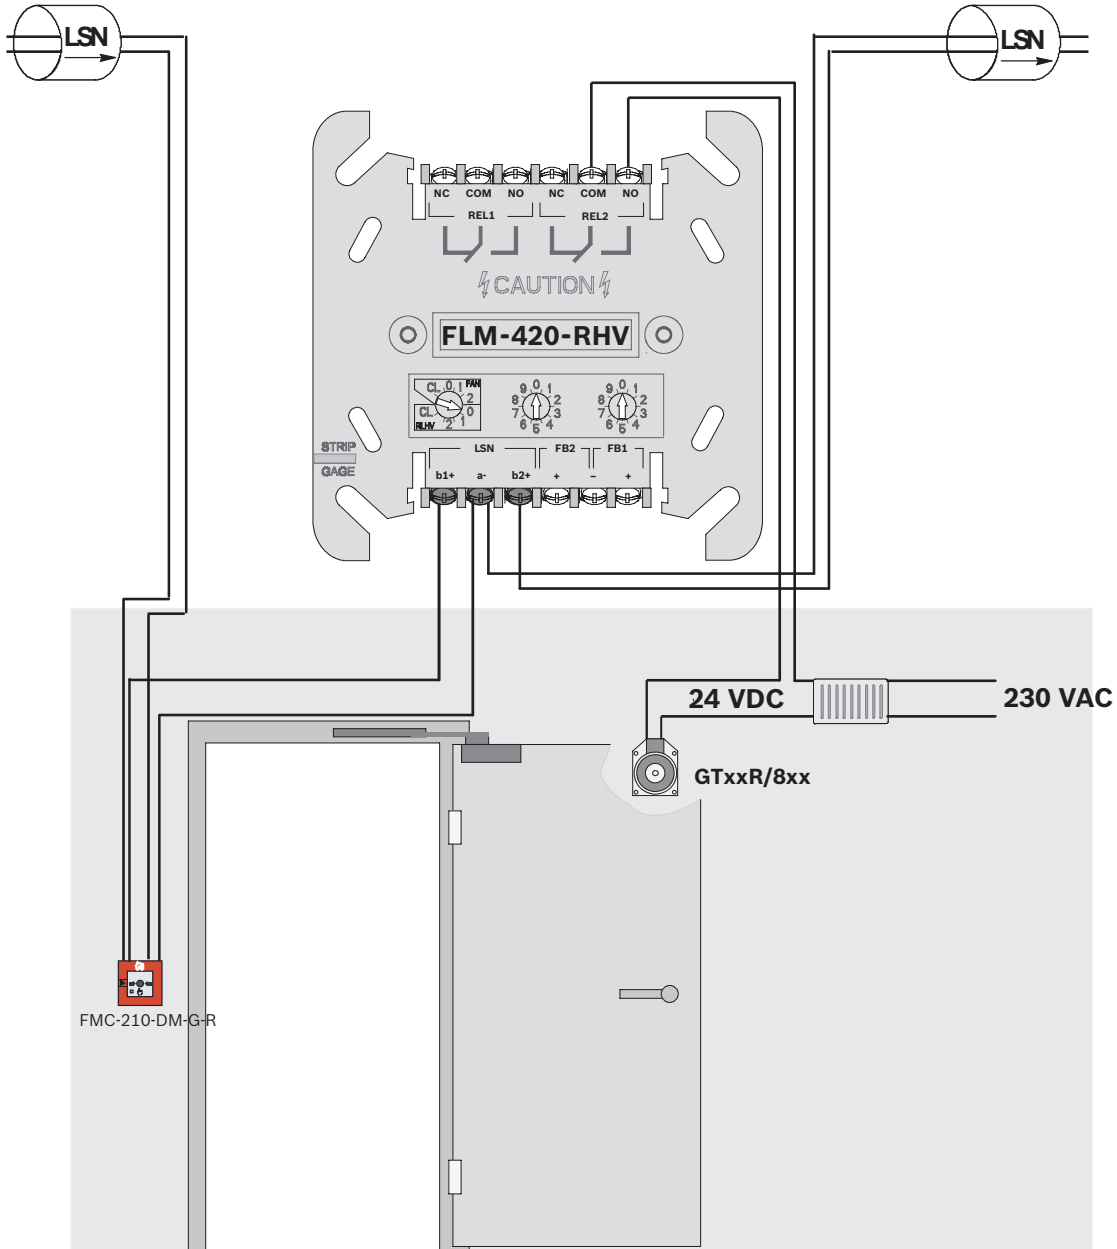





GT xx R

8 xx

 
DIBT

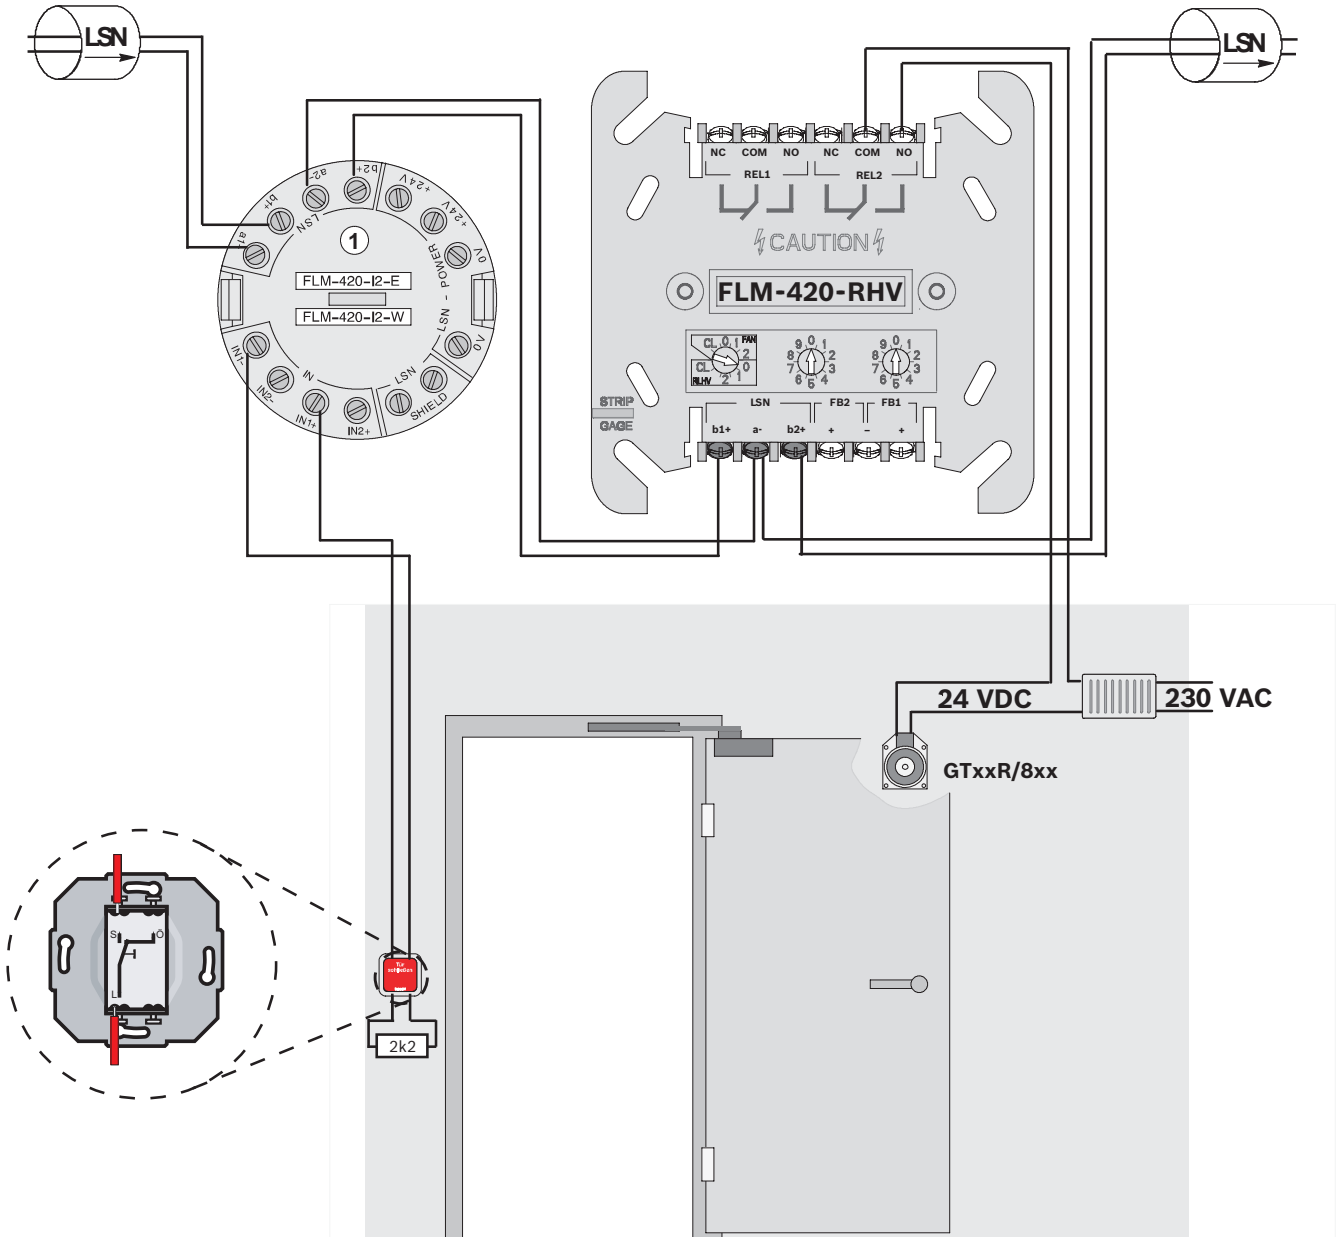




TS 73 EMF  
 TS 93 EMF  
 TS 93 GSR  
 BTS 80 EMB  
 BTS 80 FLB

 
DIBT

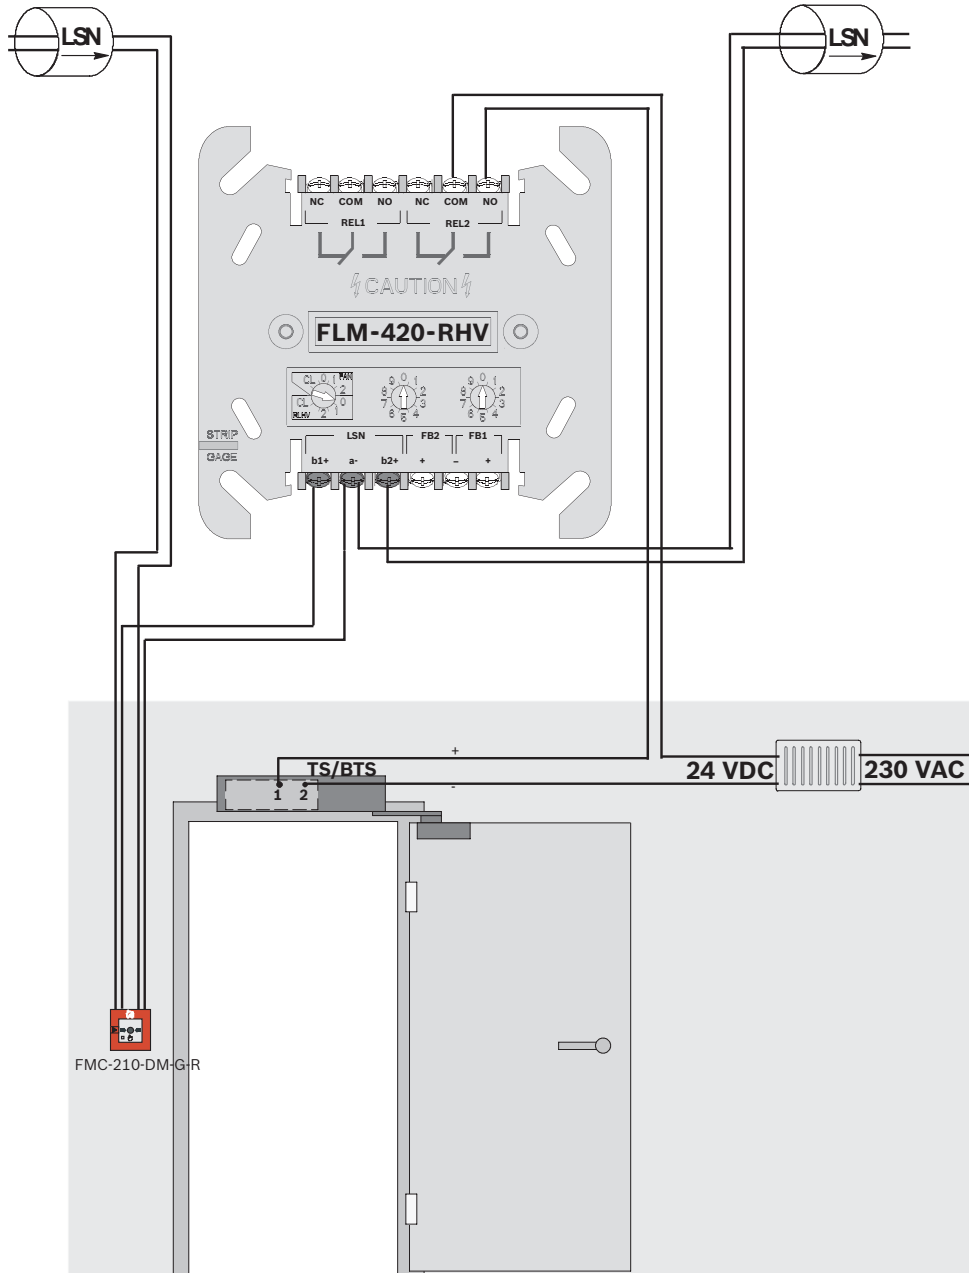



TS 73 EMF  
 TS 93 EMF  
 TS 93 GSR  
 BTS 80 EMB  
 BTS 80 FLB


DIBT

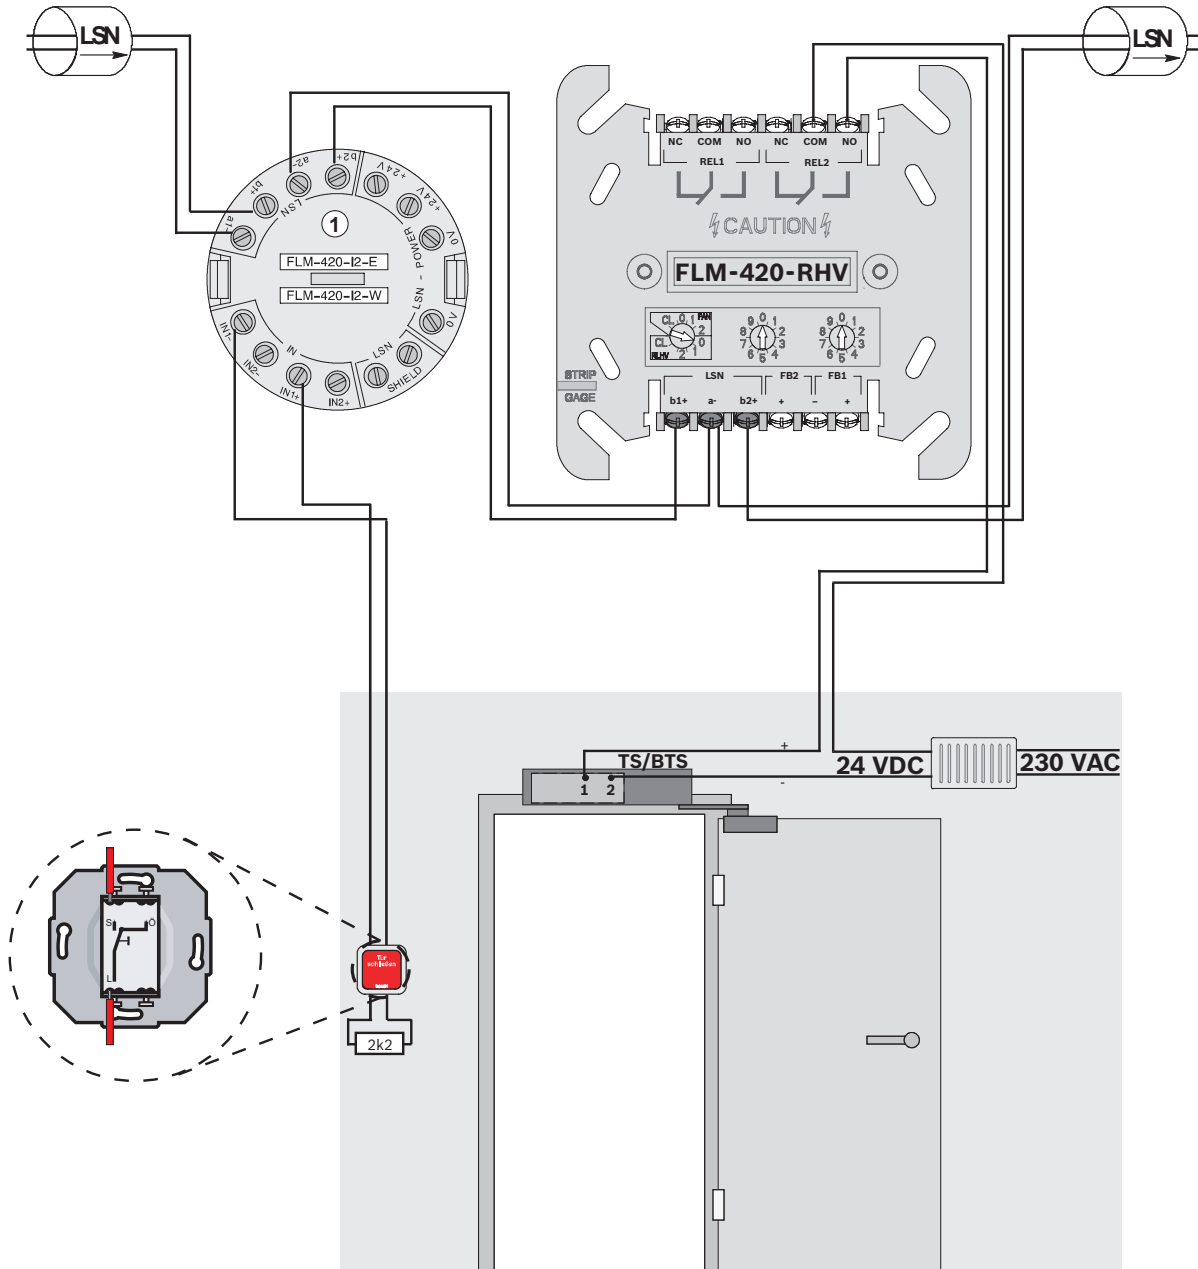



Slimdrive EMD-F/EMD F-IS


DIBT

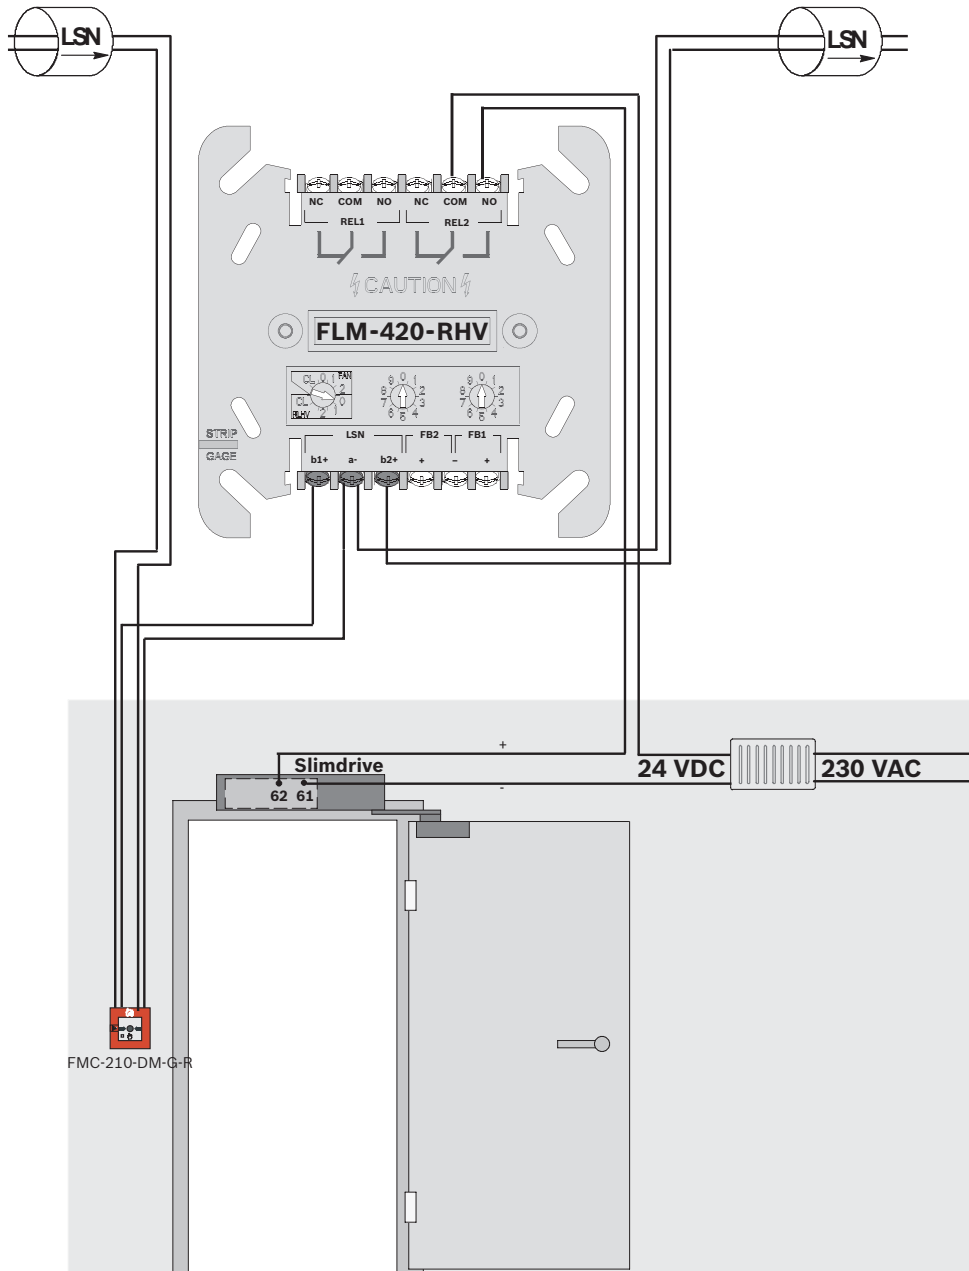





**Slimdrive EMD-F/EMD F-IS**

  **DIBT**

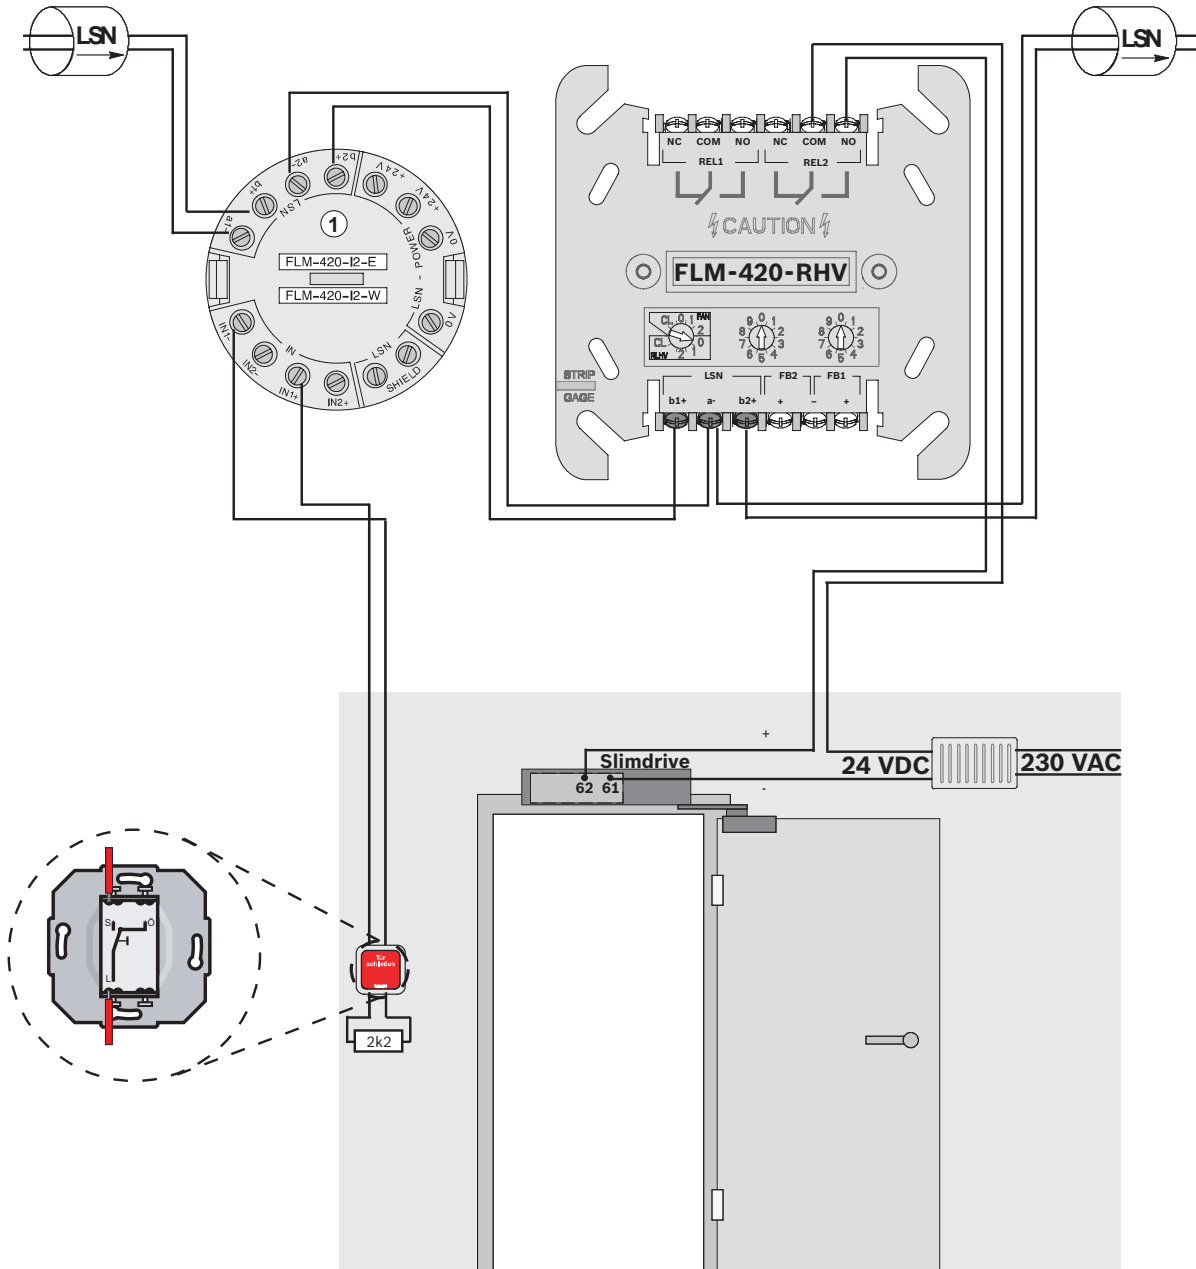







TS 4000 E/E-IS/EFS  
 TS 5000 E/E-IS/E-ISM  
 TS 550 E  
 TSA 160 NT F/F-IS/F-IS/TS

 
DIBT


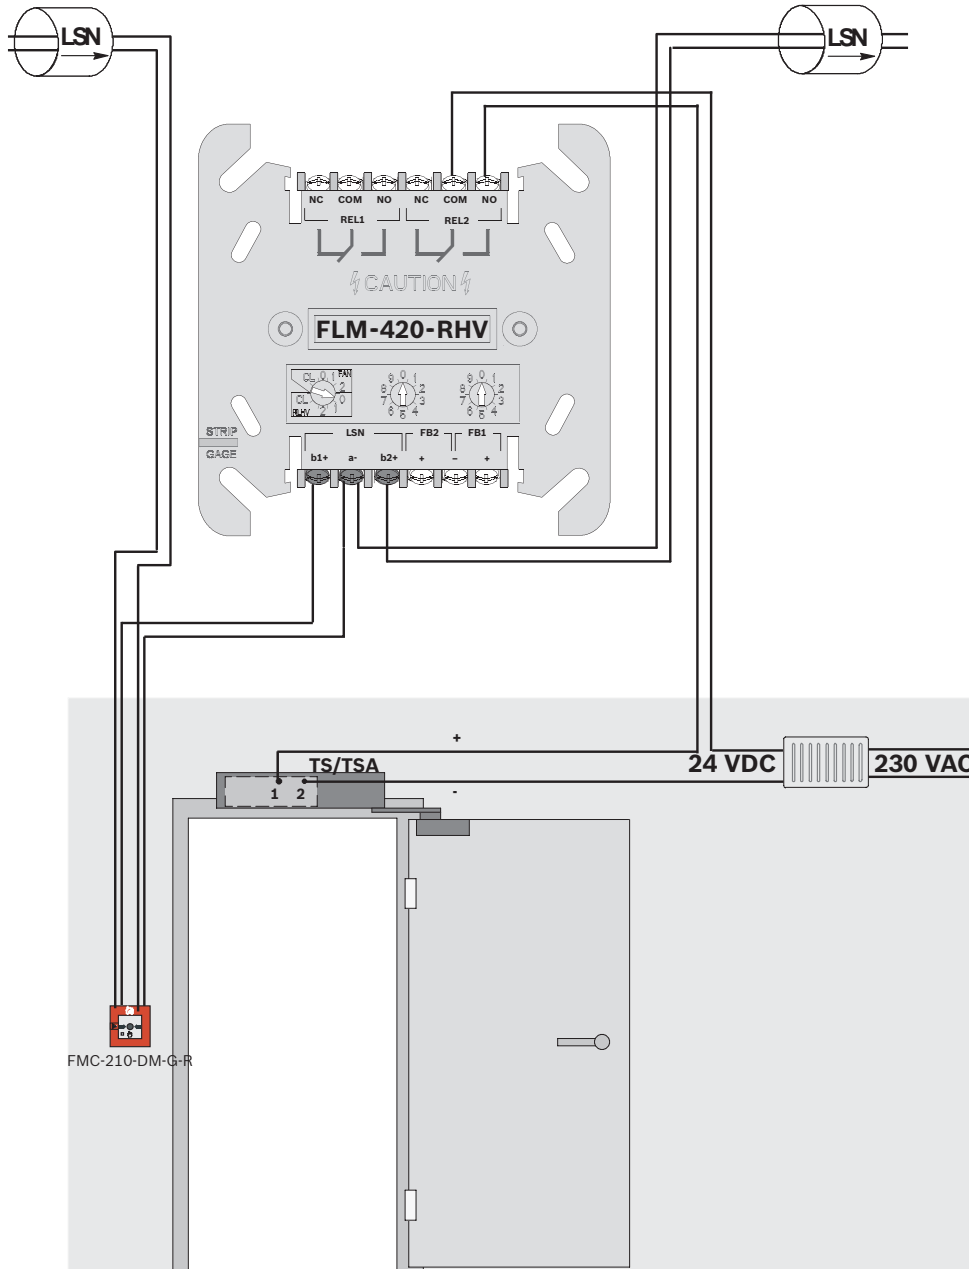




TS 4000 E/E-IS/EFS  
 TS 5000 E/E-IS/E-ISM  
 TS 550 E  
 TSA 160 NT F/F-IS/F-IS/TS

  
DIBT

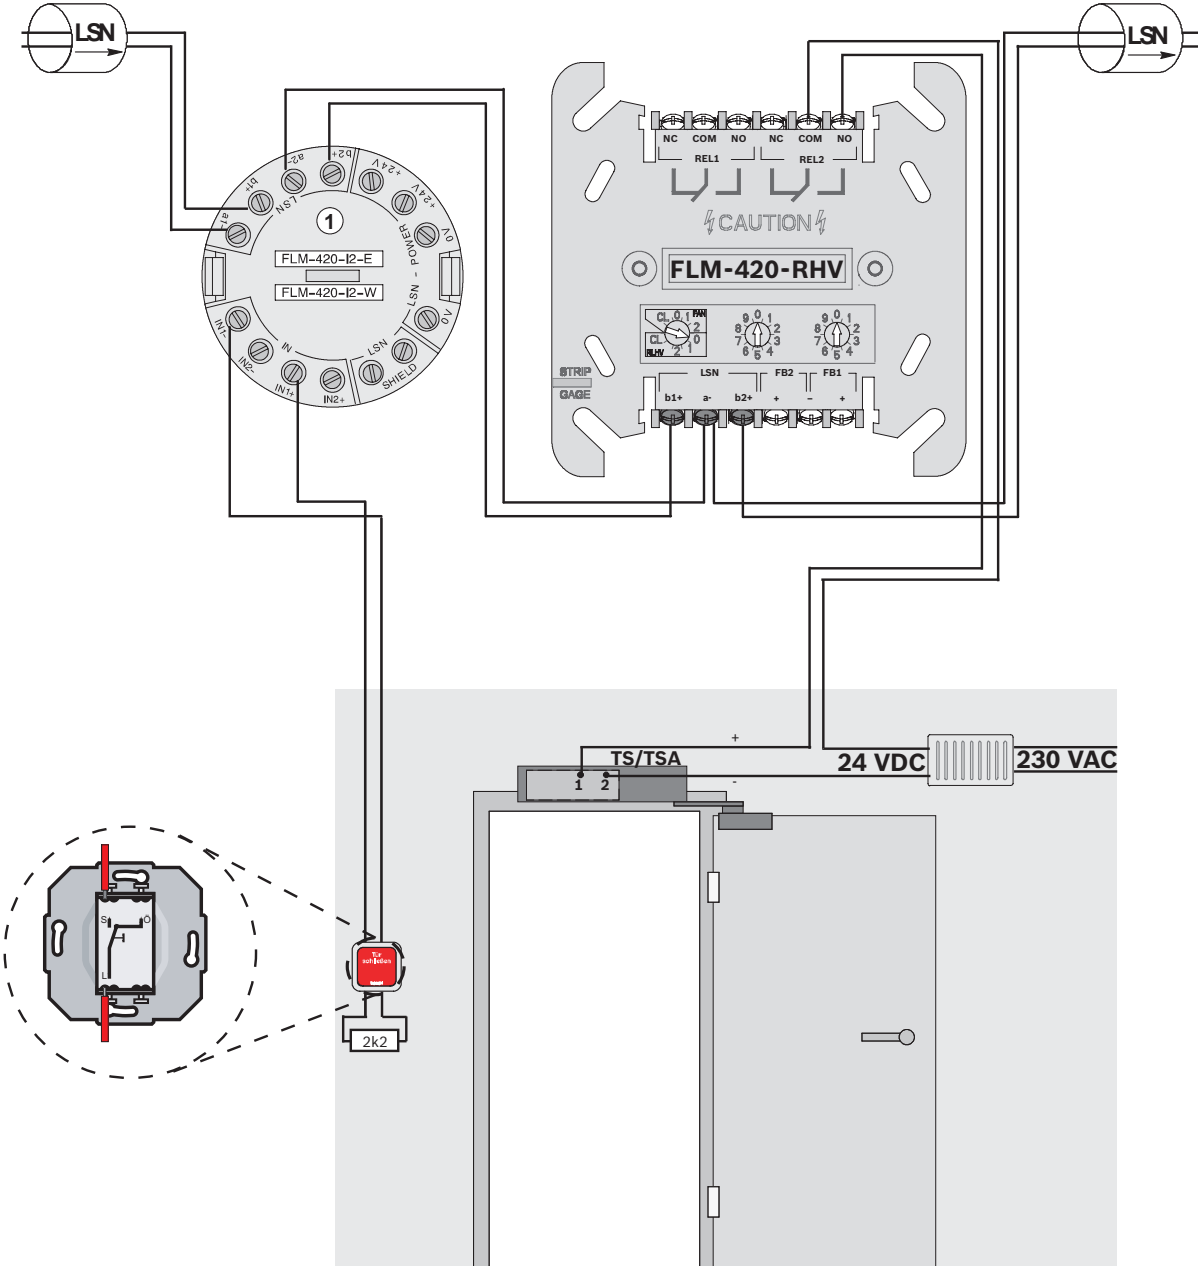





TSZ 0400


 
DIBT

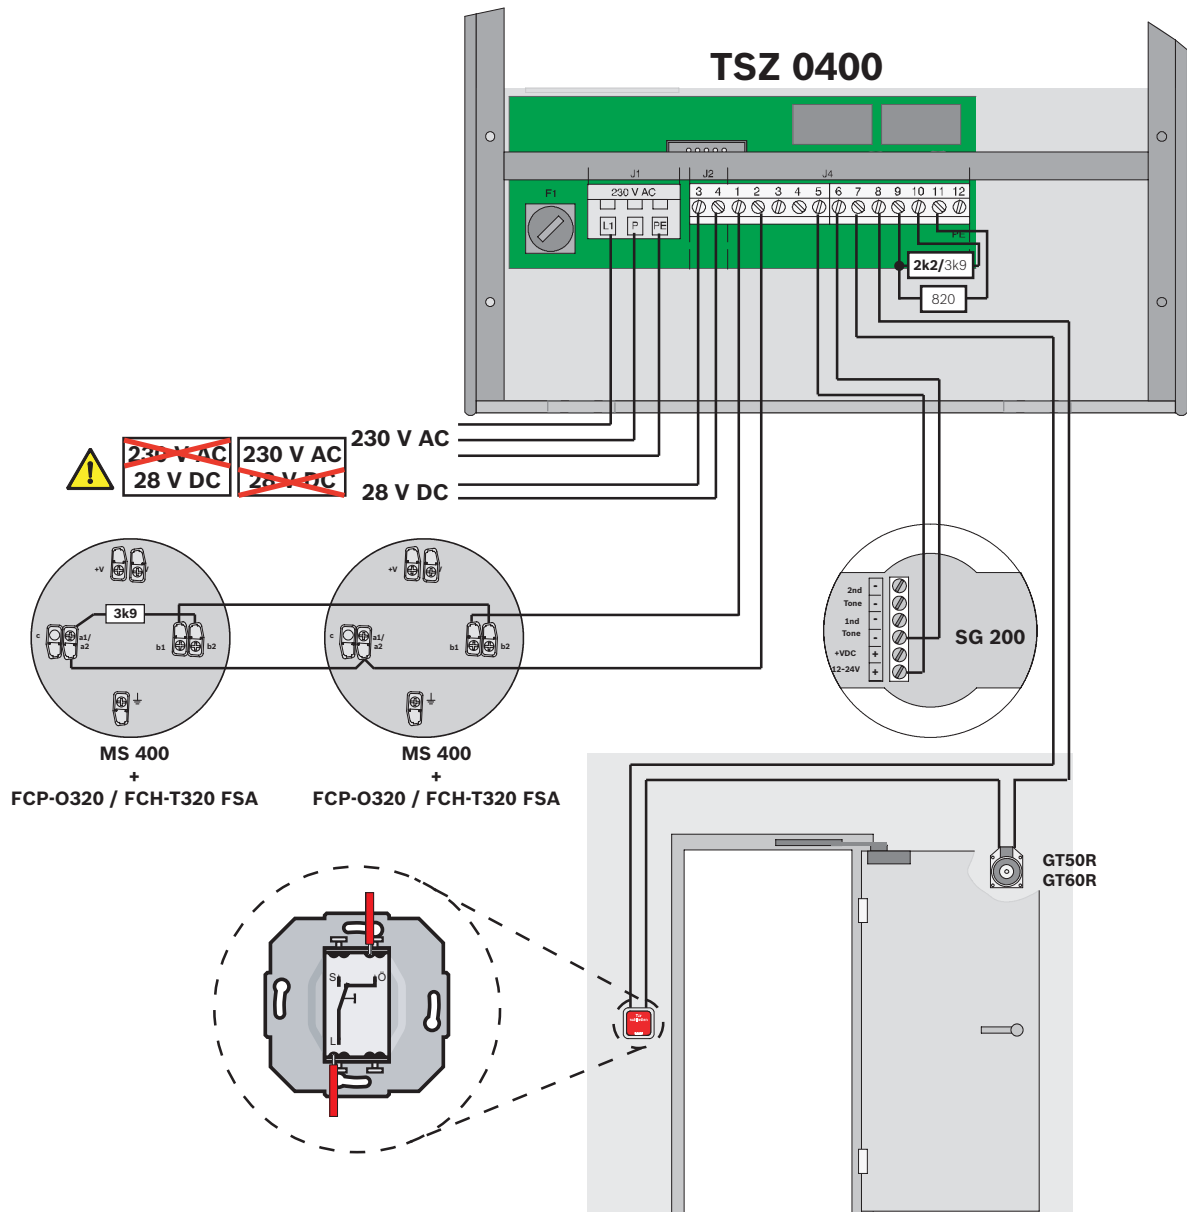





DIBT

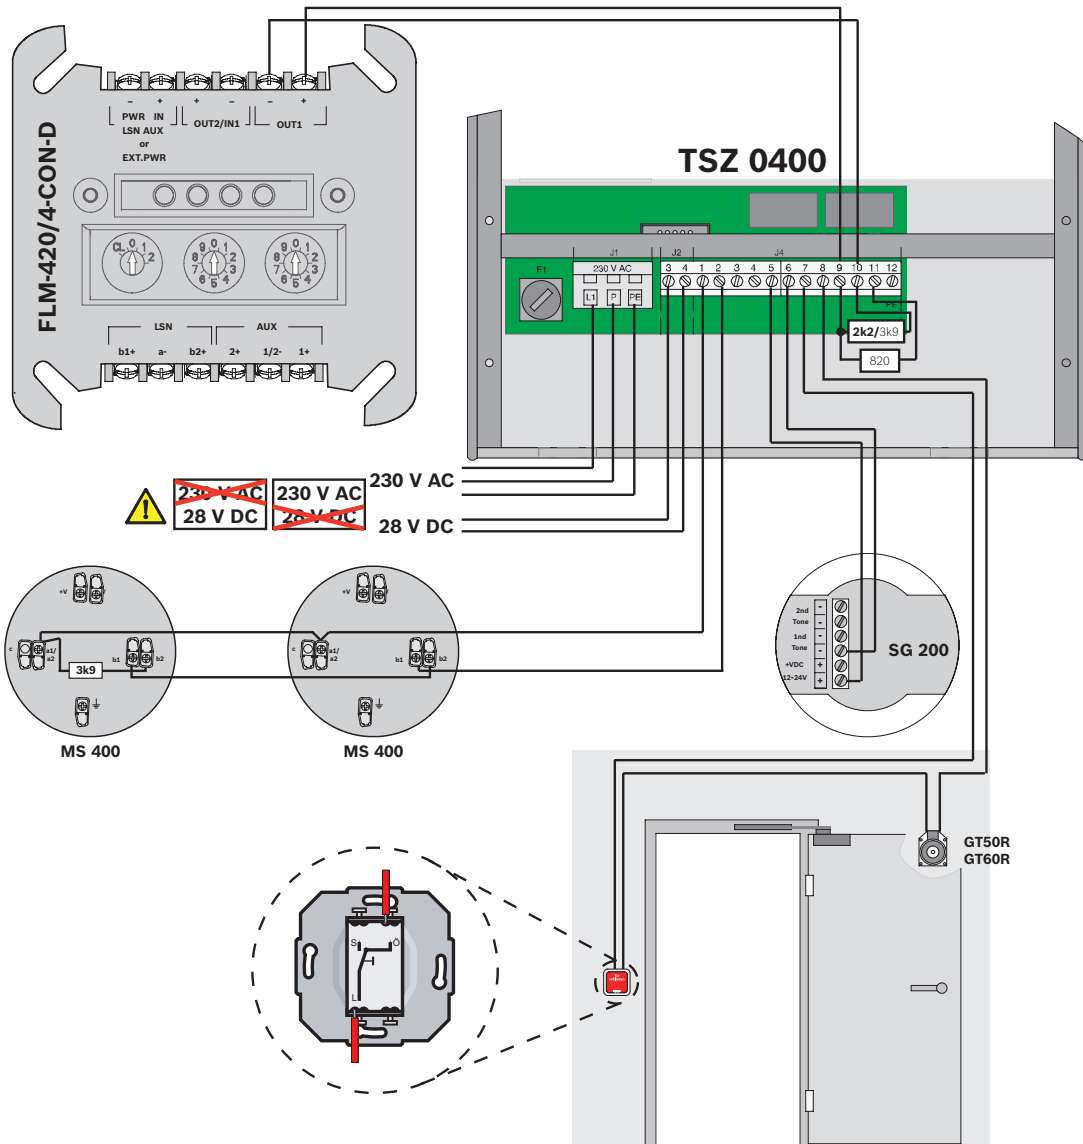

  



**DIBT**

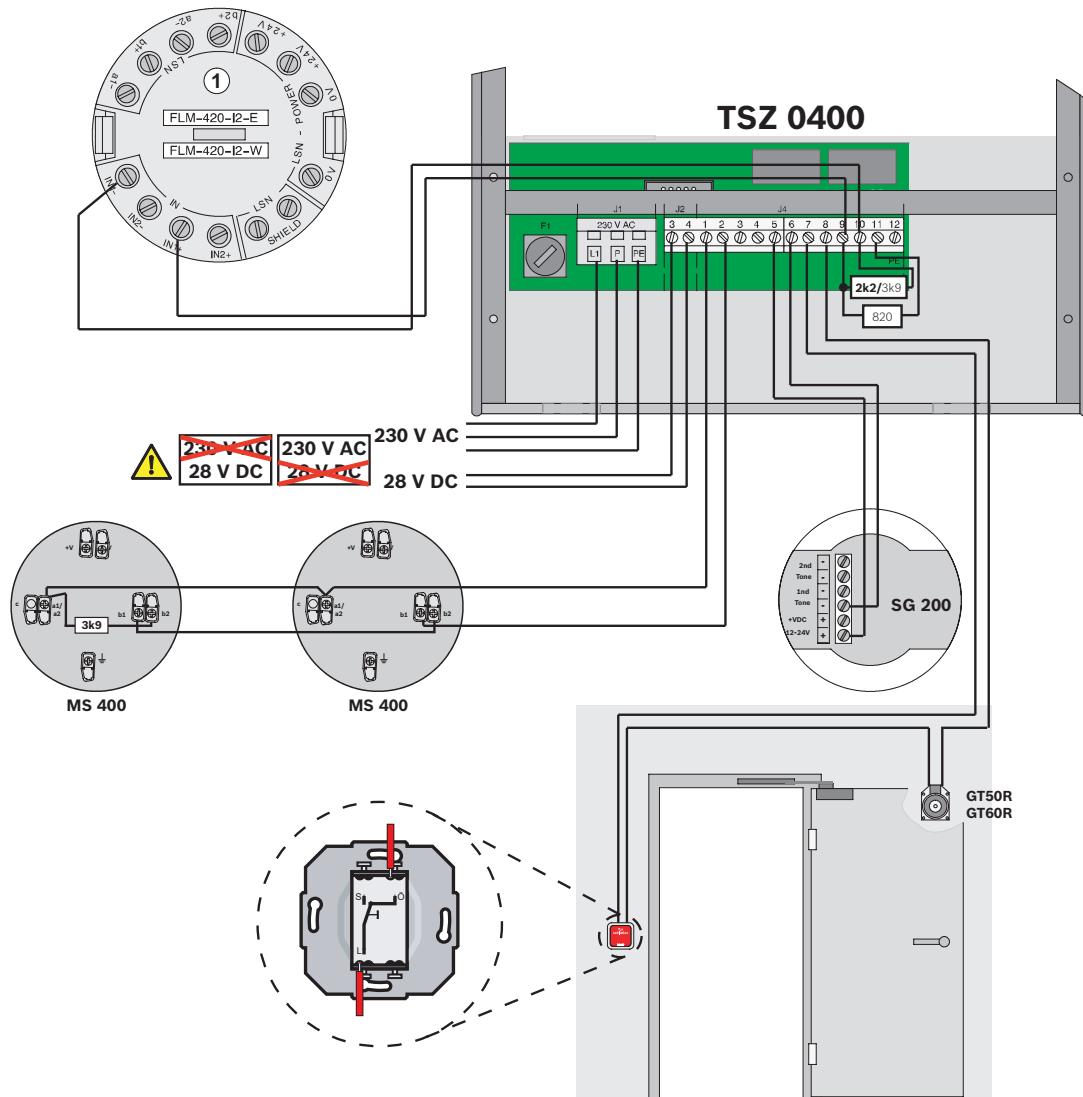


 


DIBT

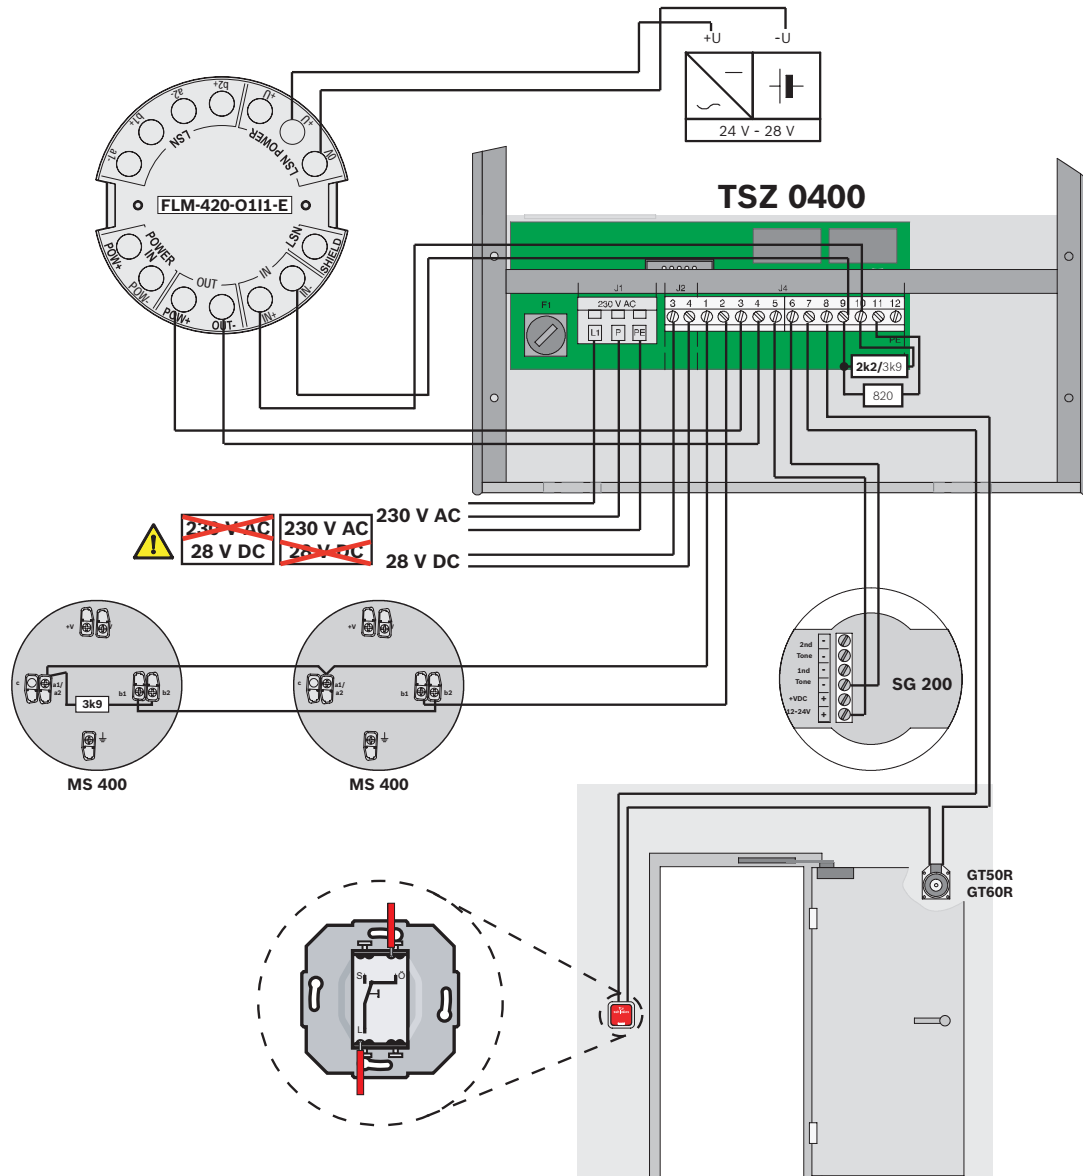


 


**FAA-420-RI-ROW**  
**FAA-420-RI-DIN**

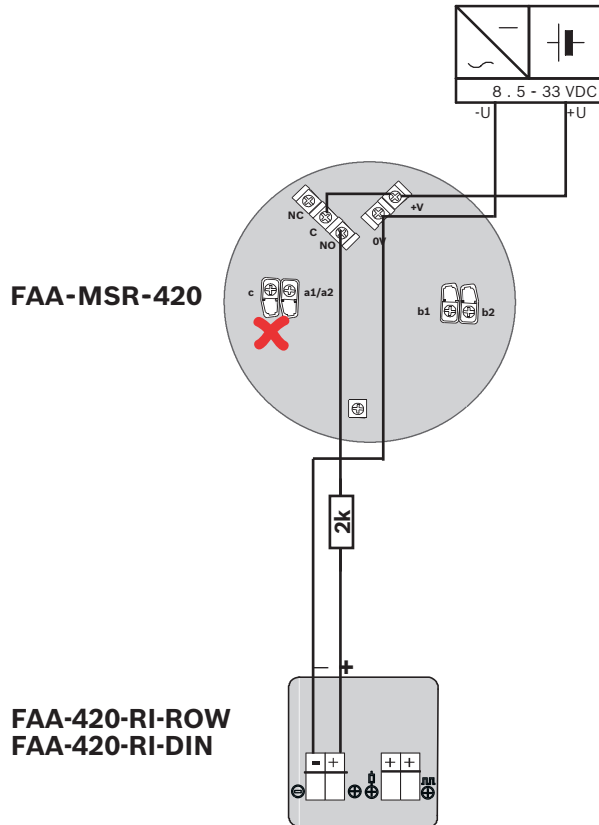 






**FAA-420-RI-DIN**

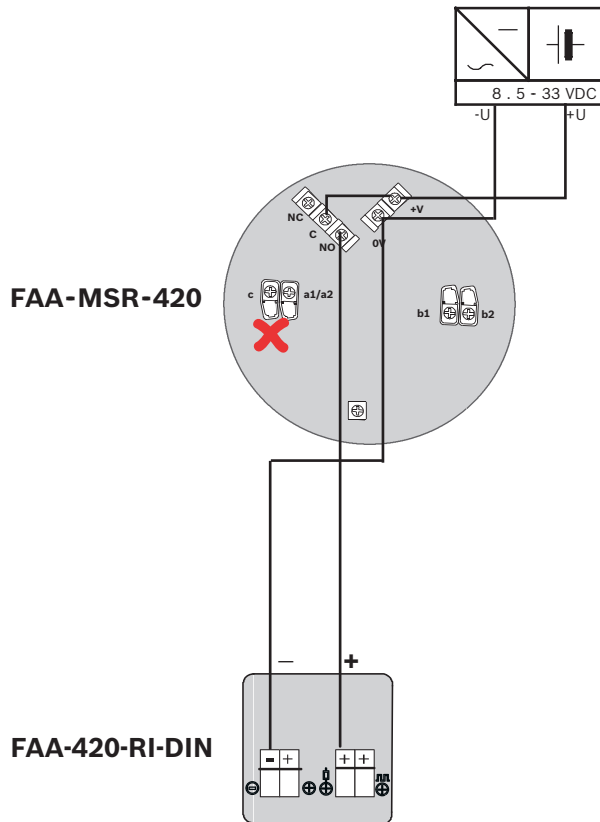 



 

FAA-420-RI-DIN

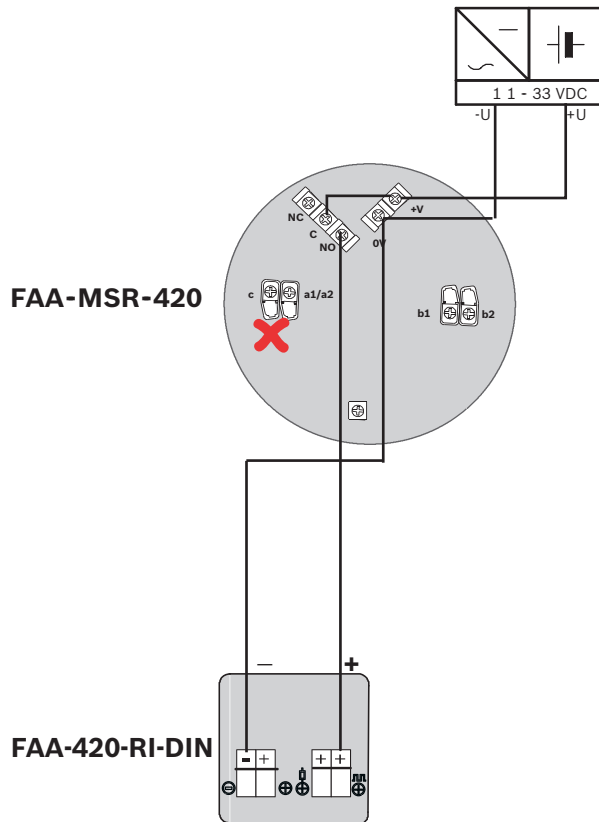 

## 2.4

### Functional Modules



*BCM-000-B, page 43*

*CZM 0004 A, page 45*

*ENO 0000 A/B, page 61*

*LSN 0300 A, page 68*

*NZM 0002 A, page 106*

 
*RMH 0002 A, page 119*

*IOS 0020 A, page 120*




*FPE-5000-UGM, page 122*



2.4.1

BCM-000-B






FLM-420-NAC-D

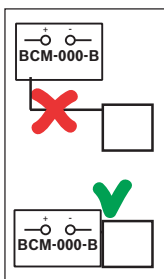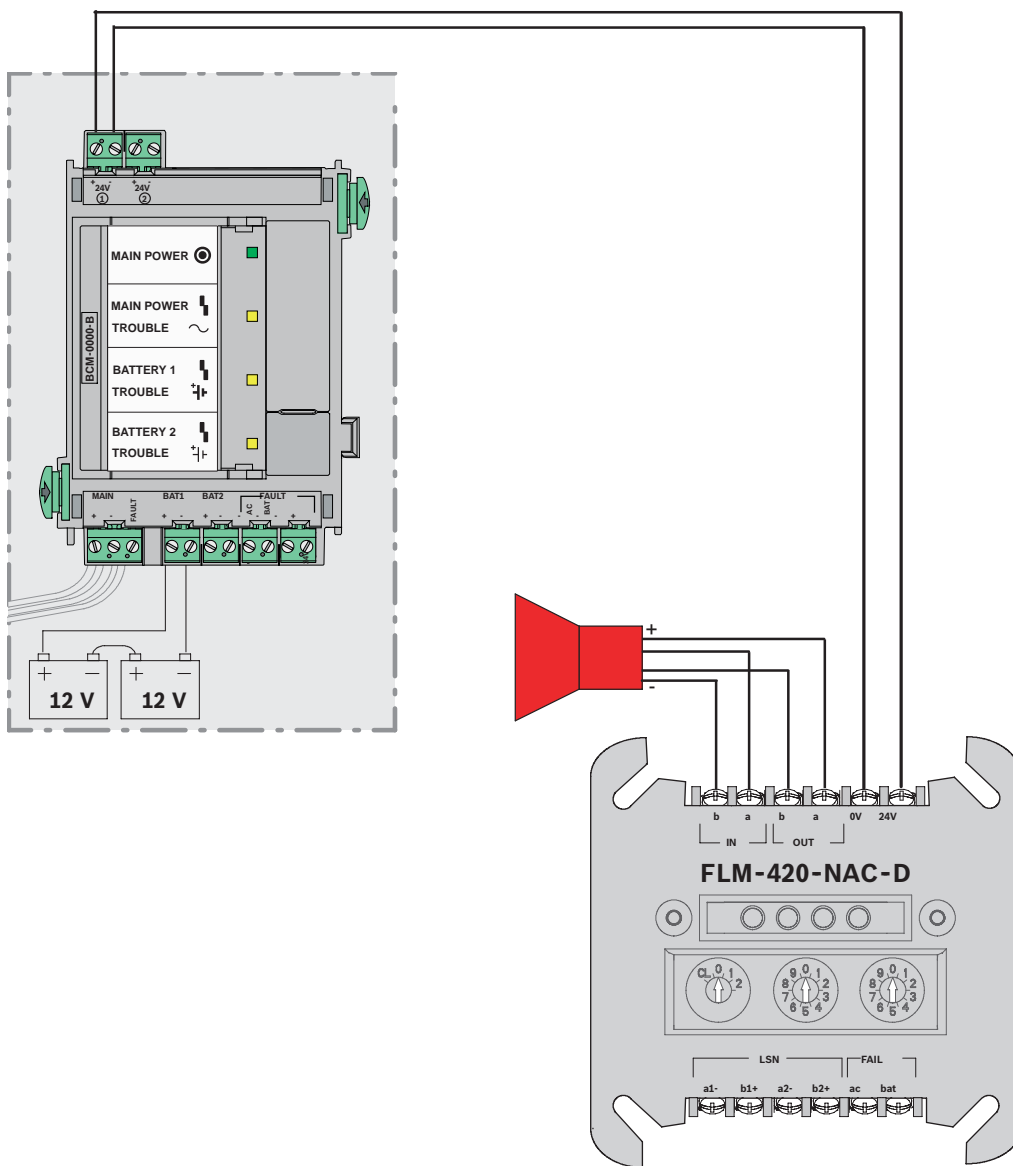 

  


FLM-420-NAC-D

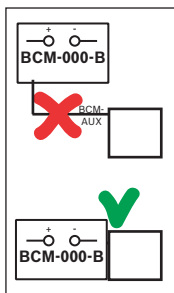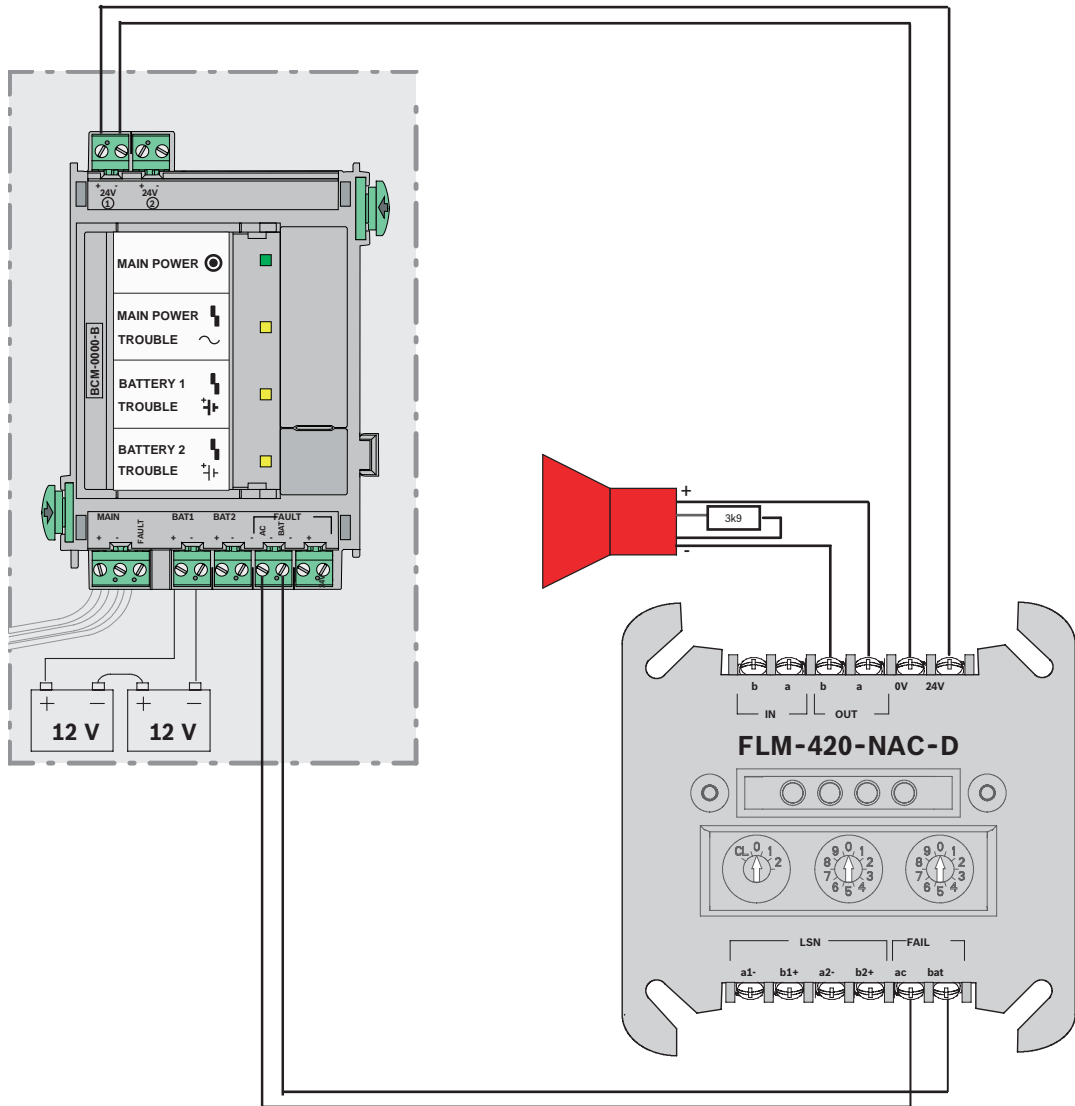 


### 2.4.2 CZM 0004 A



 **Firearay 50RV**  
**Firearay 100RV**

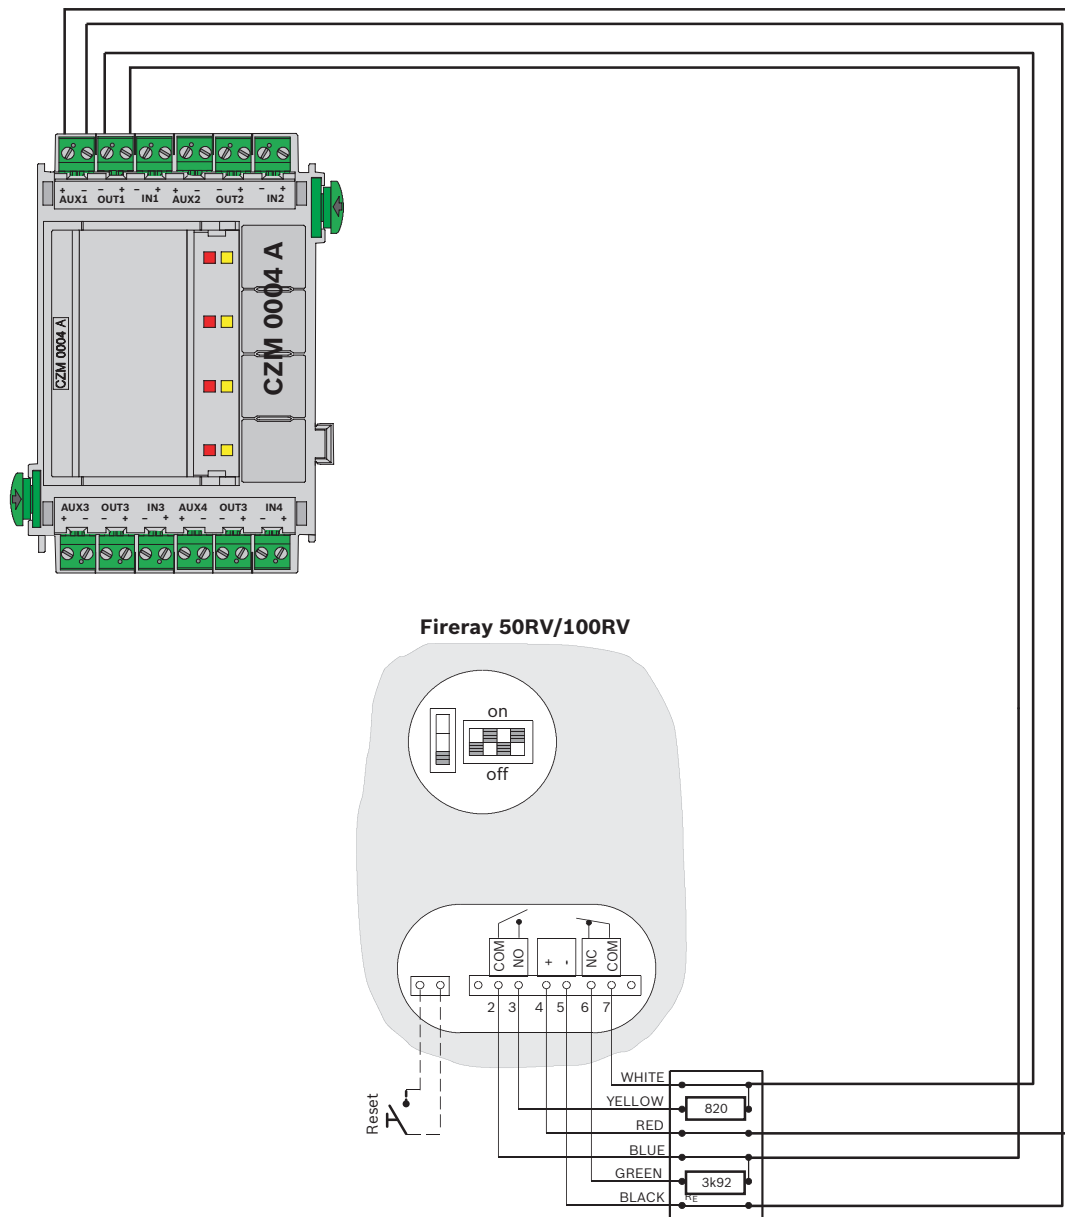






**FIRERAY3000**


1 x



 BCM-0000-B  
LSN 0300 A  
LSN 1500 A

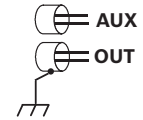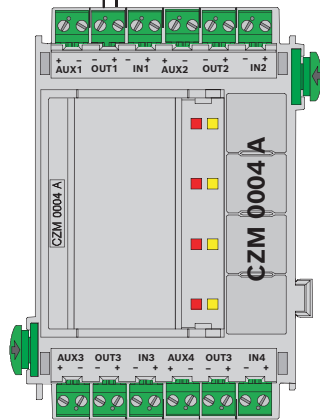

**Reset action**




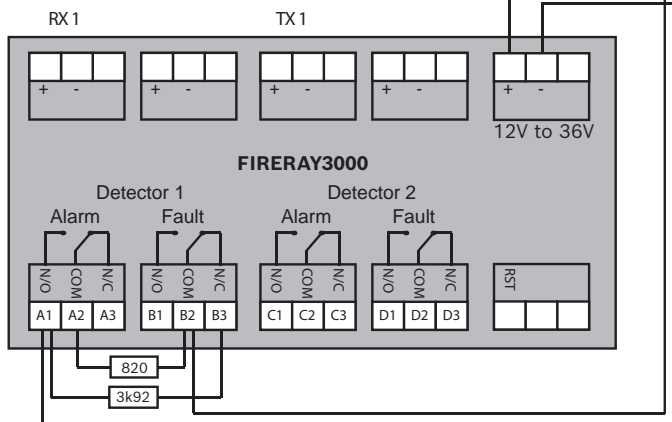




**FIRERAY3000**  
2 x **OUT1**



 BCM-0000-B  
LSN 0300 A  
LSN 1500 A

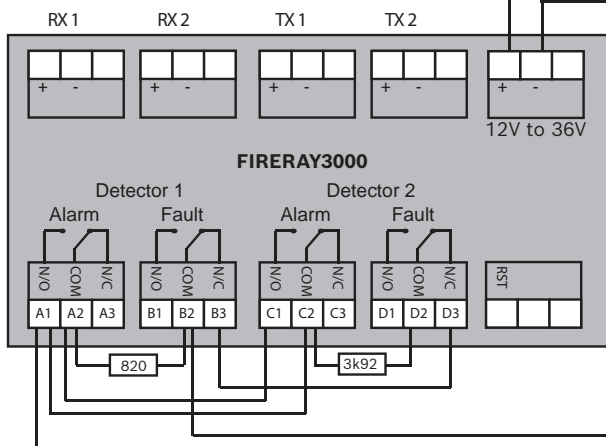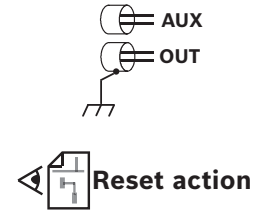
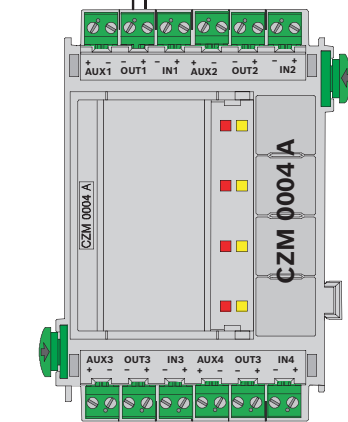




**FIRERAY3000**  
2 x **OUT1+2**



 BCM-0000-B  
LSN 0300 A  
LSN 1500 A

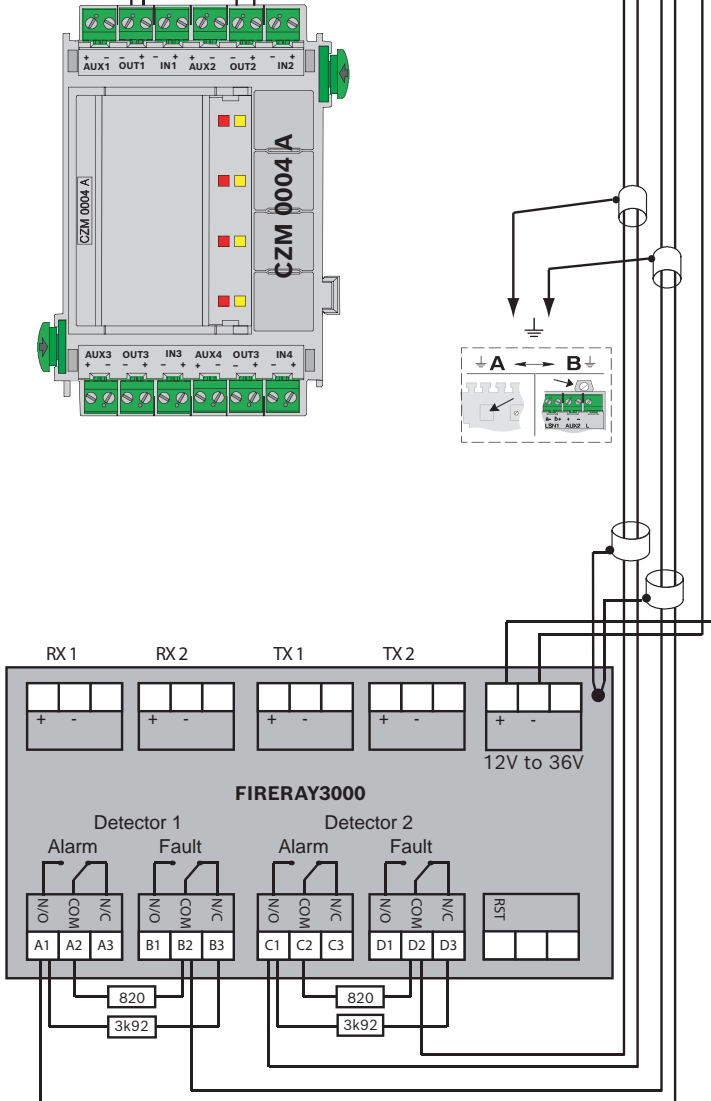

**Reset action**









**FIRERAY5000**

1 x 



 

BCM-0000-B  
LSN 0300 A  
LSN 1500 A

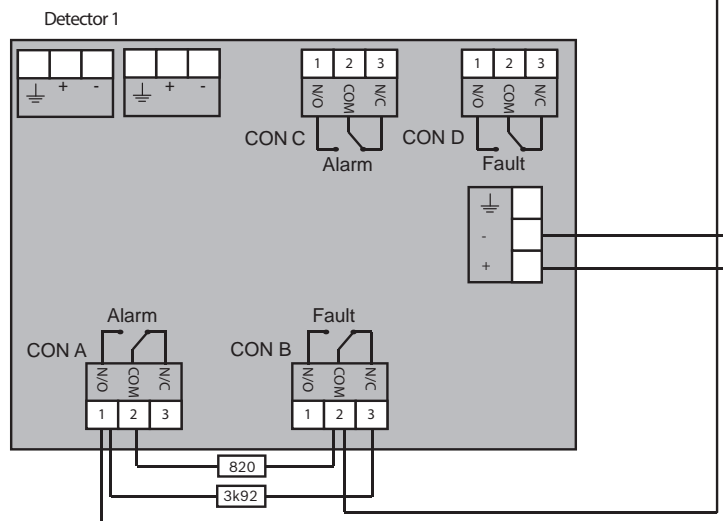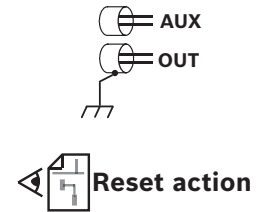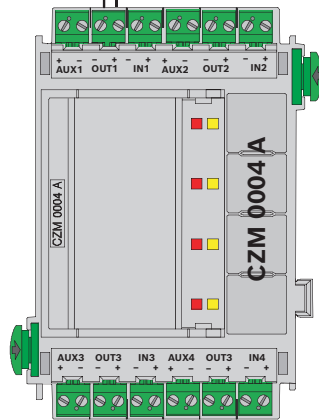





**FIRERAY5000**


**2 x OUT1**

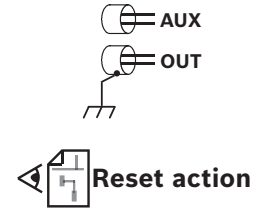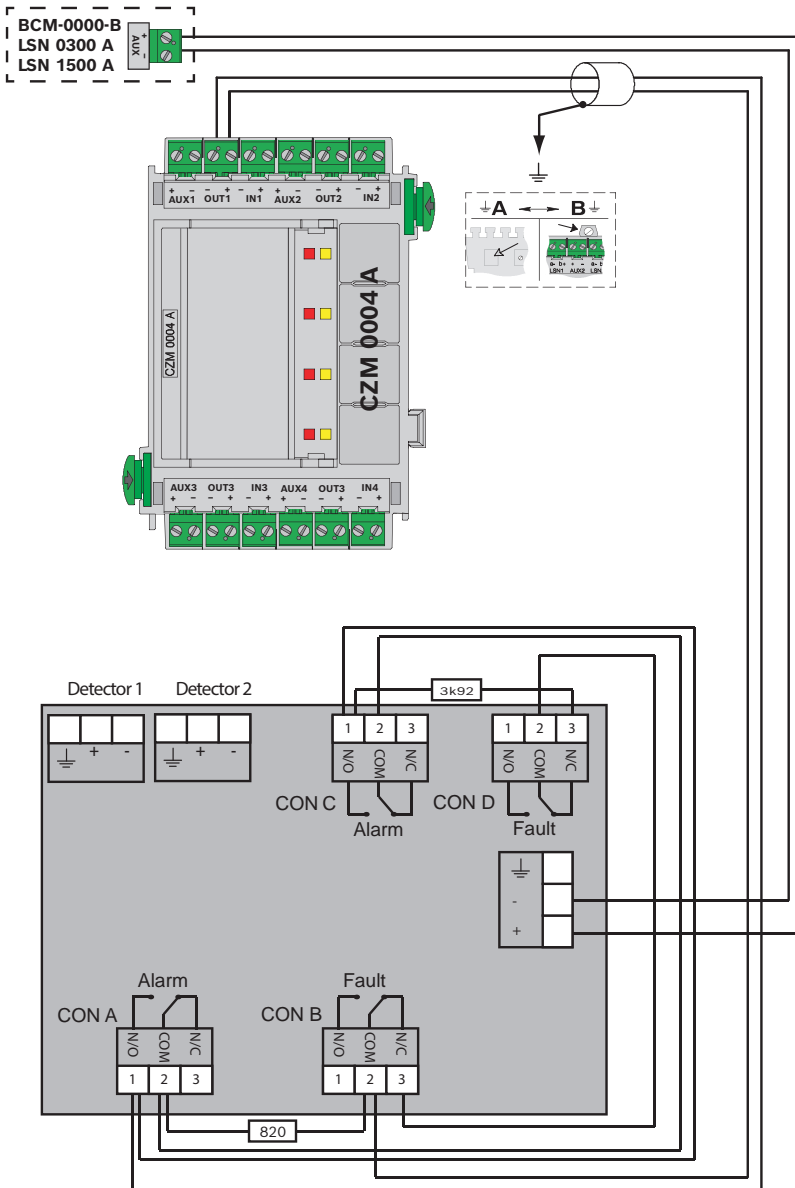






**FIRERAY5000**  
2 x **OUT1**

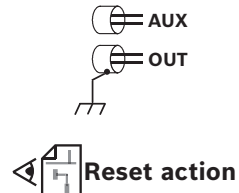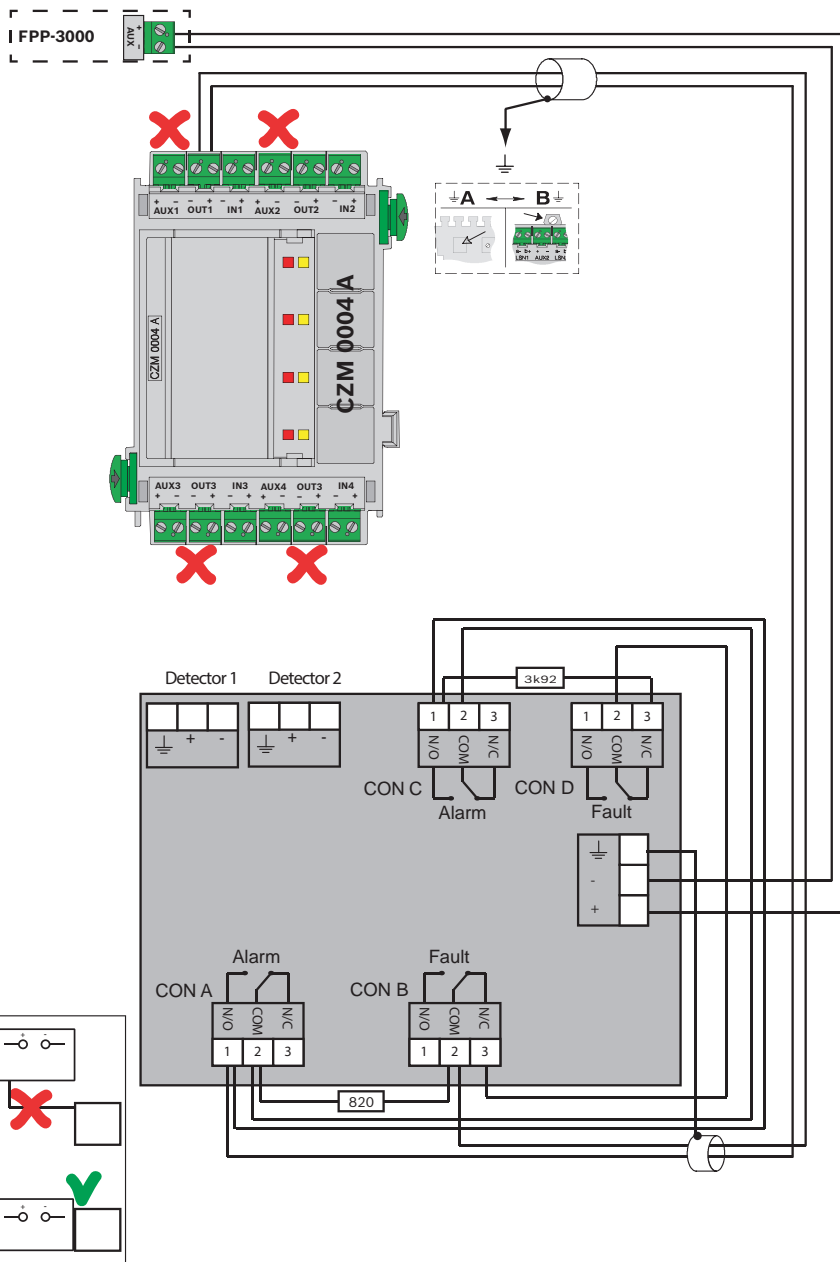


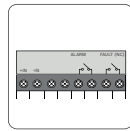



**016519, 016589  
IR3 Flame Detector**

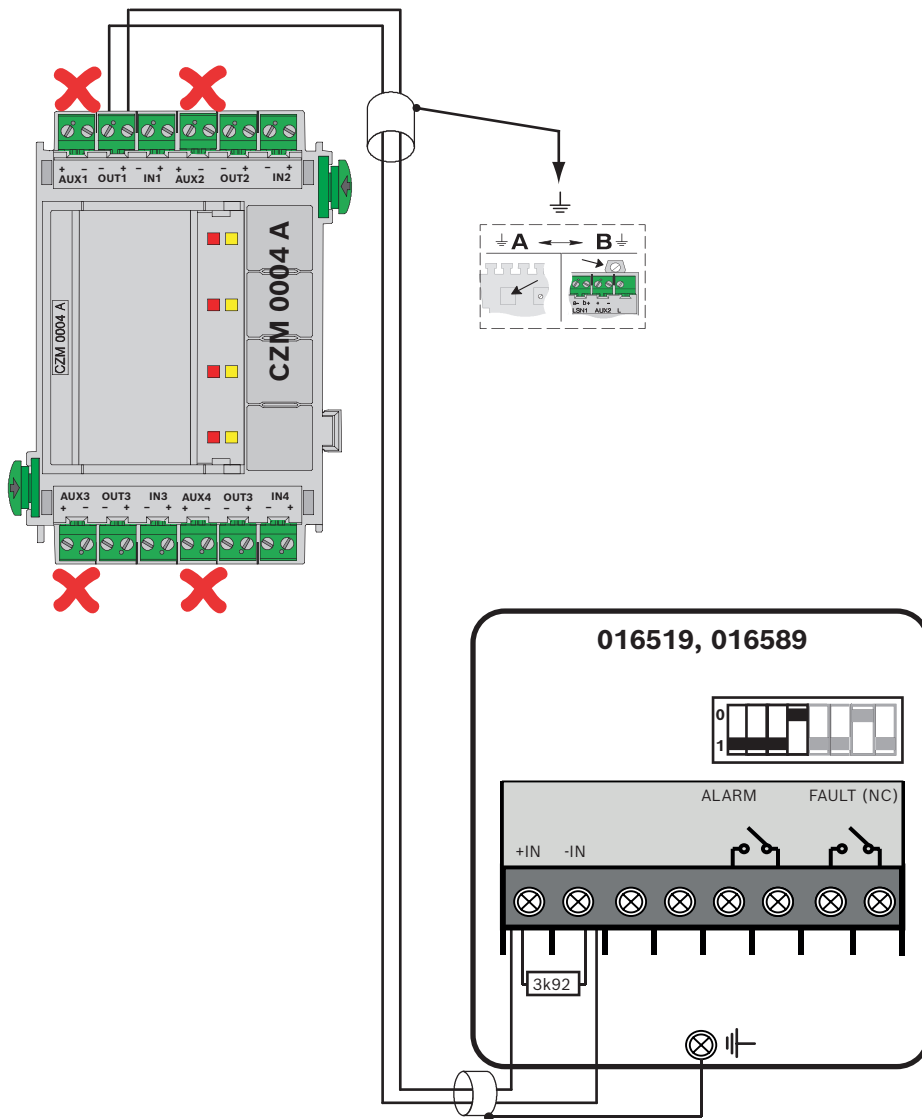 

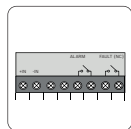


**016519, 016589  
IR3 Flame Detector**



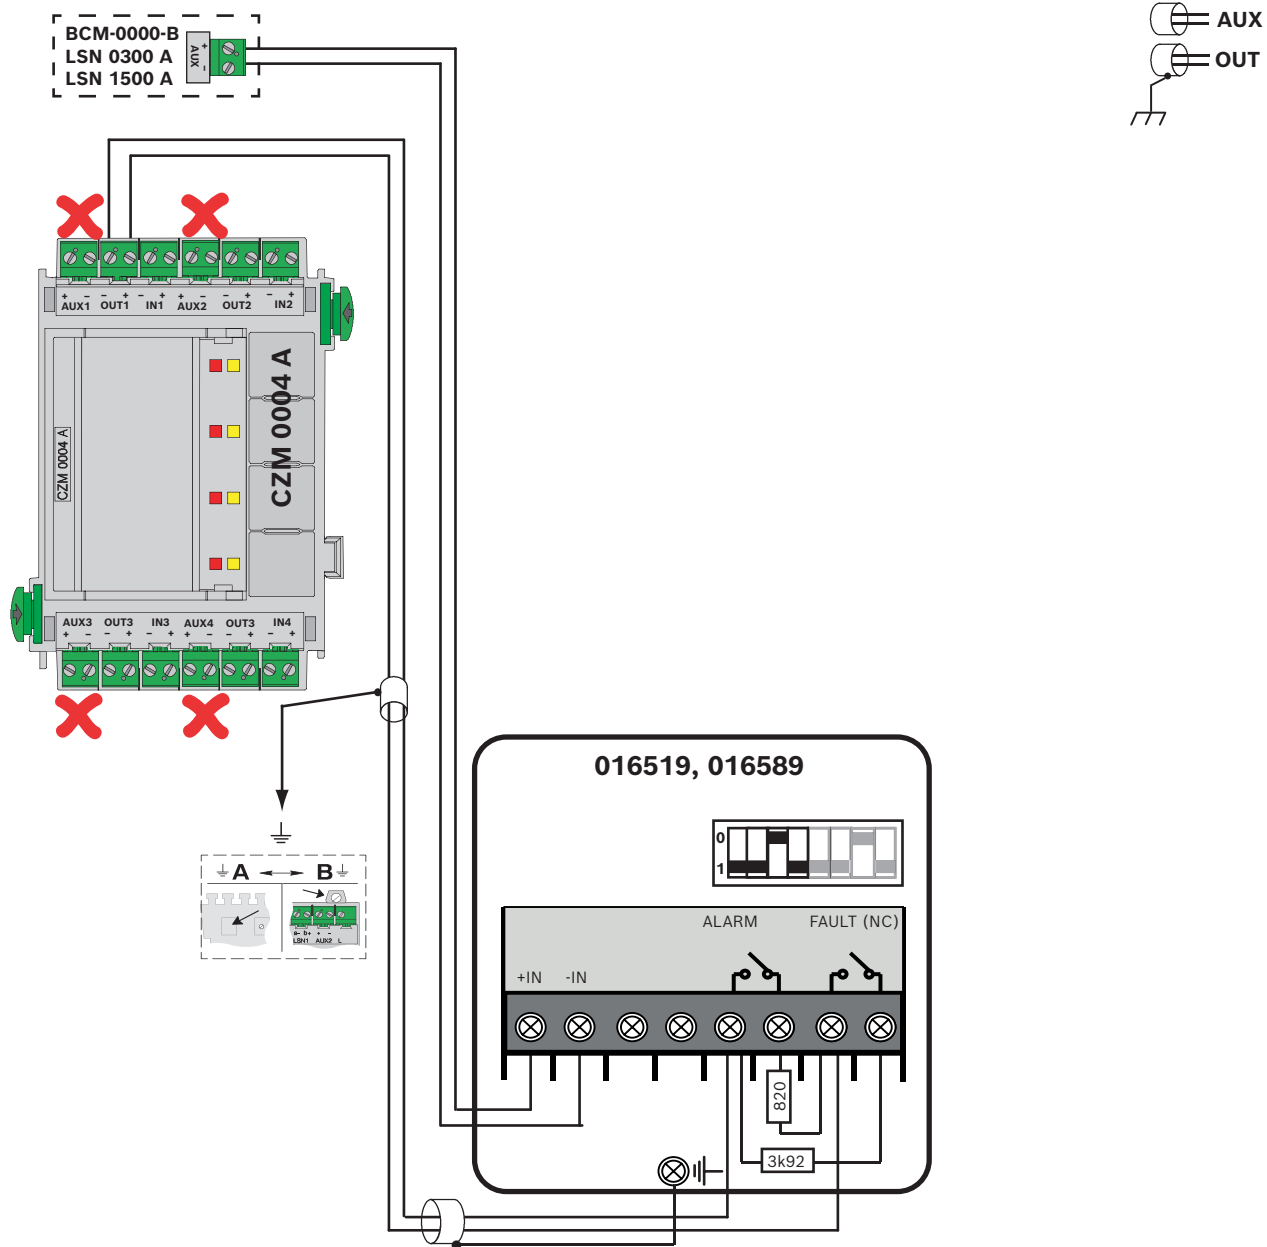
 




 



FCS-320-TM Series

 


BCM-0000-B  
LSN 0300 A  
LSN 1500 A

 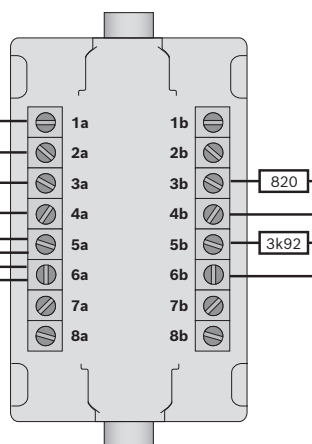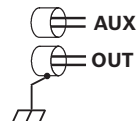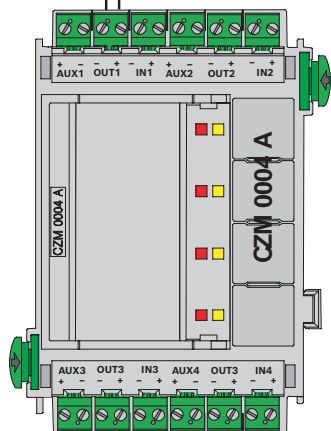

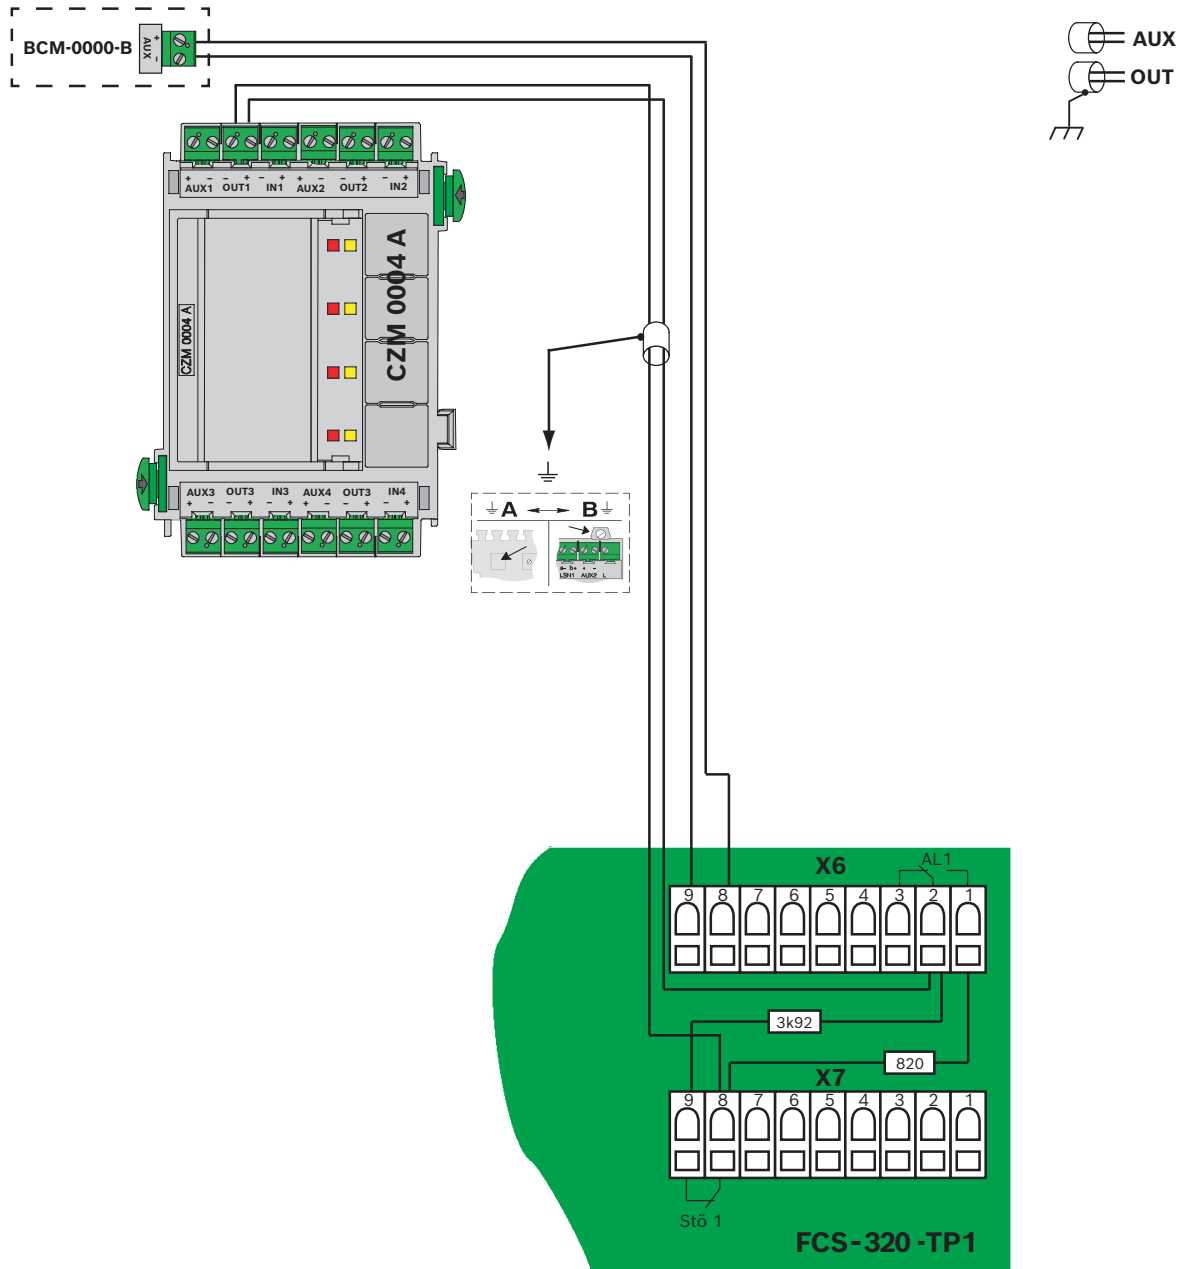  

 


FCS-320-TP2

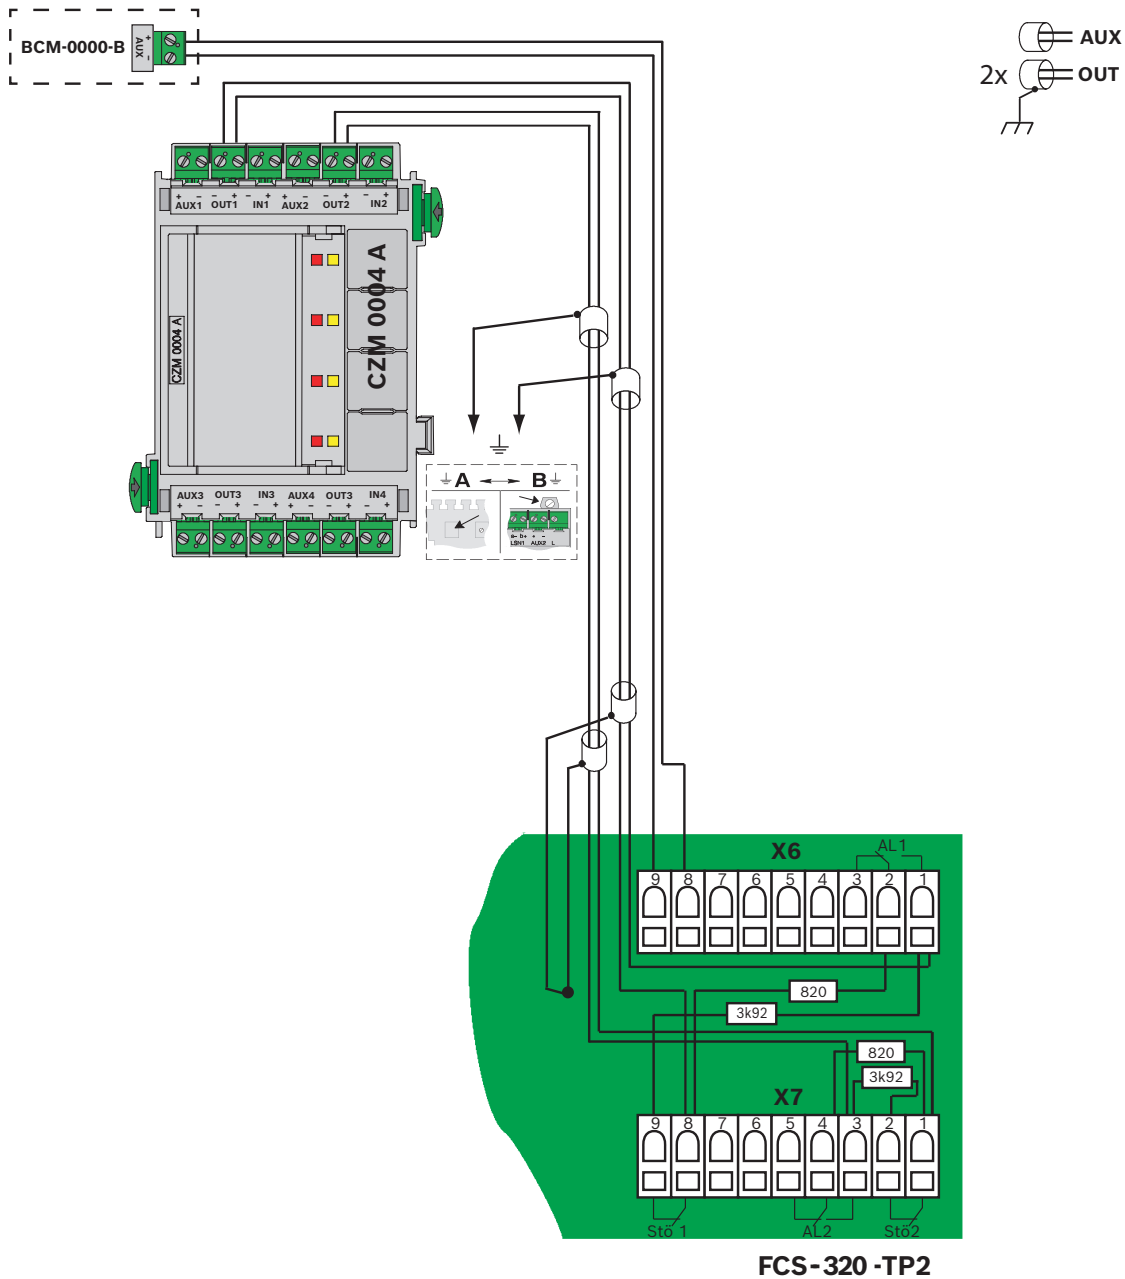







FCS-LWM-1

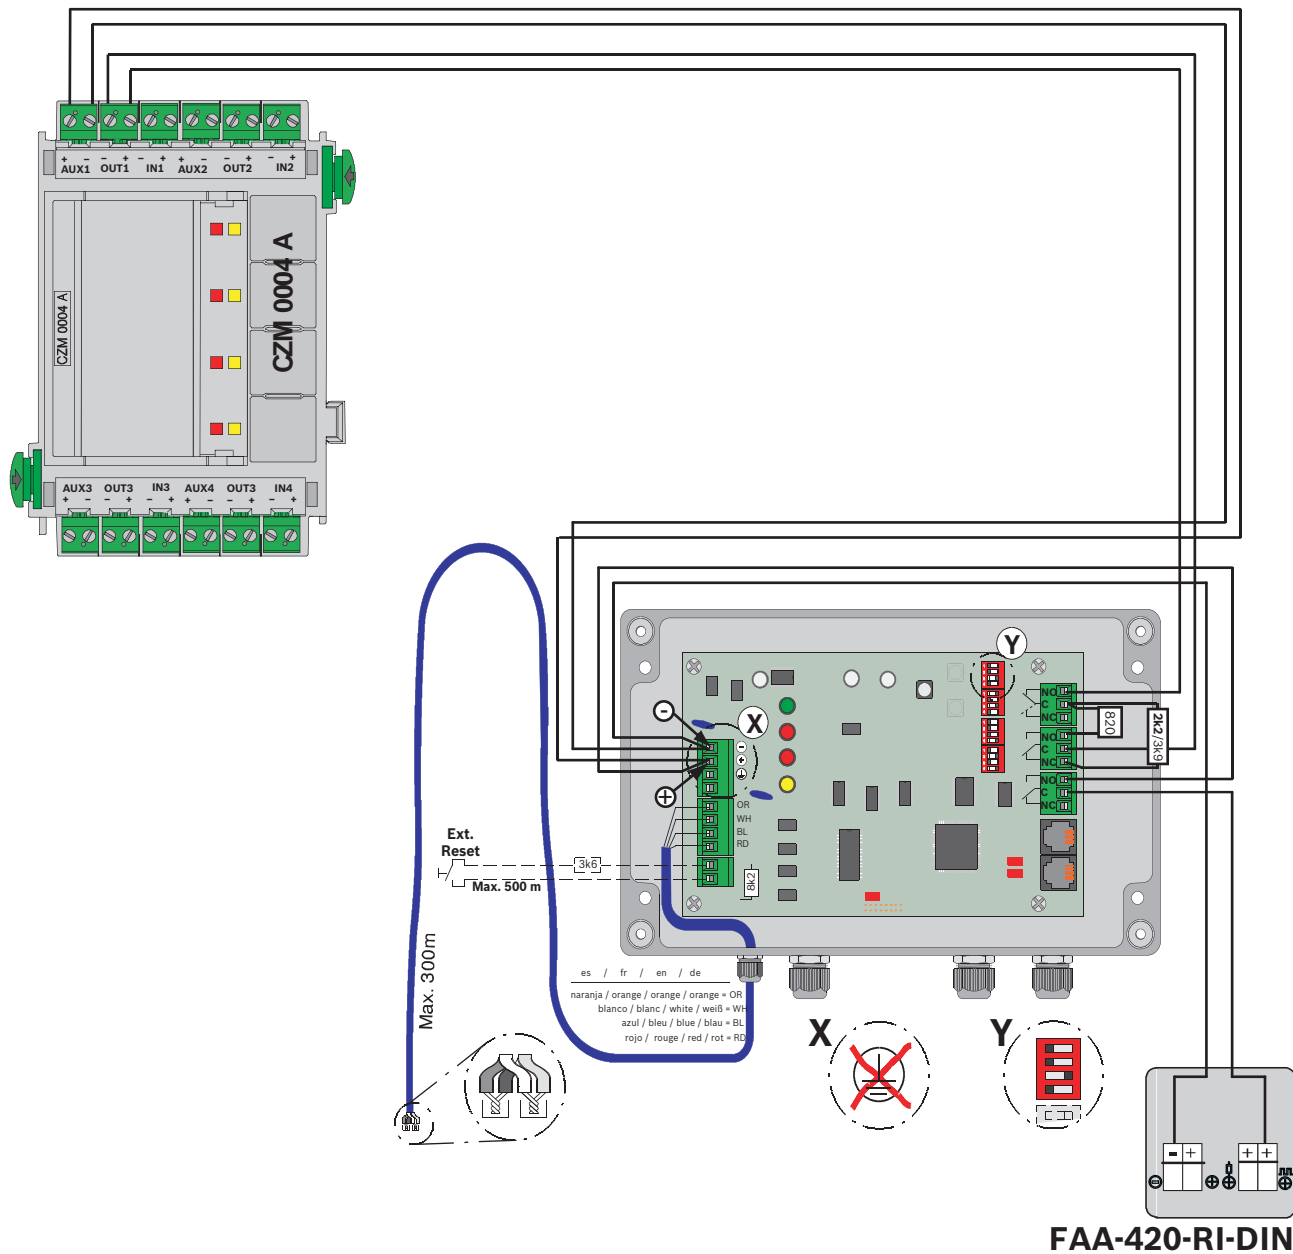






 
FCA-500-EU  
 FCP-O 500  
 FCP-O 500-P  
 FCP-OC 500  
 FCP-OC 500-P

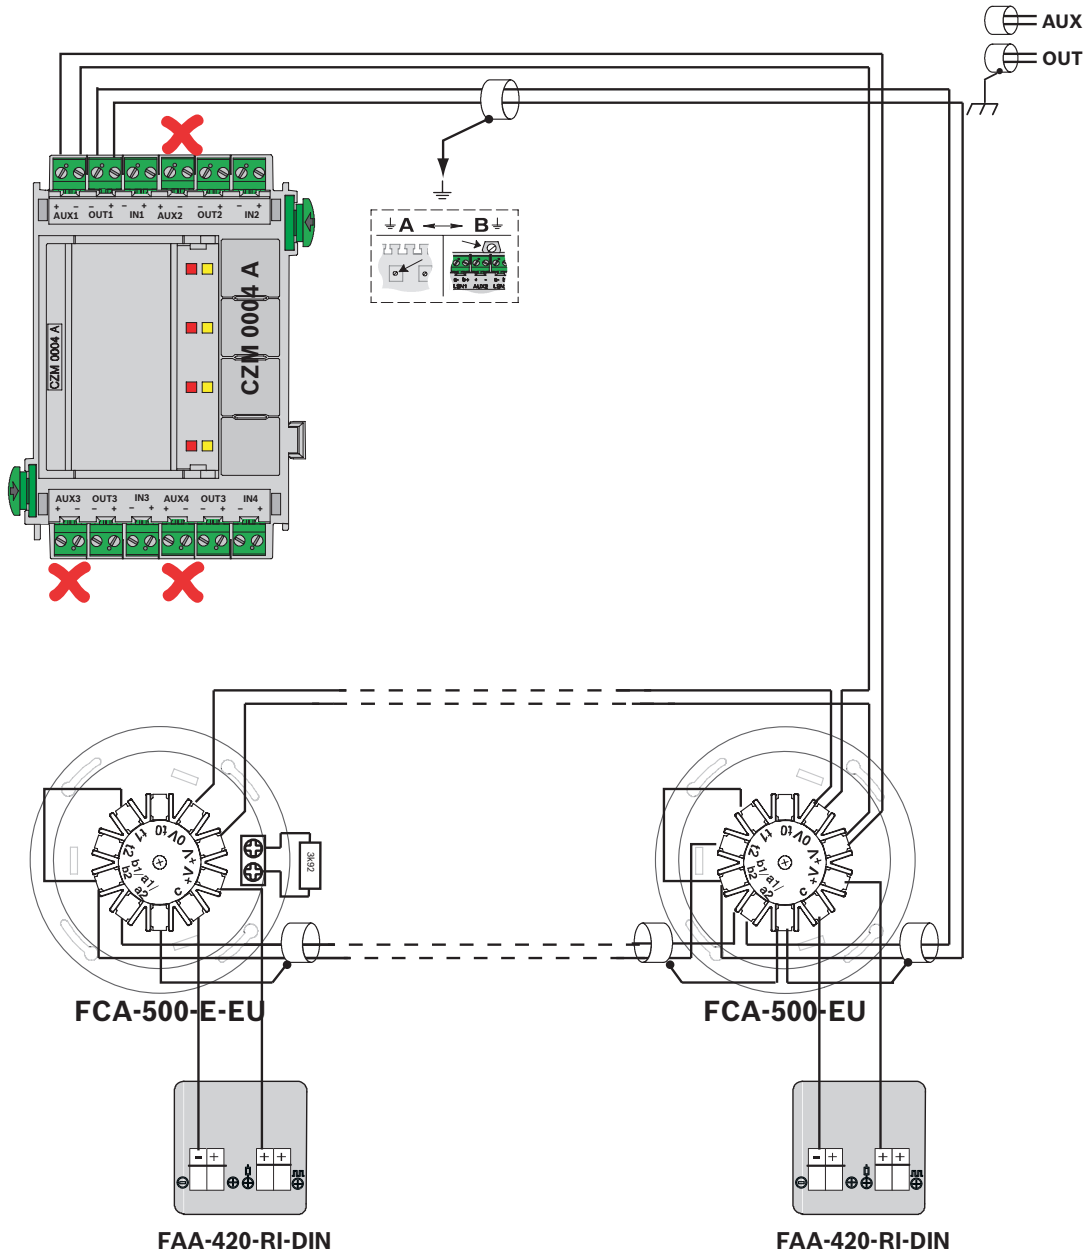





   **FMC-120-DKM-G-R**  
**FMC-120-DKM-H-R**  
**FMC-120-DKM-G-B**  
**FMC-120-DKM-H-B**  
**FMC-120-DKM-G-Y**

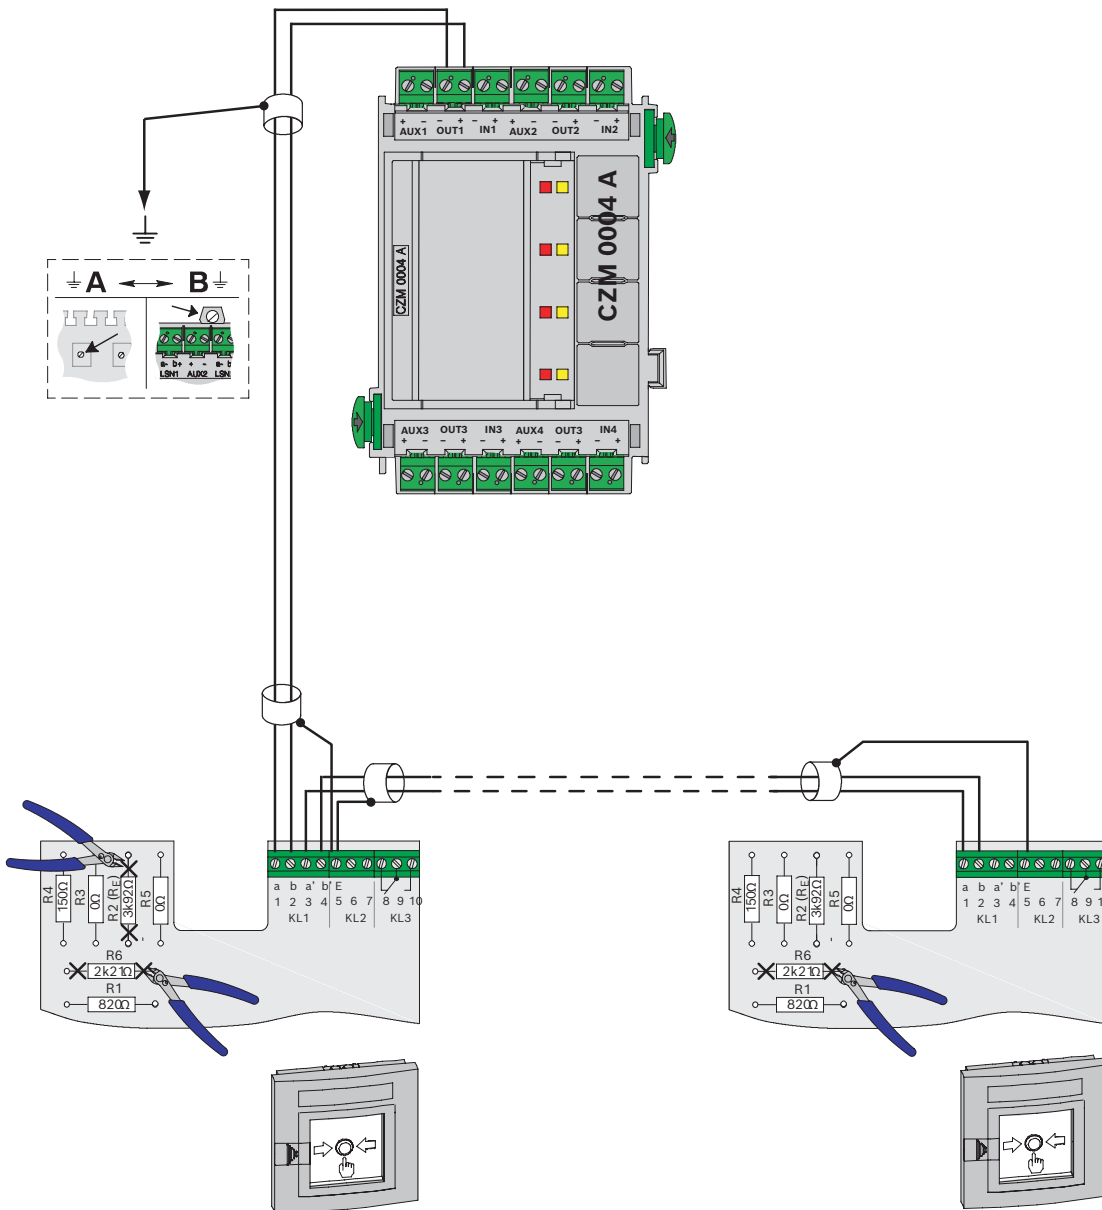



 
**FMC-300RW-GSGBU**  
**FMC-300RW-GSRBU**  
**FMC-300RW-GSGRD**  
**FMC-300RW-GSRRD**  
**FMC-300RW-GSGYE**  
**FMC-300RW-GSRYE**

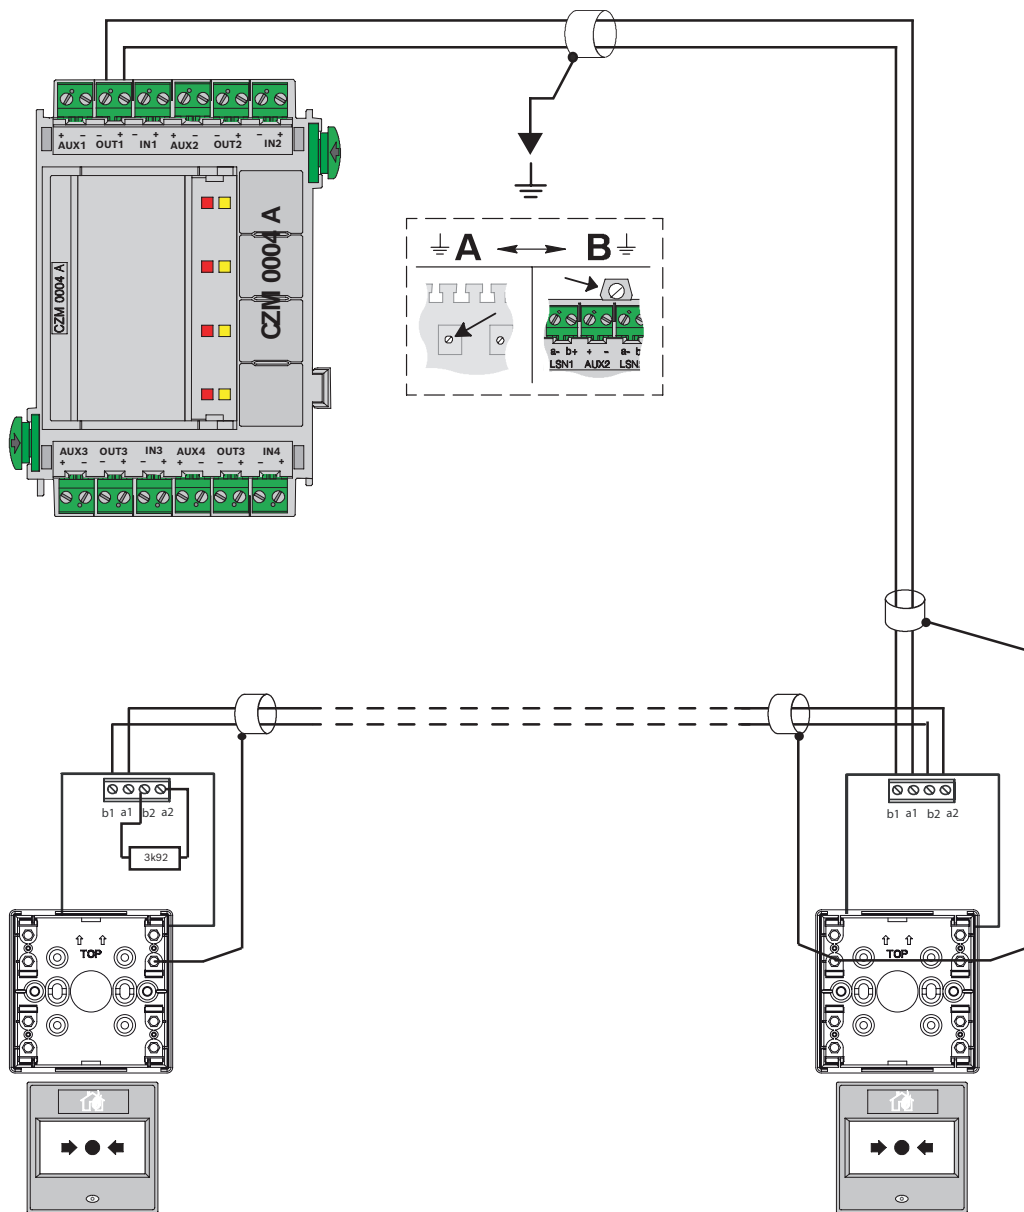


### 2.4.3 ENO 0000 A/B




 AT5000 IP/GPRS







EN 54-2


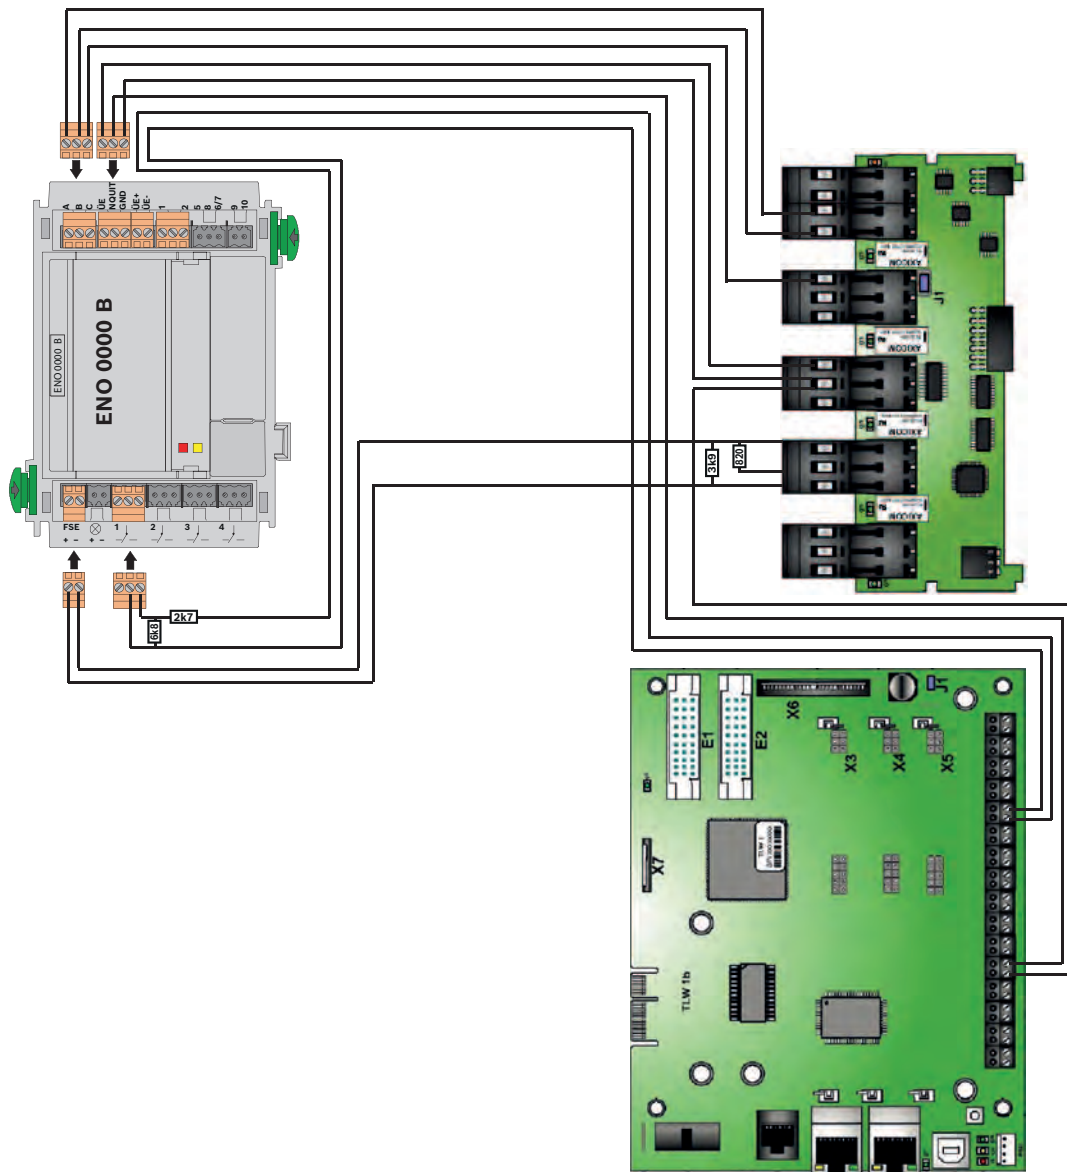


 



**MDL-F**

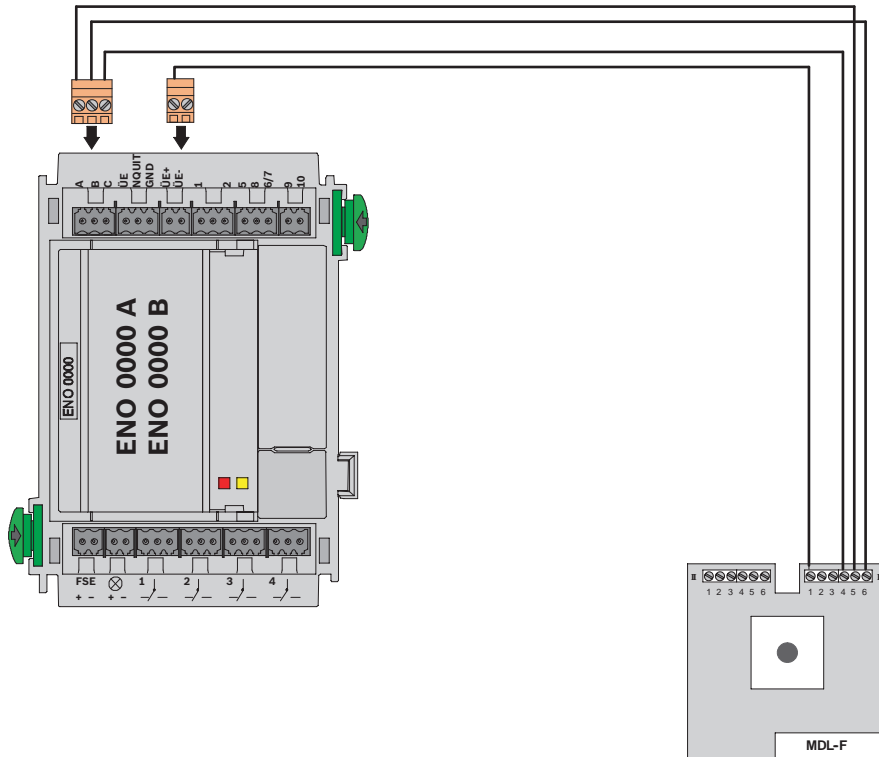

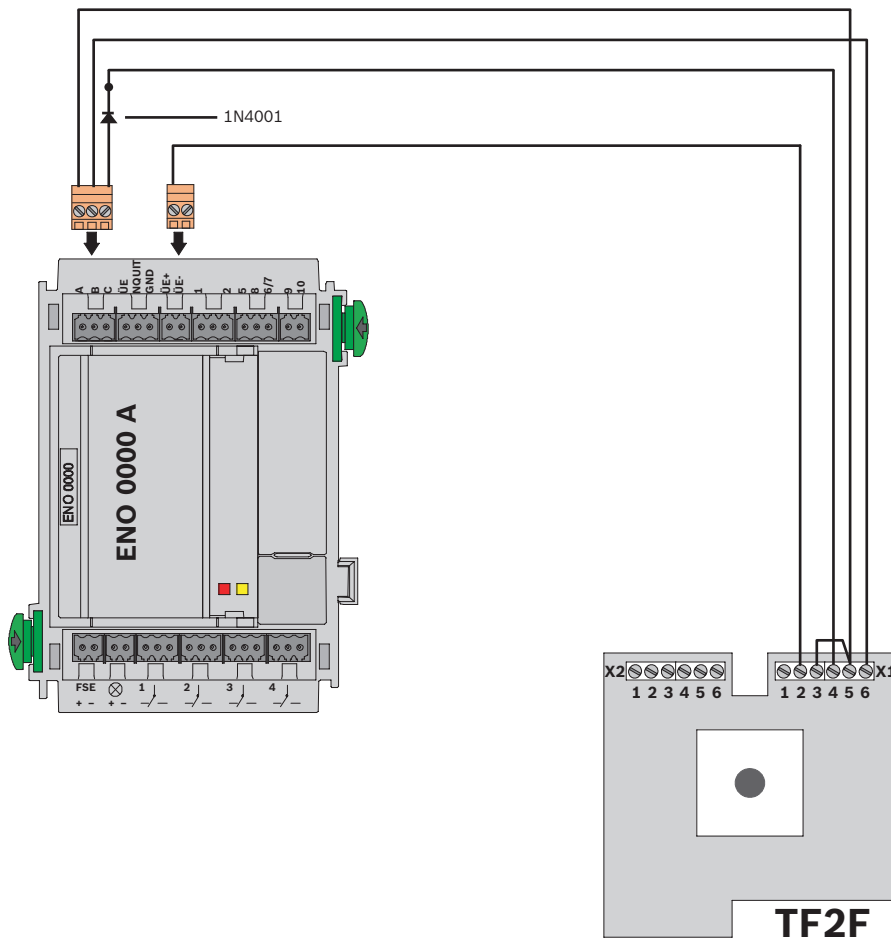  


  


TF2F

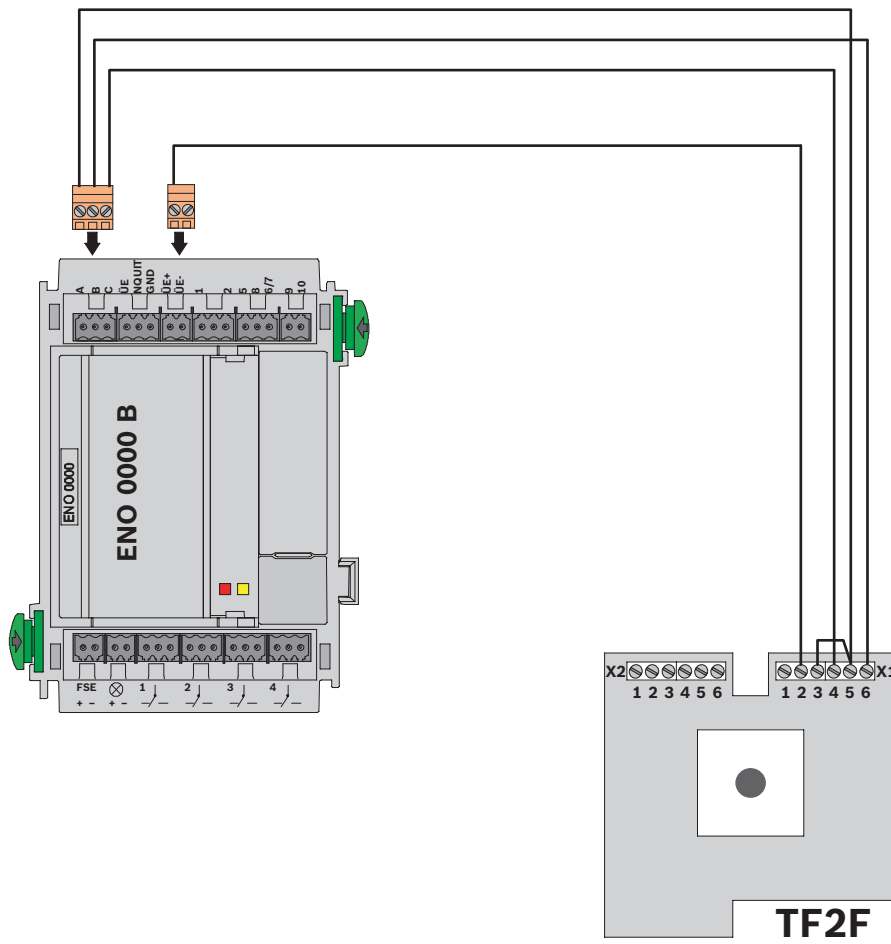 





 



**UE-F-D/T**

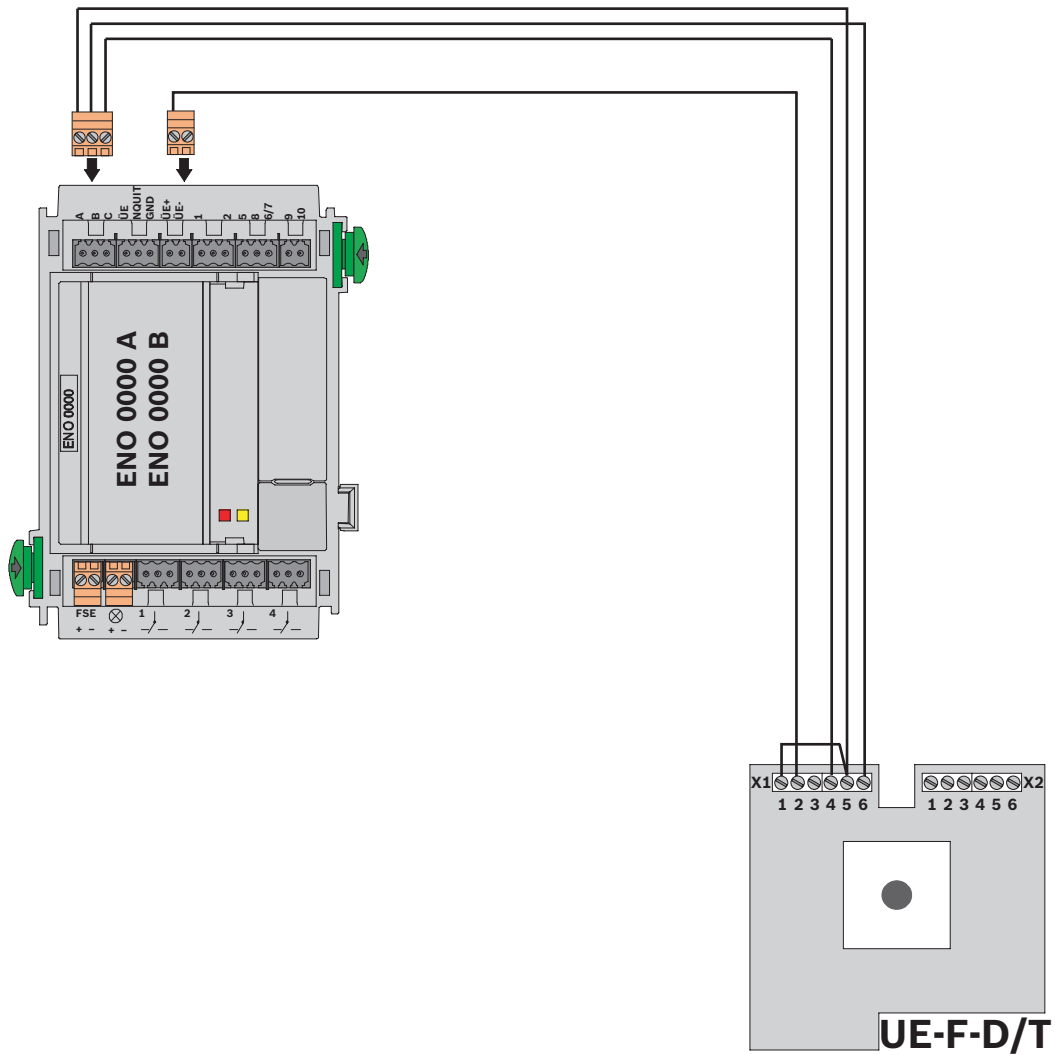


 


**GÜ 101-B**

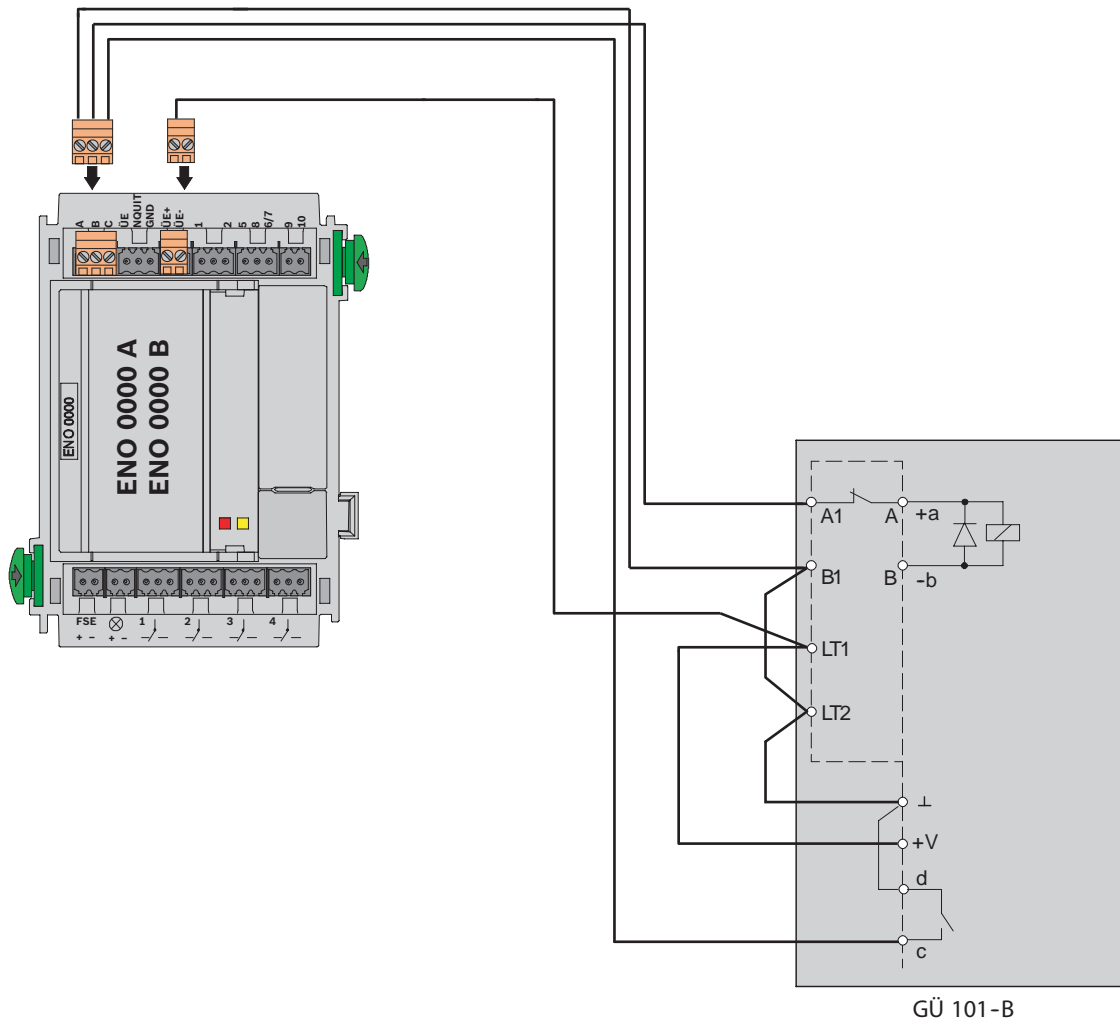 

 



**GÜ 101-B**

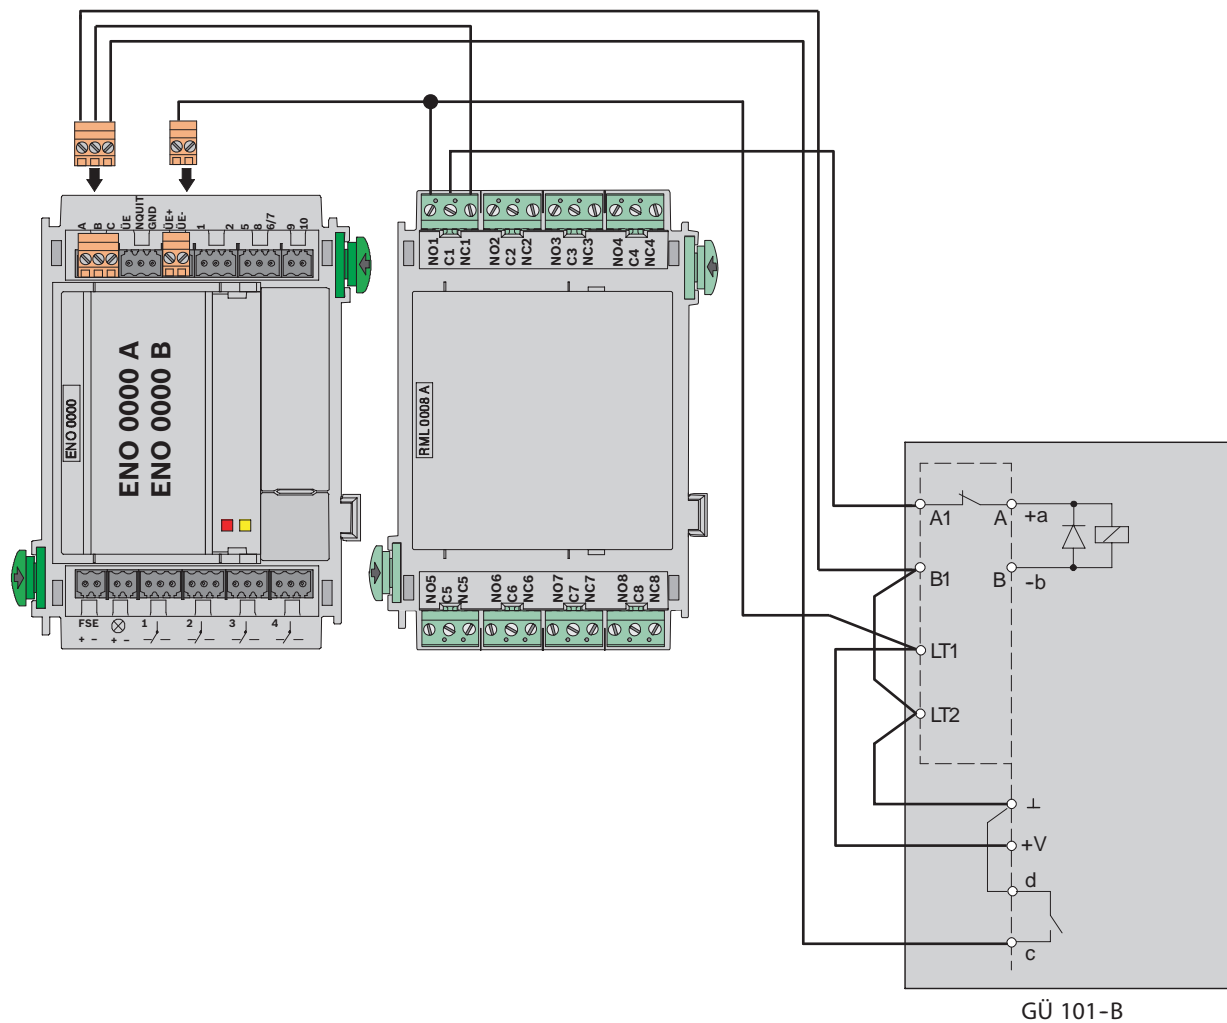
 


GÜ 101-B



2.4.4

  
 
LSN 0300 A

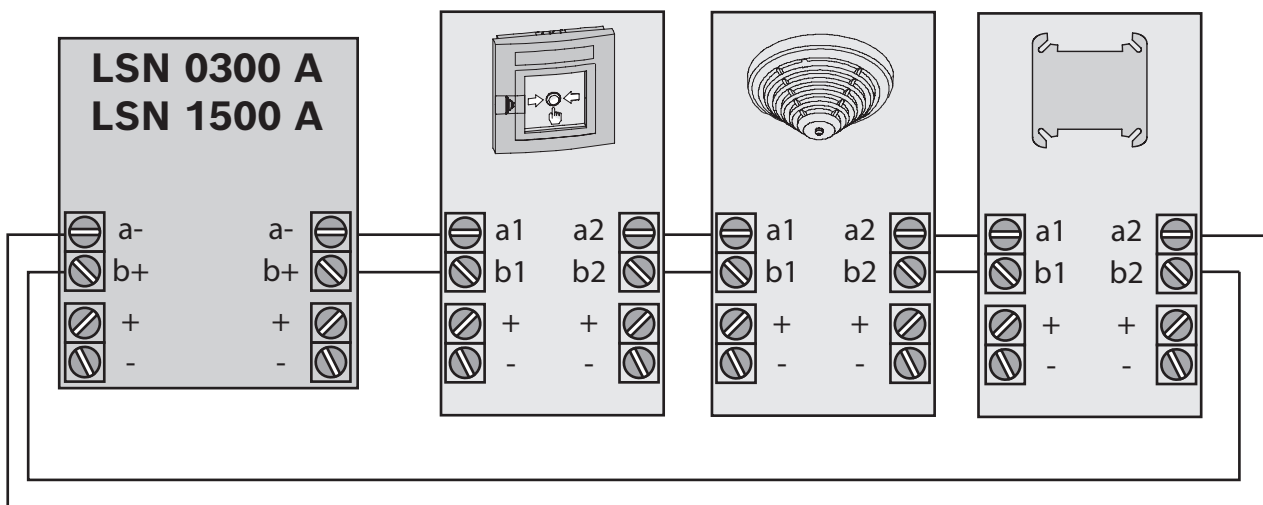






 
 
 
FLM-I 420-S  
 FLM-420-I2-D  
 FLM-420-O1I1-D  
 FLM-420-RHV-D/S  
 FLM-420-RLV1-D

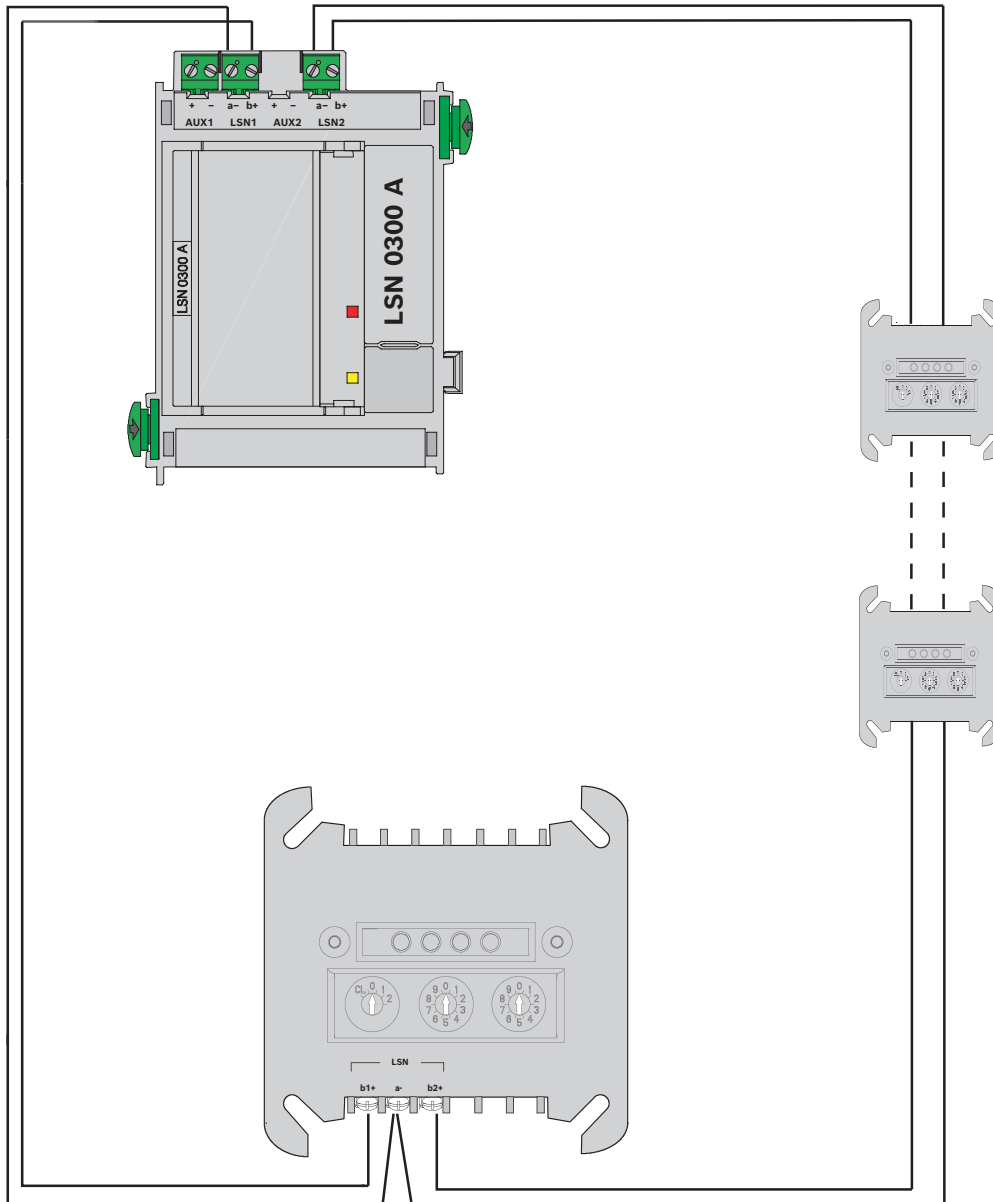







**FLM-420-I2-E/W**  
**FLM-420-RLV1-E**

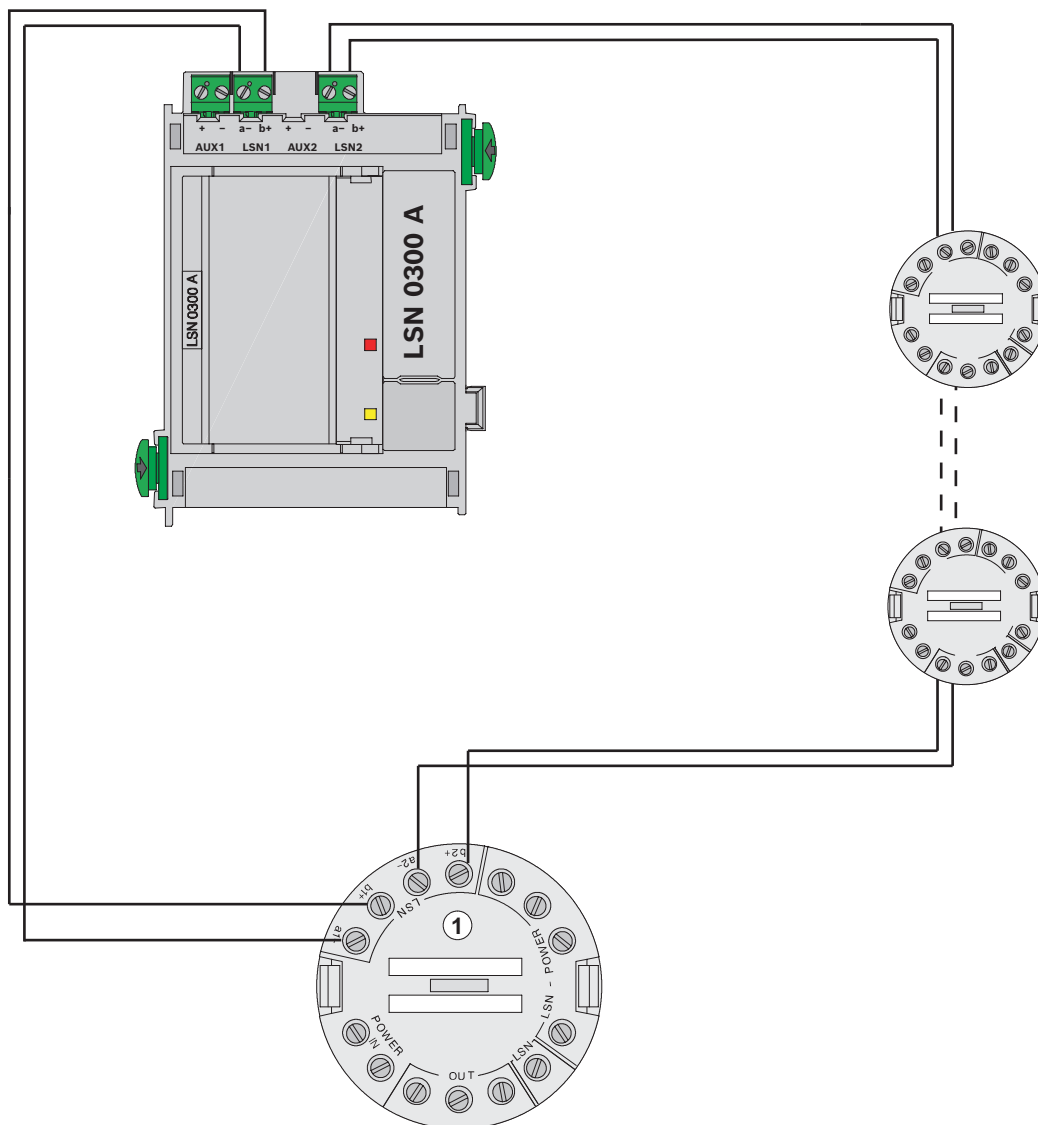 

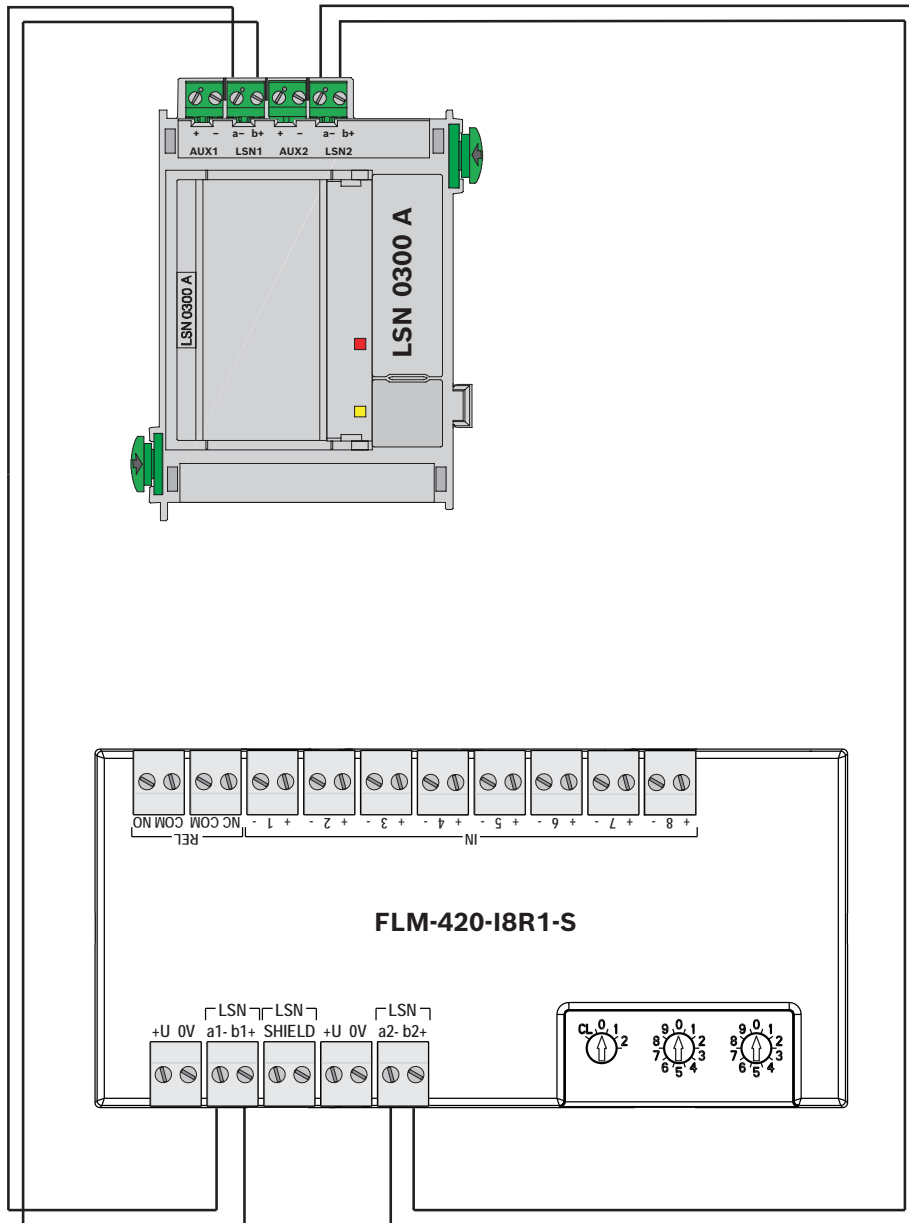
 
 
 


  


**FLM-420-0812-S**

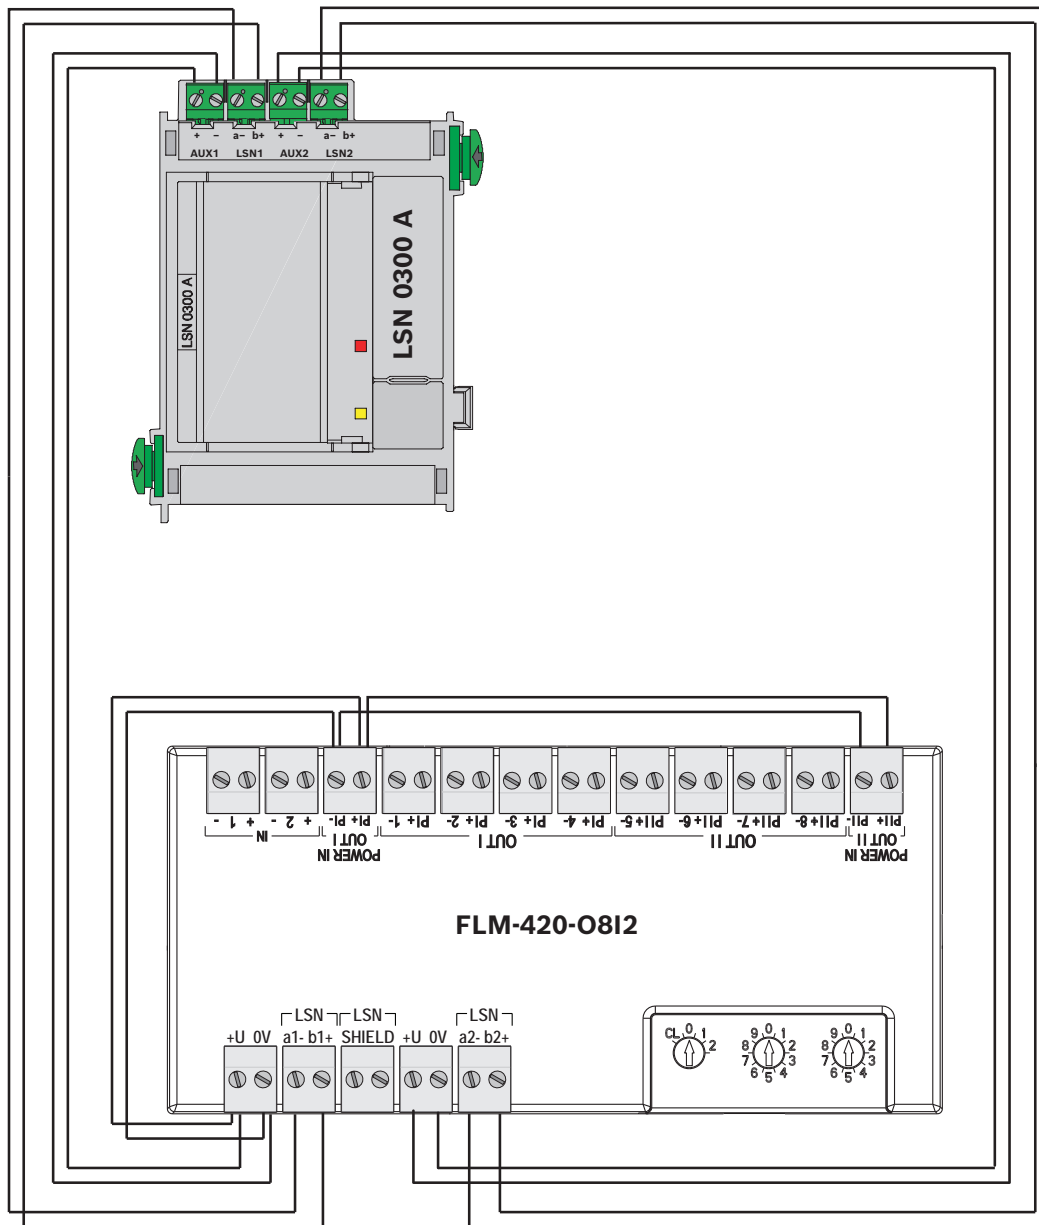
 






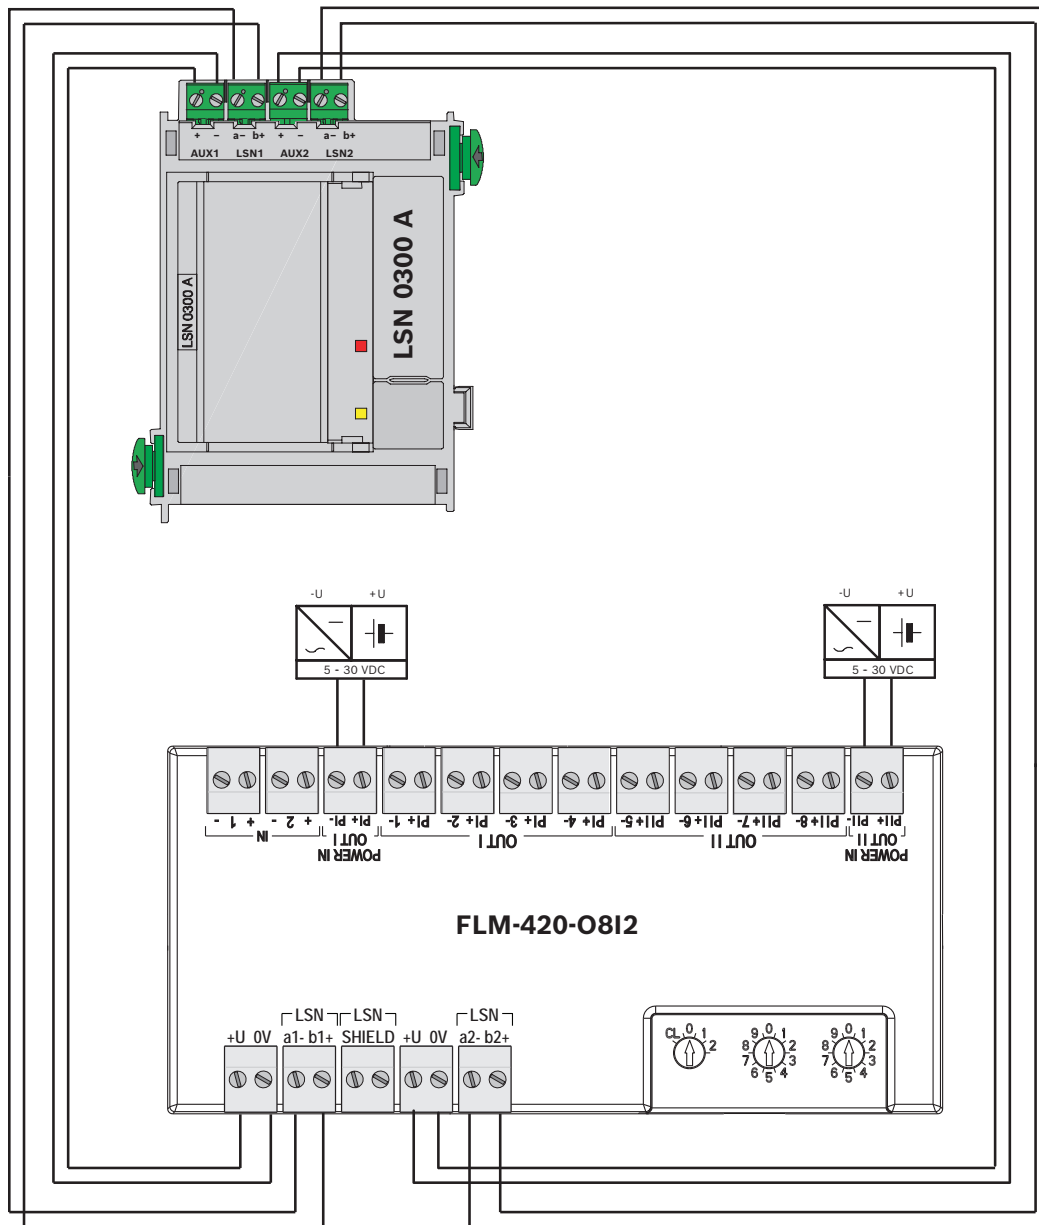   

 


FLM-420-NAC-D/S

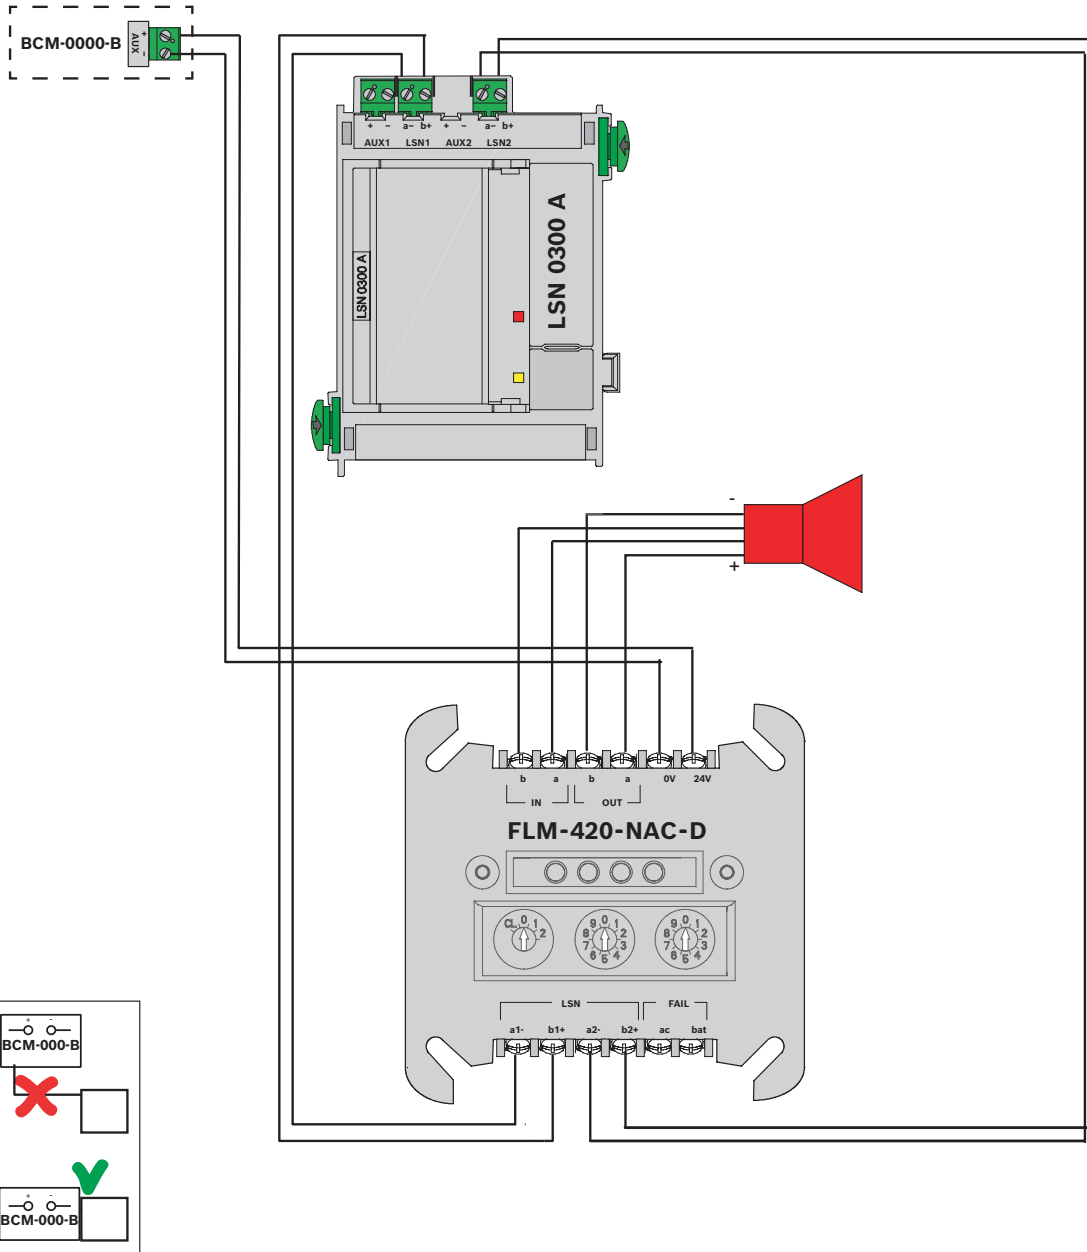 


 
 


FLM-420-NAC-D/S


 





EN 54-2

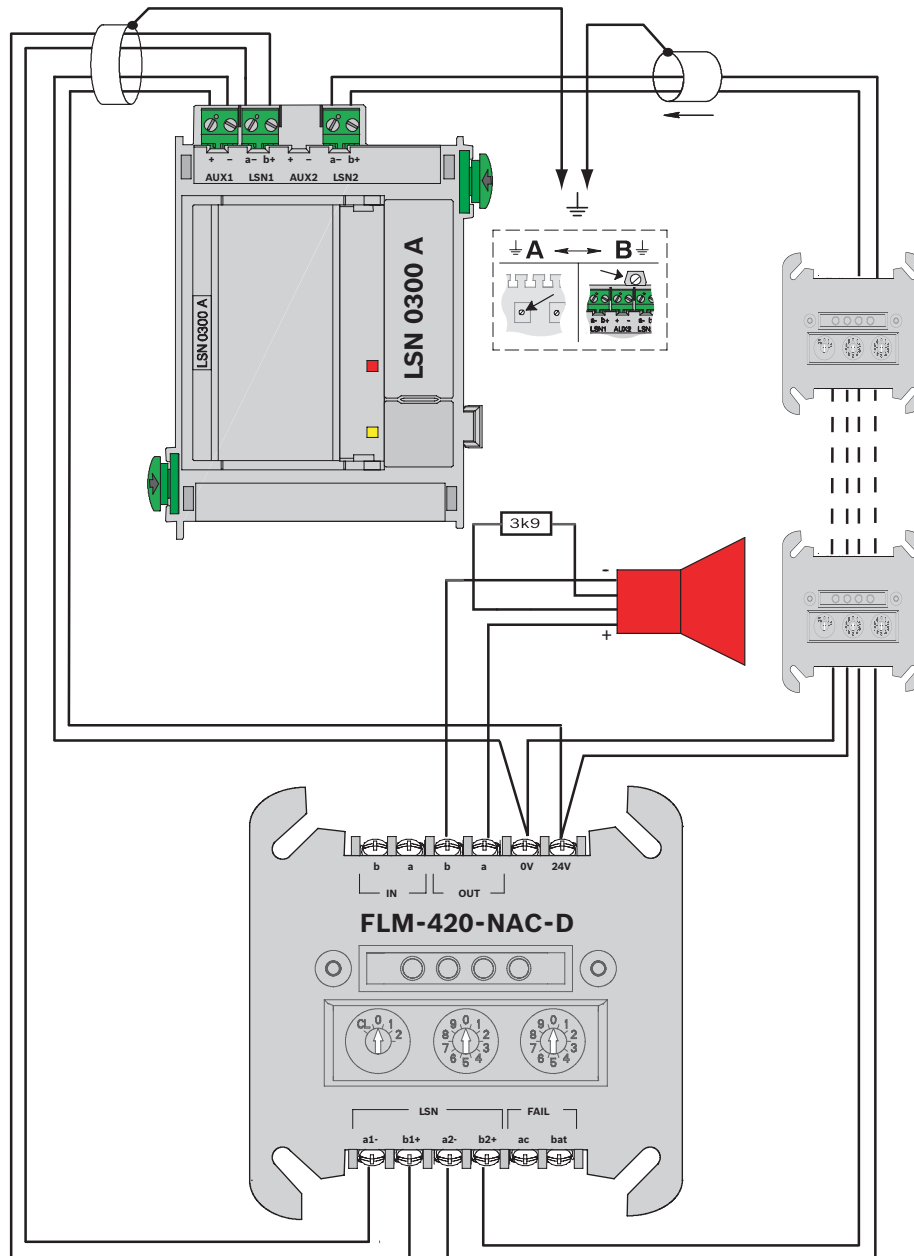


  



FLM-420-NAC-D/S

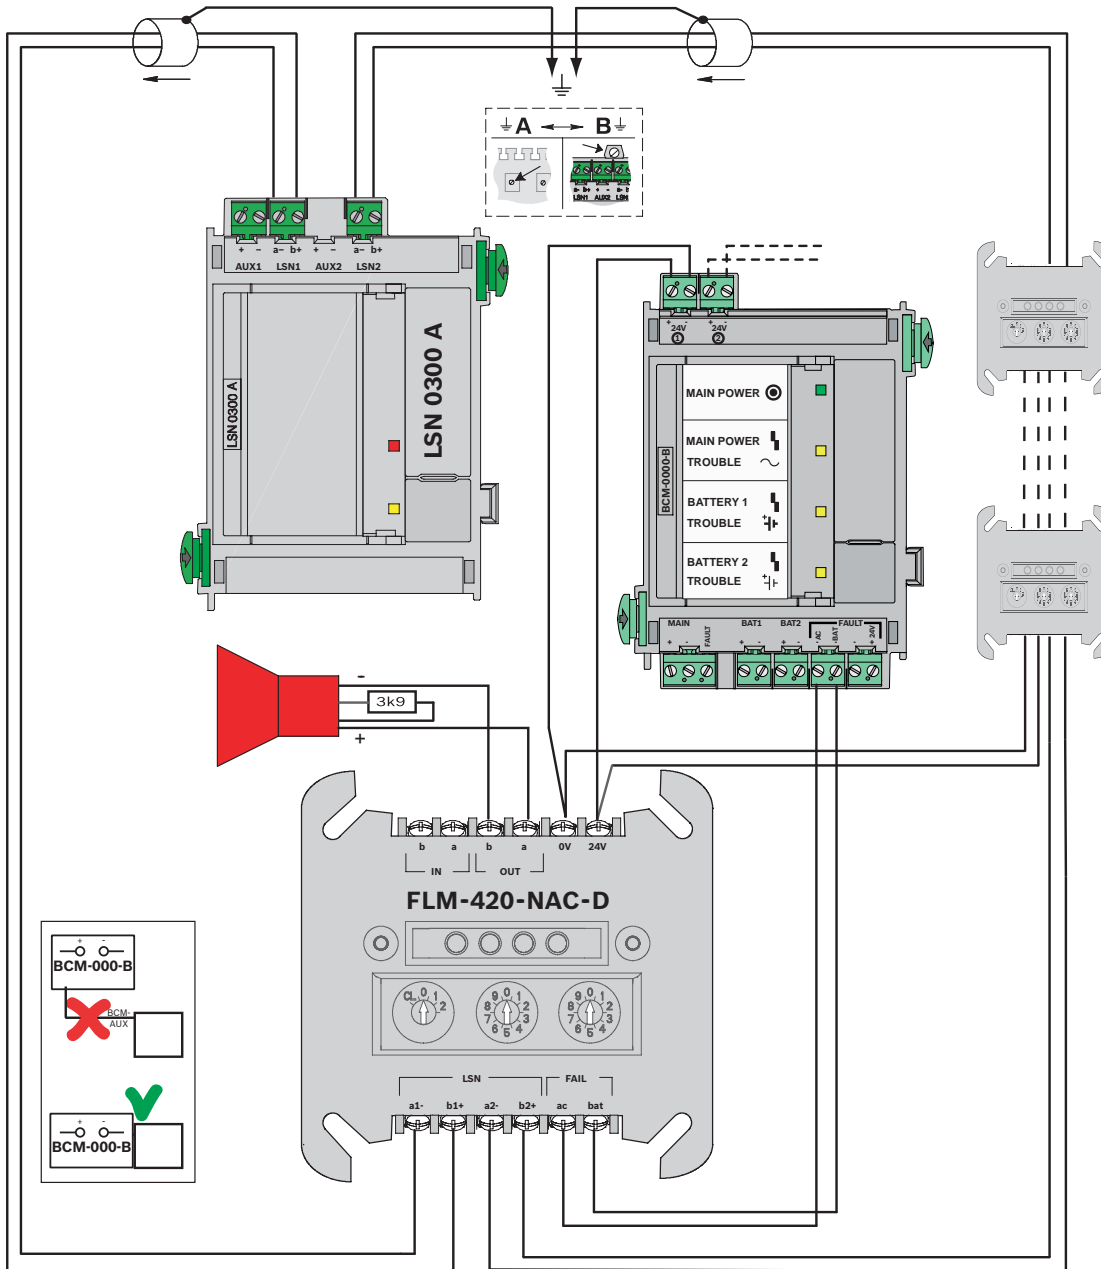
 


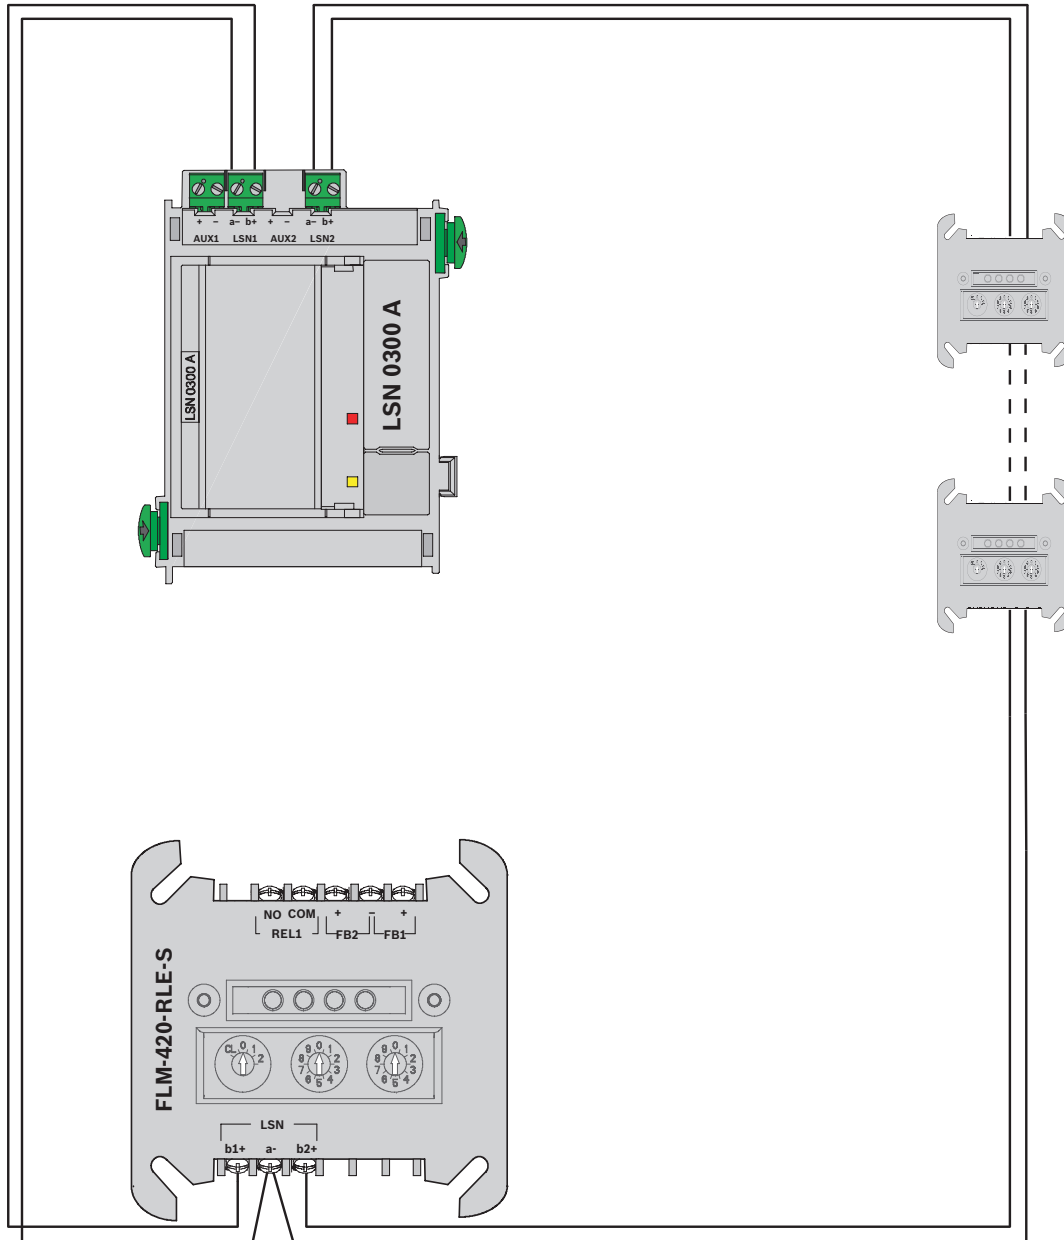  


 




**FLM-420-O111-D**

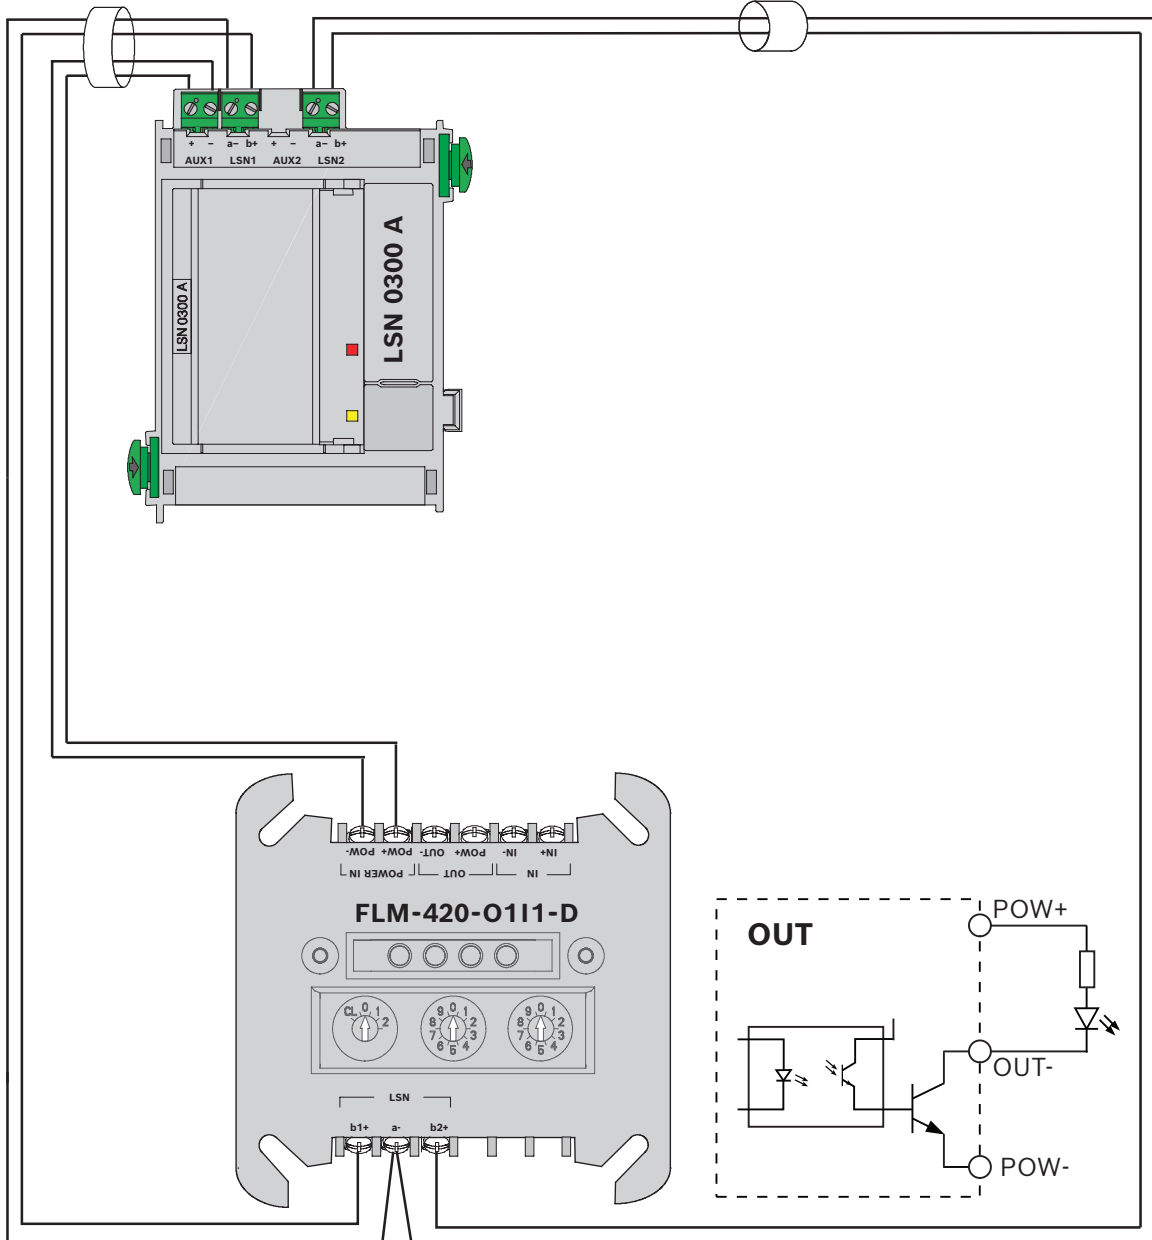 

 
 


**FLM-420-O111-D**

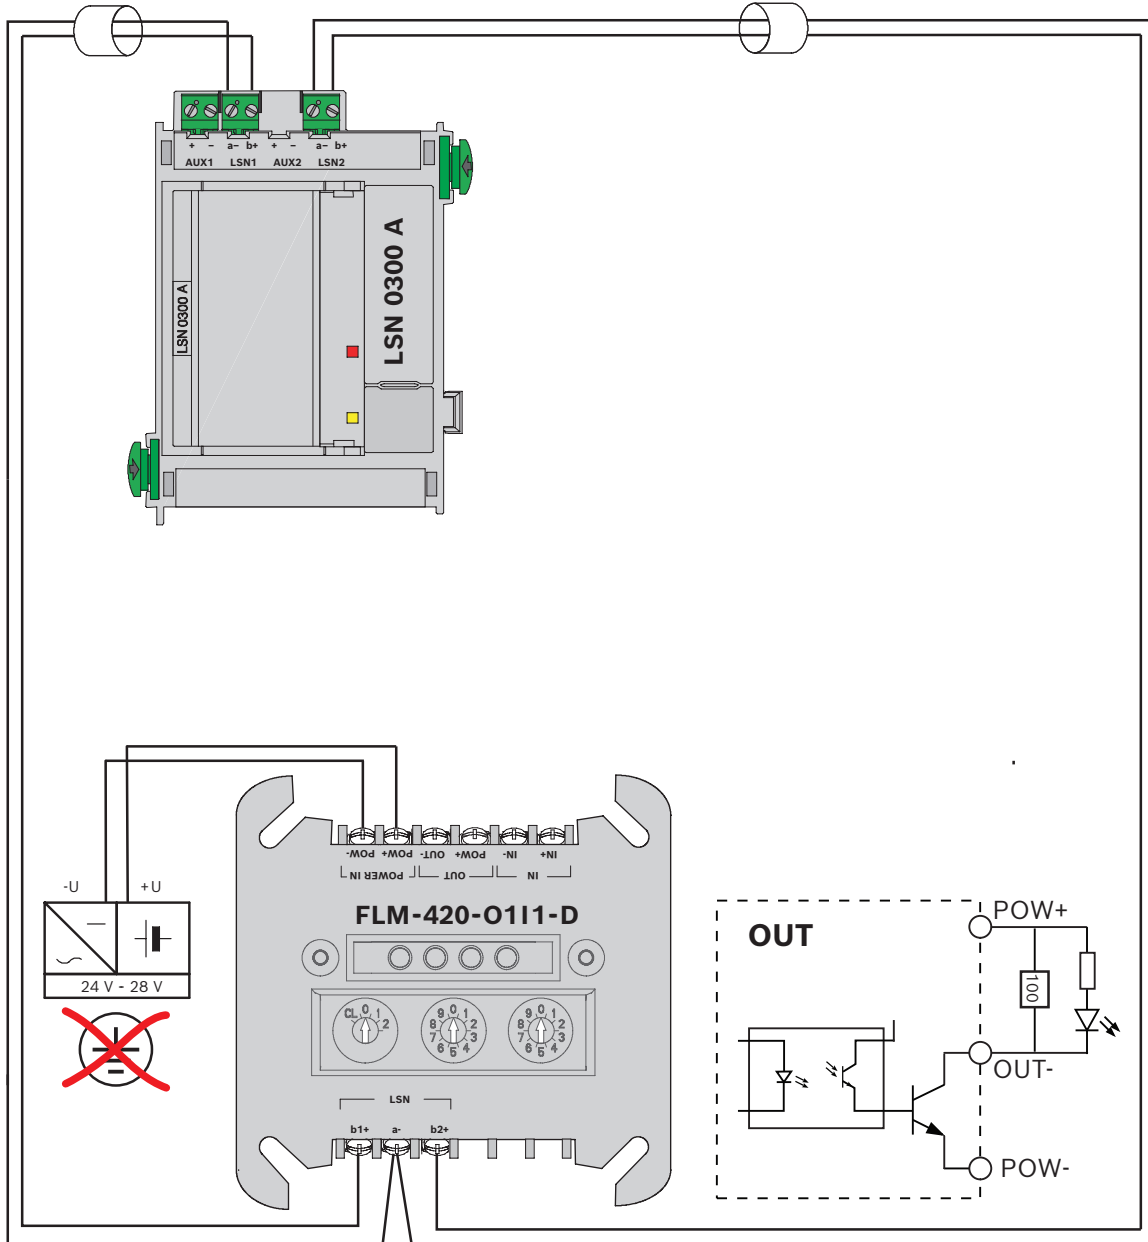
 


  



**FLM-420-O111-E**

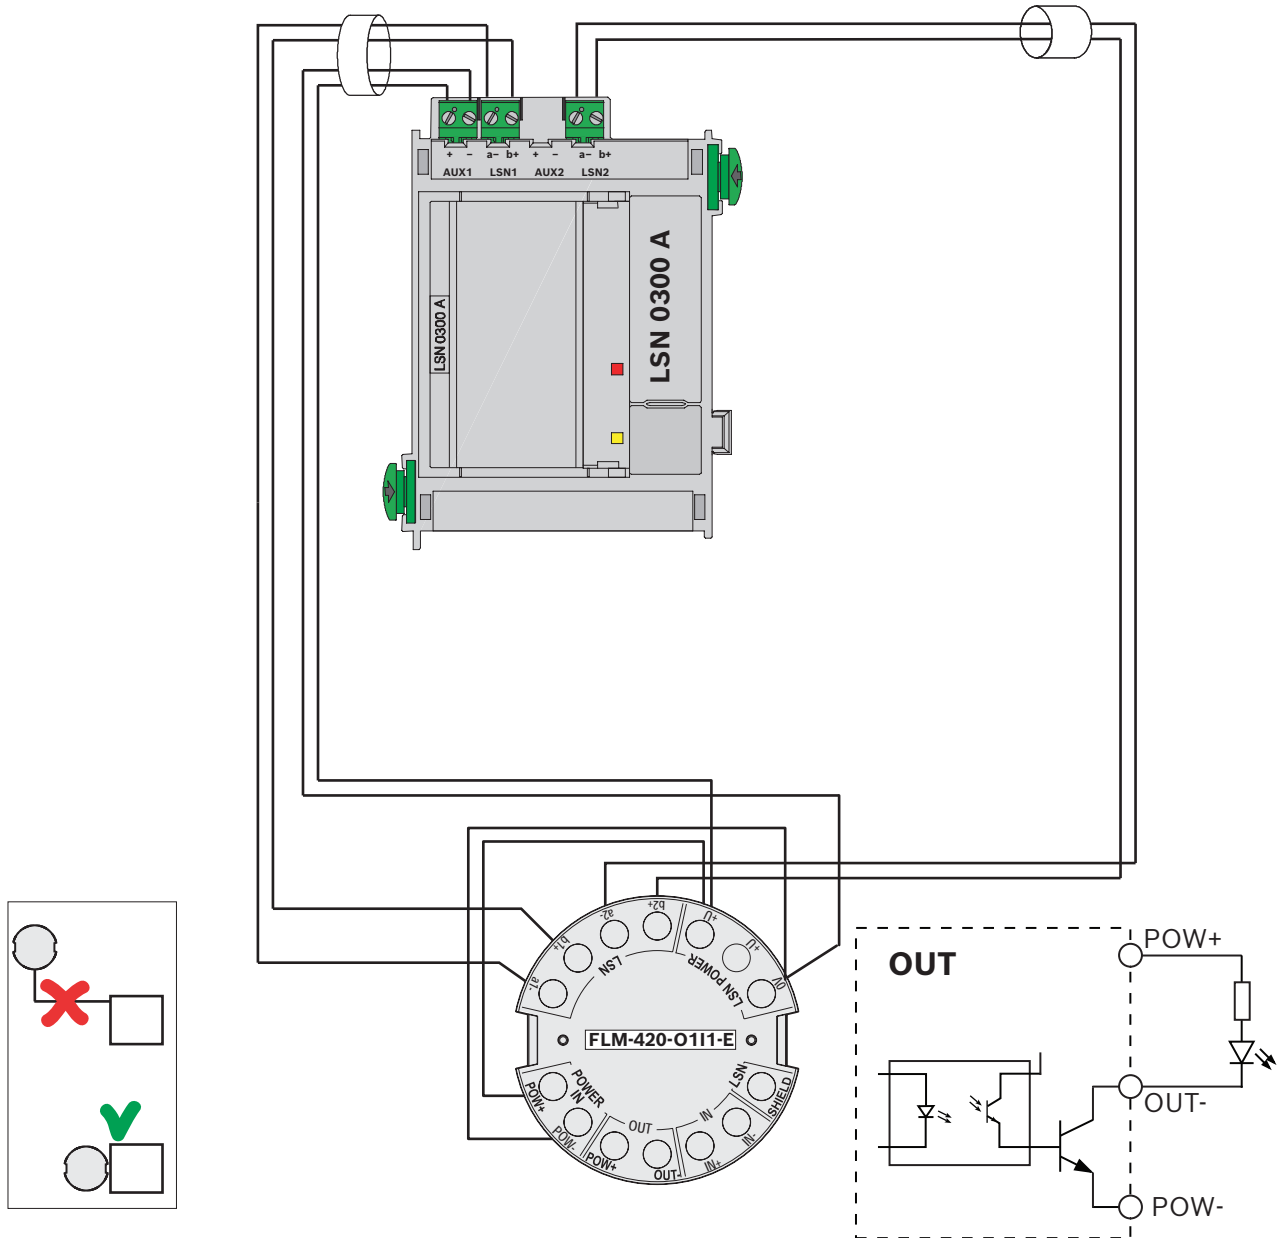 



  


**FLM-420-RLV8-S**

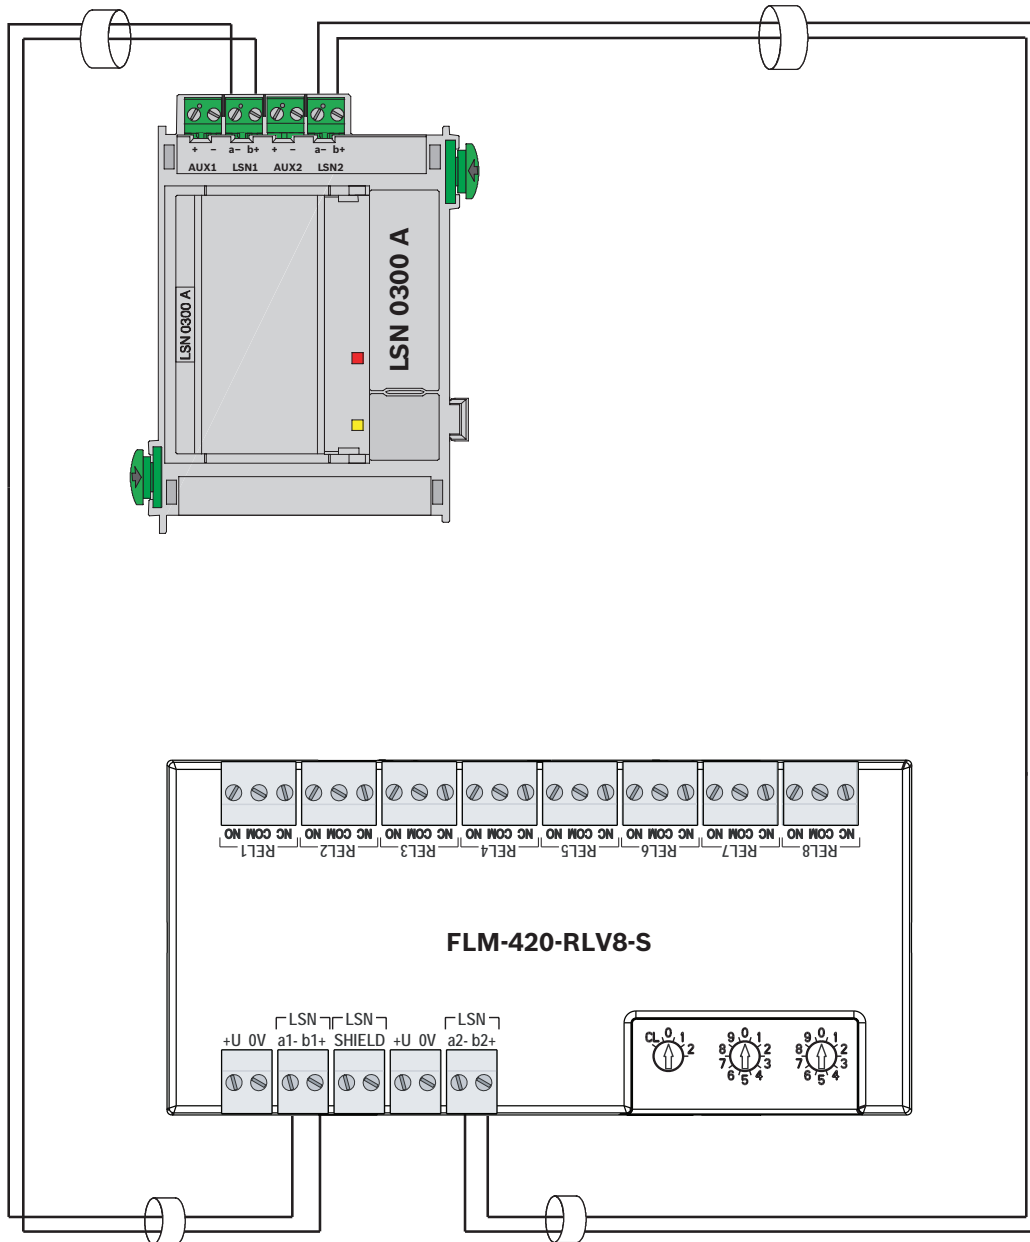 





FAD-0420

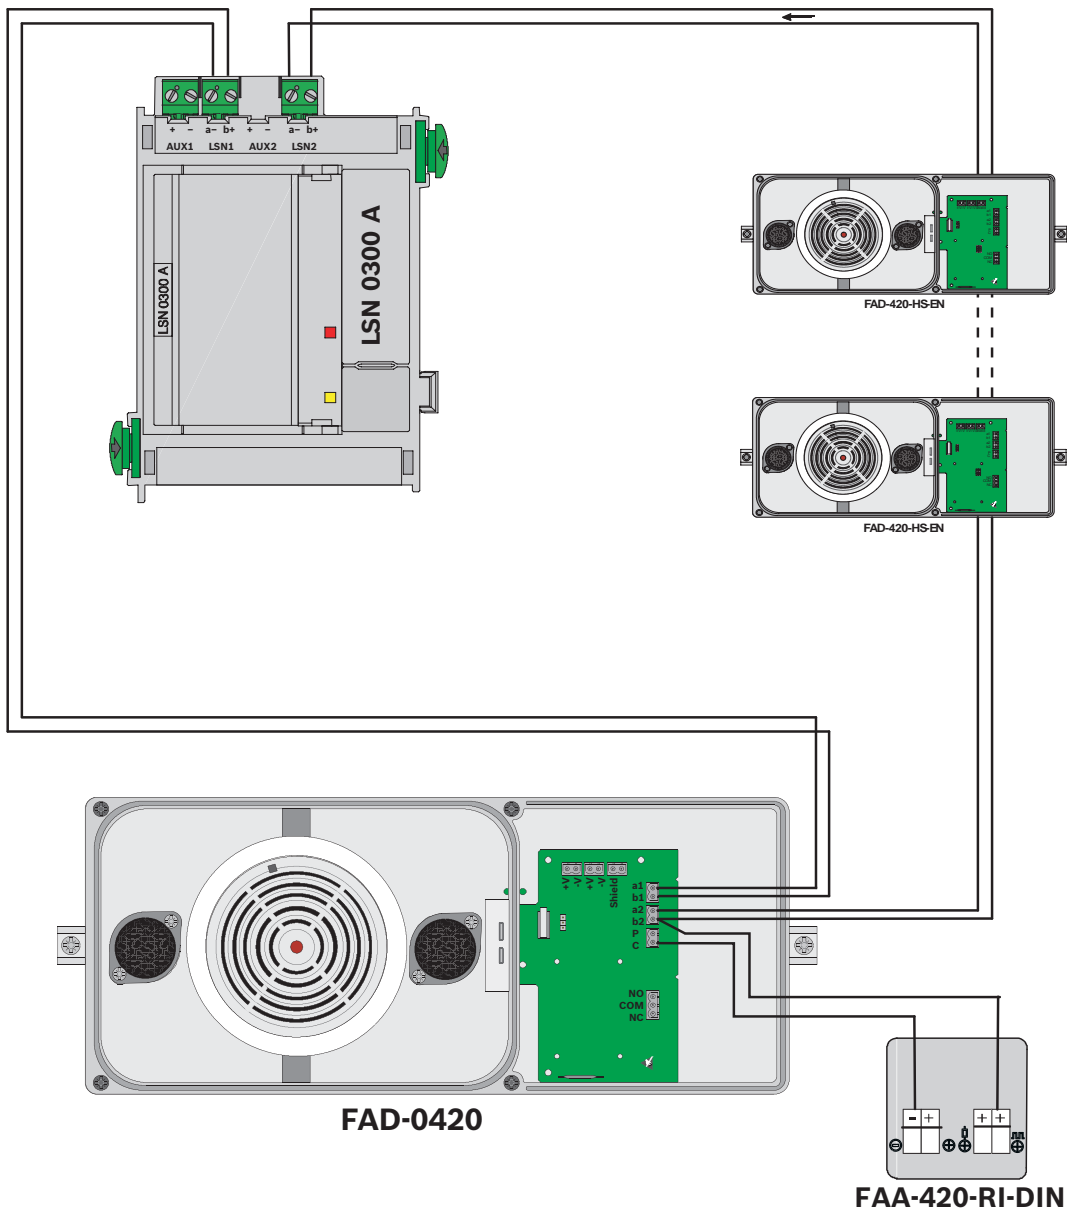





FAD-420-HS-EN

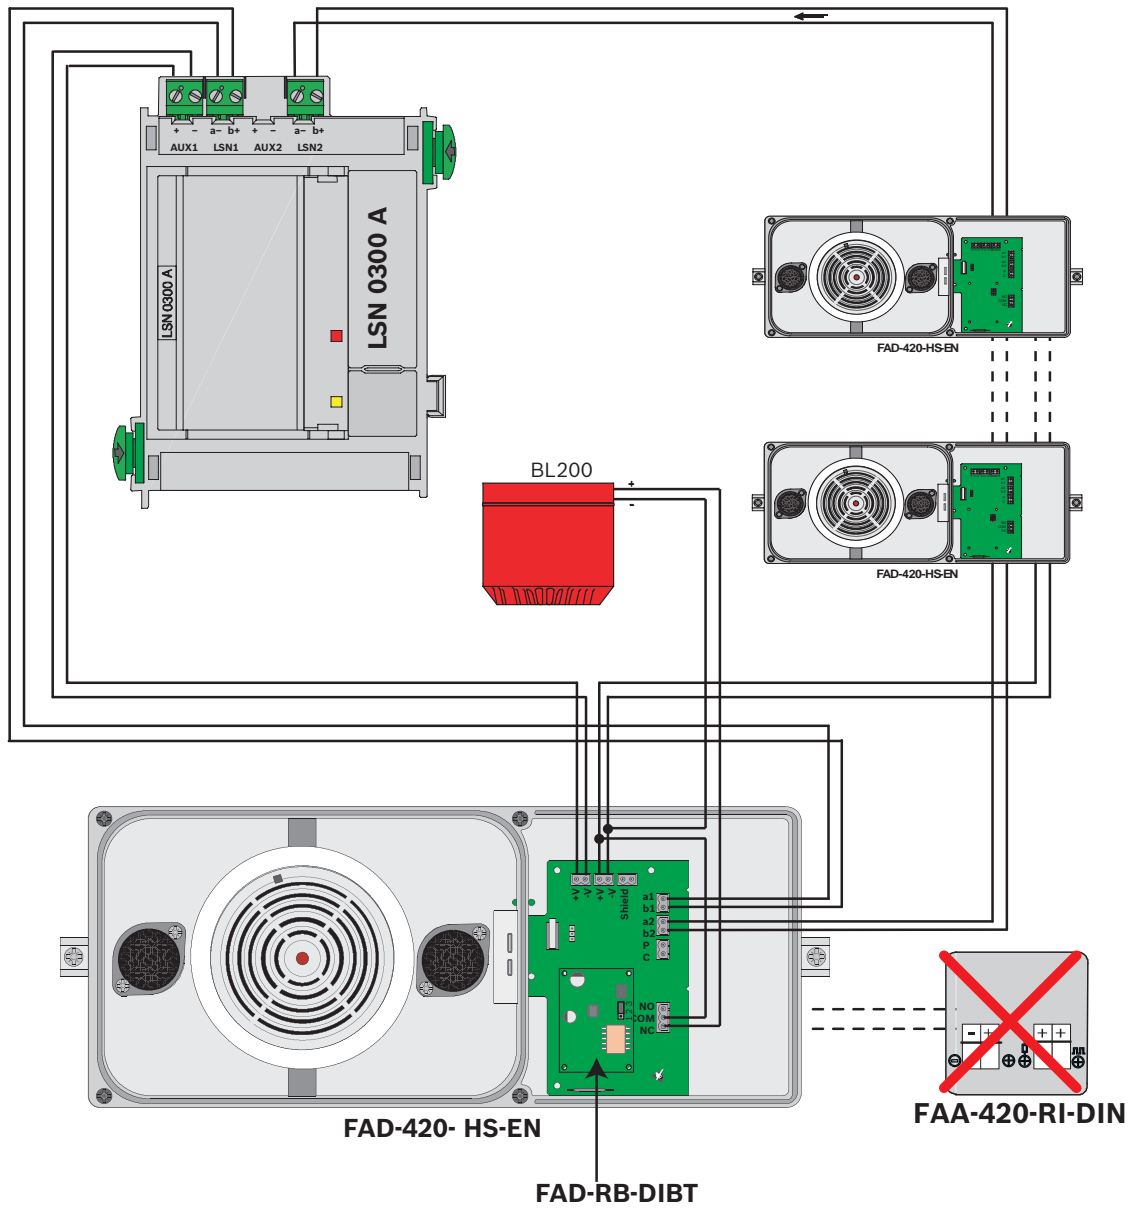

 



**FAS-420 Series**

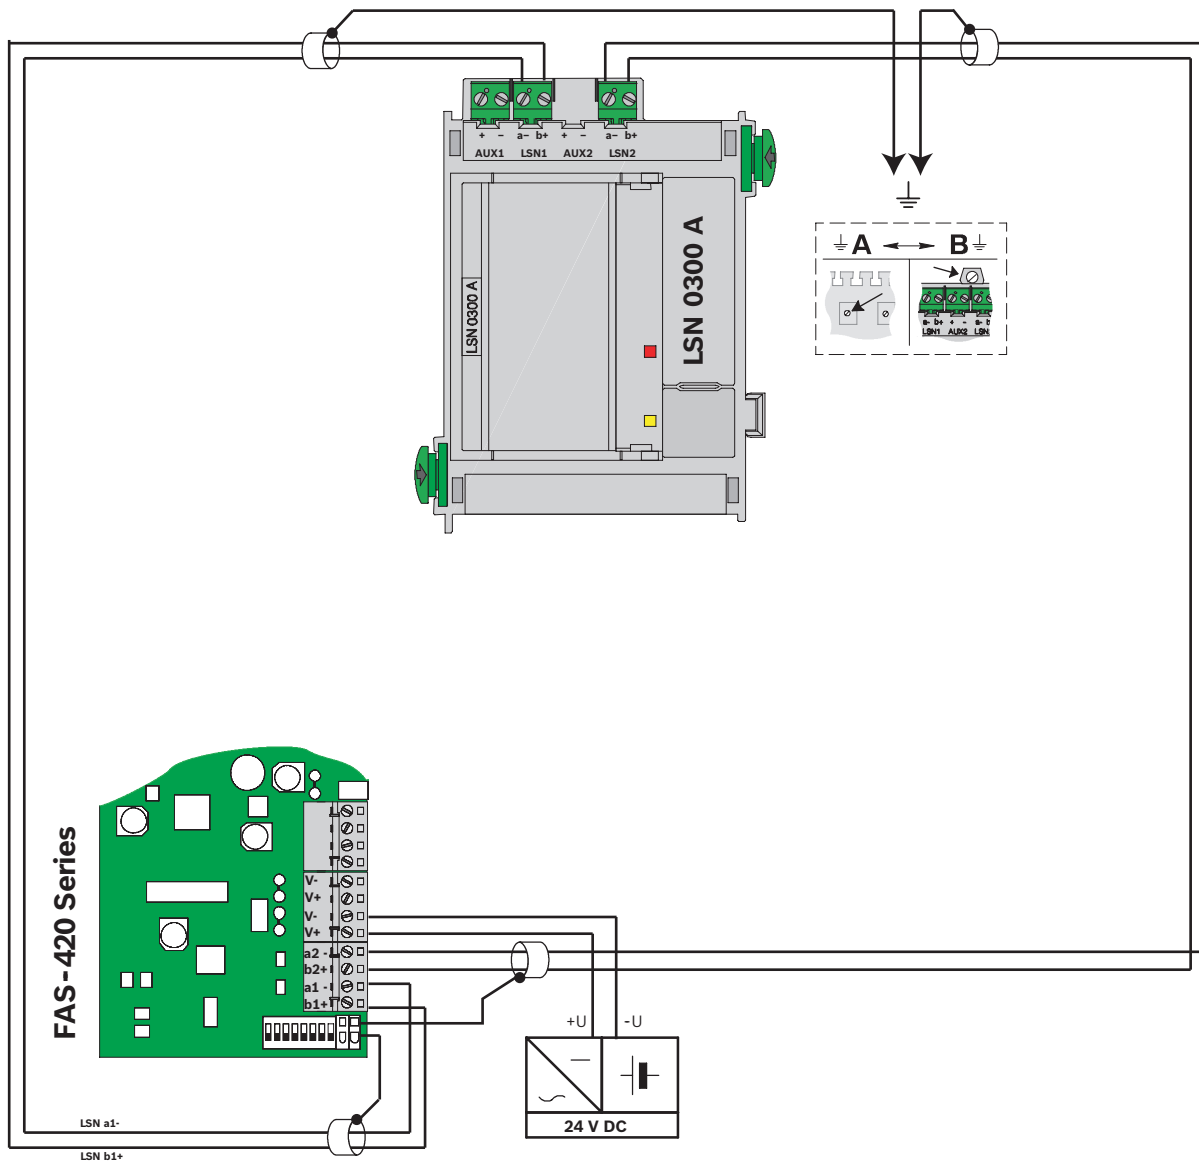


 


FAS-420-TM Series

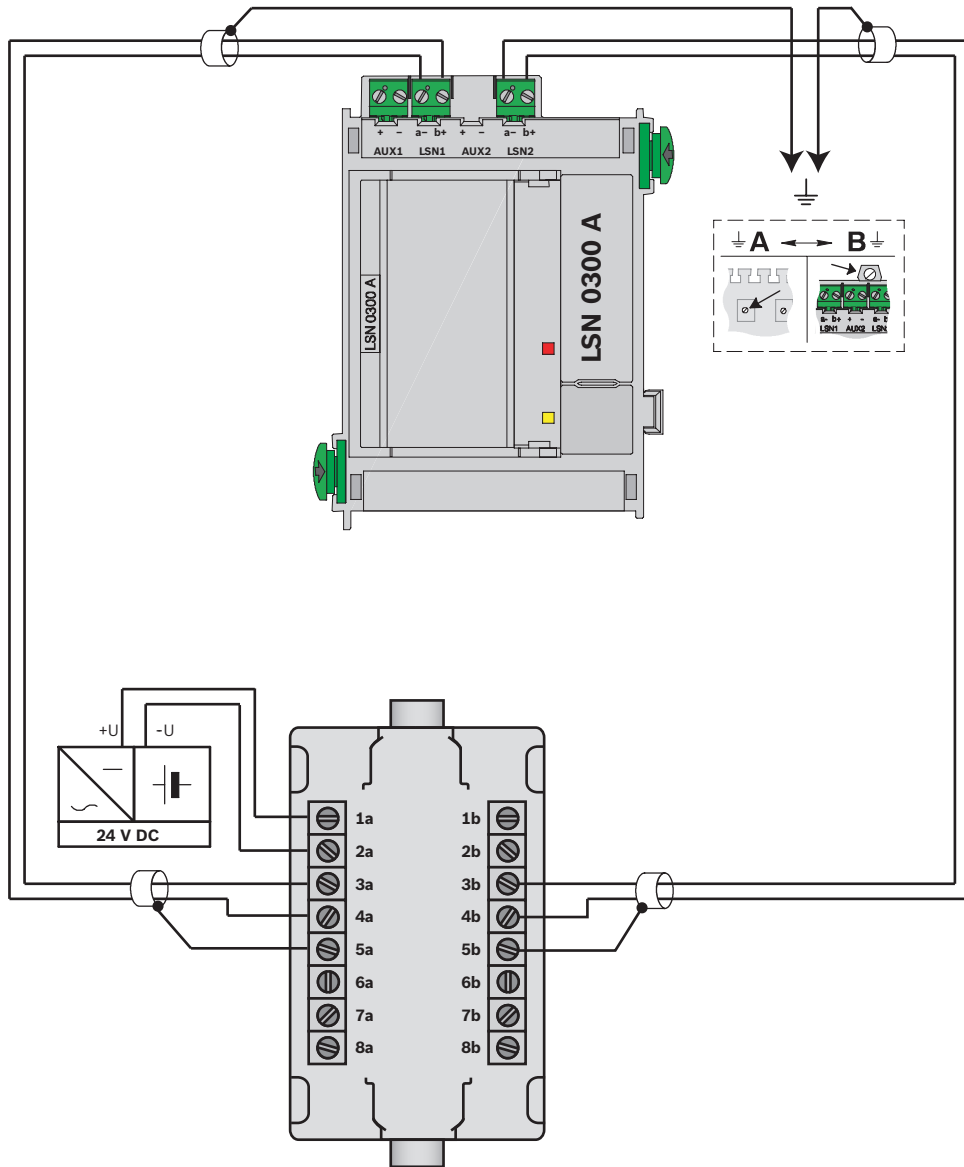

 

 **FNM-420-A / -B**  
**FNM-420U-A / -B**  
**FNM-420V-A**

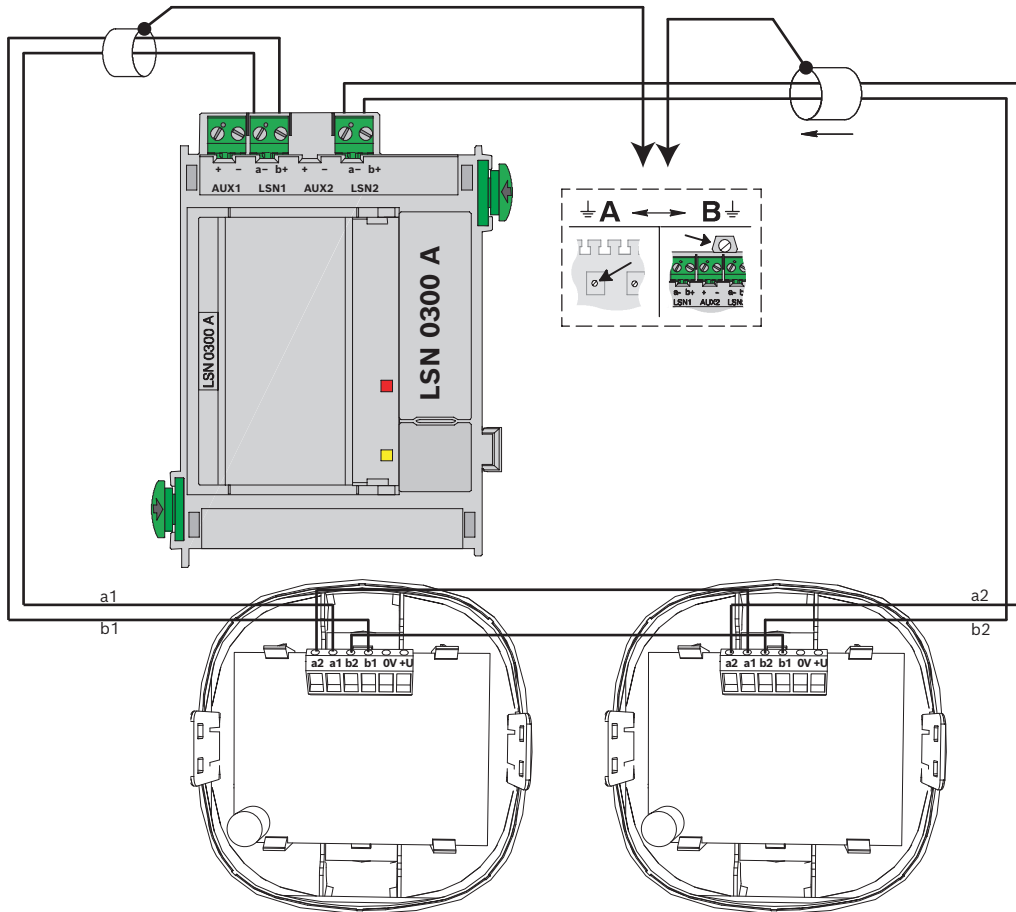



**FNM-420-A/-B**  
**FNM-420U-A/-B**  
**FNM-420V-A**

**FNM-420-A/-B**  
**FNM-420U-A/B**  
**FNM-420V-A**





 **FNM-420-A-BS**  
**FNM-420U-A-BS**

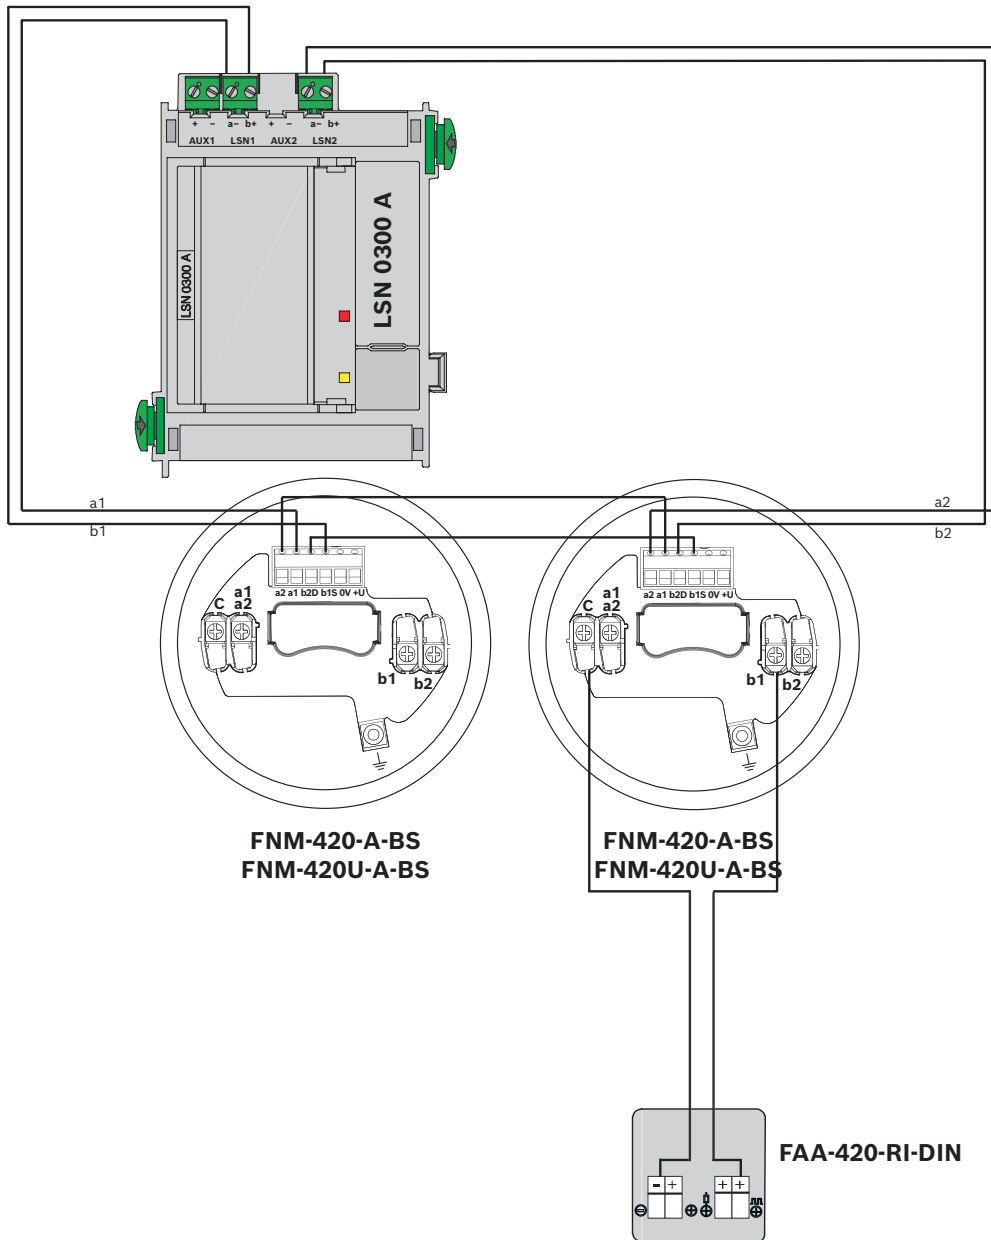






**FNM-420-A-BS**  
**FNM-420U-A-BS**

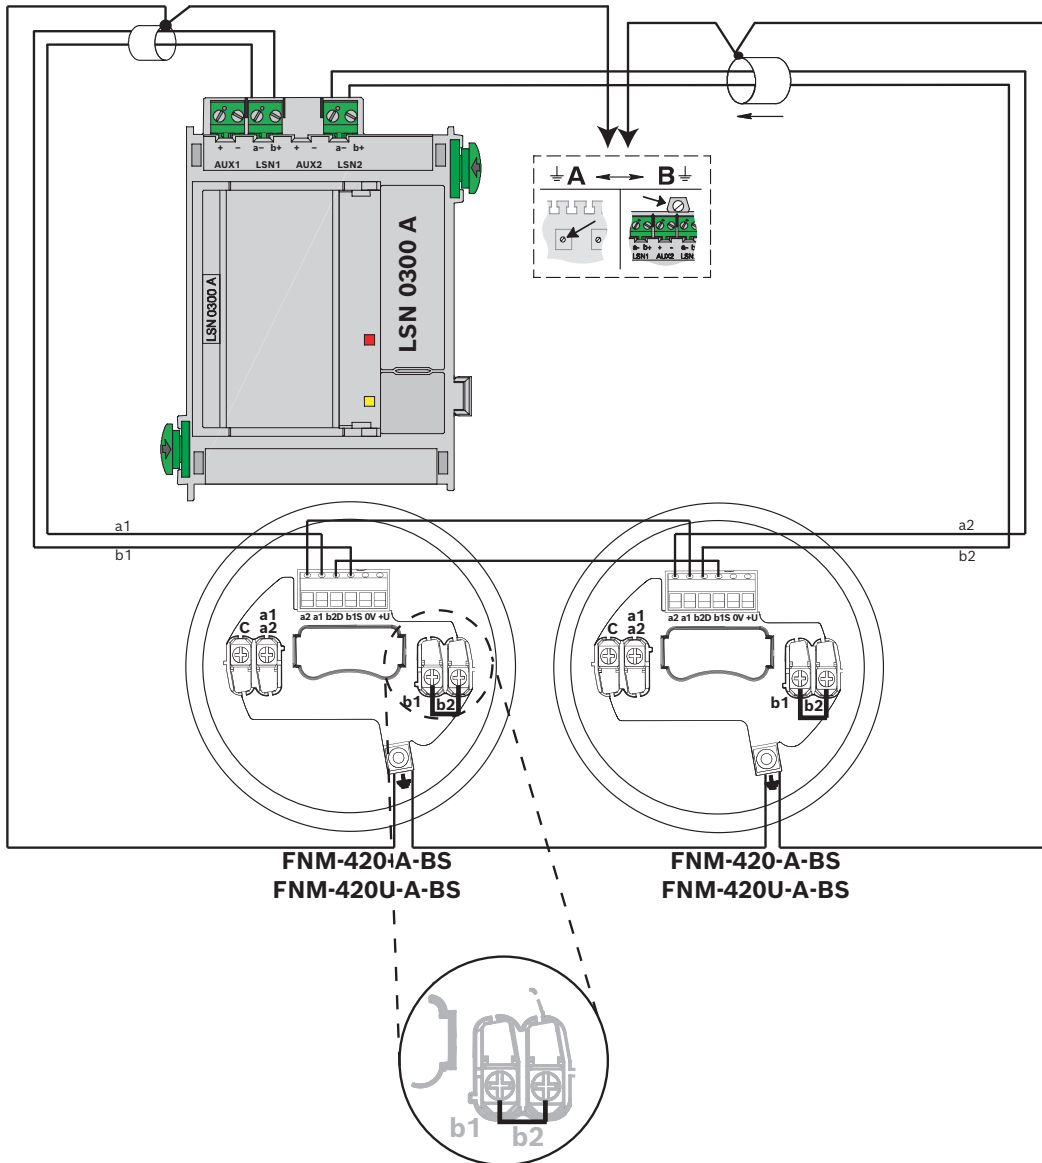 





 


  
FAP-0520  
FAP-0520-P  
FAP-OC520  
FAP-OC-520-P

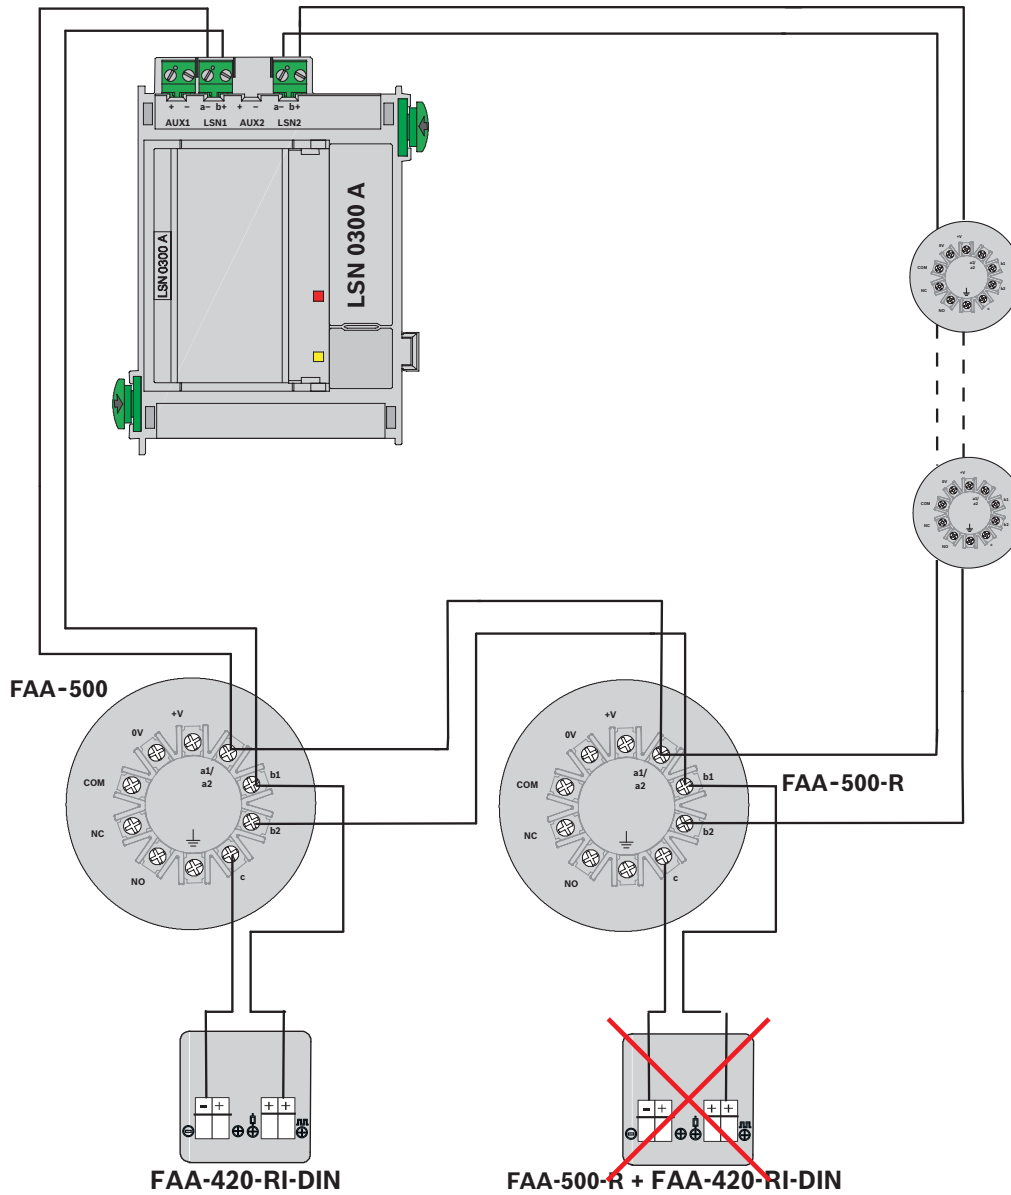






 
 
**FAA-MSR-420**  
**FAP-425-O, FAP-425-O-R**  
**FAP-425-OT, FAP-425-OT-R**  
**FAP-425-T-R**  
**FAP-425-DO-R, FAP-425-DOT-R**  
**FAP-425-DOTC-R, FAP-425-DOTCO-R**

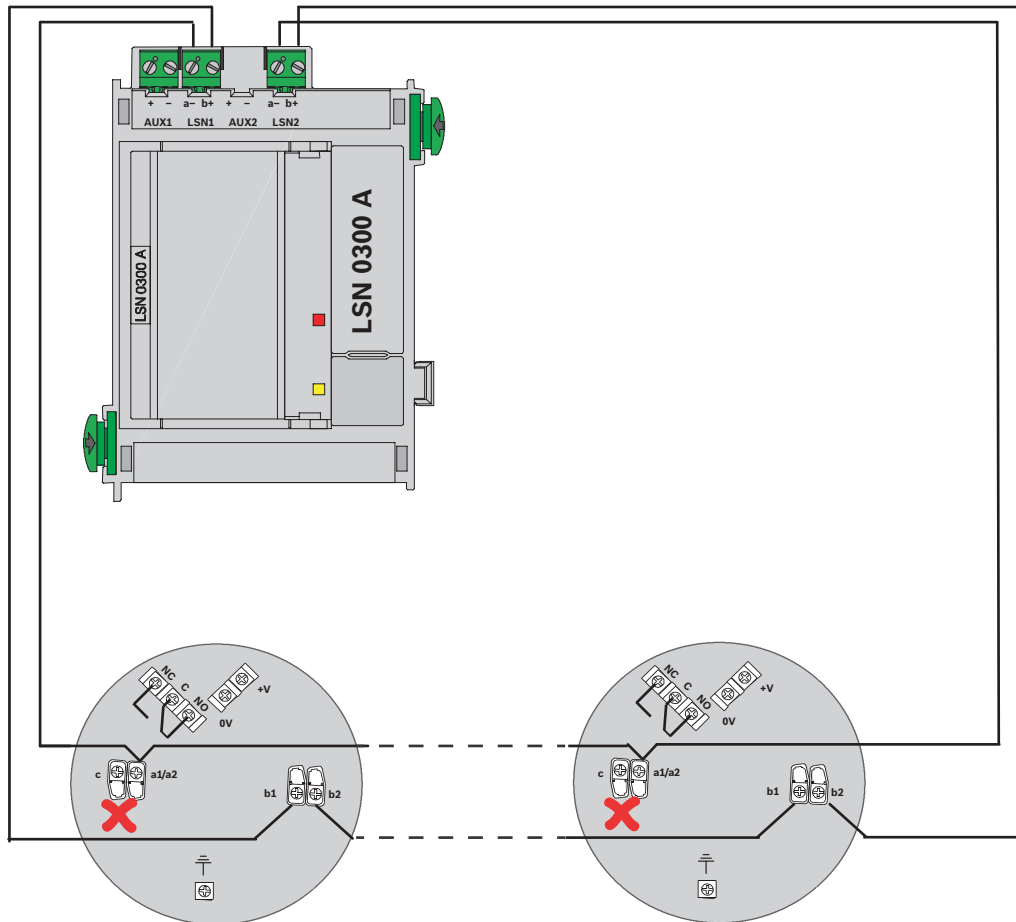




   
 
MS 400, MS 400 B  
 FAP-425-O, FAP-425-O-R  
 FAP-425-OT, FAP-425-OT-R  
 FAP-425-T-R  
 FAP-425-DO-R, FAP-425-DOT-R  
 FAP-425-DOTC-R, FAP-425-DOTCO-R

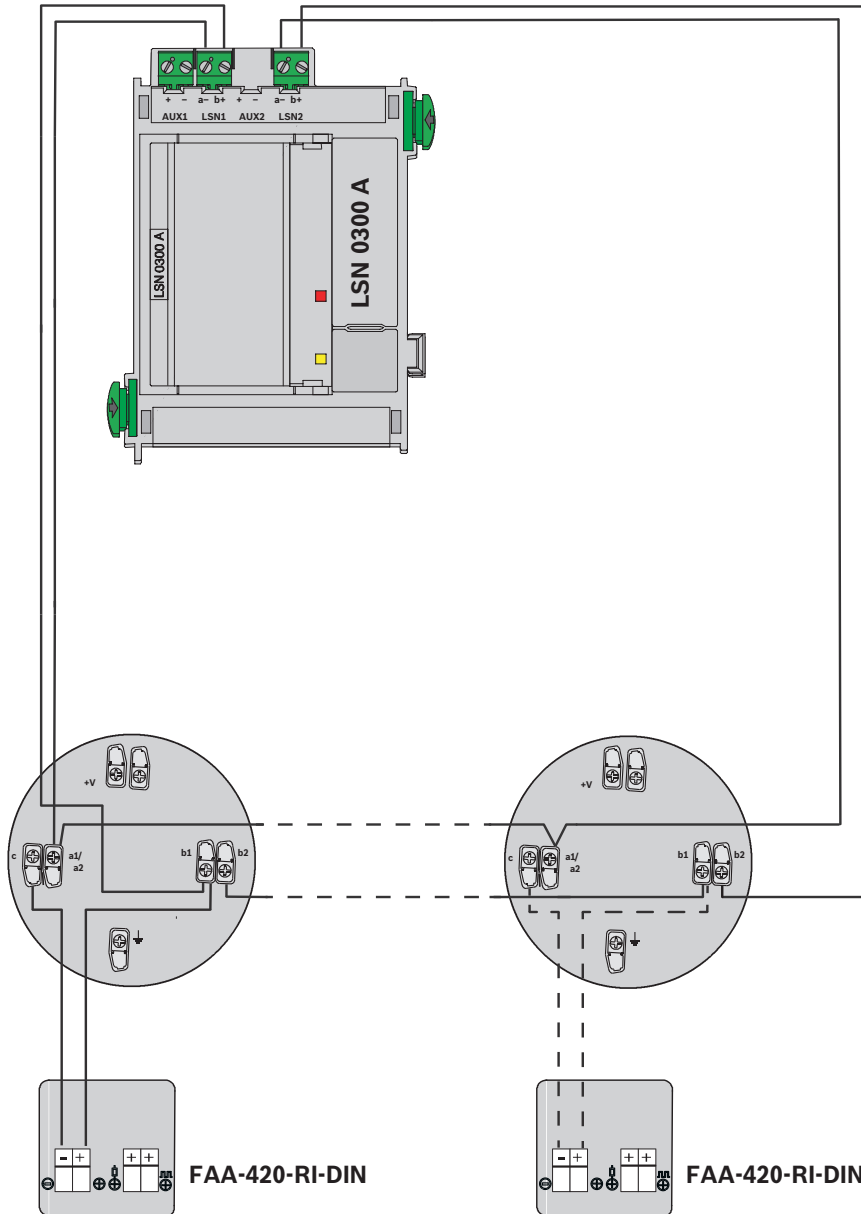

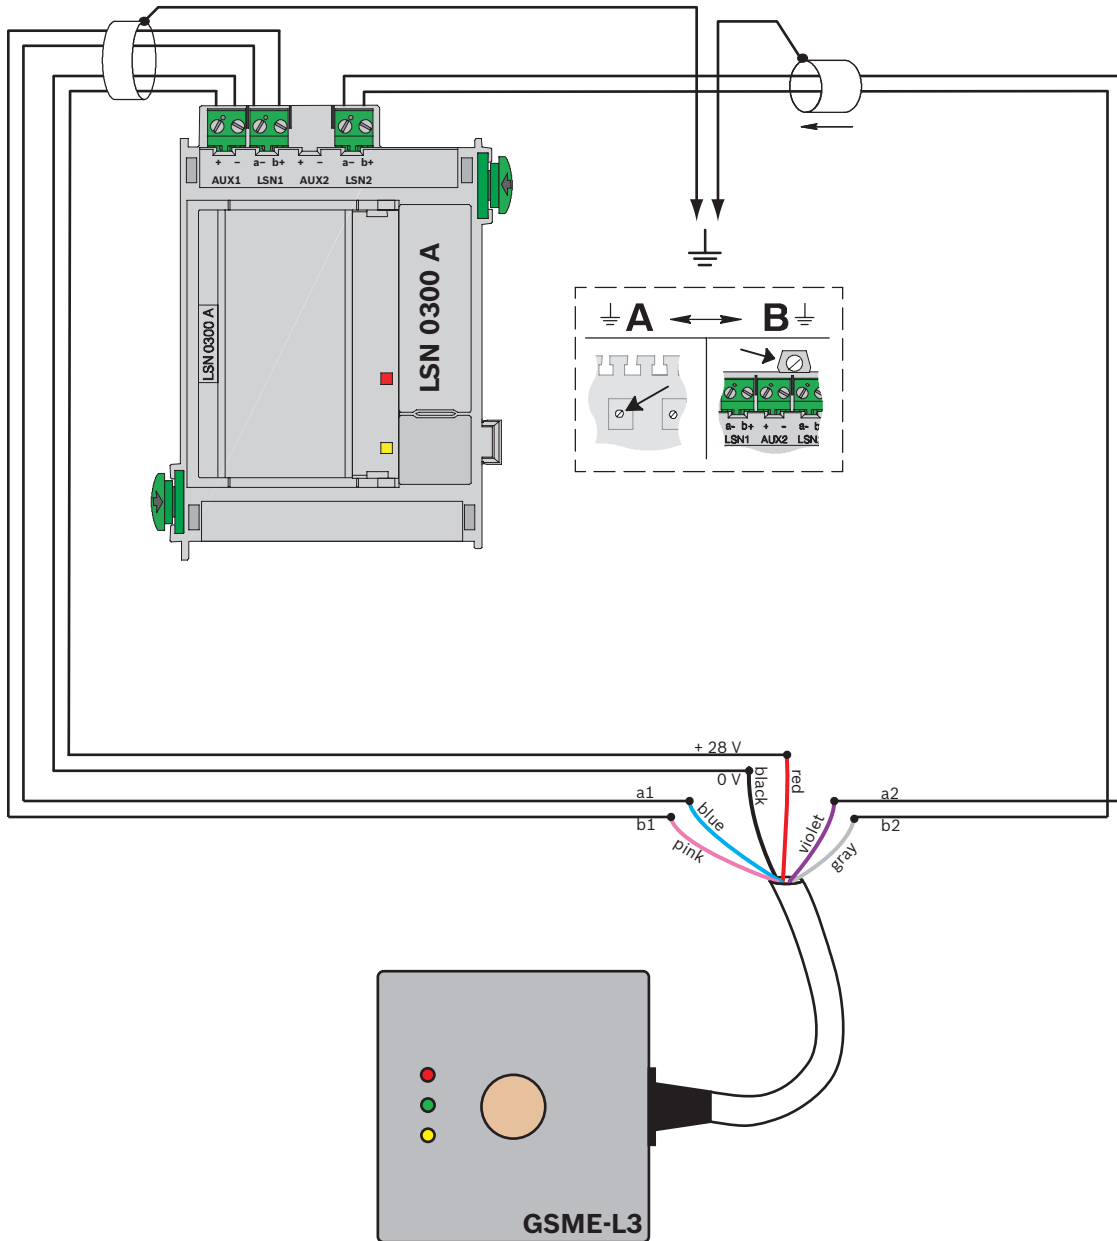








ATB 420 LSNi

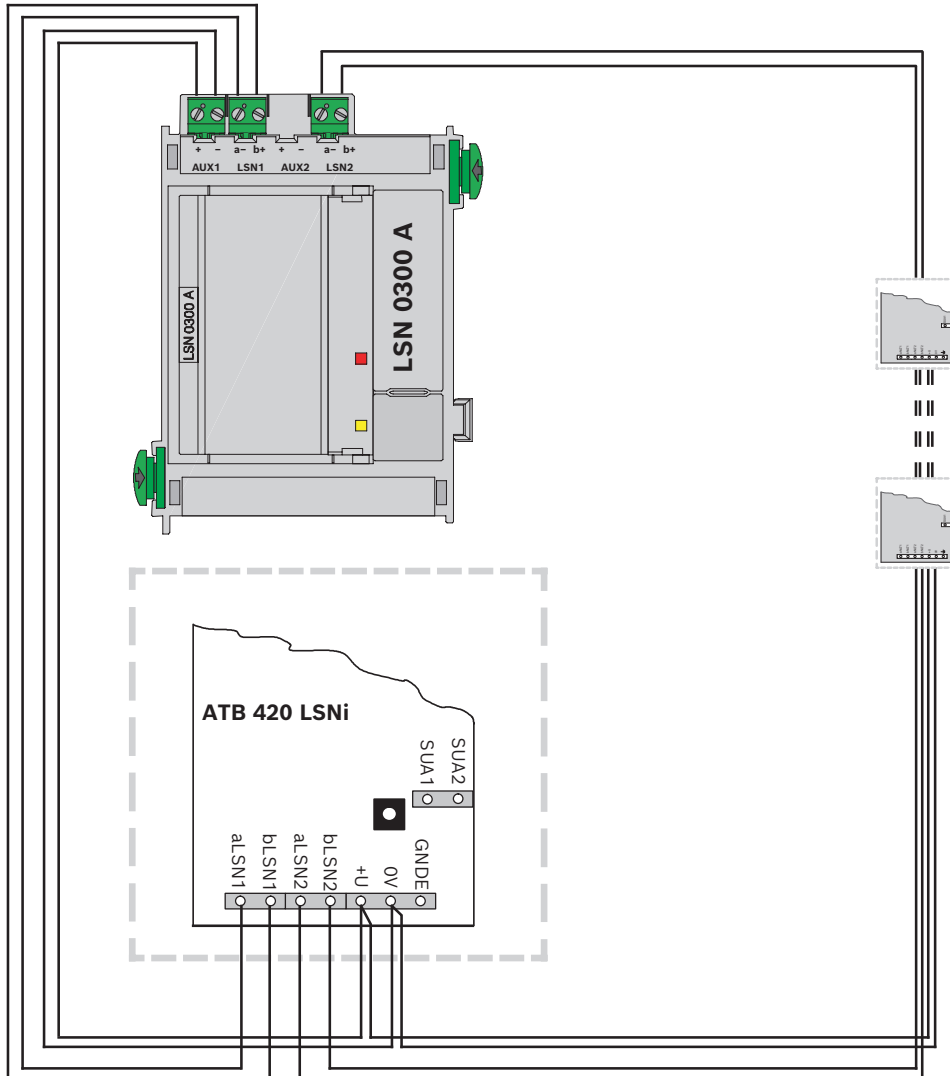 





**BAT 100 LSN**  
**ATG 420 LSNi**

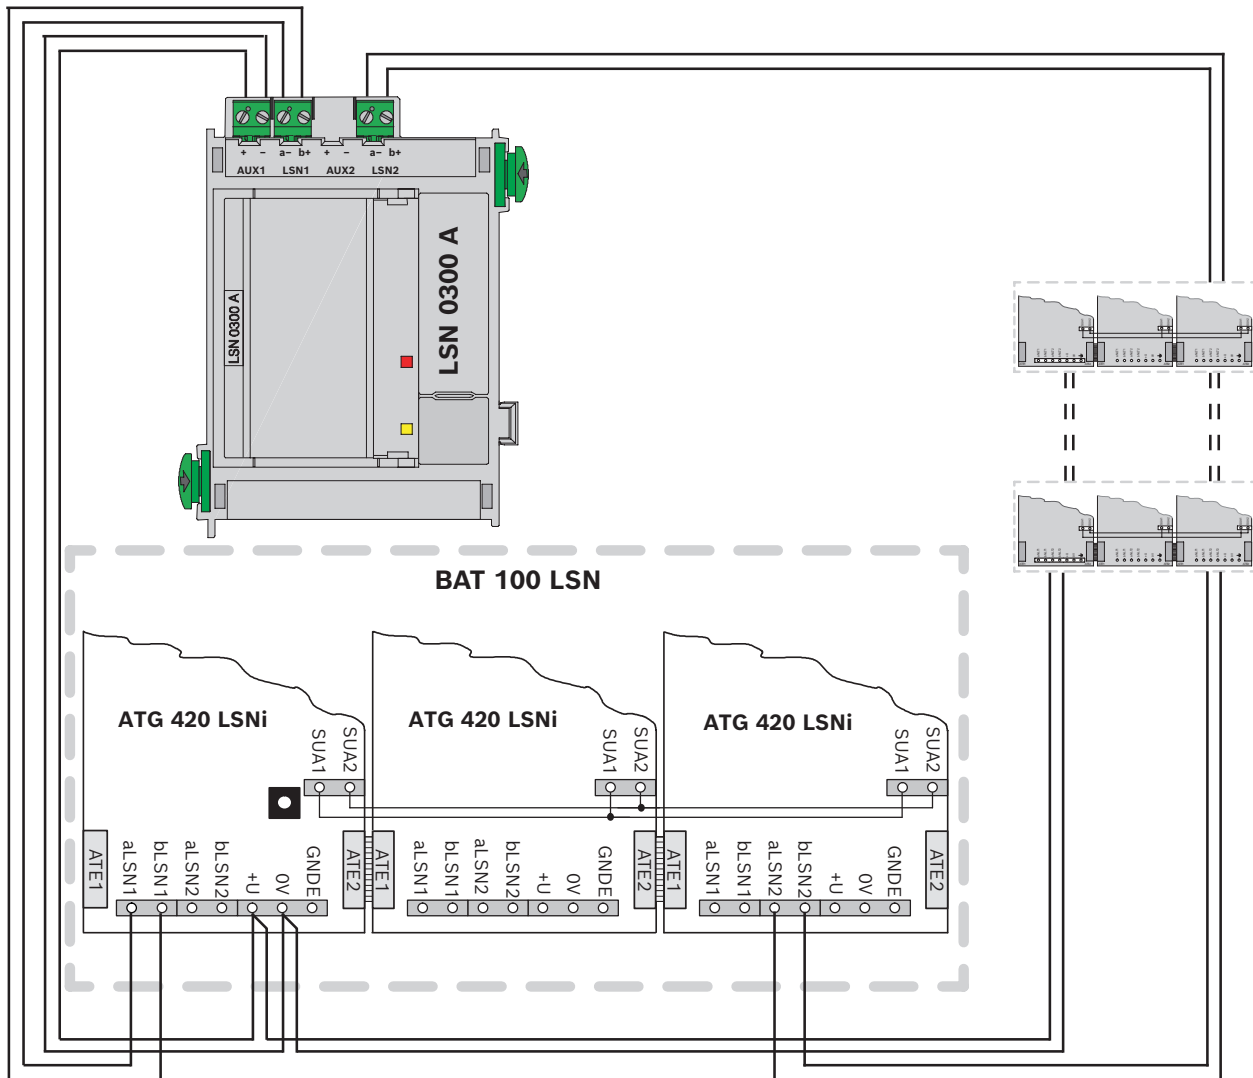 

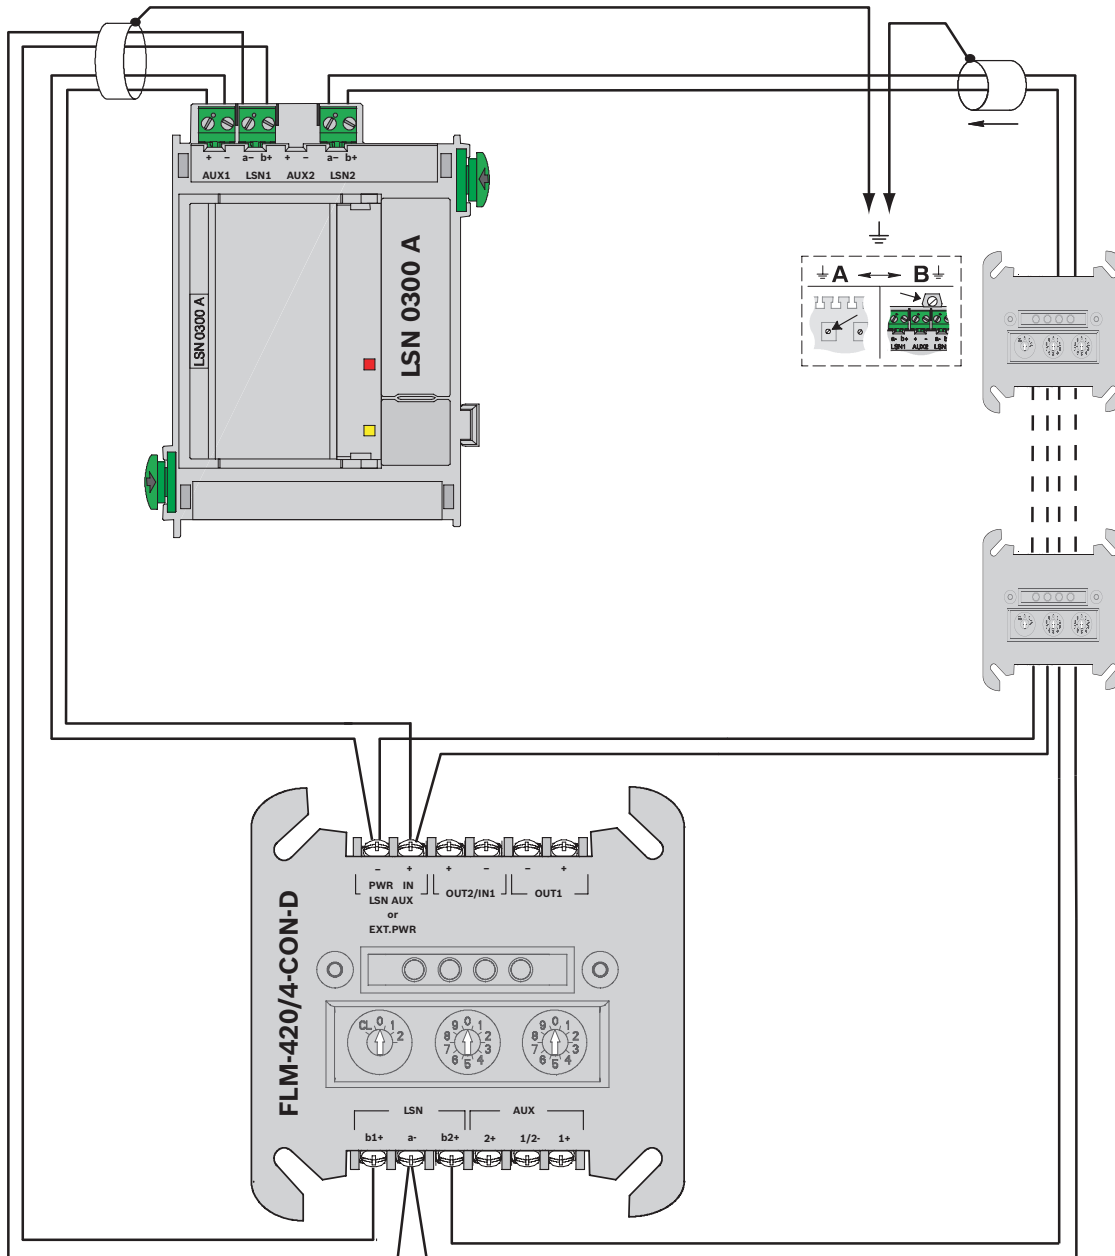  






FBF 100 LSN

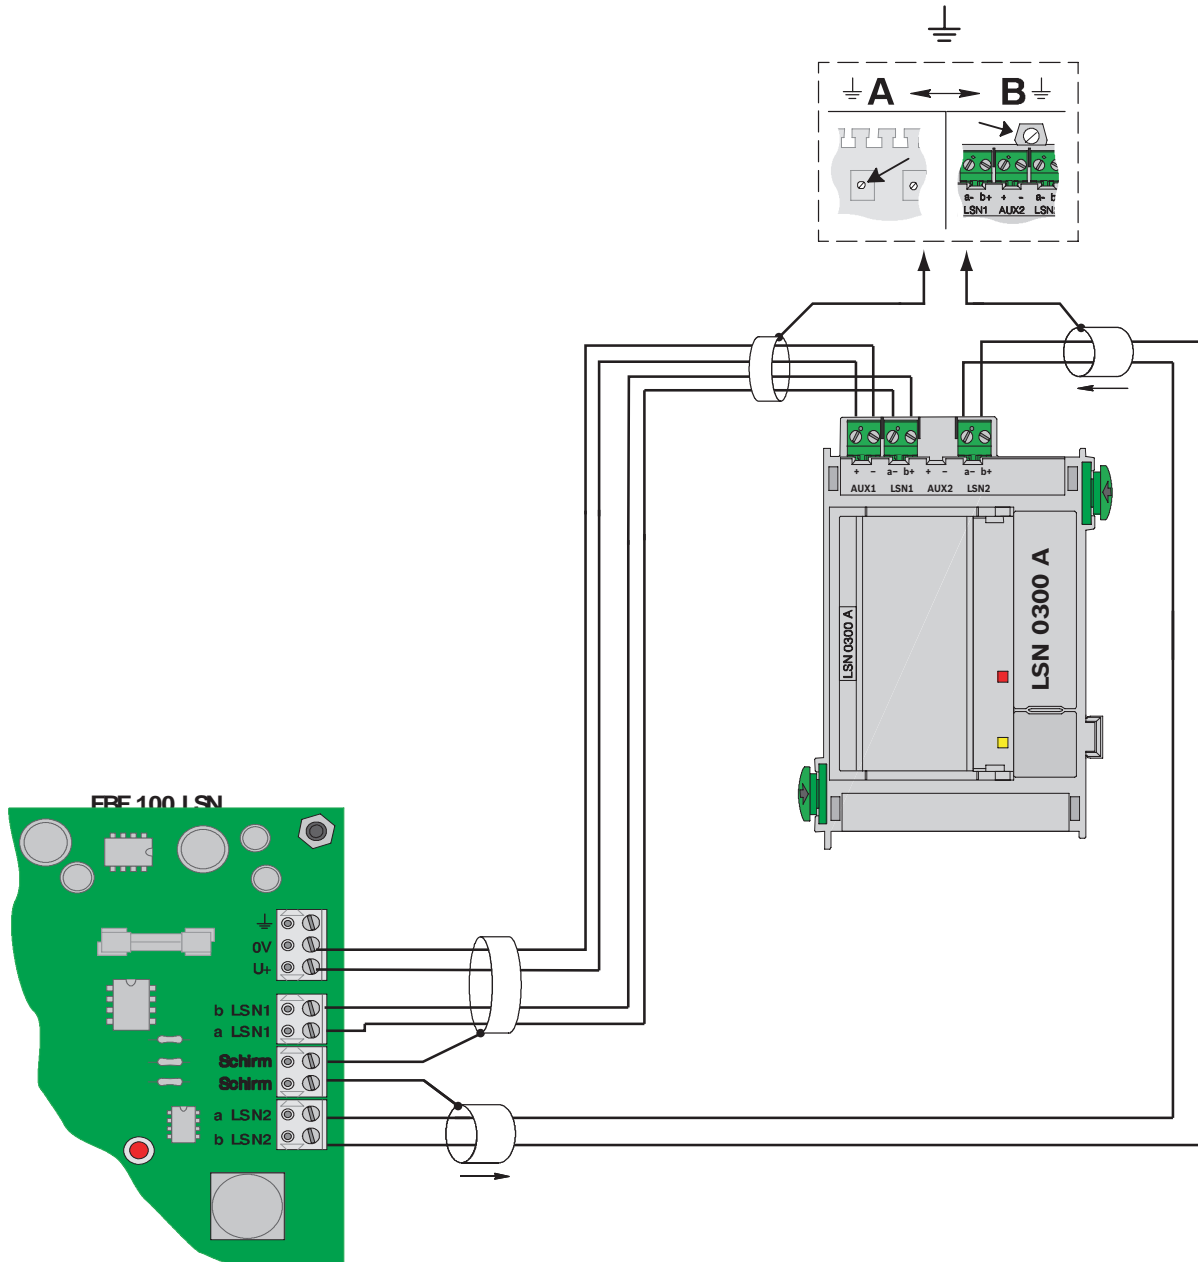 




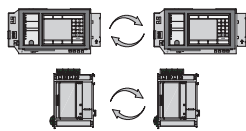


FLM-420-RLE-S

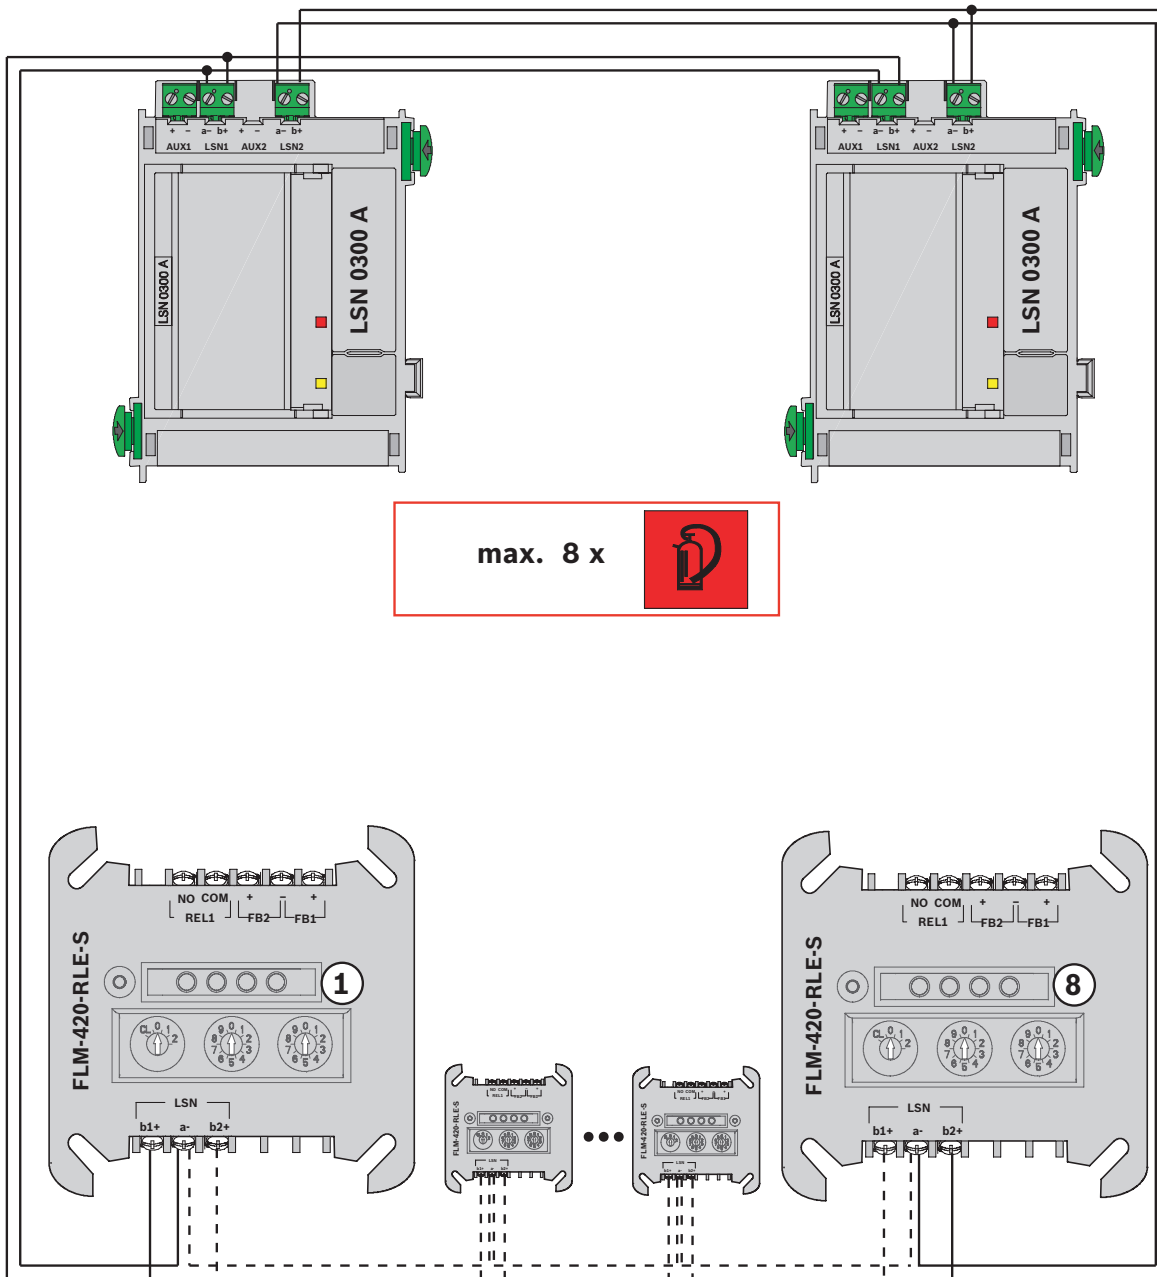 




 
**FNX-425U-WFWH**  
**FNX-425U-RFWH**  
**FNX-425U-WFRD**  
**FNX-425U-RFRD**

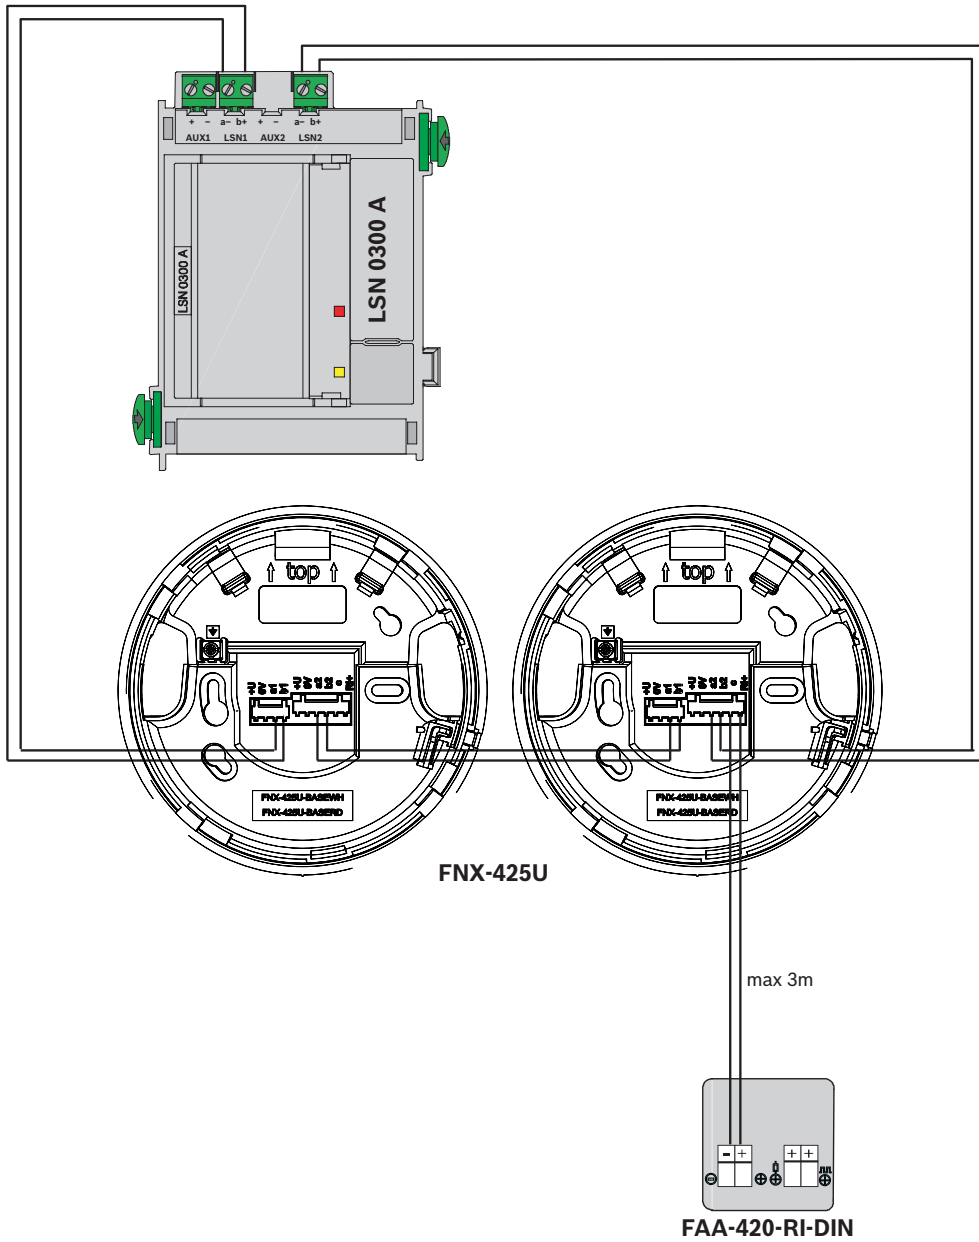







FNX-425U-WFWH  
 FNX-425U-RFWH  
 FNX-425U-WFRD  
 FNX-425U-RFRD

  
 
+ FNX-425U-COVWH  
 FNX-425U-COVRD

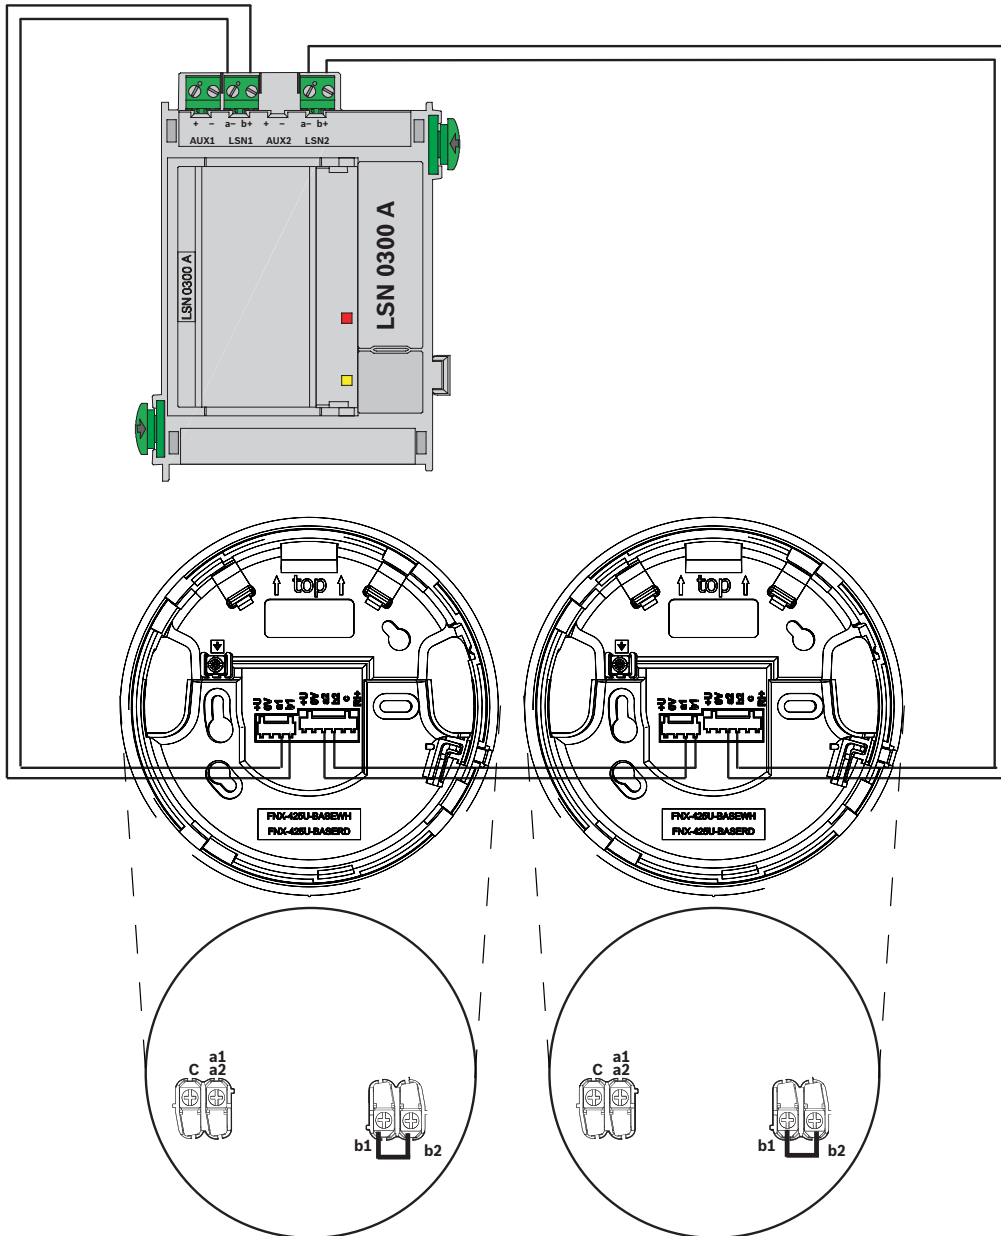







FMC-210...

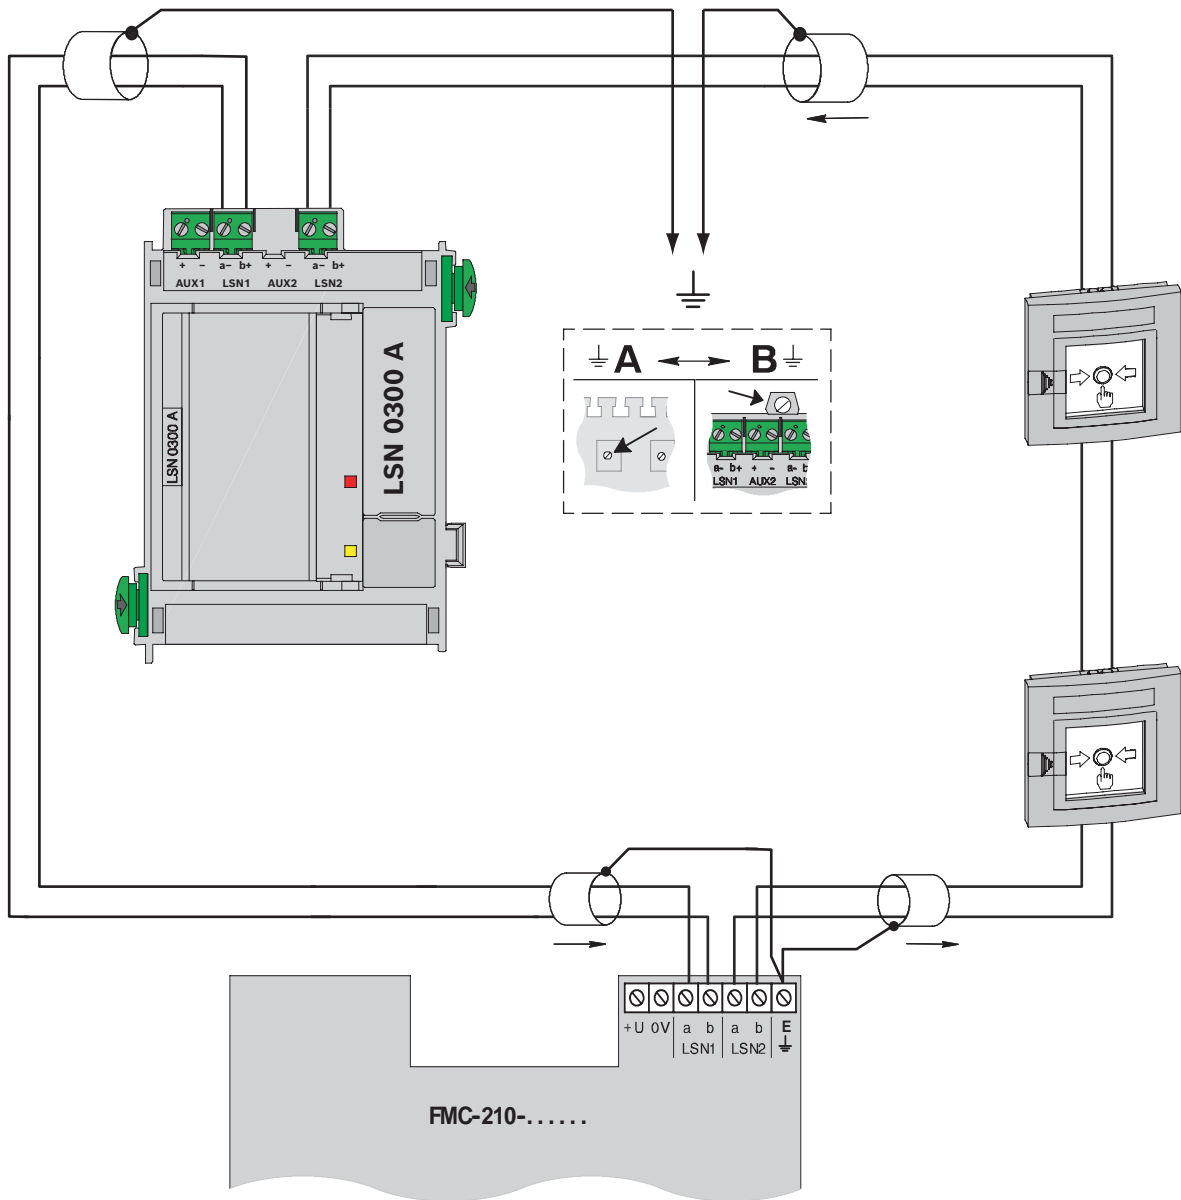 

 
 



**FMC-210-IP66-R**



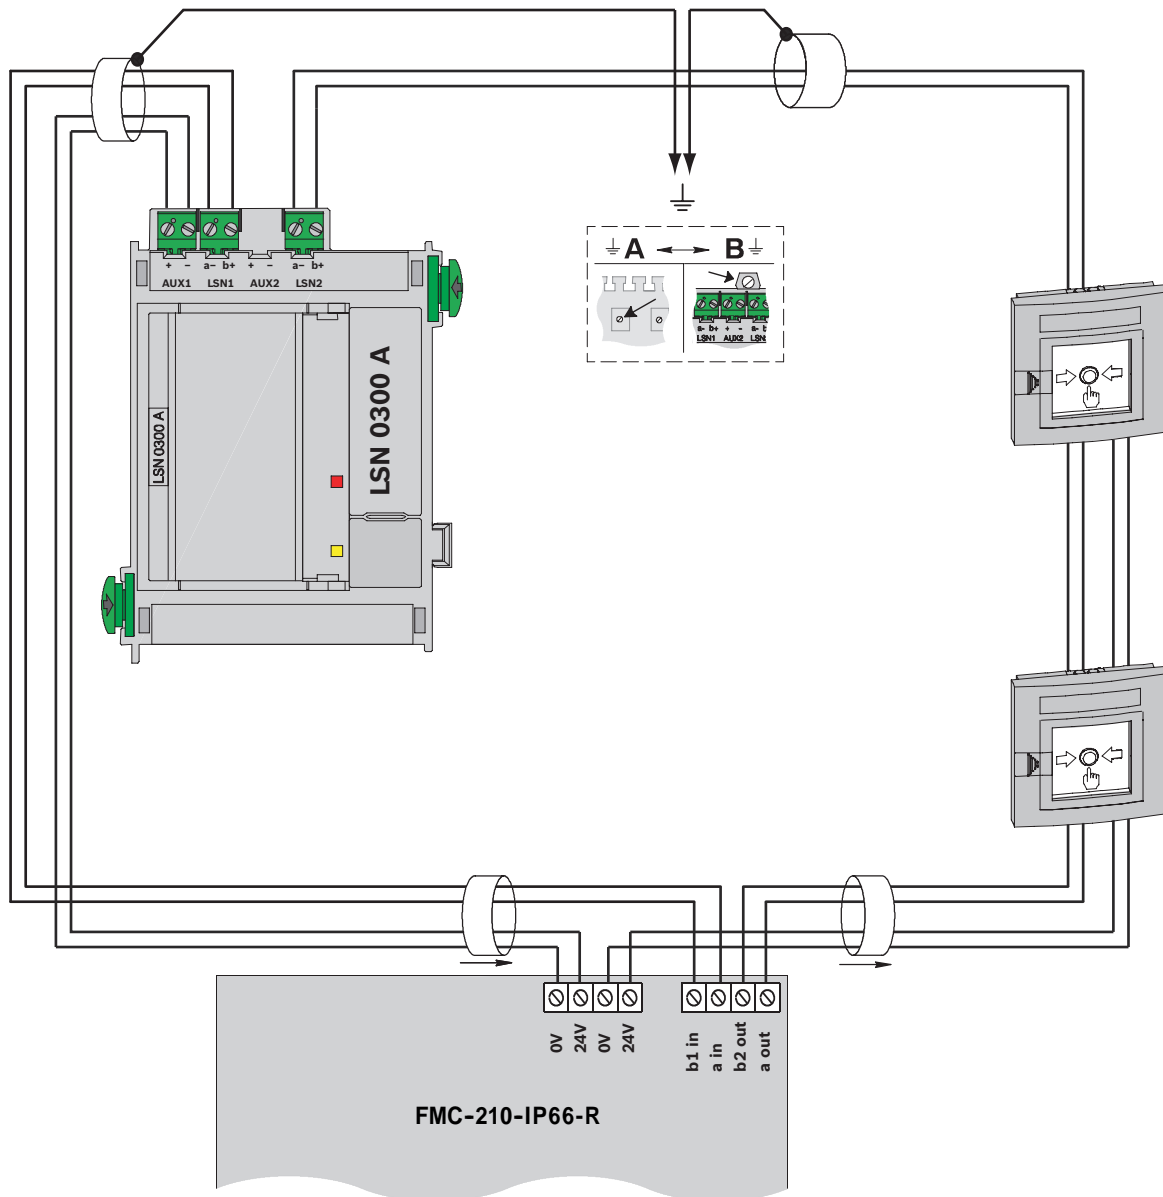
 


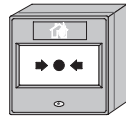 

    
FMC-420RW-HSGRD  
 FMC-420RW-HSRRD  
 FMC-420RW-GFGRD  
 FMC-420RW-GFRRD  
 FMC-420RW-GSGRD  
 FMC-420RW-GSRRD

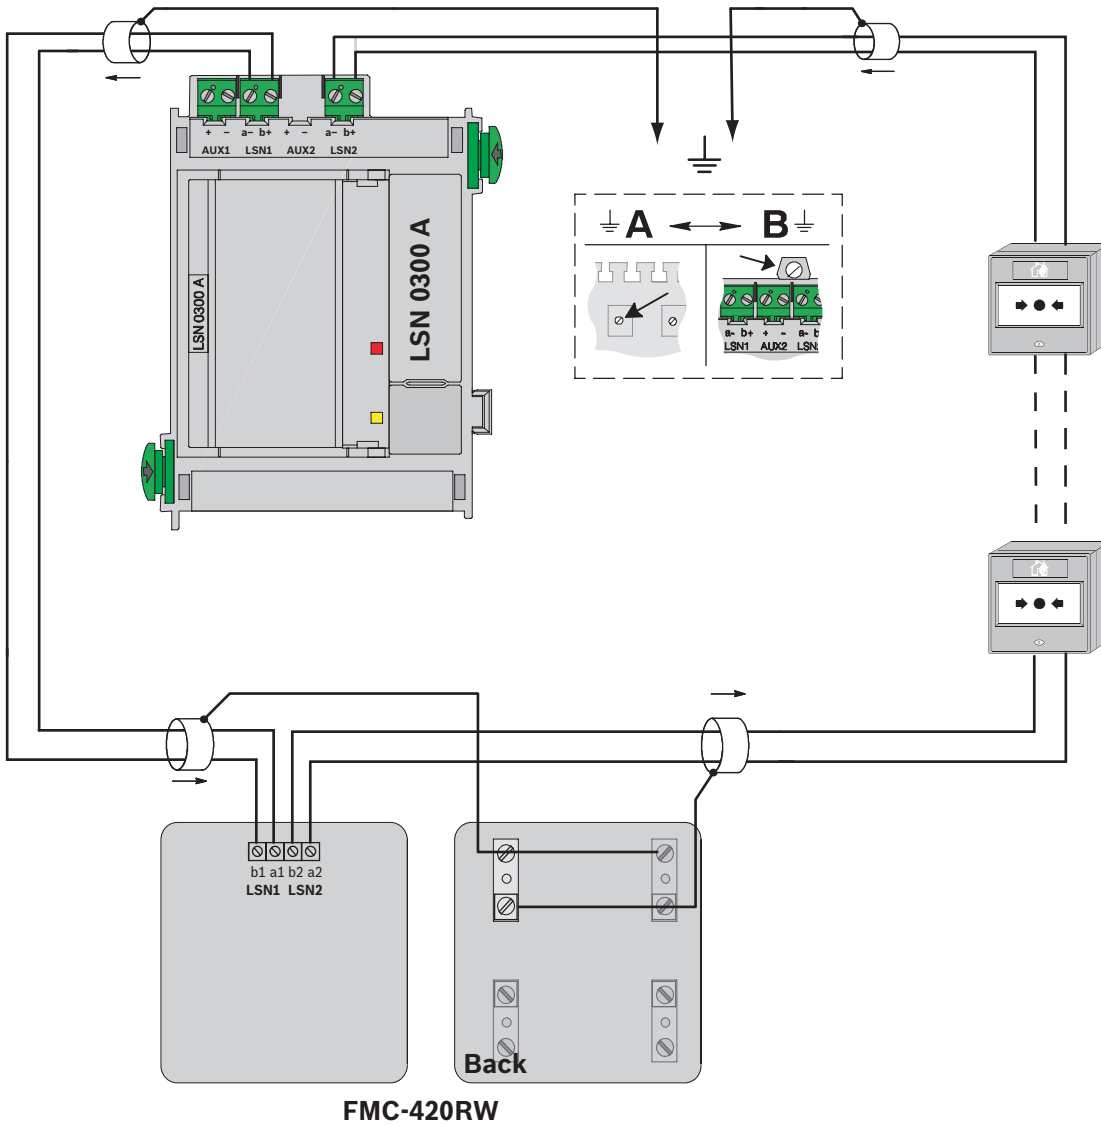

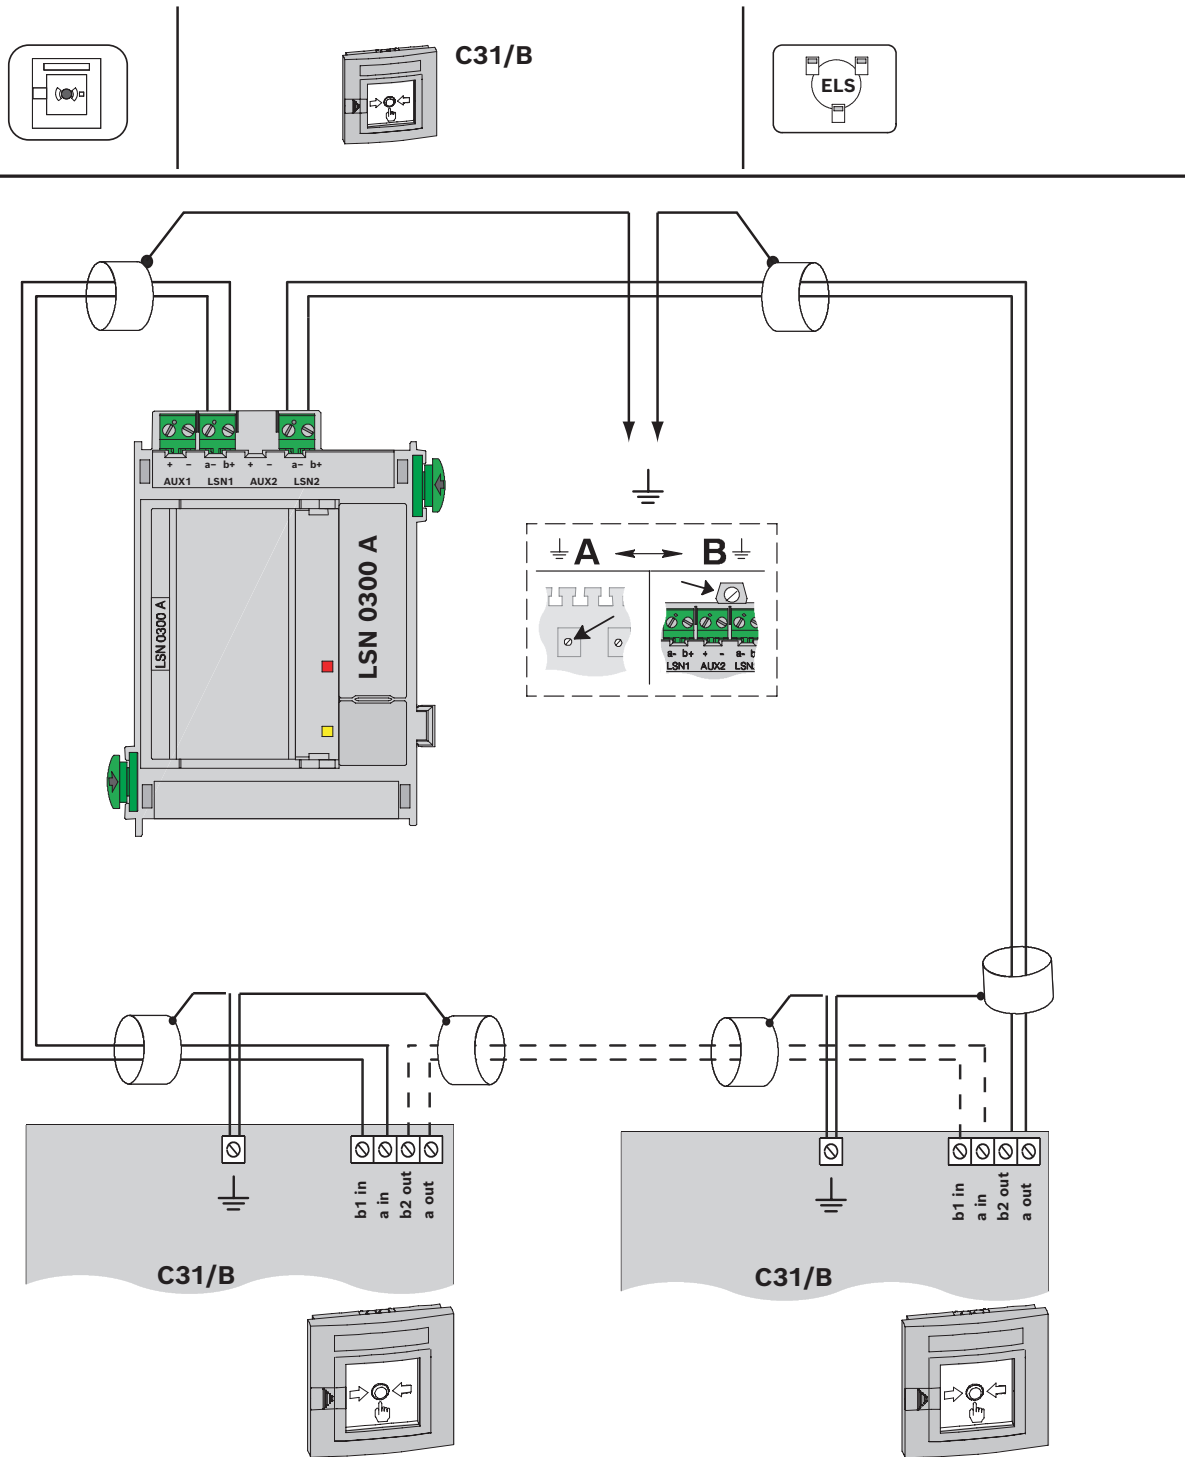

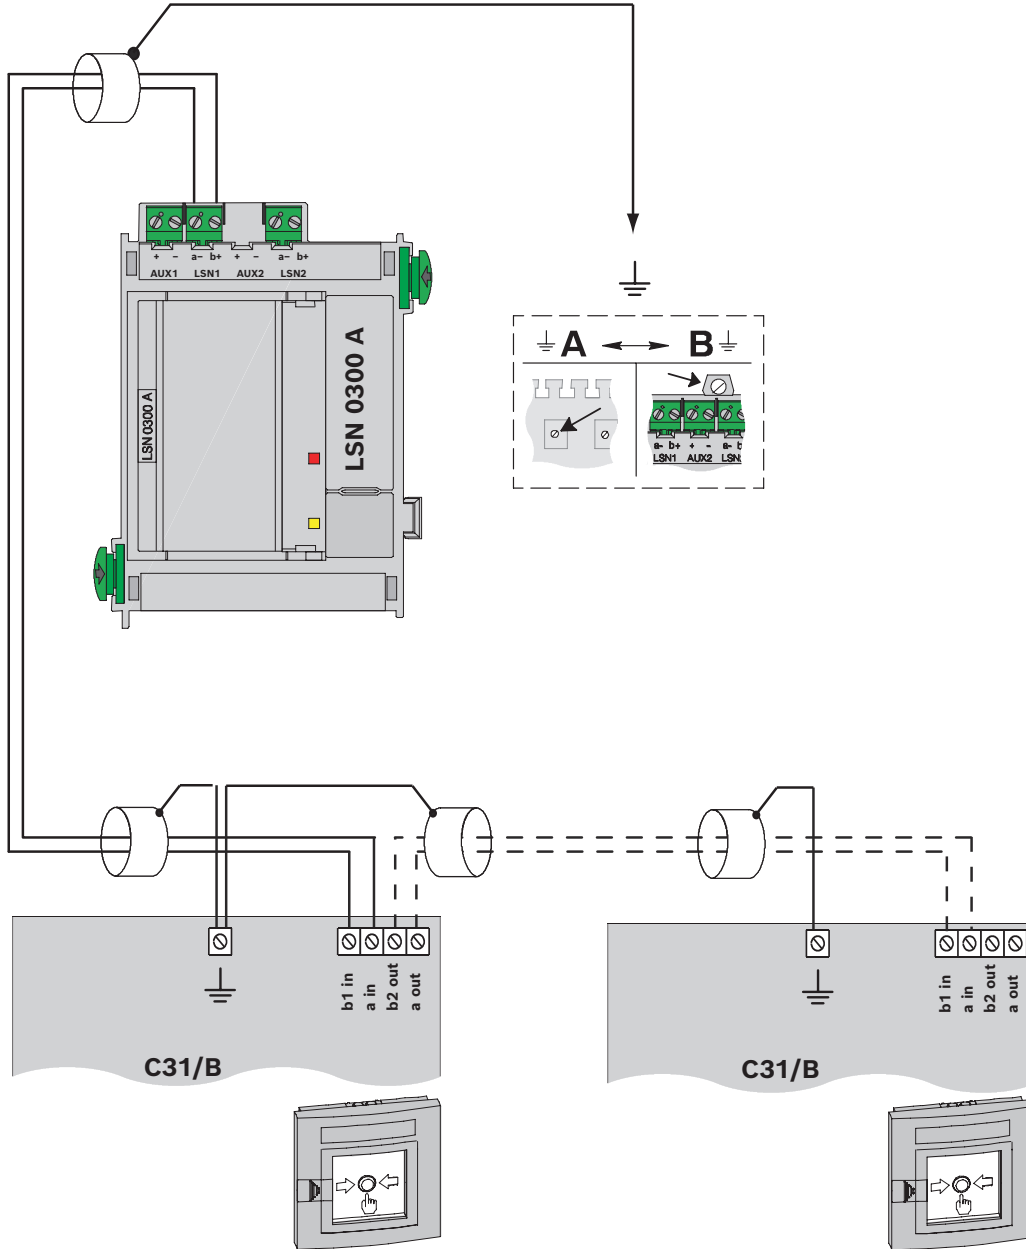




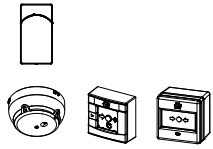


**FWI-270**



**FDOOT271-O**



**FDM275-O**


 
**FDM273-O**

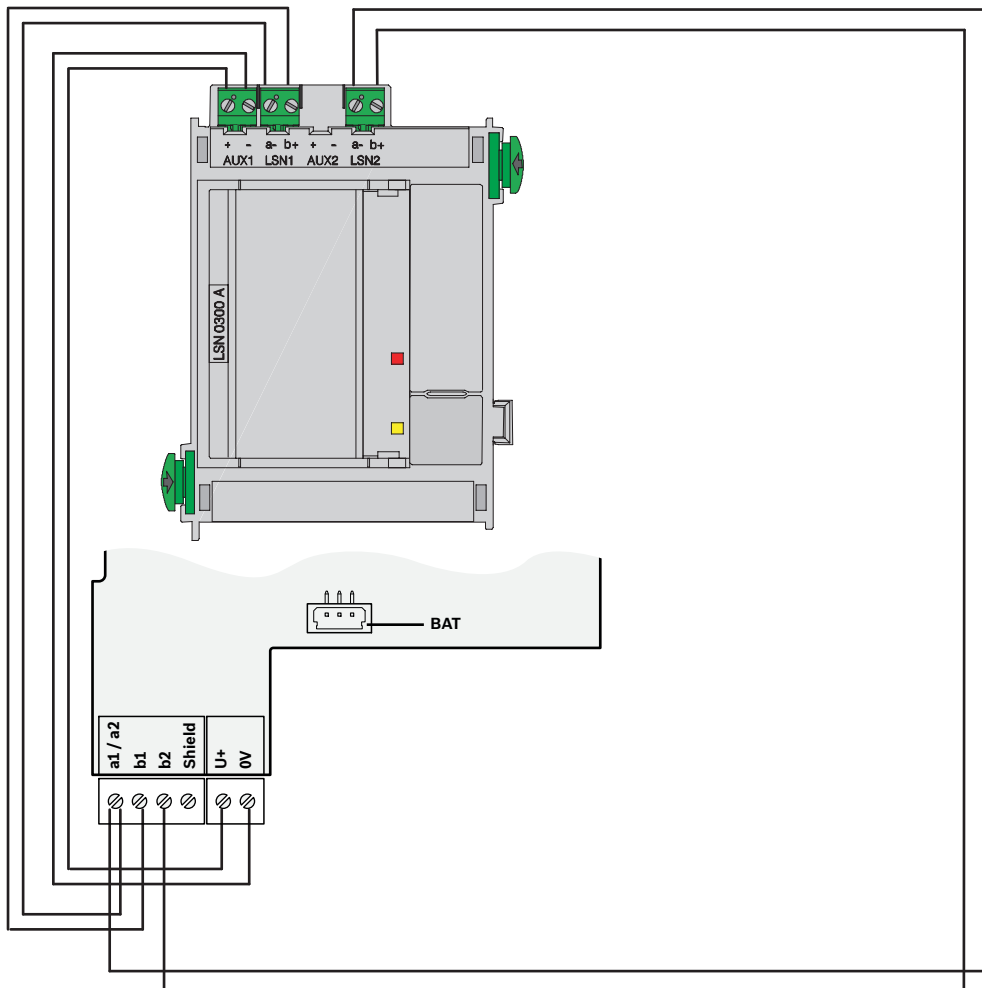





### 2.4.5 NZM 0002 A

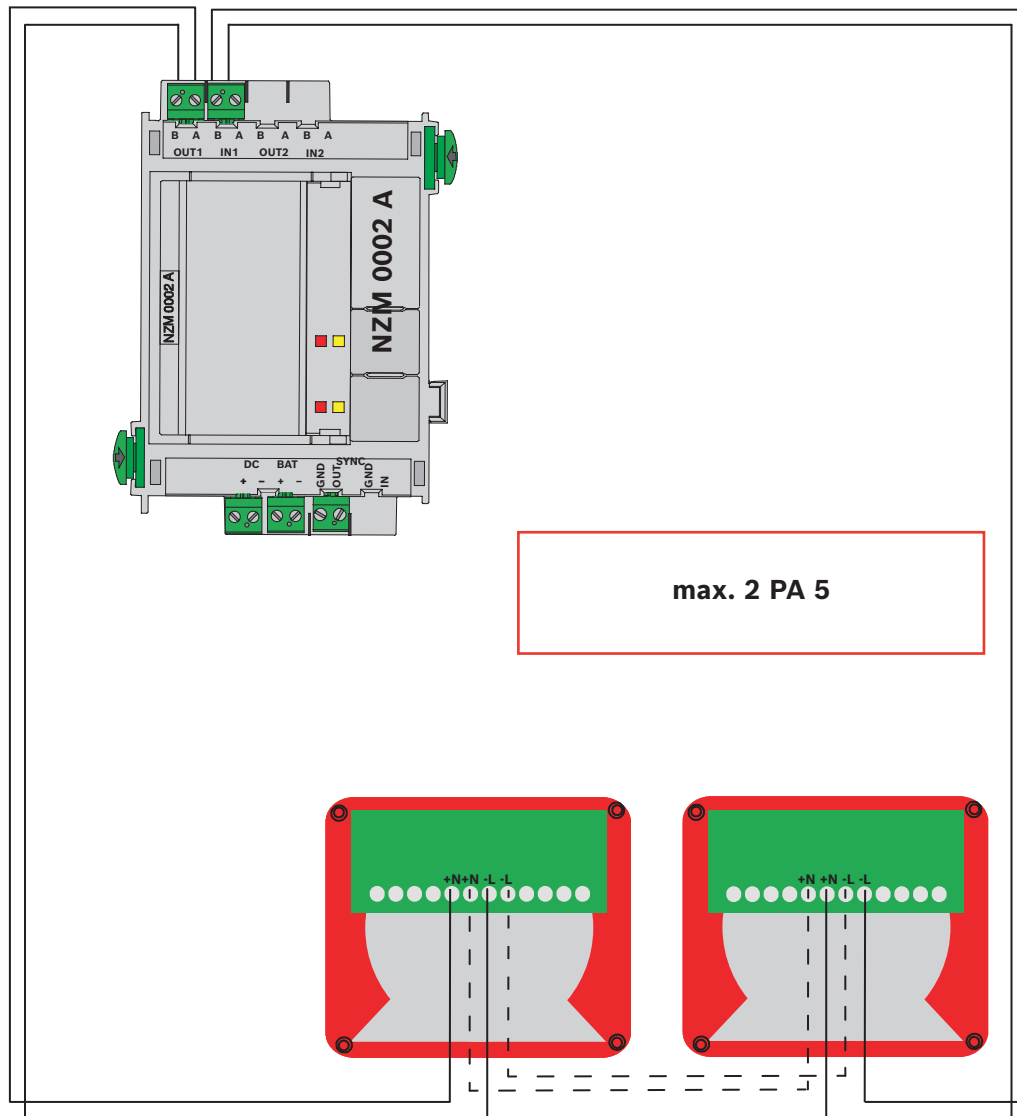 

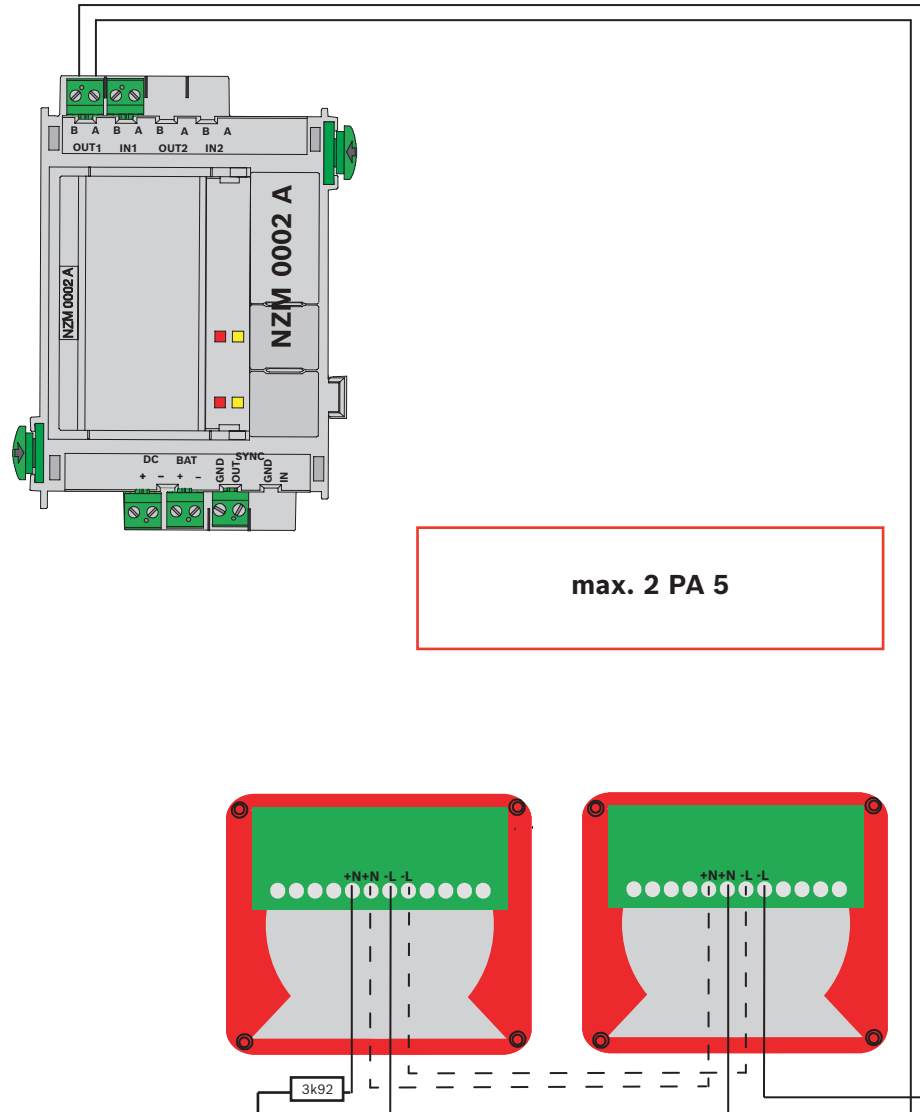 


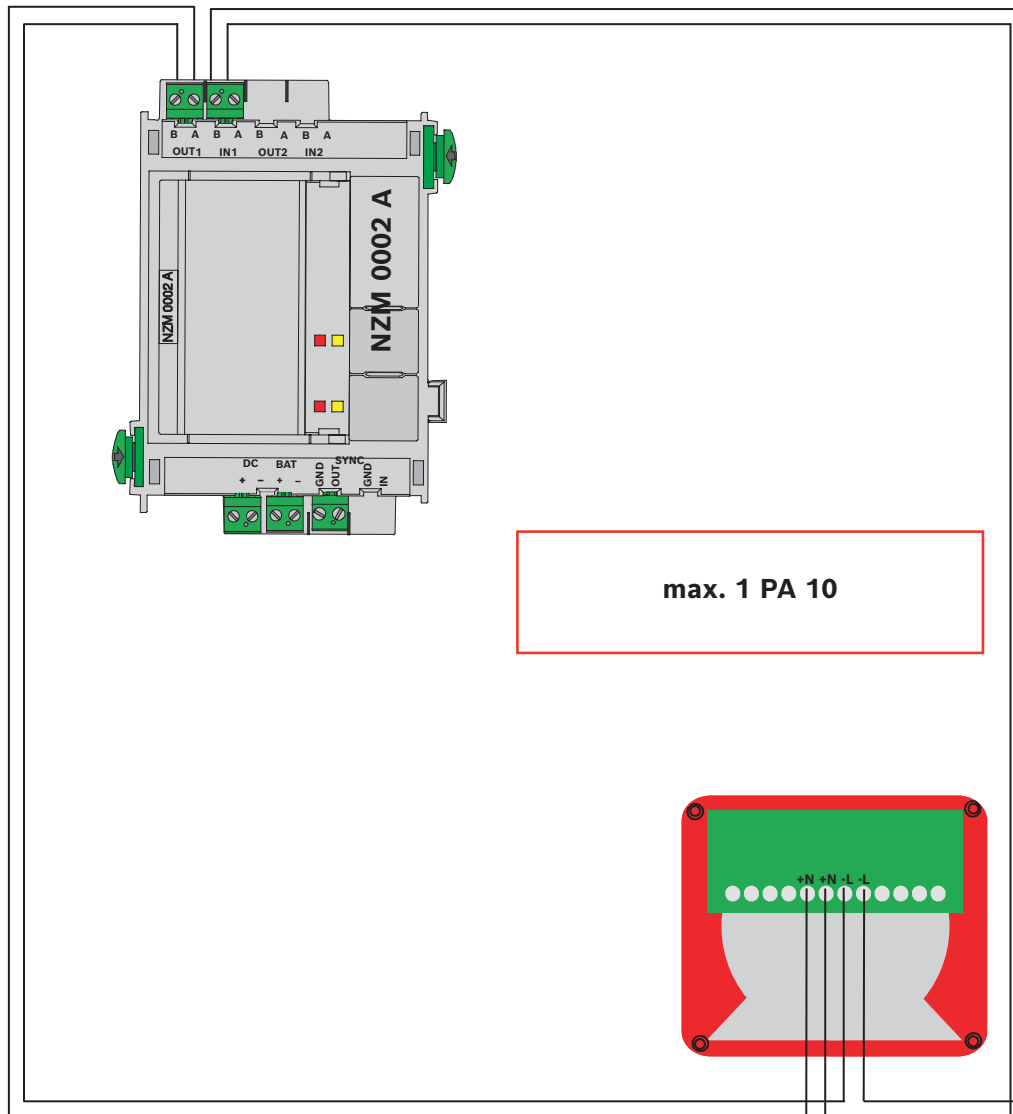
 


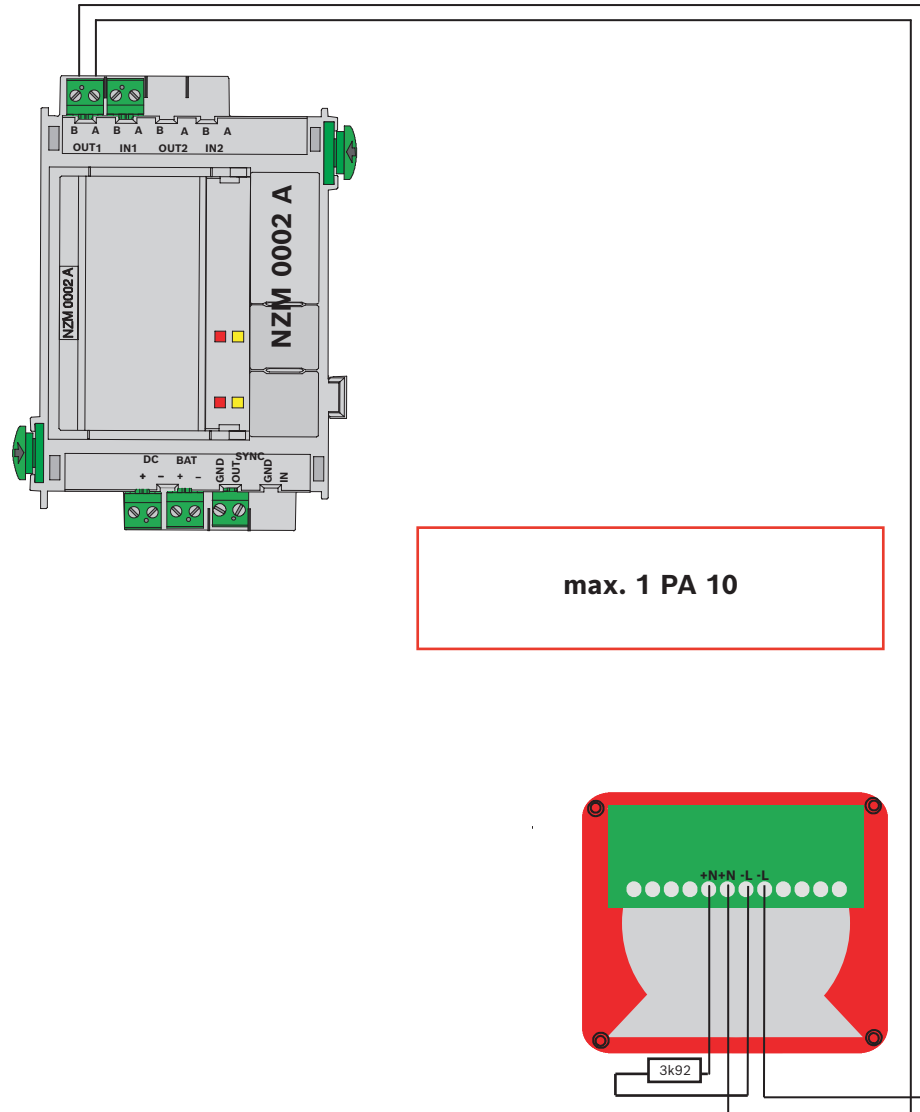 


  



NZM 0002 A

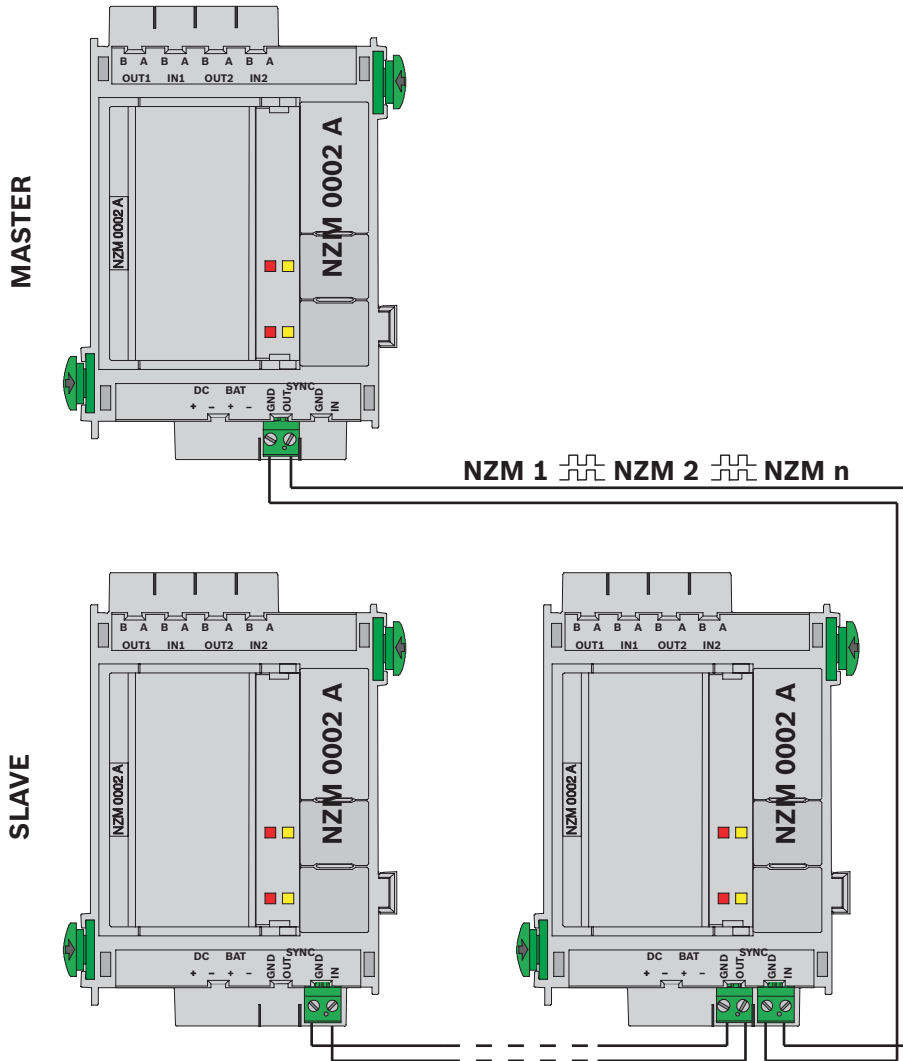


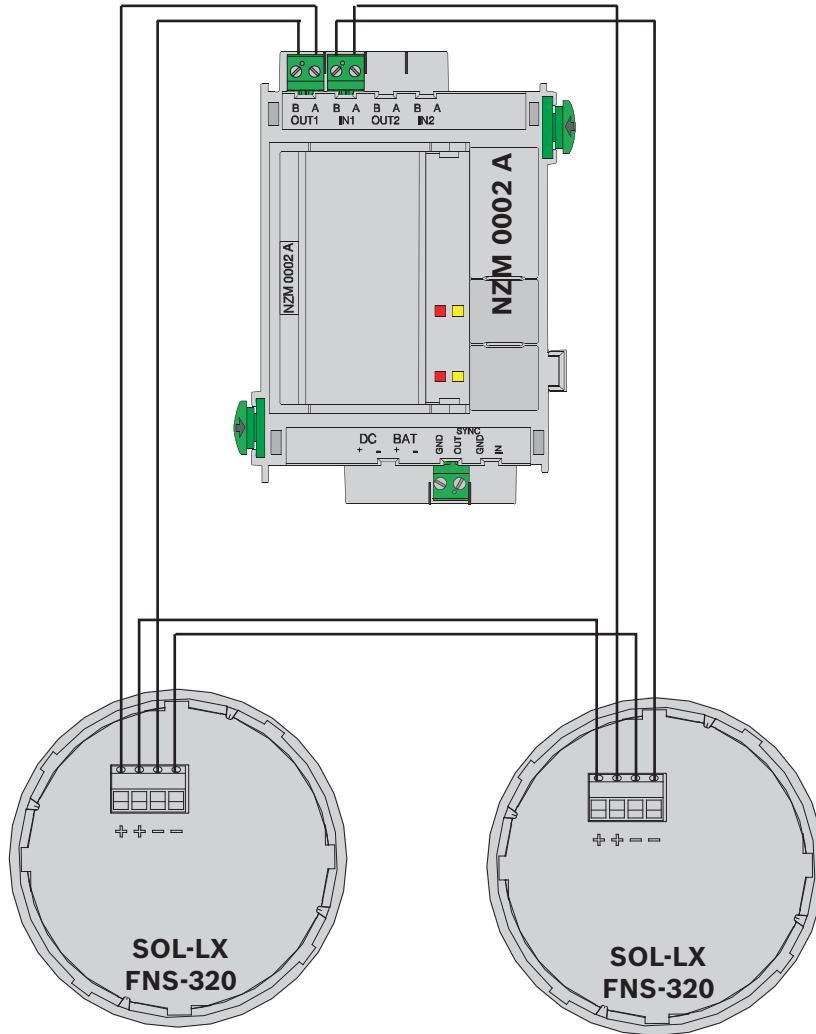
 


 


**SOL-LX  
FNS-320**

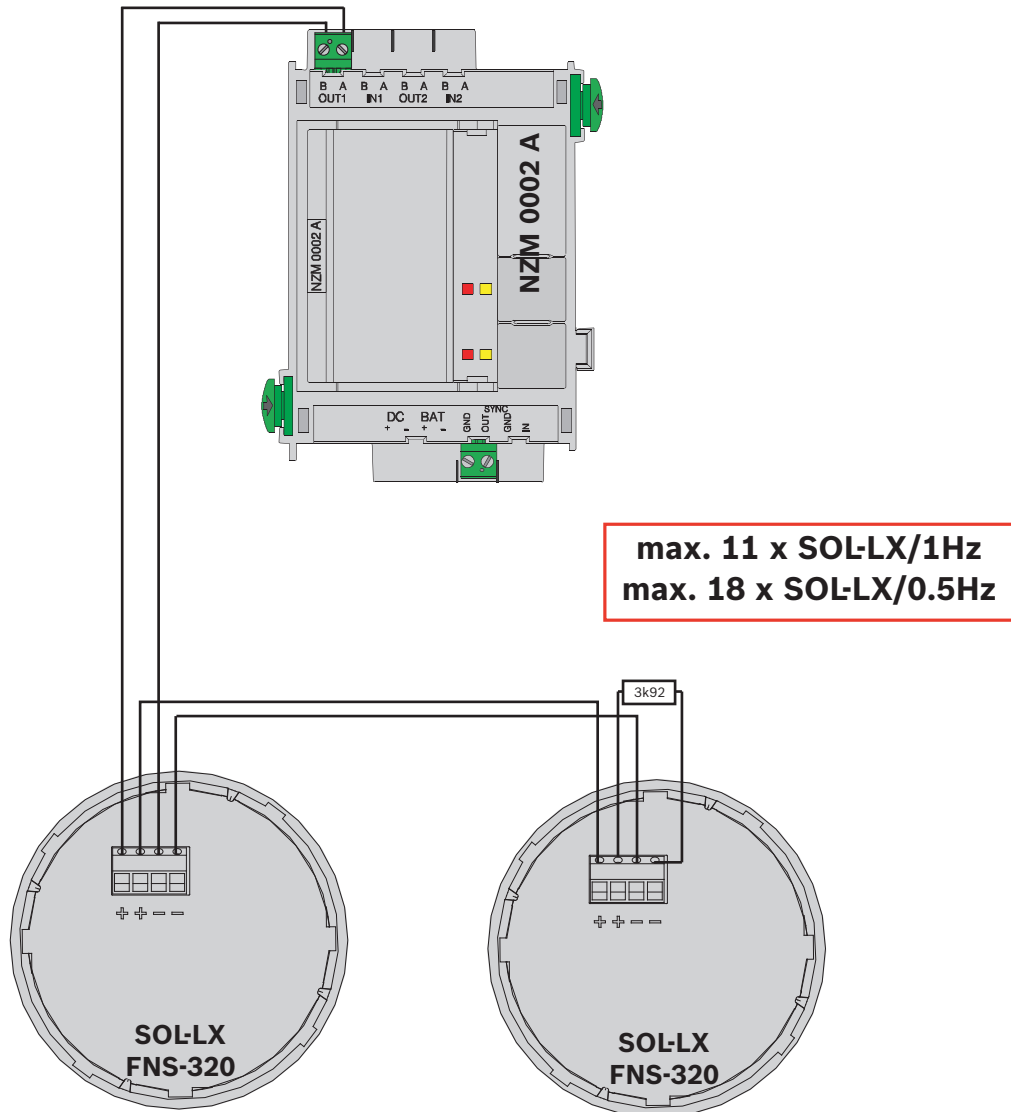
 





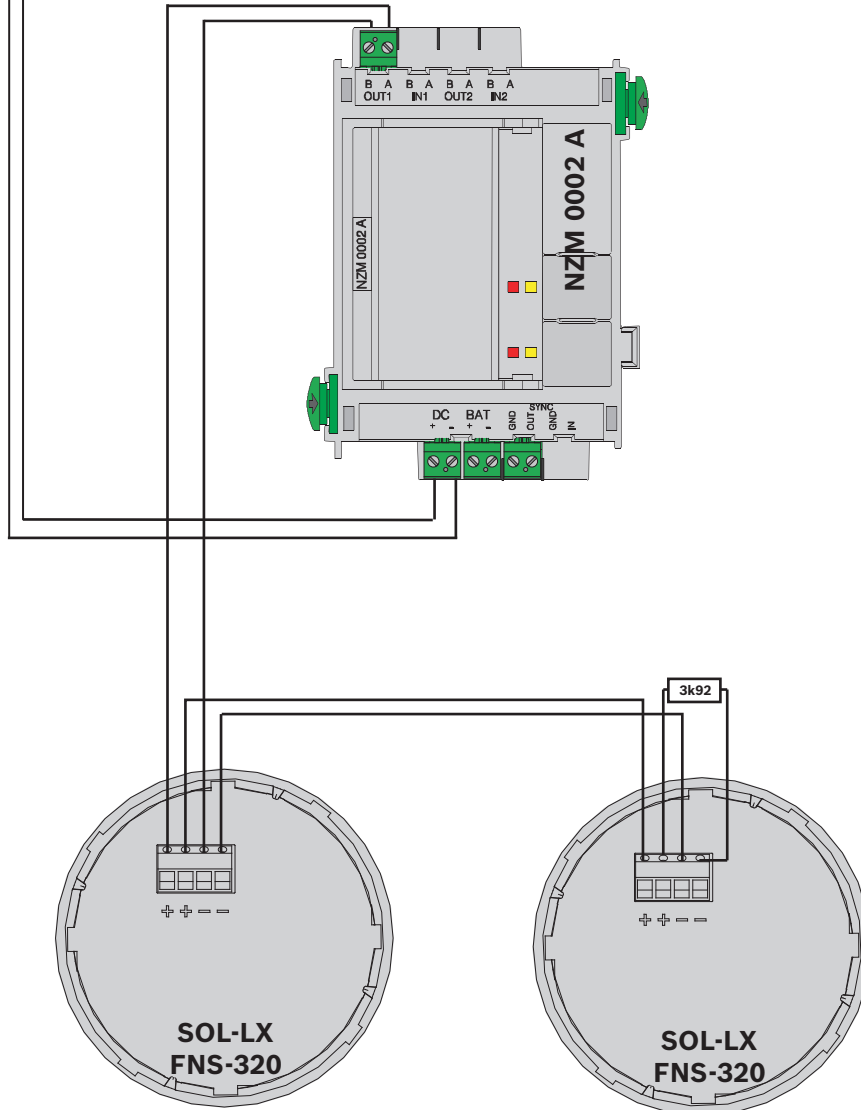  


 


**ROLP-W-LX  
FNM-320**

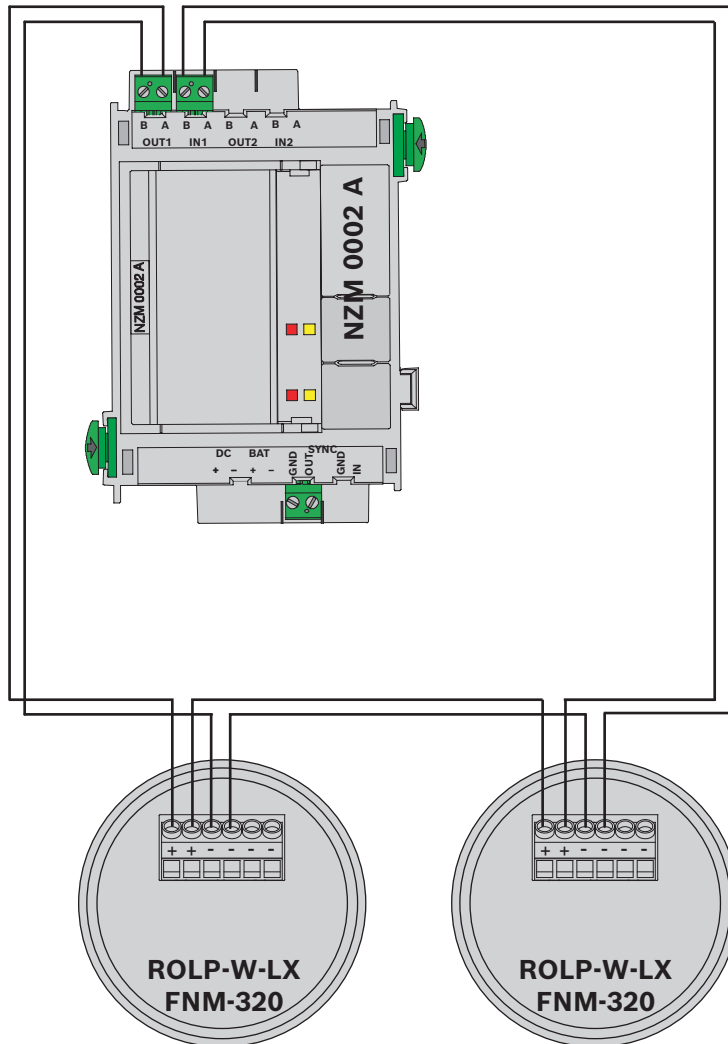 


 


**ROLP-W-LX  
FNM-320**

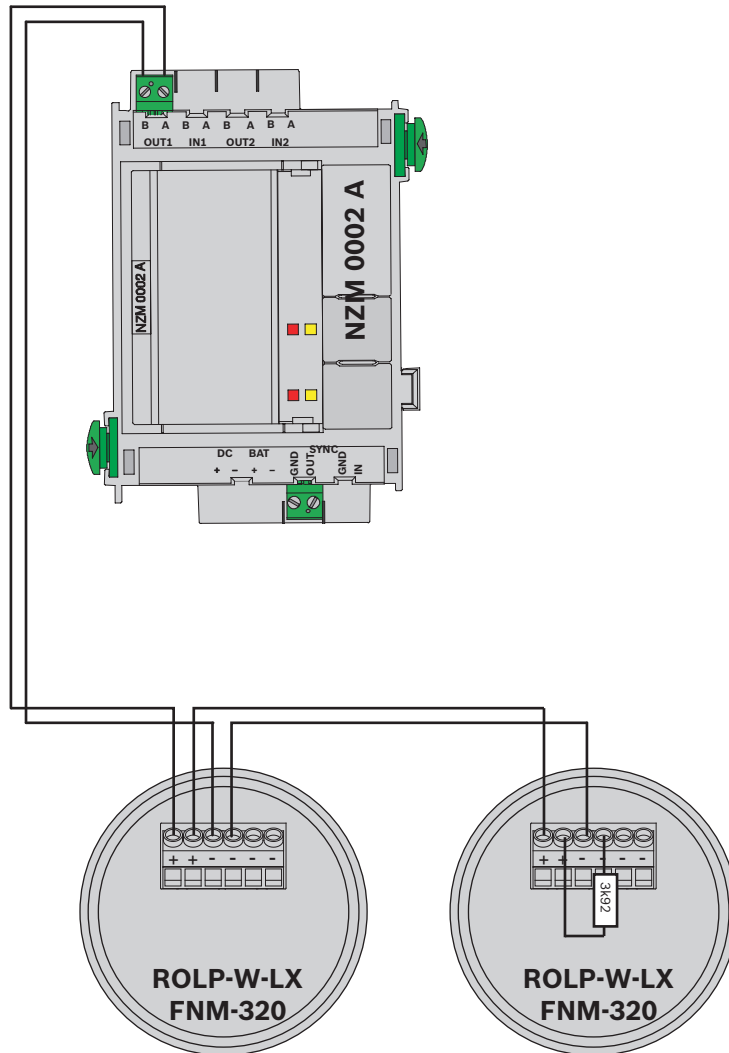 





PB 2005

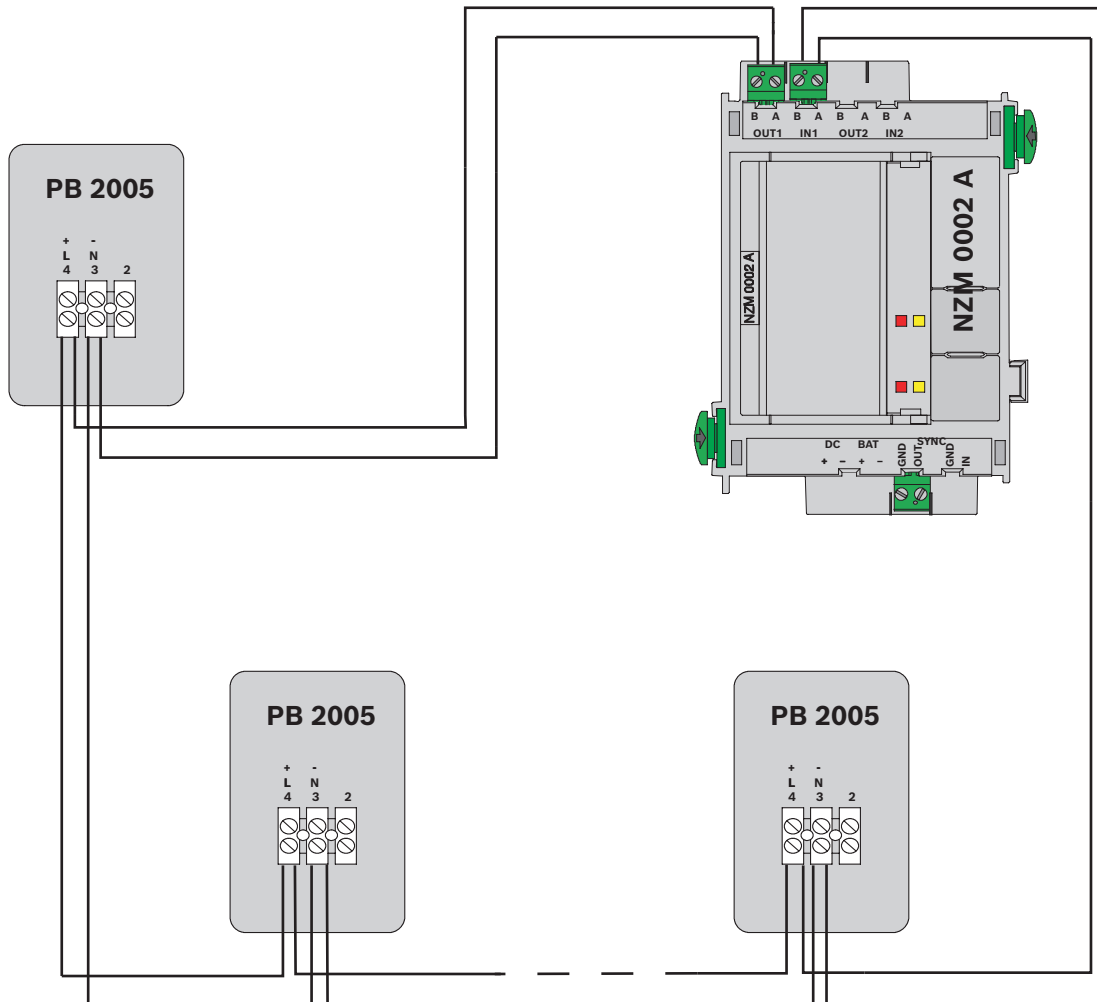 





**PB 2005**

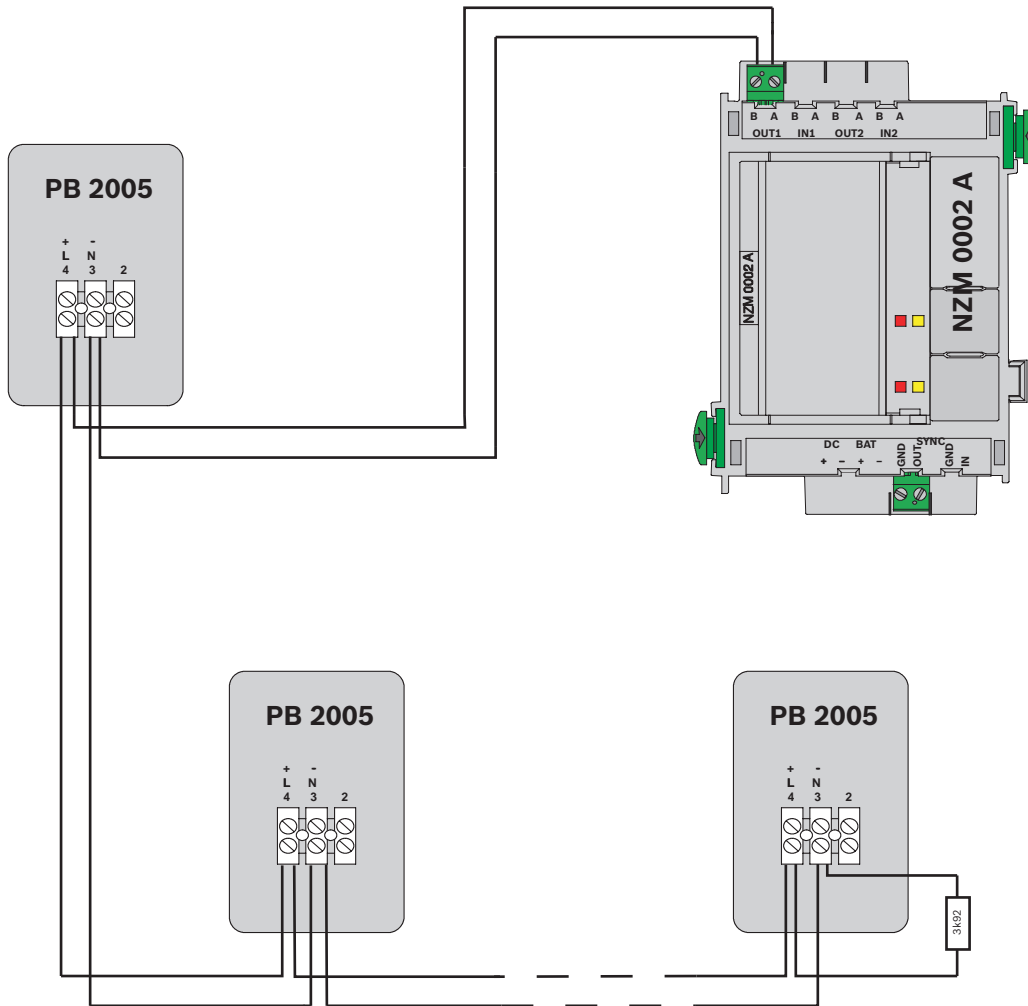 




**PB 2005**

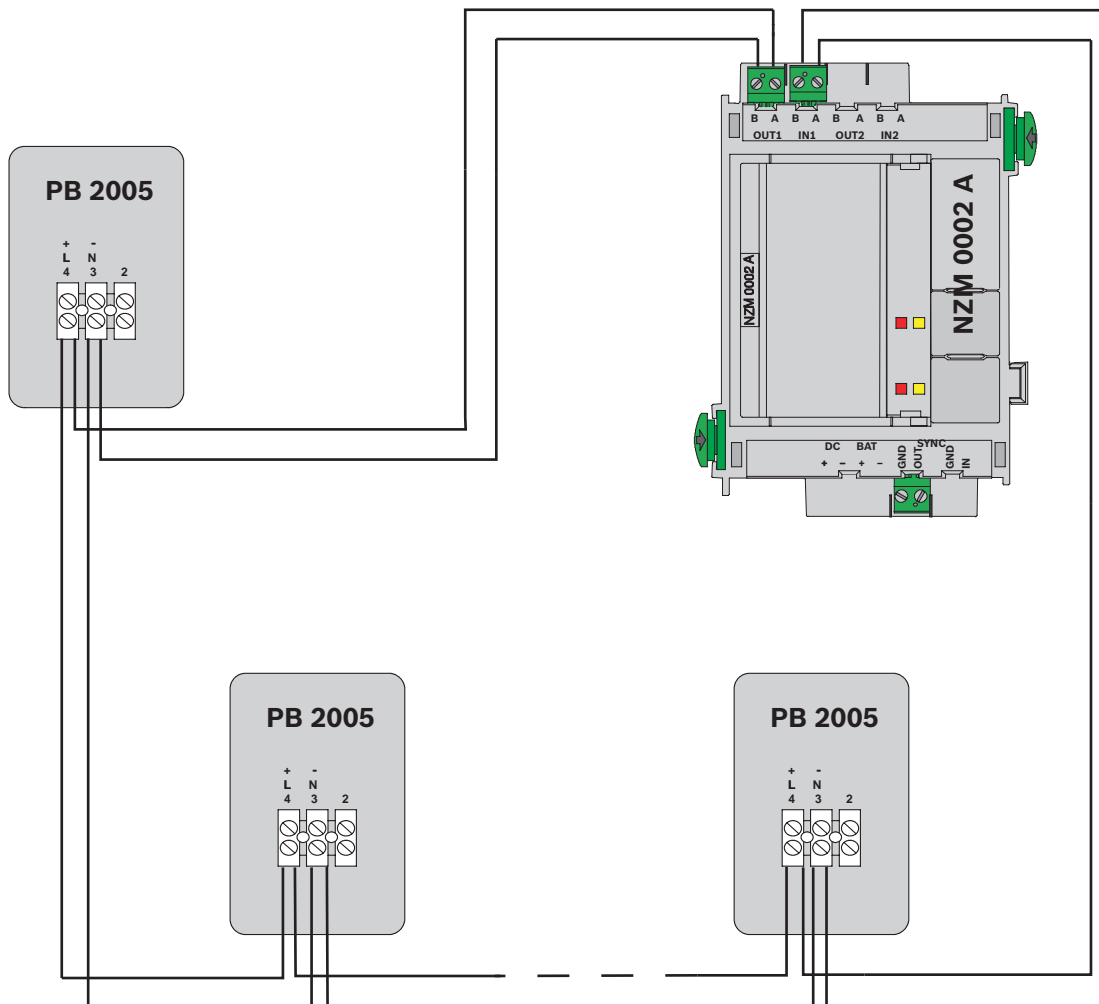
 


2.4.6


 
RMH 0002 A




FNS-P400RTH

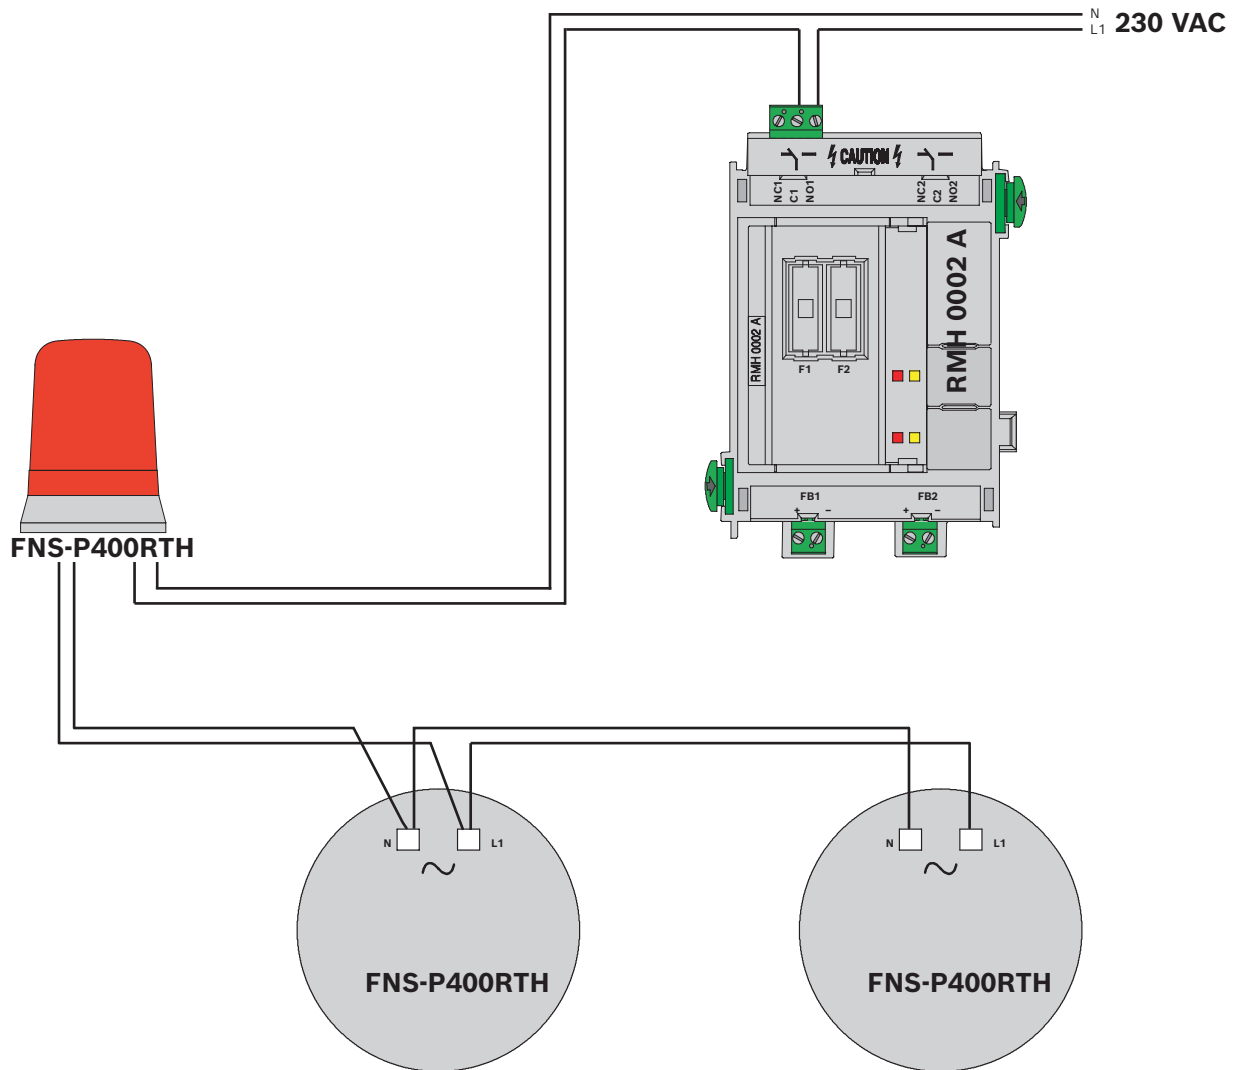 

### 2.4.7 IOS 0020 A

  

Plena

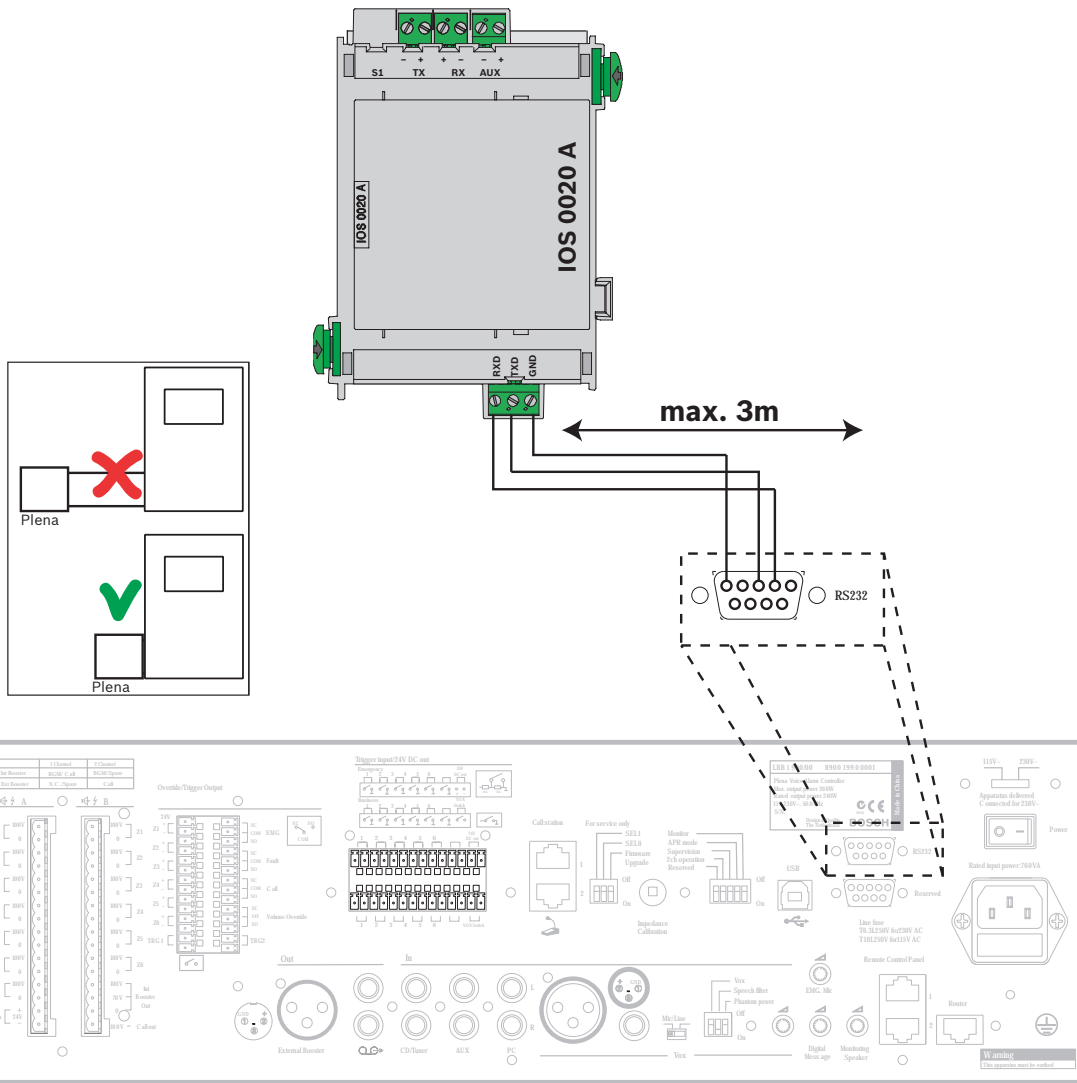







FAT4000 FBF4000 ADP4000

FMF-FAT FMF-FBF-FAT  
FMF-FIBS-A4/-A3  
FMF-ADP

 ELS

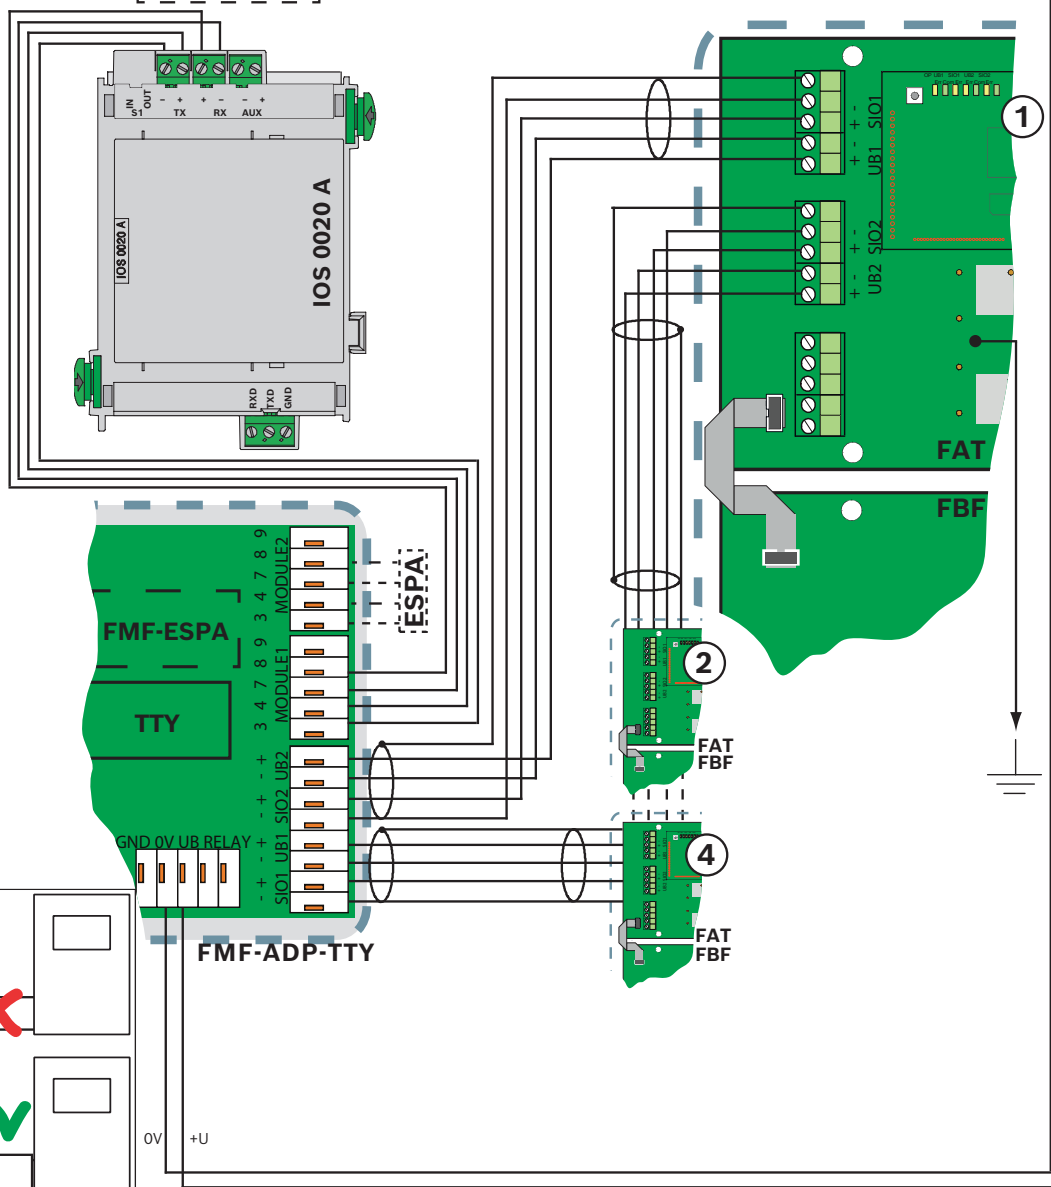



### 2.4.8 FPE-5000-UGM




FAT4000 FBF4000 ADP4000  
 FMF-FAT FMF-FBF-FAT  
 FMF-FIBS-A4/-A3  
 FMF-ADP

 ELS

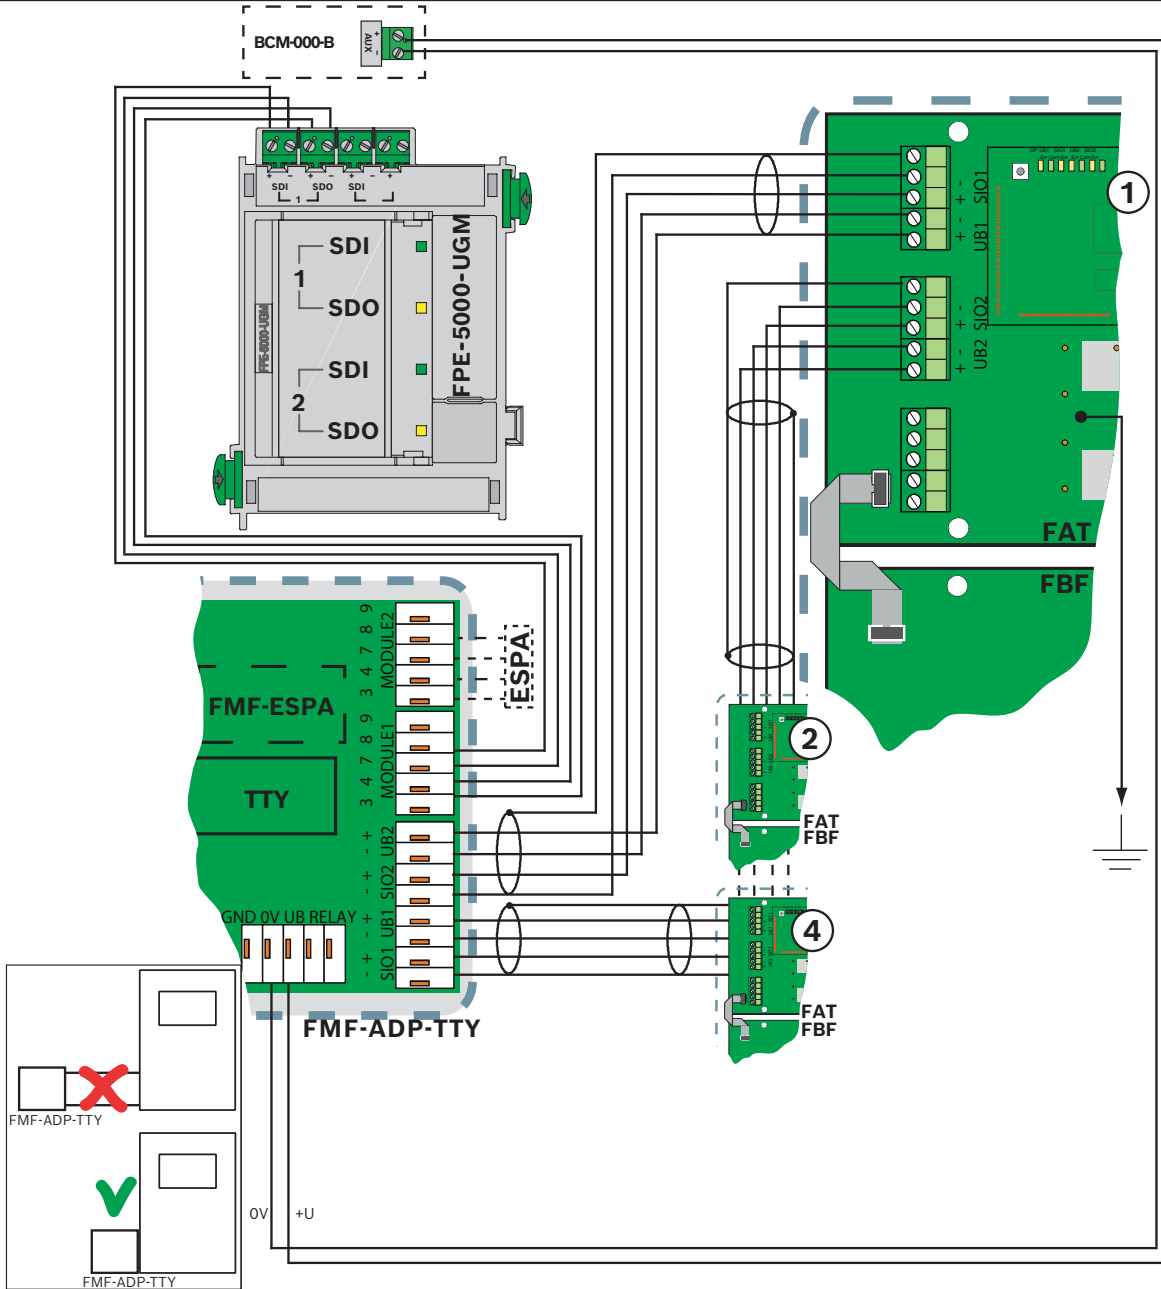



**FAT2002RE  
ADP-NE**

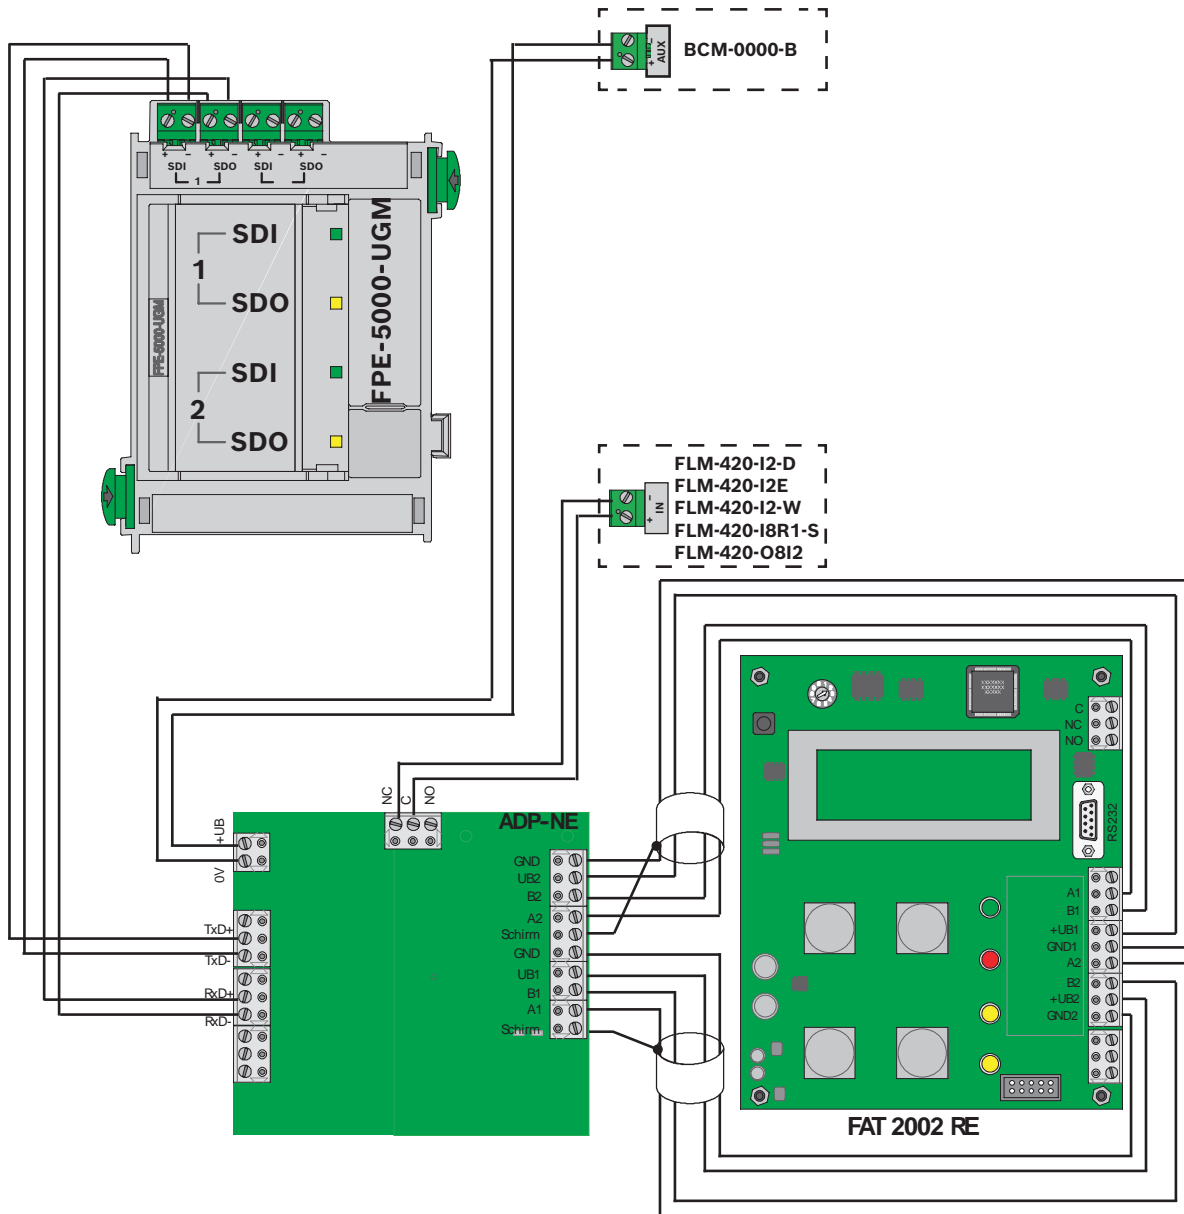

## 2.5

### Interface Modules



*FLM-420-4/CON-D/S, page 125*

*FLM-420-I8R1-S, page 158*

*FLM-420-NAC-D/S, page 160*

*FLM-420-RHV, page 172*


*FLM-420-RLE-S, page 184*

*FLM-420-RLV1-E, page 185*



*FLM-420-RLV8-S, page 186*


*FMF-ADP-FBF/FMF-ADP-TTY, page 187*

### 2.5.1 FLM-420-4/CON-D/S

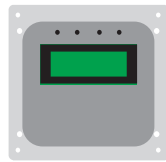


ALARMLINE II

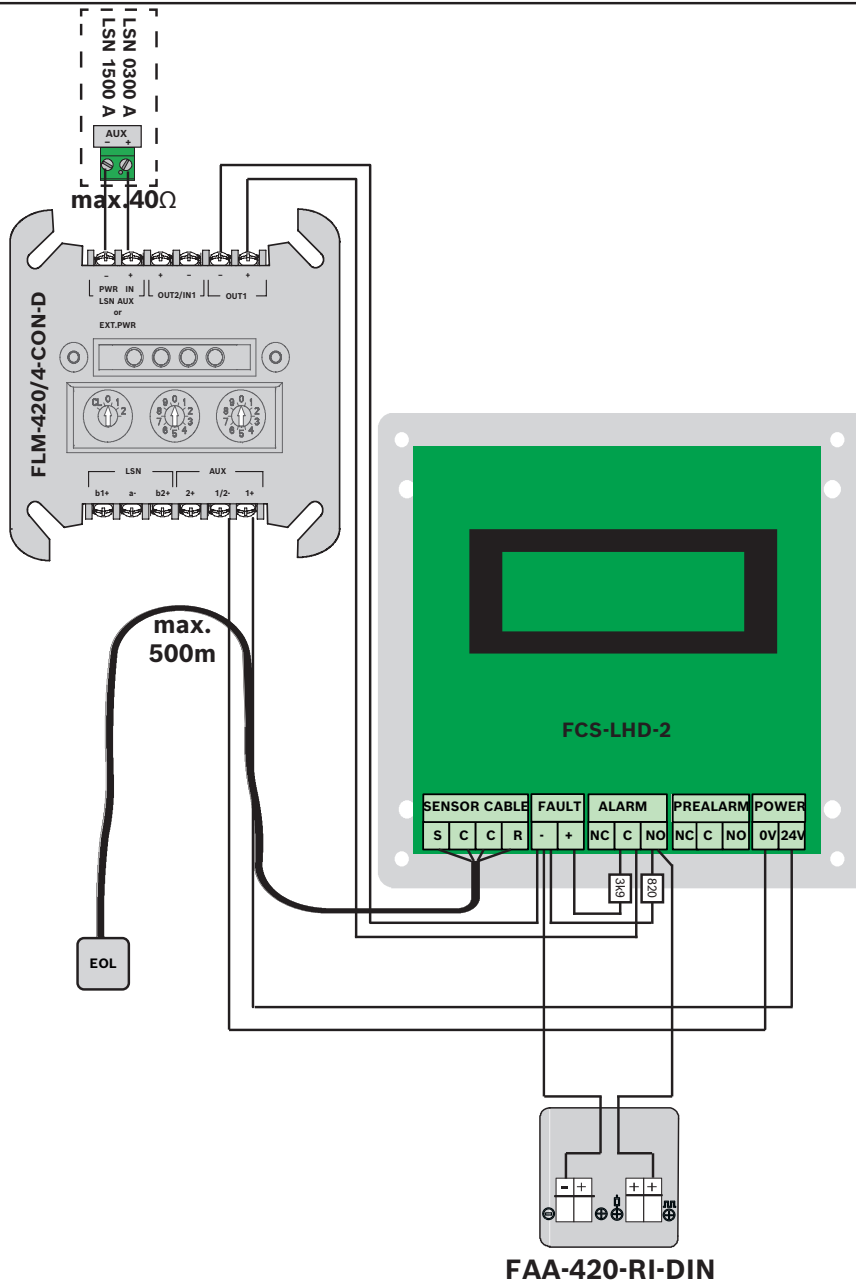 



 


FCS-LWM-1

 


ELS

BCM-0000-B  
LSN 0300 A  
LSN 1500 A

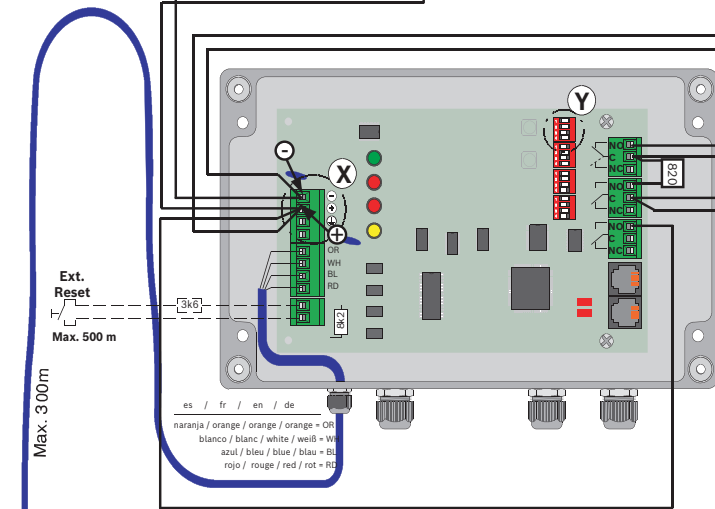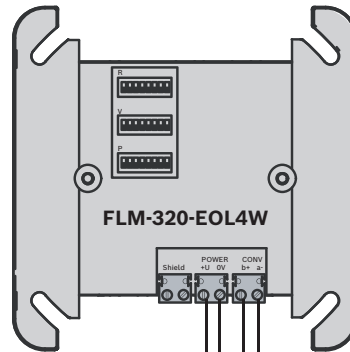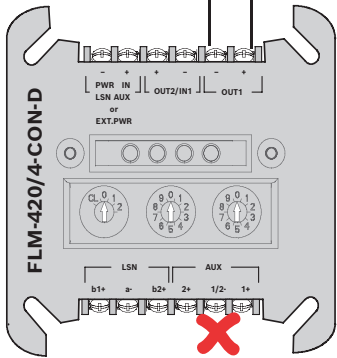




FCS-LWM-1

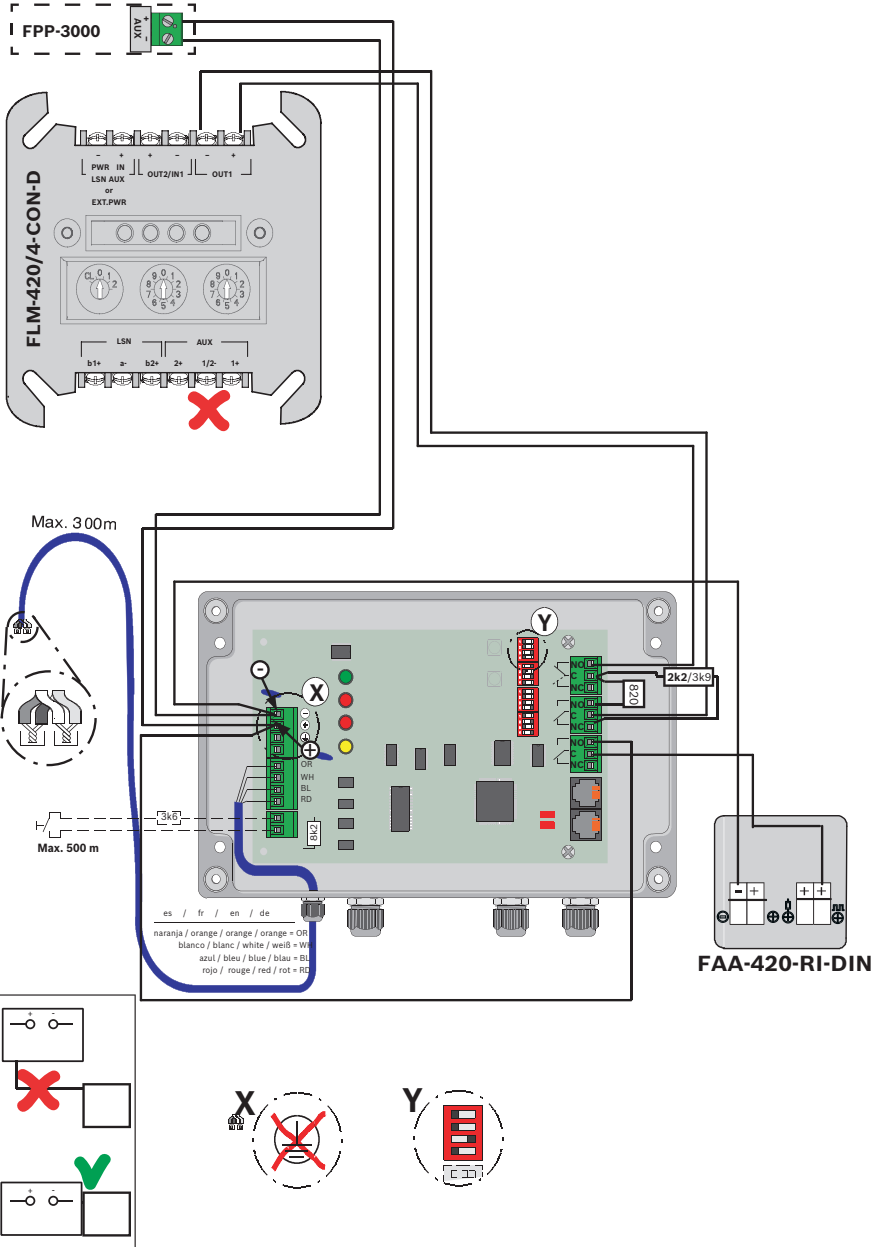






FCP-500

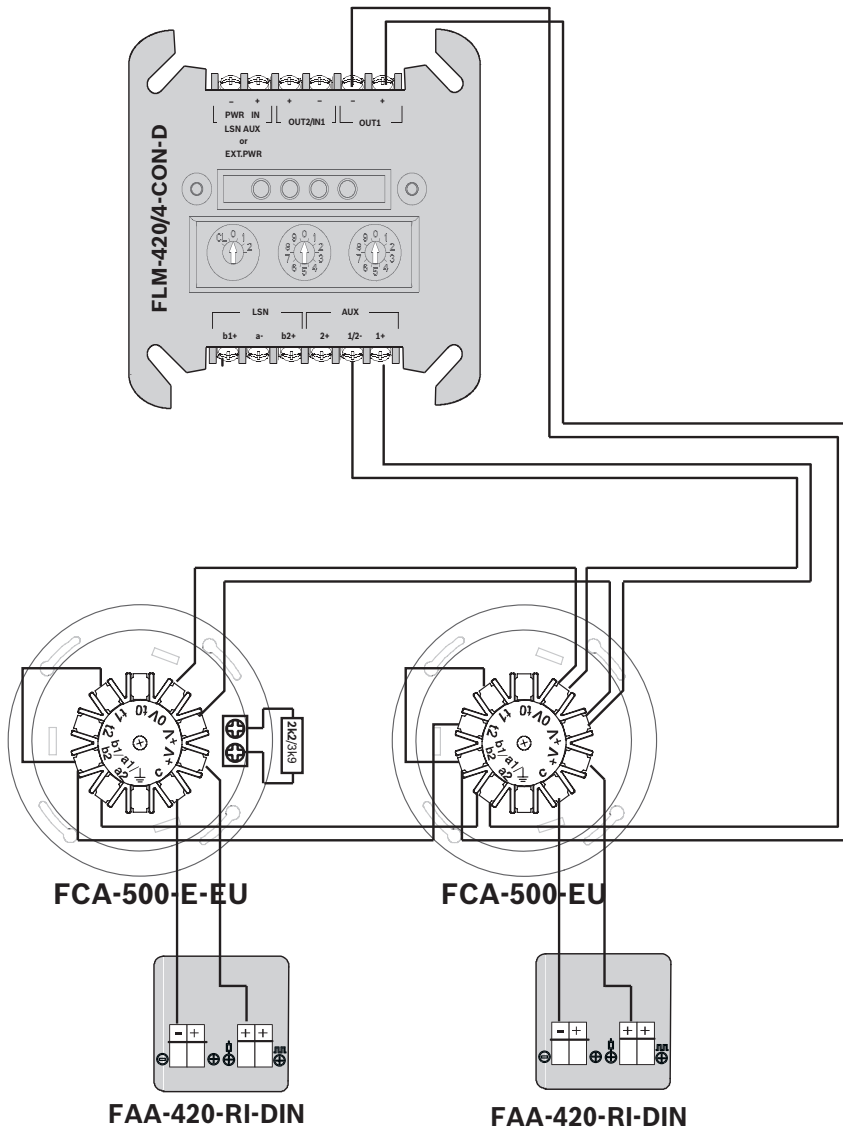






 FCA-500-EU  
 FCP-O 500  
 FCP-O 500-P  
 FCP-OC 500  
 FCP-OC 500-P

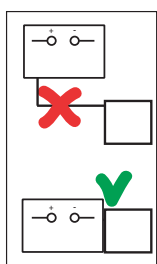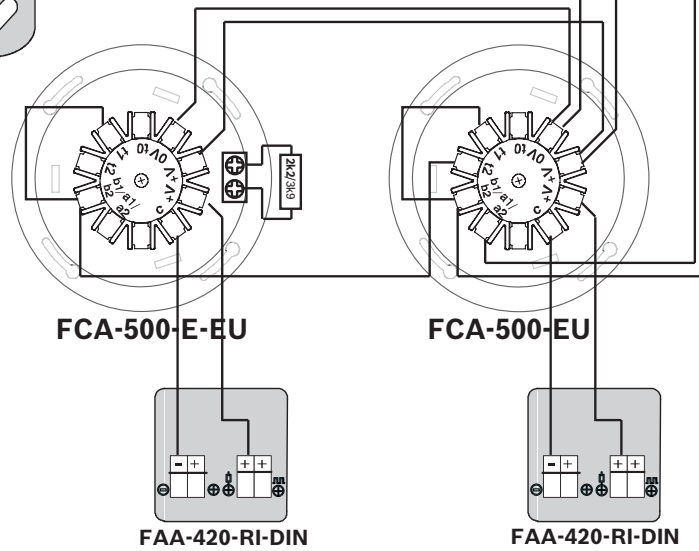
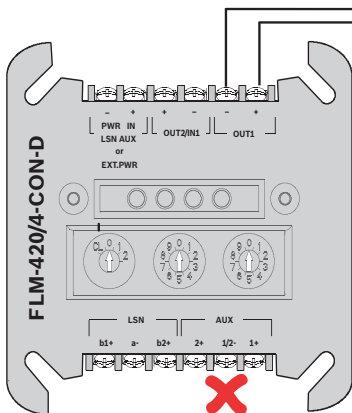





FCS-320-TM Series




 
BCM-0000-B  
LSN 0300 A  
LSN 1500 A

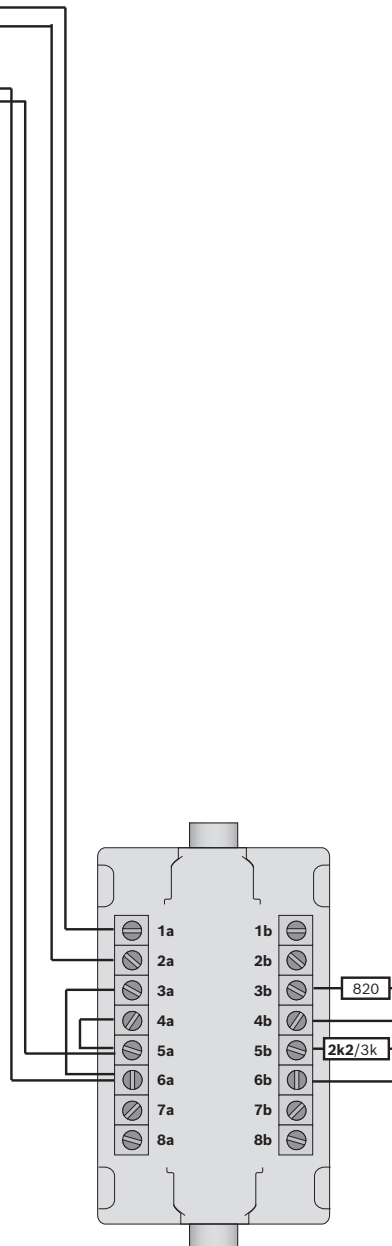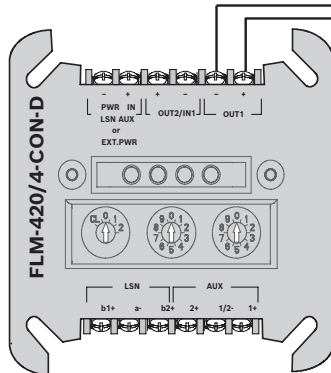







FCS-320-TP Series

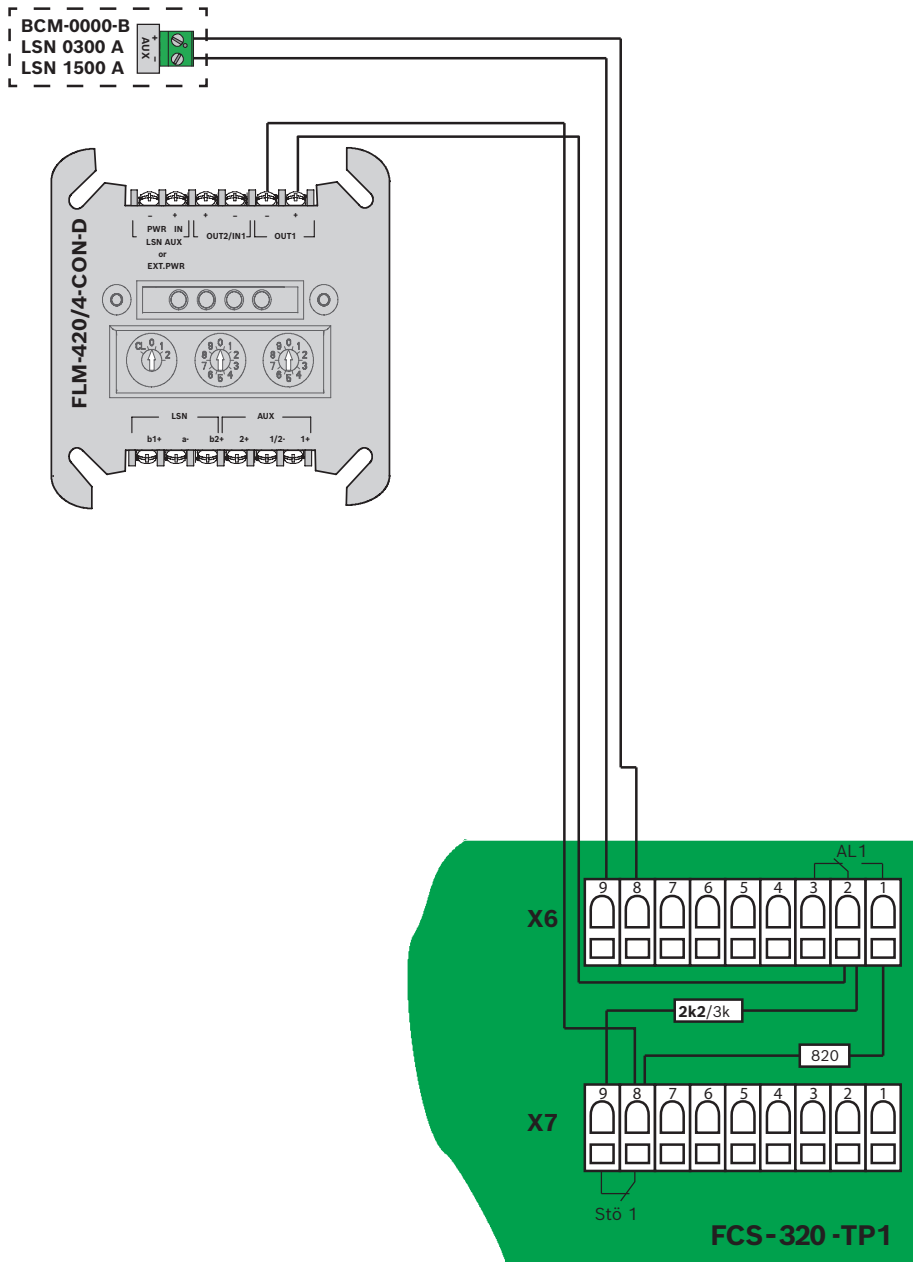


 



FCS-320-TP Series

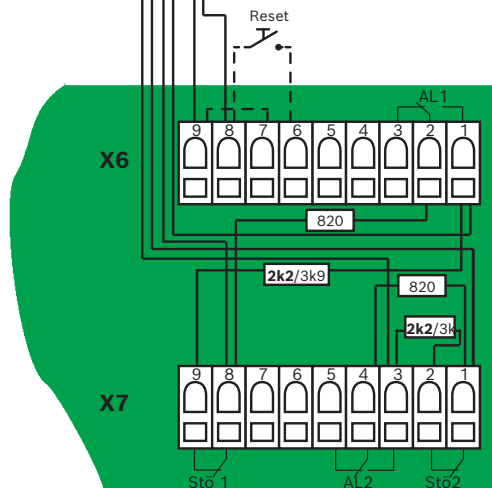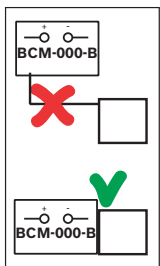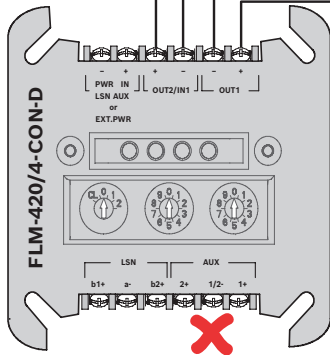 


FCS-320-TP2


 


FCS-320-TP1

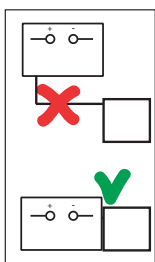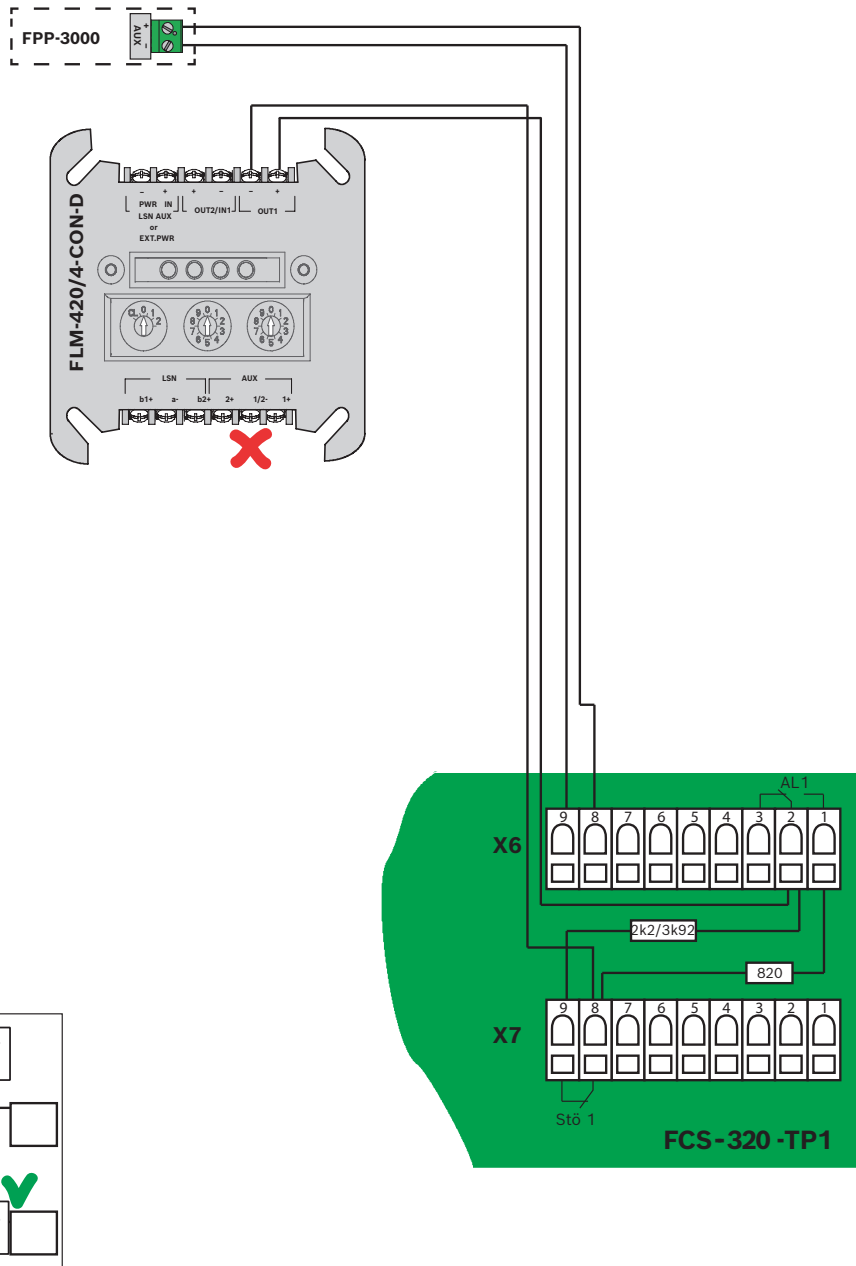


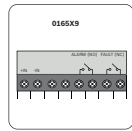


**016519, 016589  
IR3 Flame Detector**

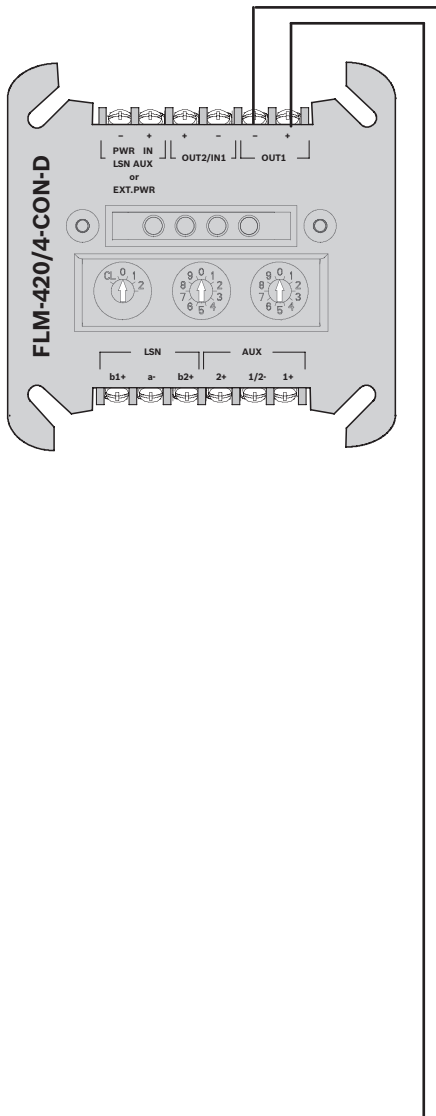
 



**max. 1 x 0165X9**

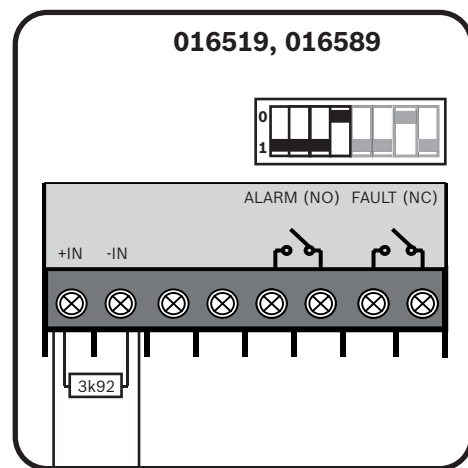


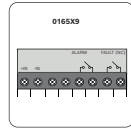


**016519, 016589  
IR3 Flame Detector**

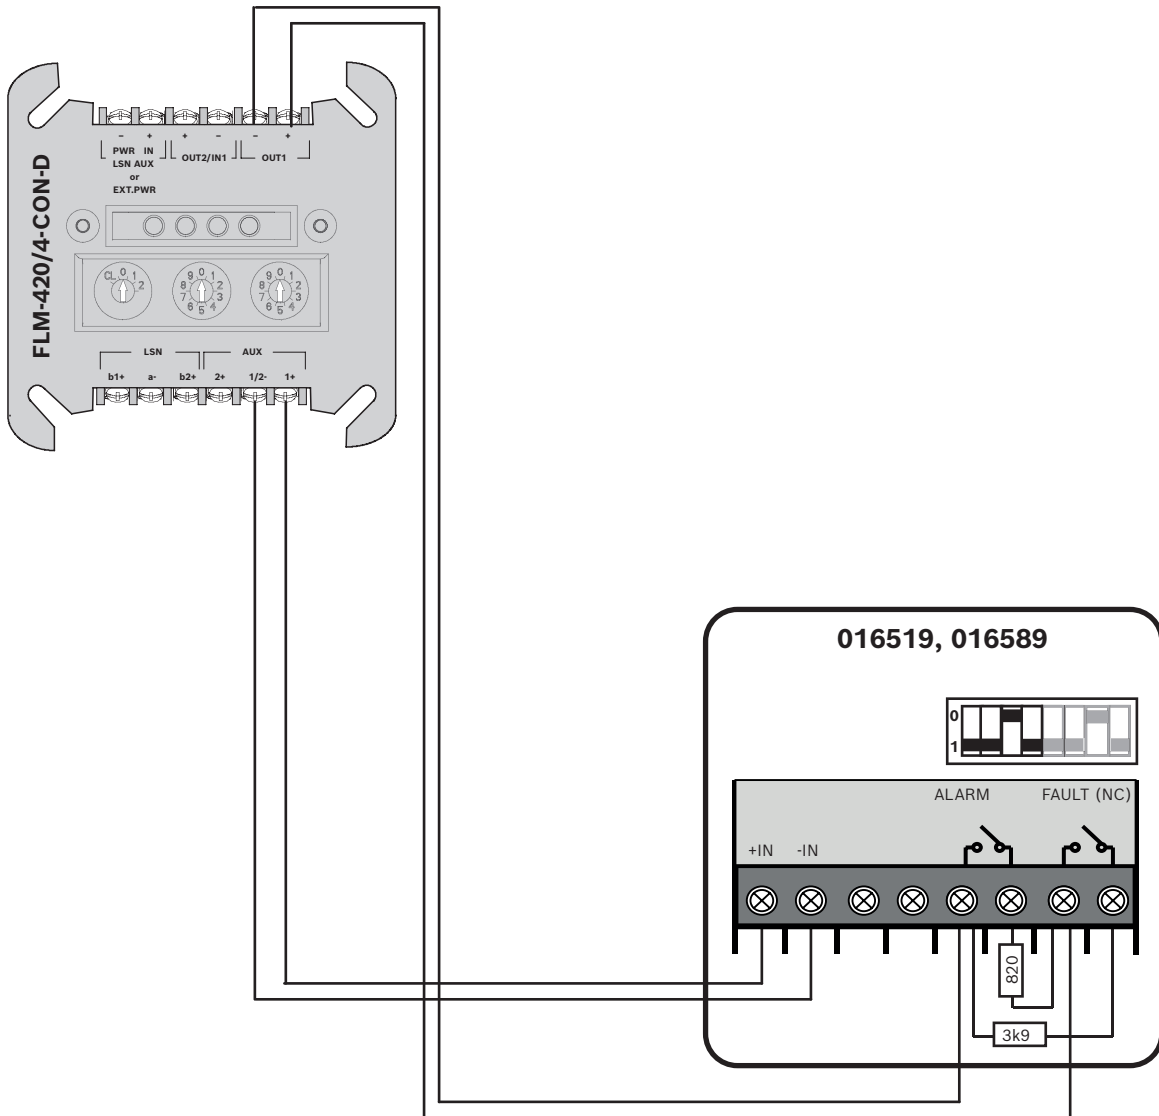 


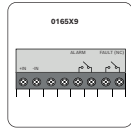


### 016519, 016589 IR3 Flame Detector

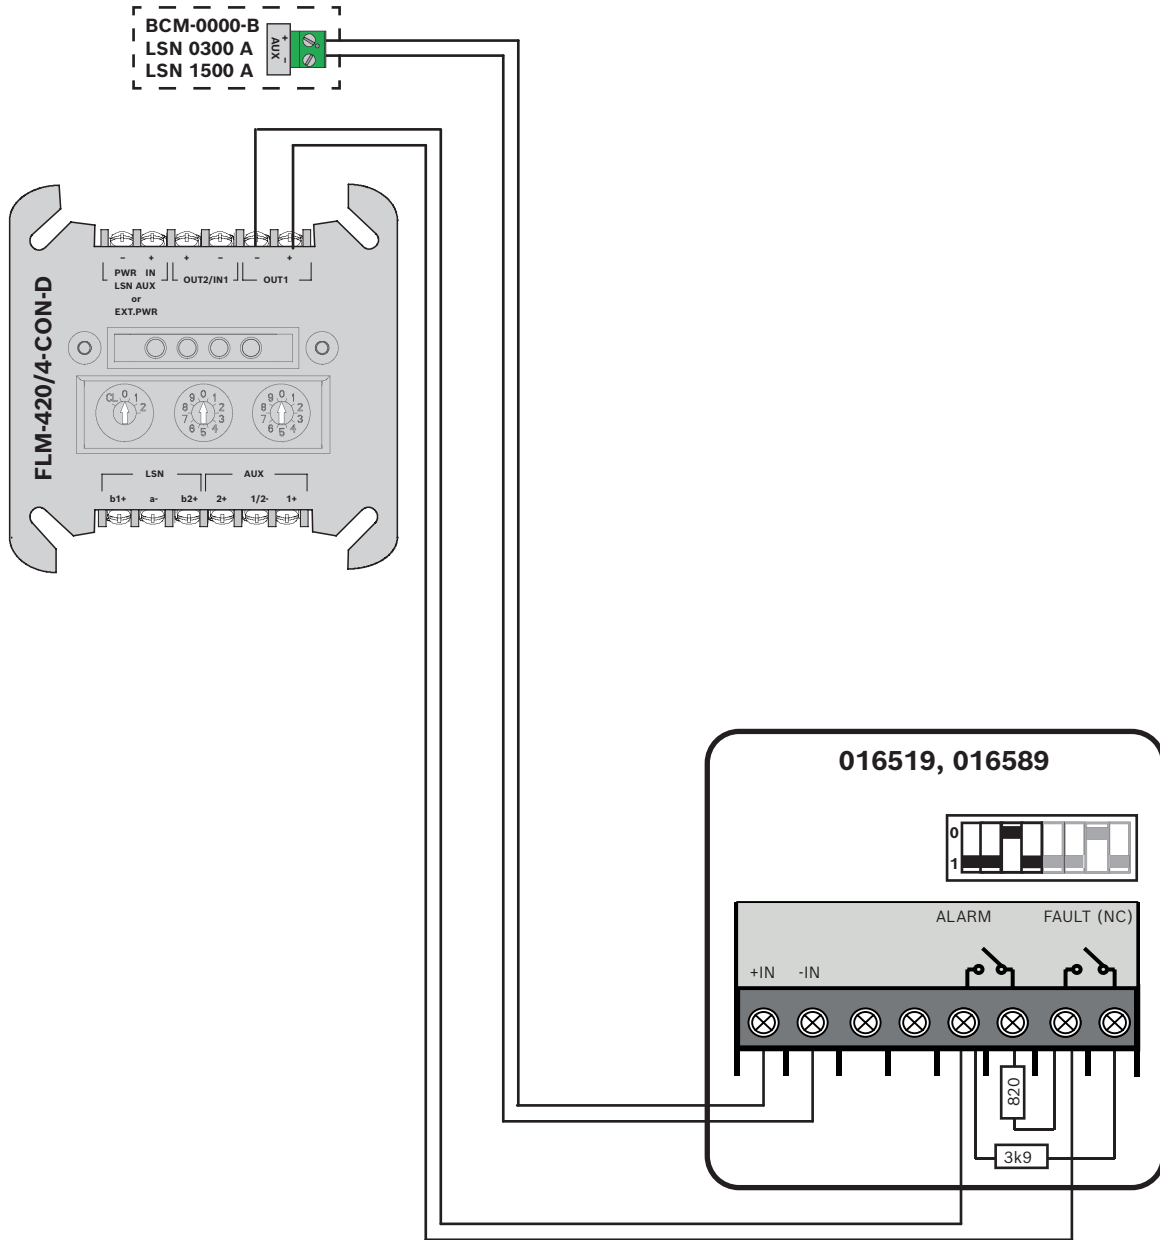 



 


**016519, 016589  
IR3 Flame Detector**

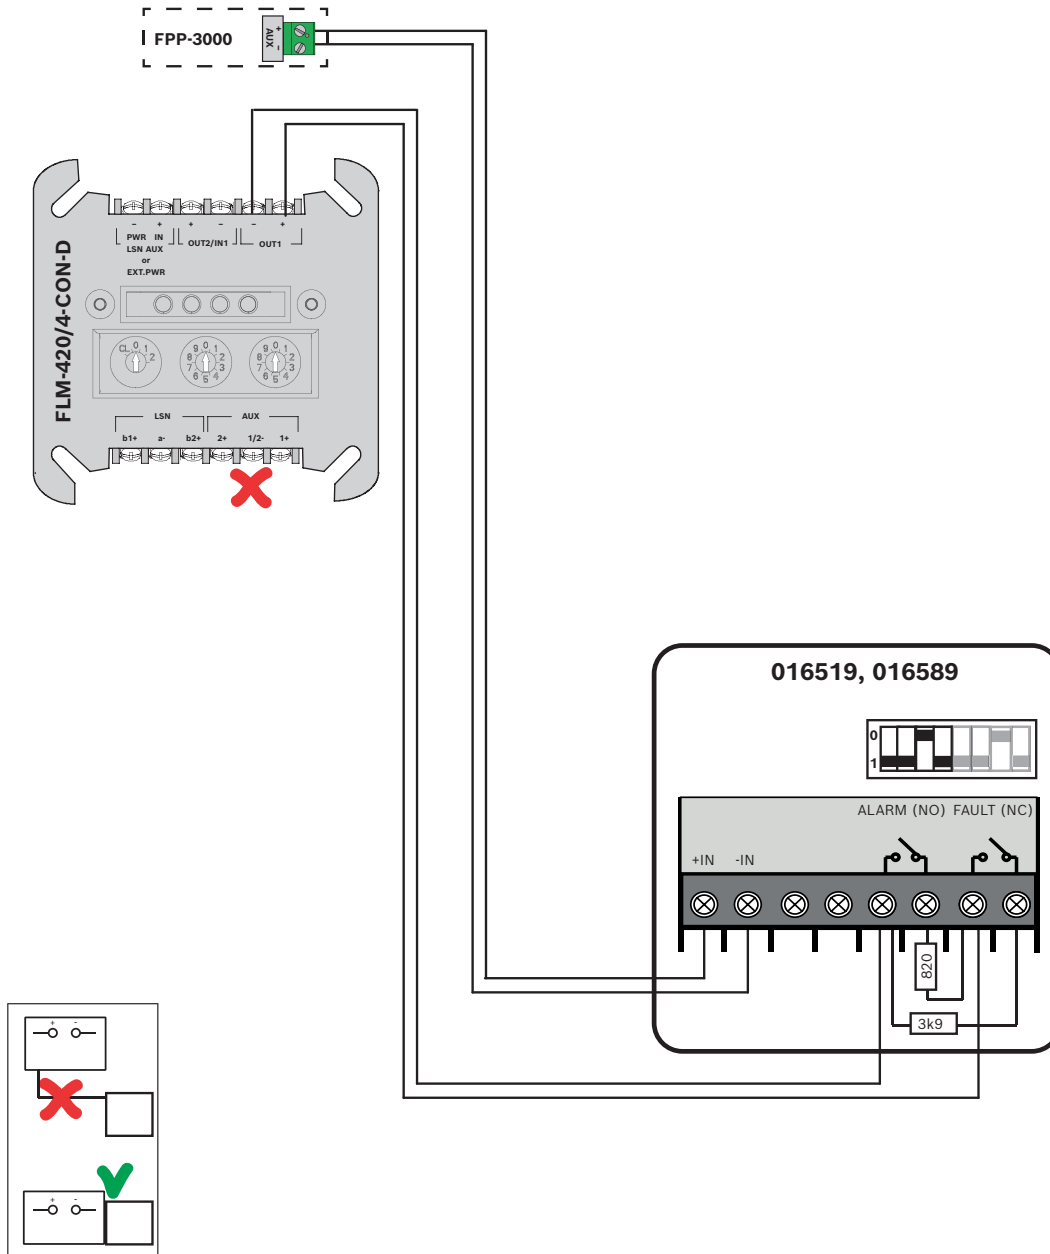




**Fireray 50RV  
Fireray 100RV**

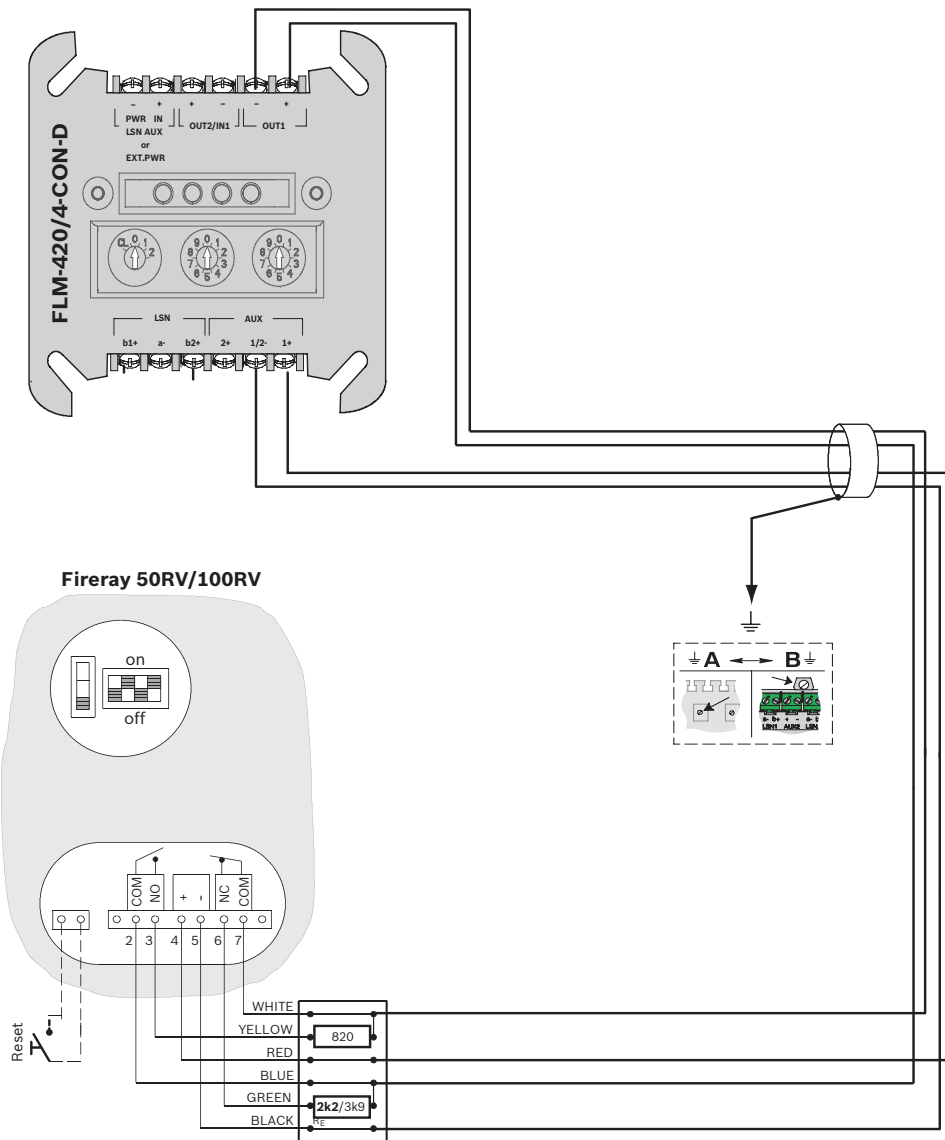



**FIRERAY3000**


1 x

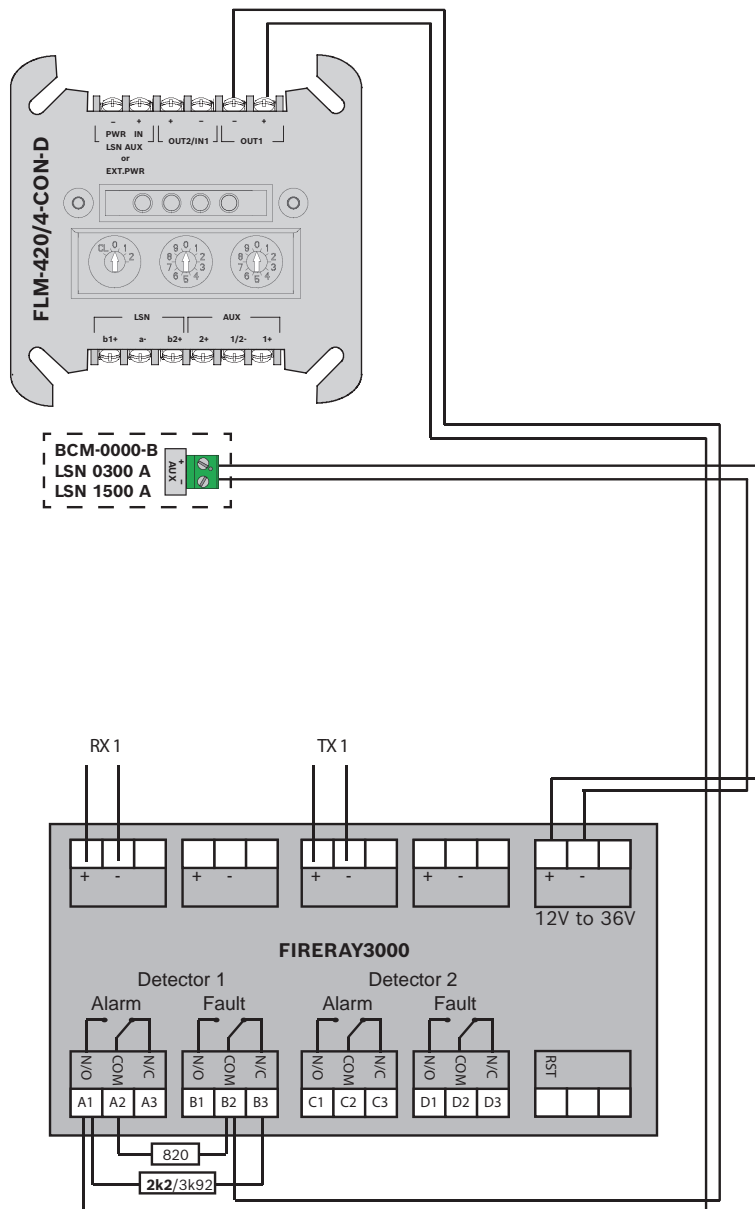



**FIRERAY3000**


2 x  **OUT1**

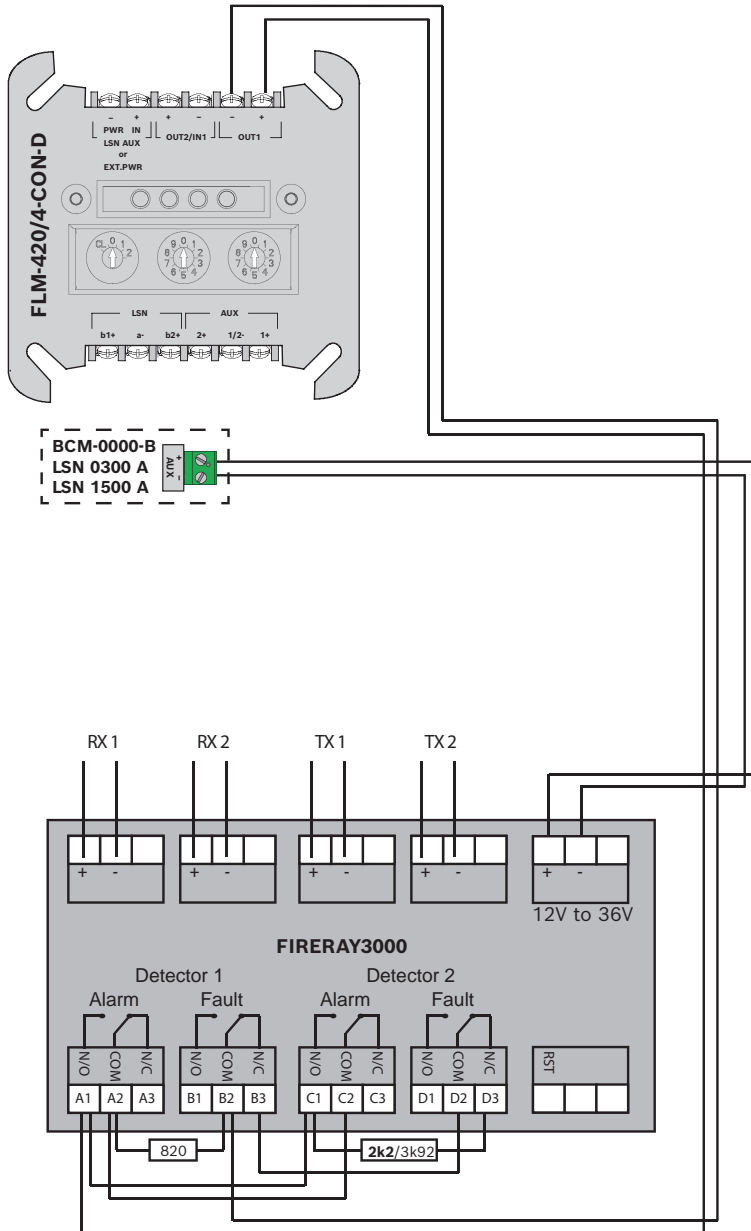




**FIRERAY3000**

2 x  **OUT1+2**

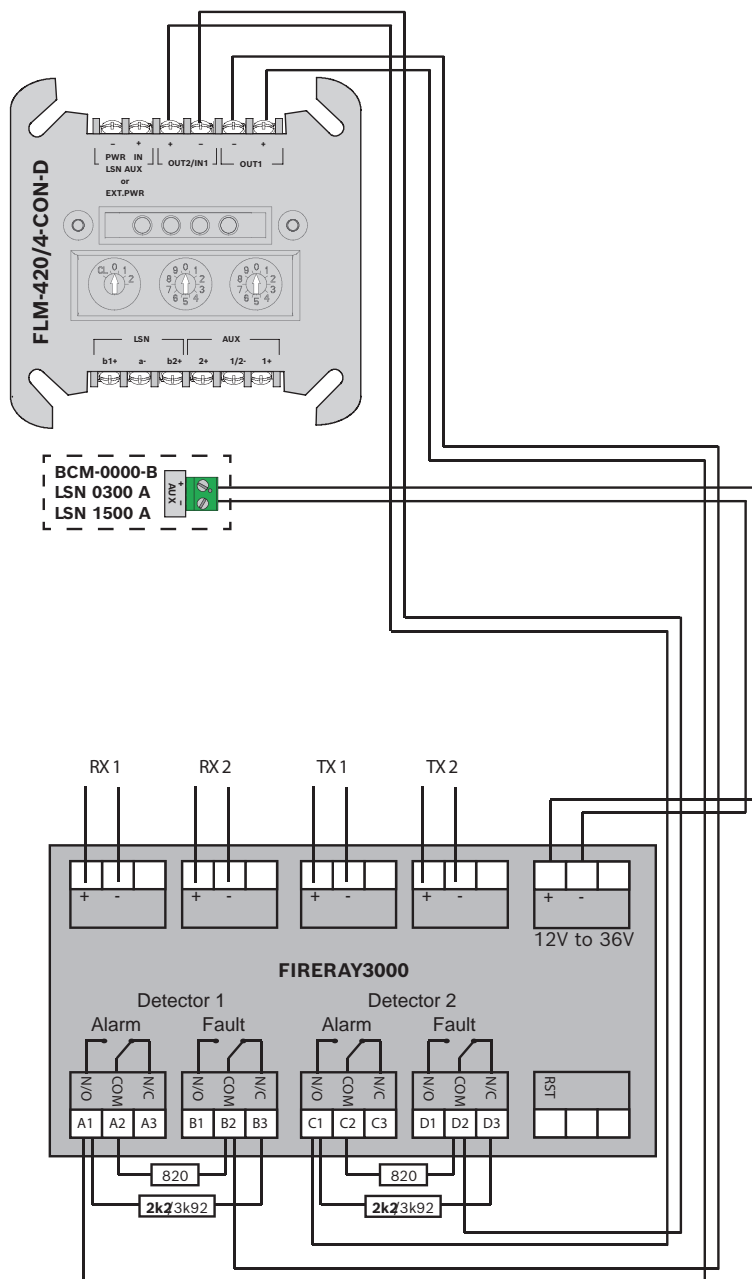


**Reset action**

 

**FIRERAY5000**


1 x 

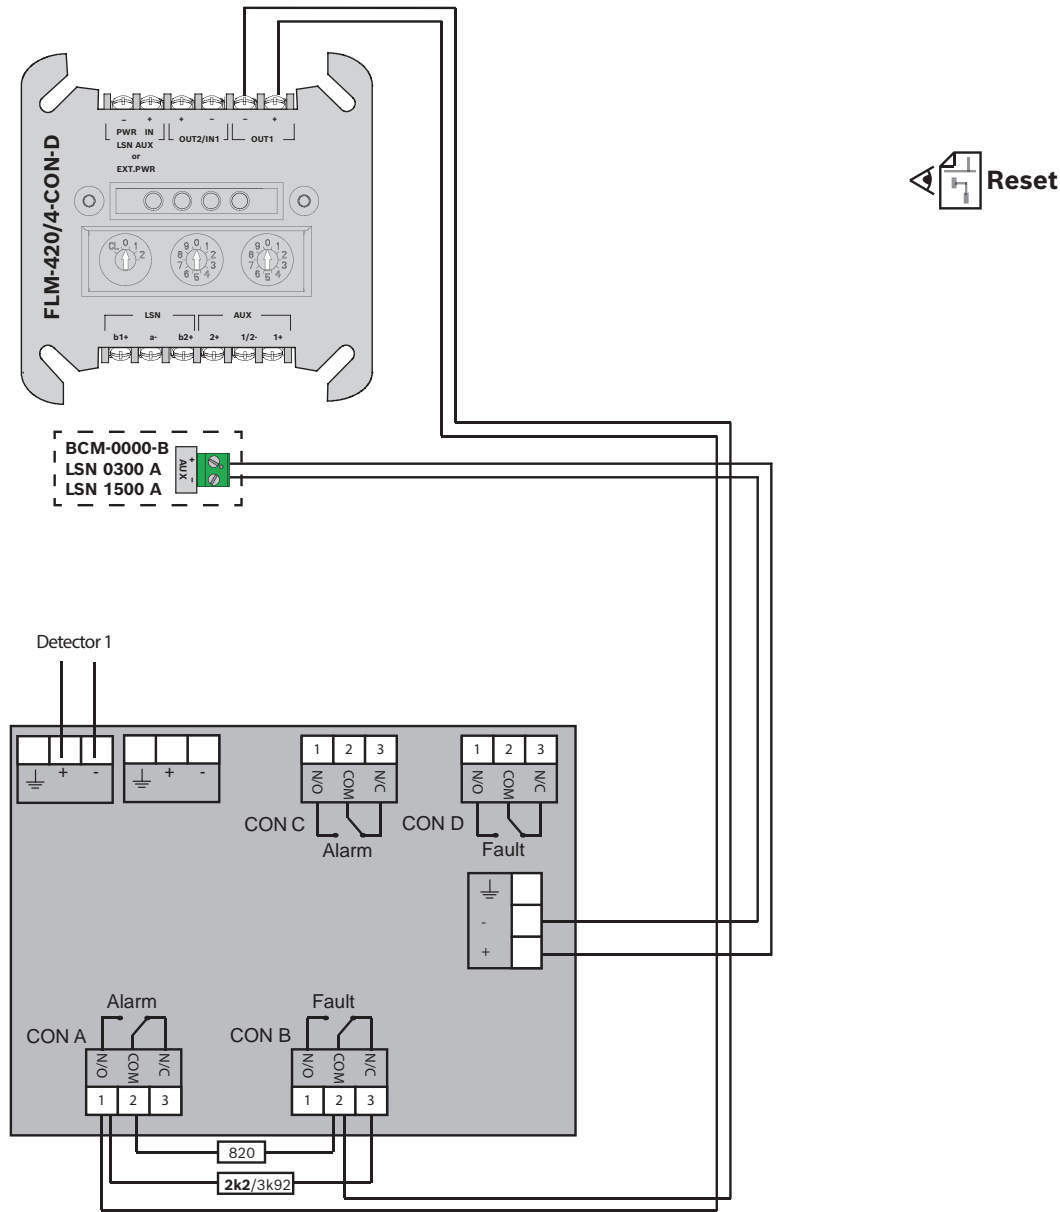





**FIRERAY5000**

 **2 x OUT1**

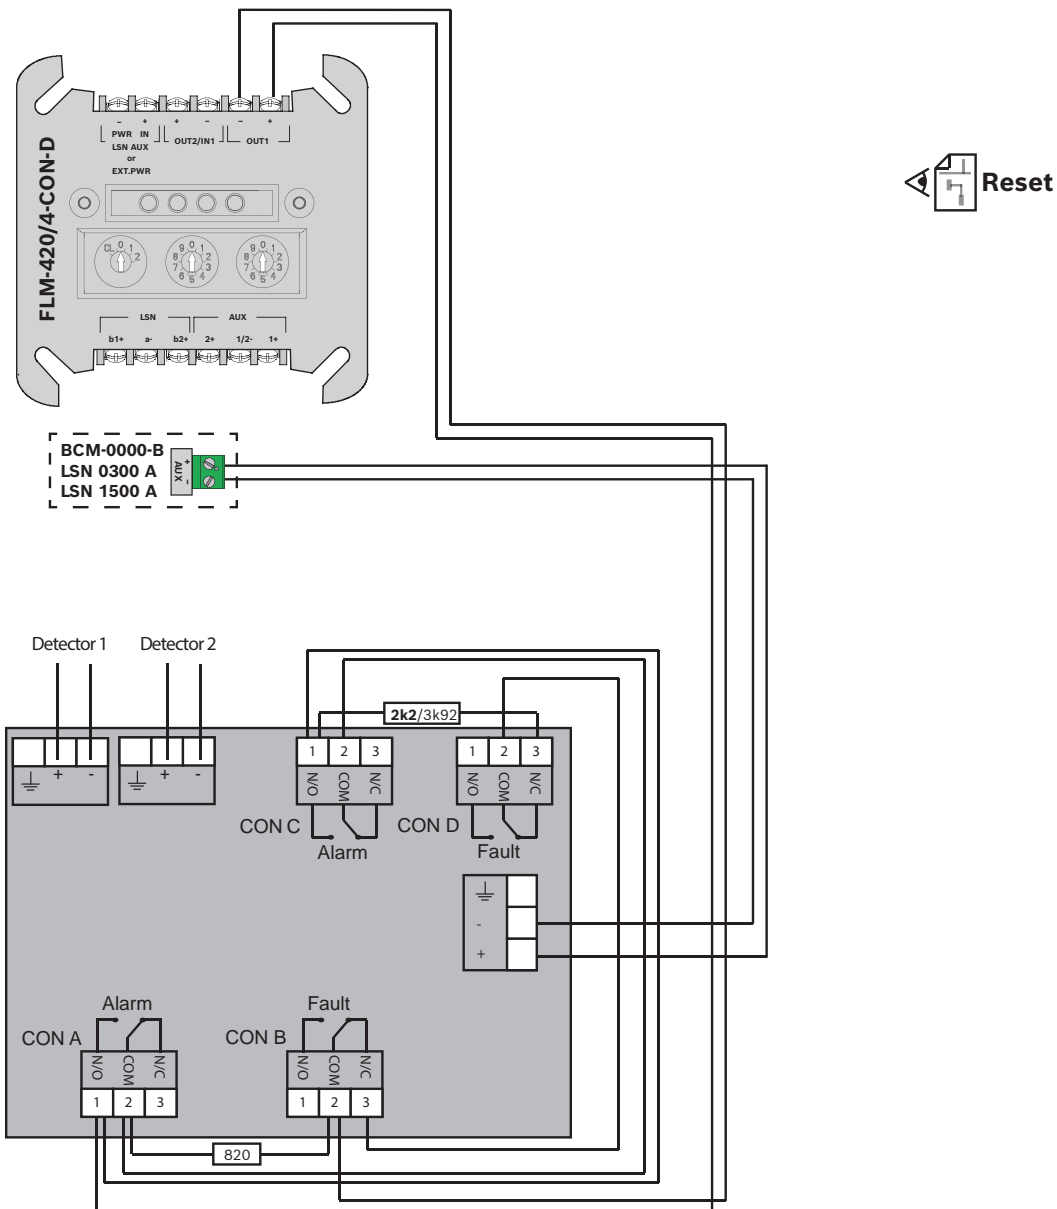

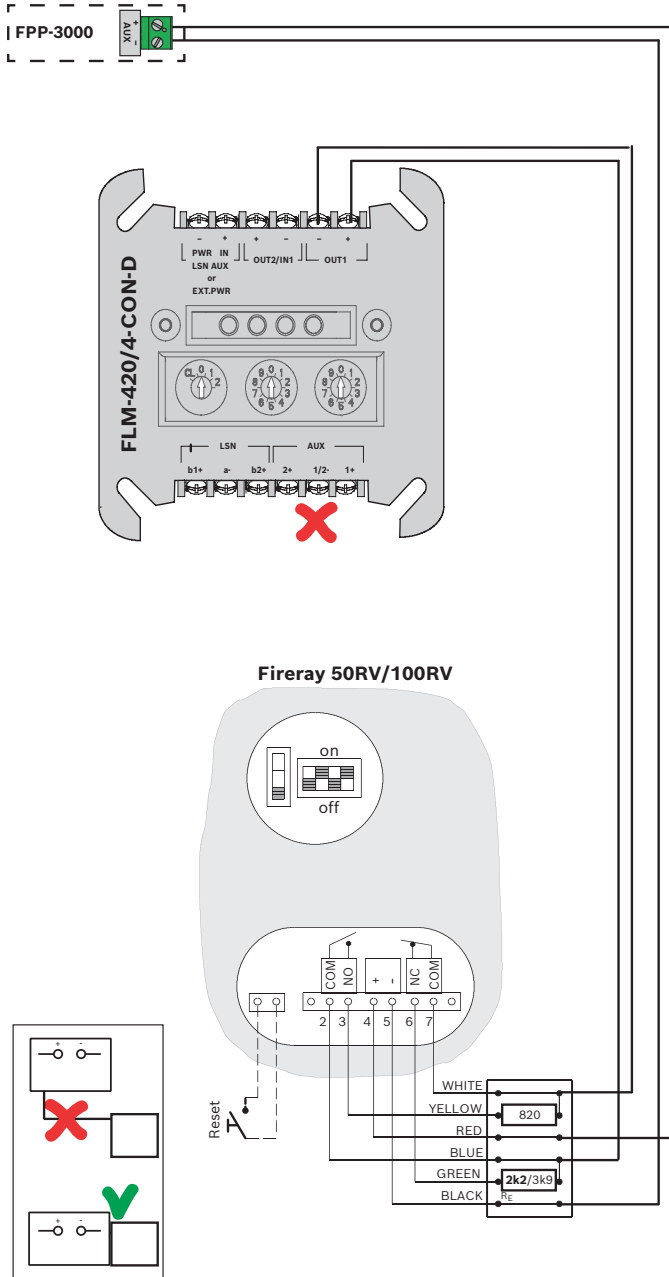






**FIRERAY3000**


1 x

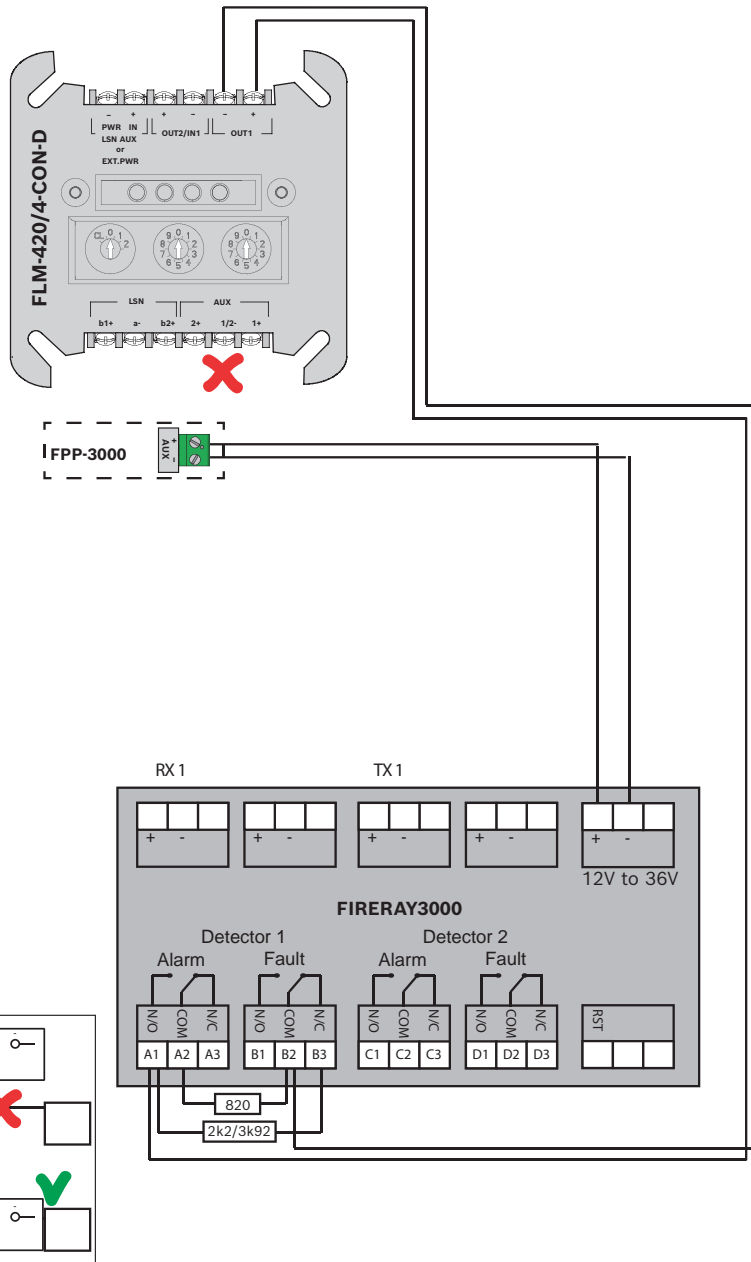


**Reset action**



**FIRERAY3000**  
2 x  **OUT1**

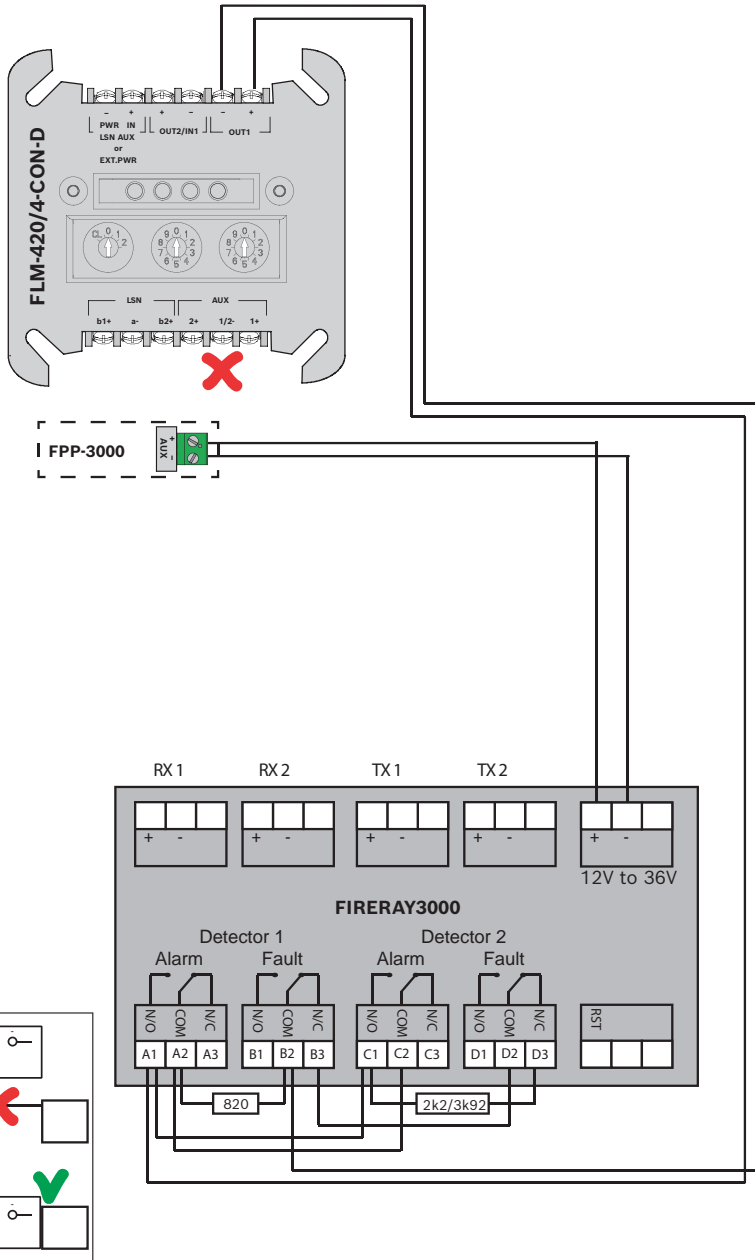


 **Reset action**

 


**FIRERAY5000**

1 x

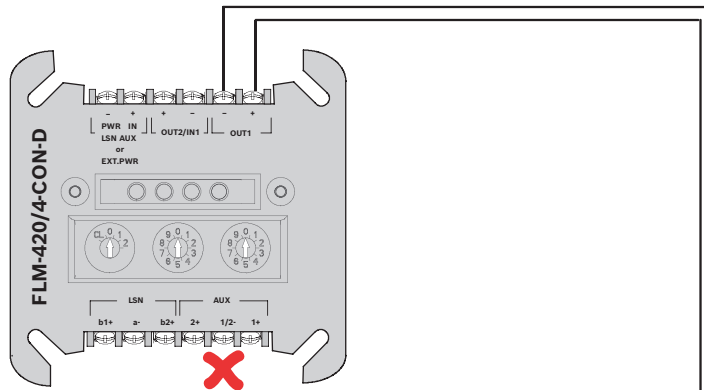


**Reset action**

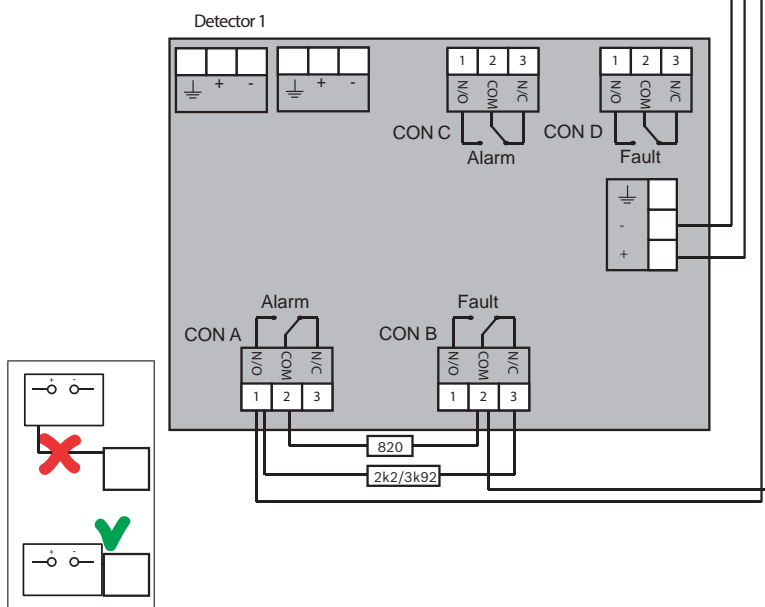





**FIRERAY5000**

**2 x OUT1**

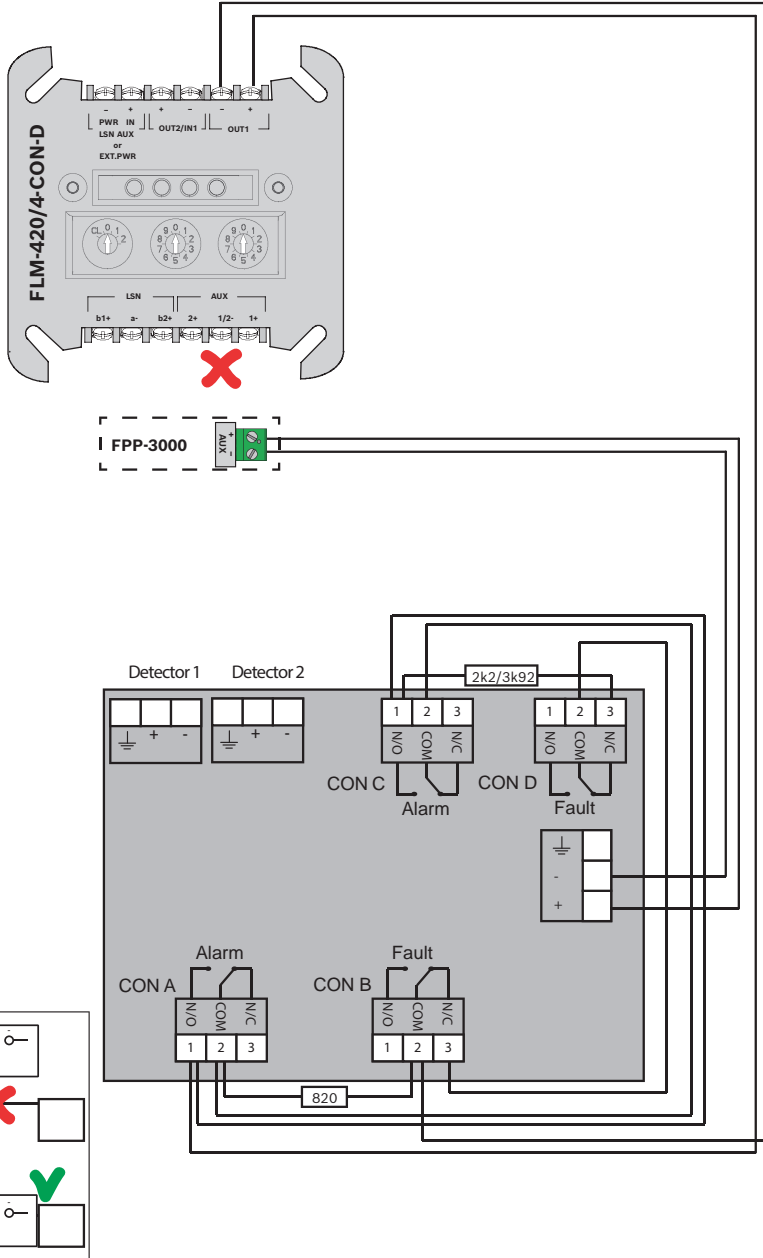


 **Reset action**

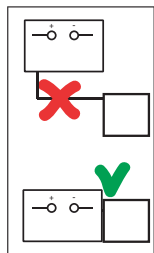

 



DC1192, SB3  
OOH740-A9-Ex  
DO1101A-Ex  
DT1101A-Ex-  
/DT1102A-Ex  
DF1101-Ex

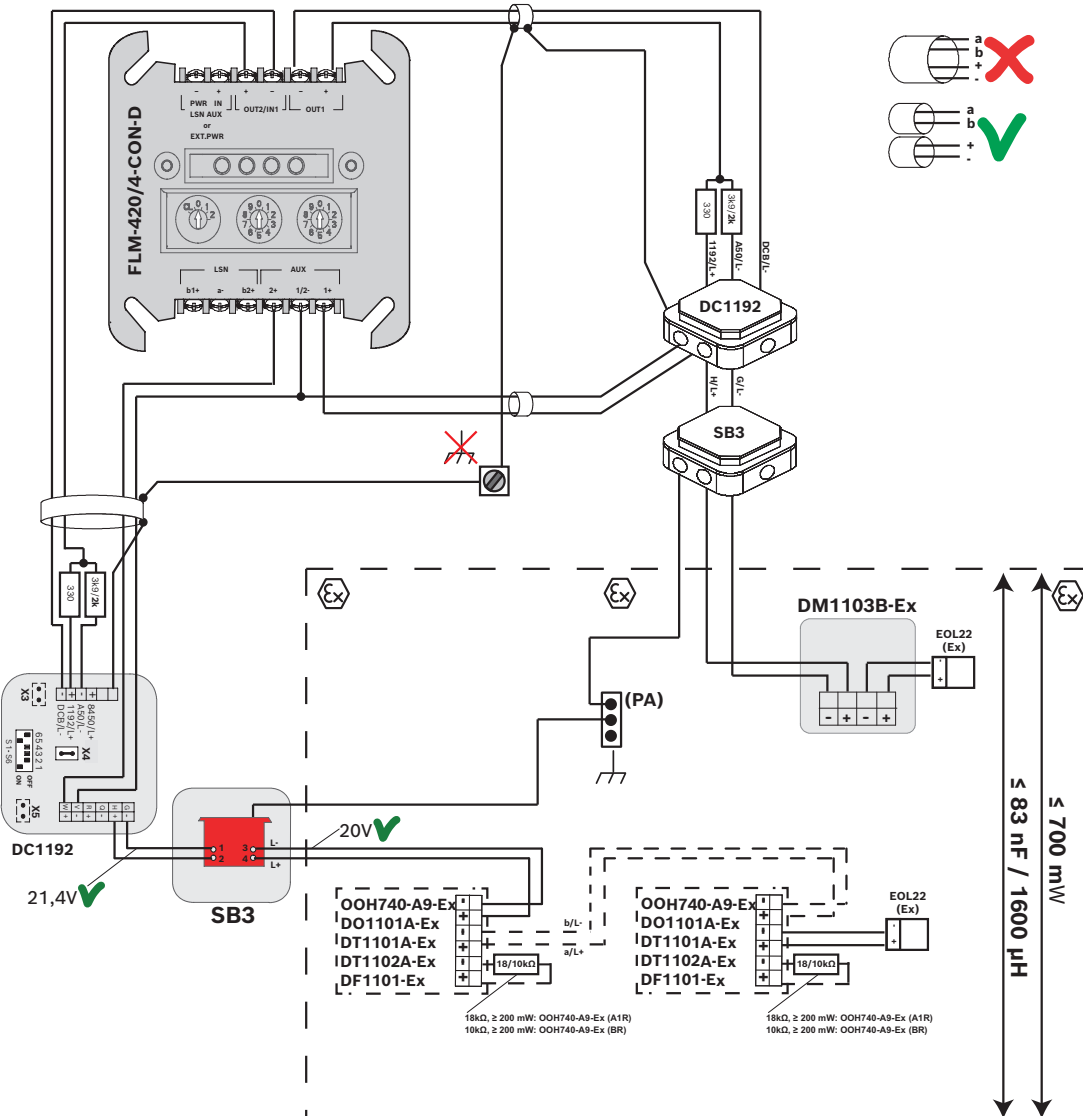




 
DC1192, SB3  
 OOH740-A9-Ex  
 DO1101A-Ex  
 DT1101A-Ex/DT1102A-Ex  
 DF1101-Ex  
 DM1103B-Ex

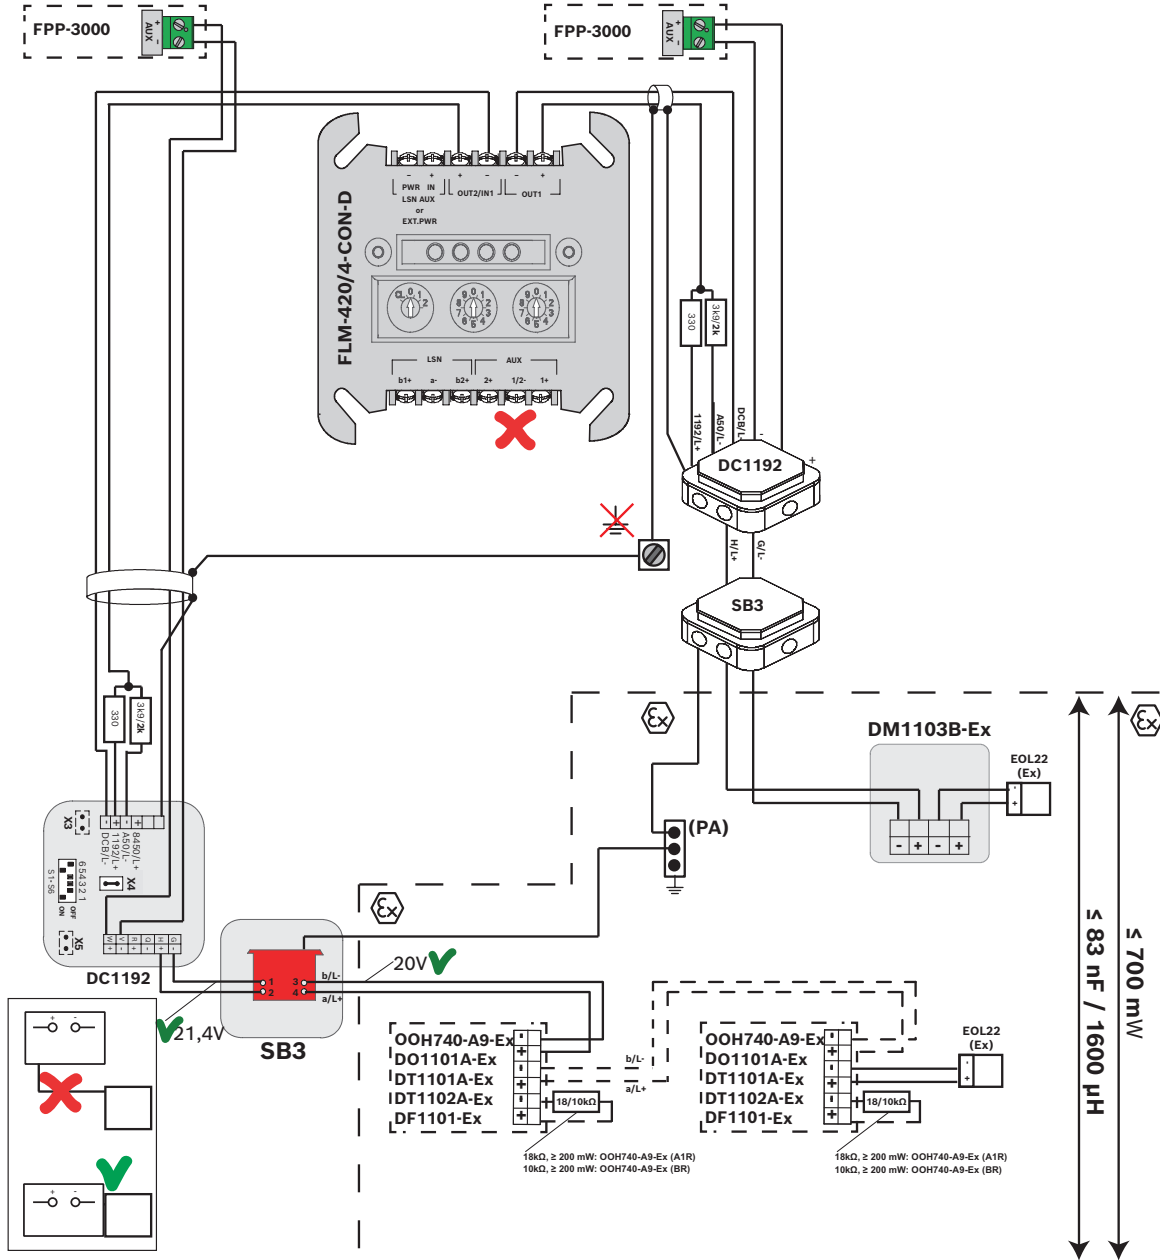





**DF 1192**

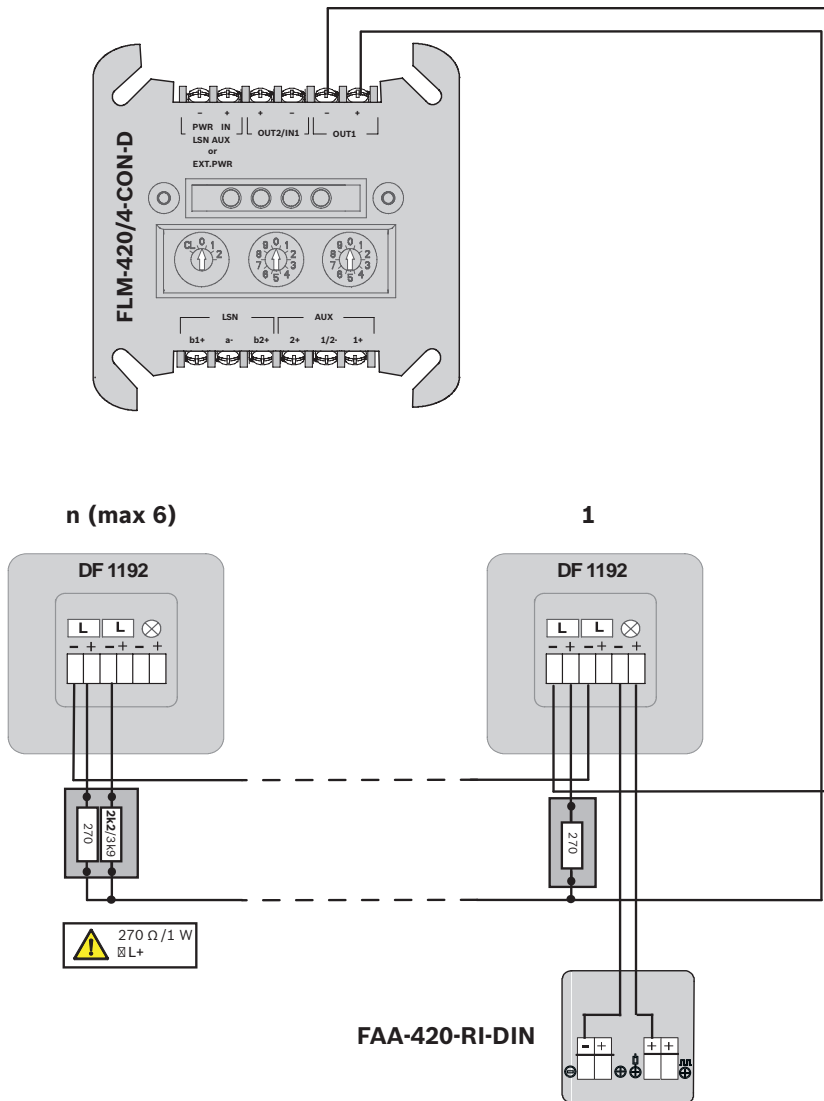

 


**FMC-300-RW**

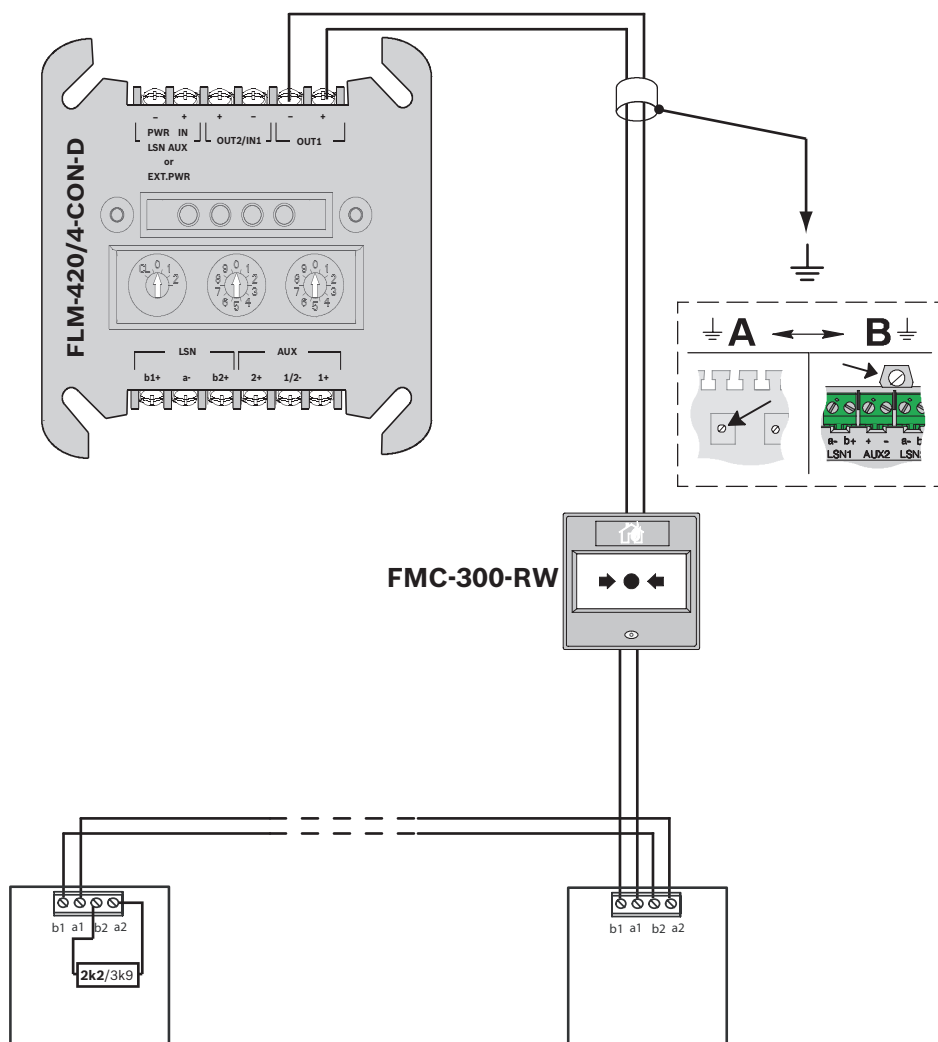 









N4387A

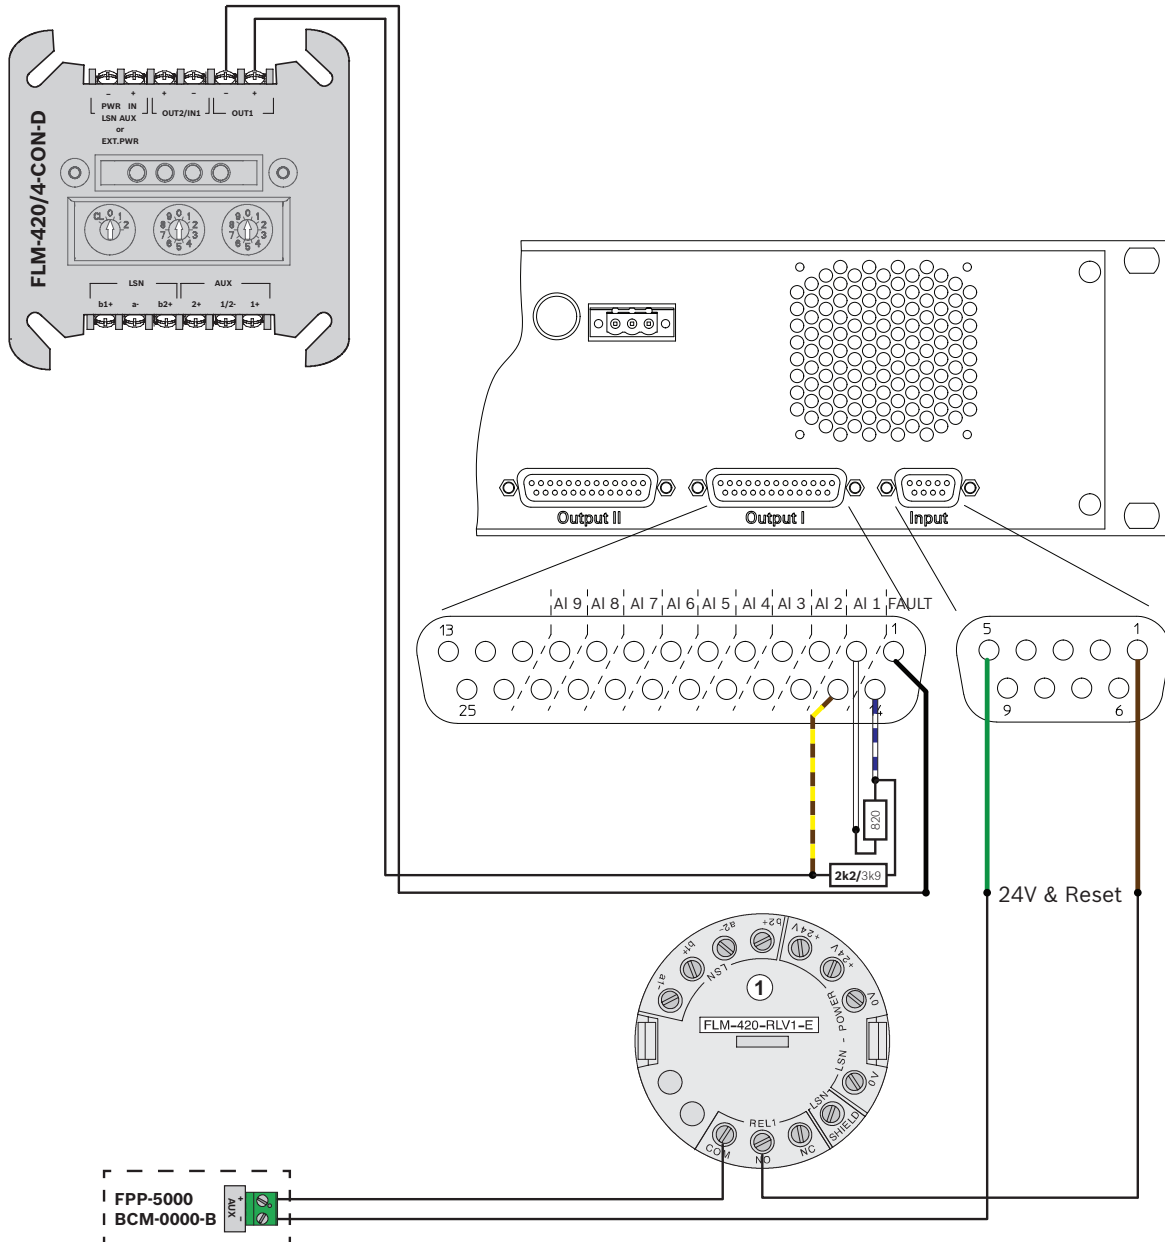


 


 
 
MSS 400, MSS 400 B  
 FCH-320-T320  
 FCH-T320-R470, FCH-T320-FSA  
 FCP-O320, FCP-O320-R470  
 FCP-OC320, FCP-OC320-R470  
 FCP-OT320, FCP-OT320-R470

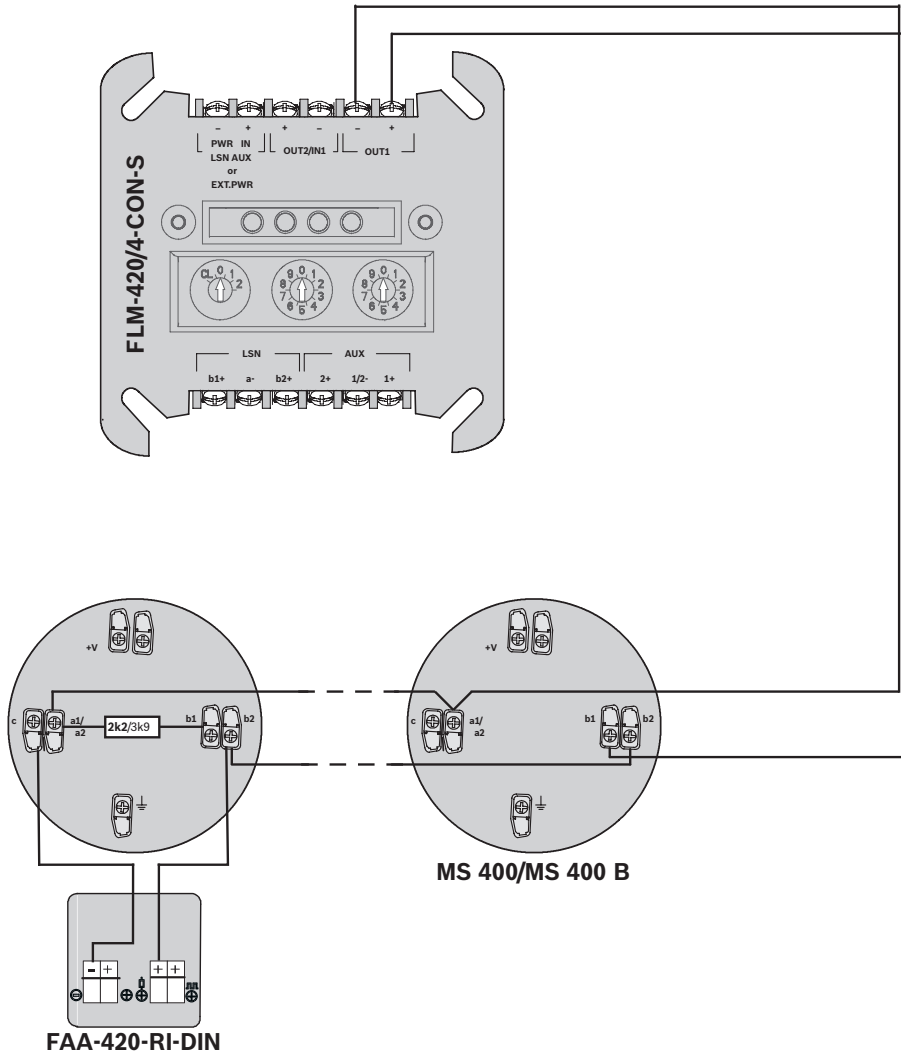






**2014/2 Ex**  
**2014/2 GLU-Ex**

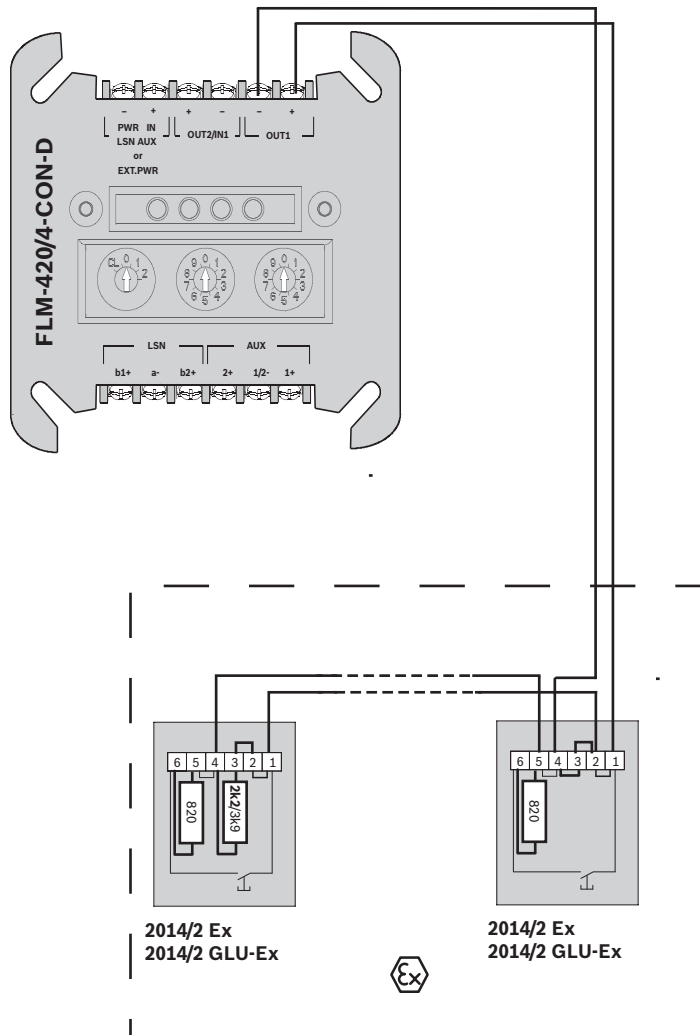 

 
 


  FMC-120-DKM-G-R FMC-120-DKM-G-Y  
 FMC-120-DKM-H-R FMC-120-EST-G-B  
 FMC-120-DKM-G-B  
 FMC-120-DKM-H-B

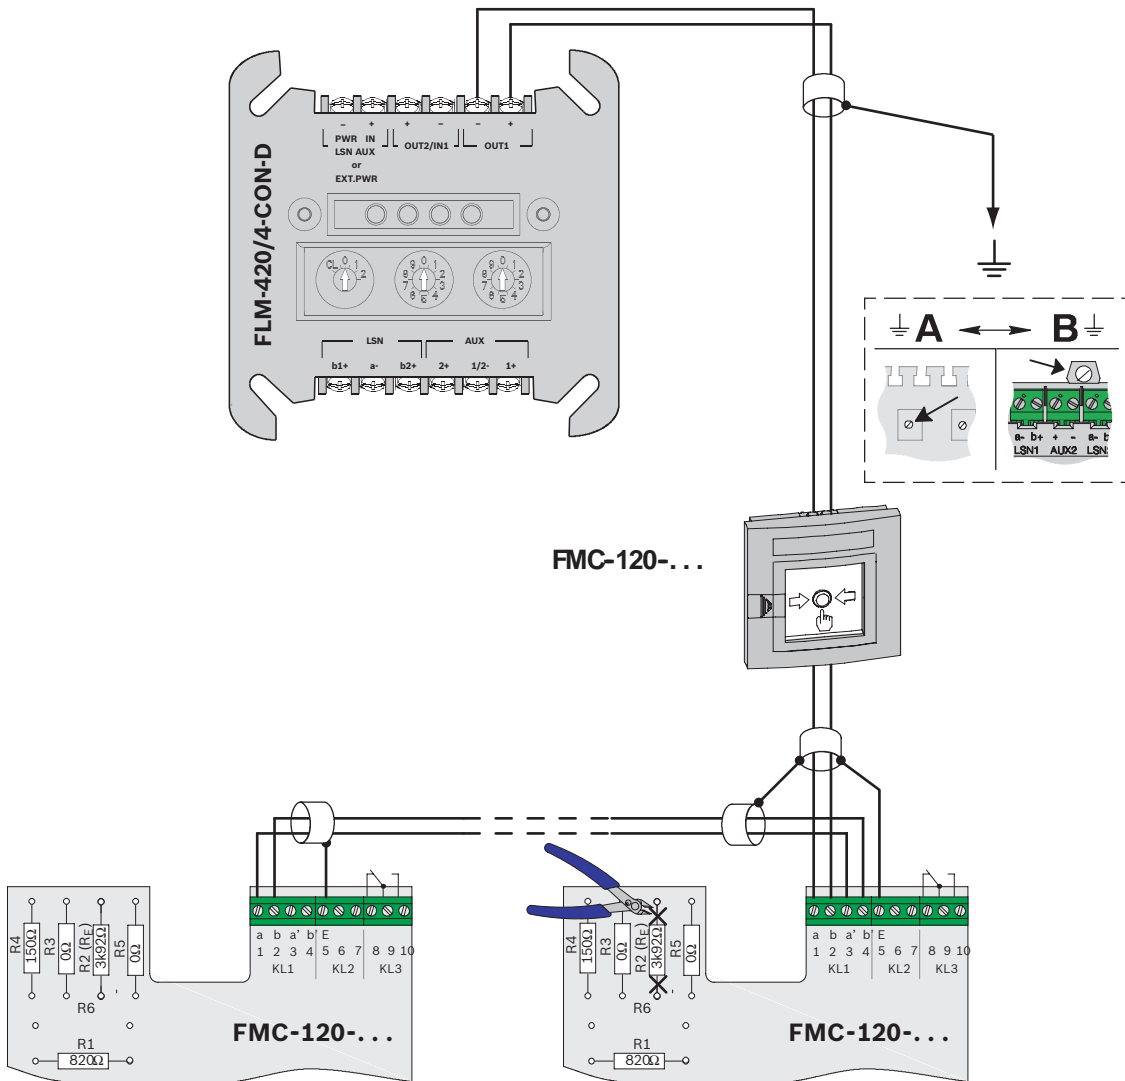




NO

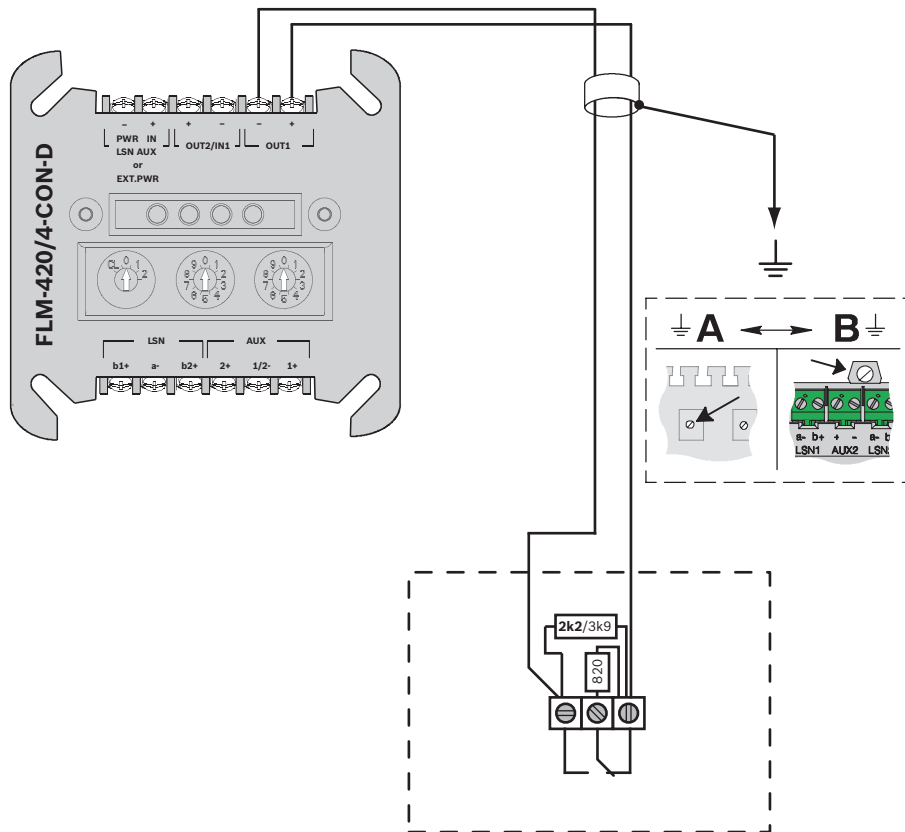 


2.5.2


FLM-420-I8R1-S

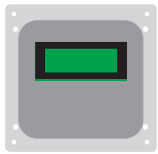

ProReact EN Analogue

FCS-LHD-2EN

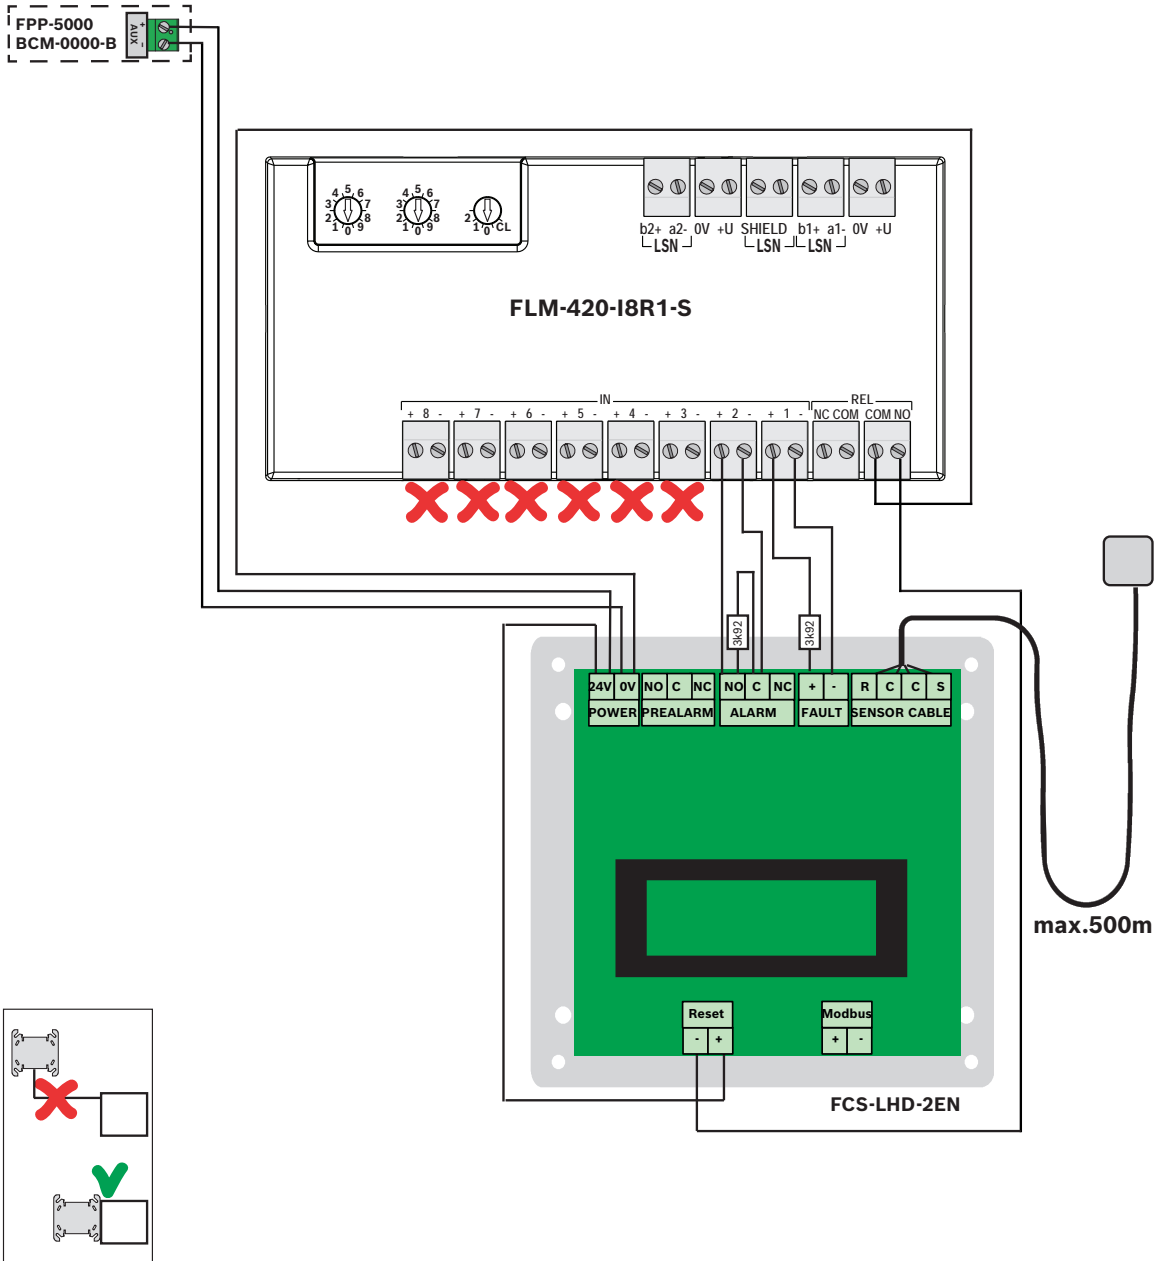

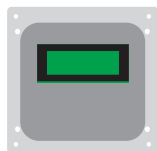




ProReact EN Analogue

FCS-LHD-2EN




ELS



FPP-3000(ZSP135-DR)  
FPP-5000  
BCM-0000-B

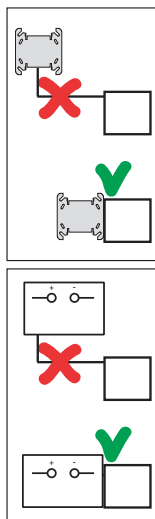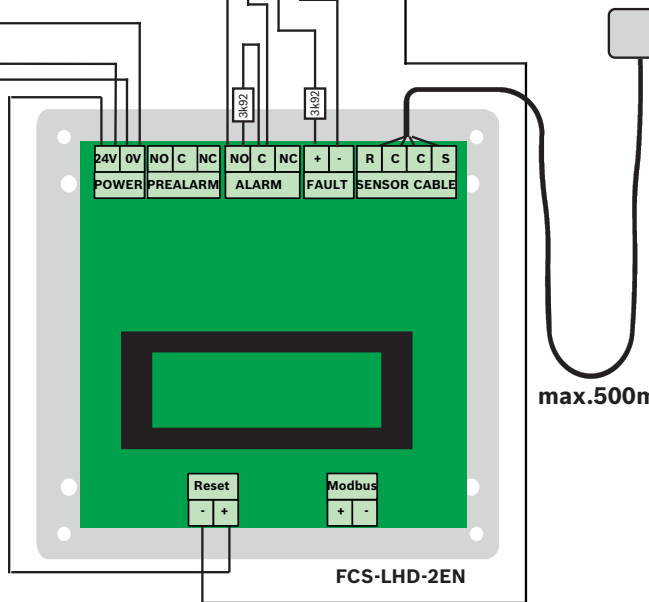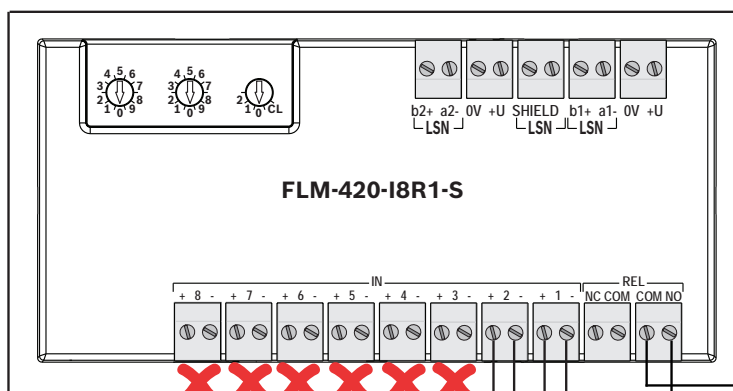

### 2.5.3 FLM-420-NAC-D/S

 


FPP-3000(ZSP135-DR)  
FPP-5000  
BCM-0000-B

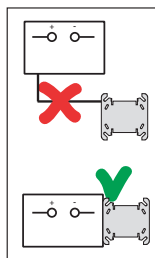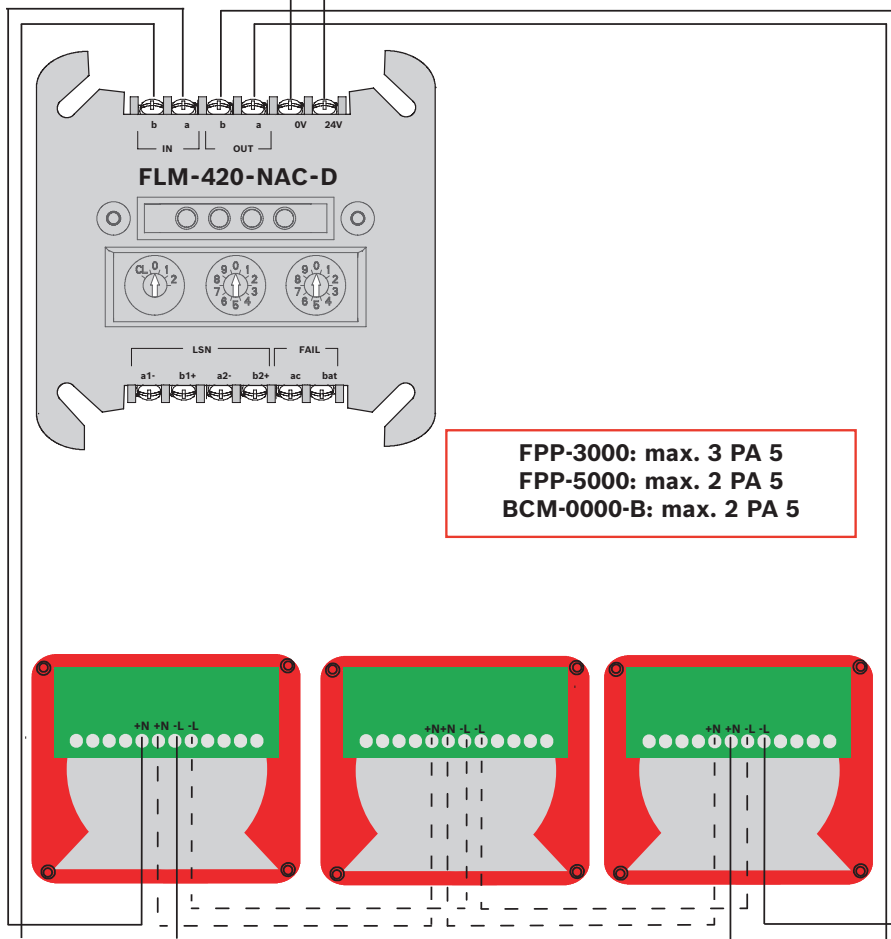








FPP-3000  
FPP-5000  
BCM-0000-B

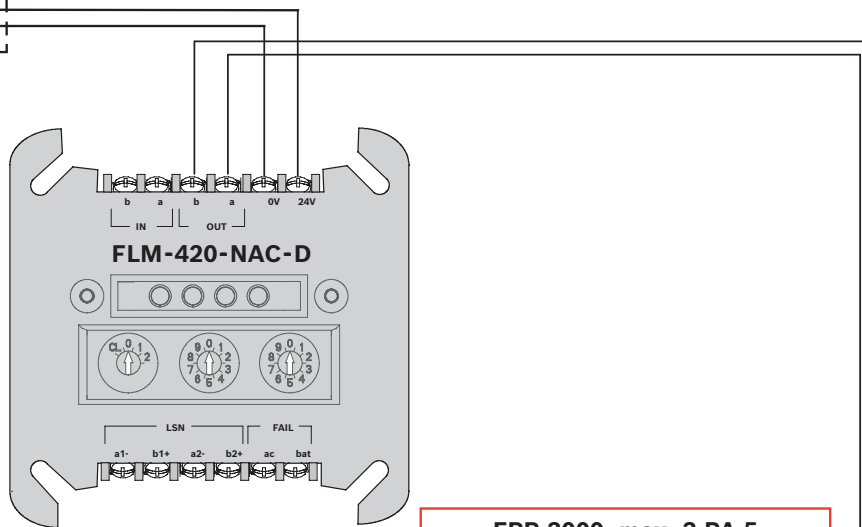


 **FPP-3000: max. 3 PA 5**  
**FPP-5000: max. 2 PA 5**  
**BCM-0000-B: max. 2 PA 5**

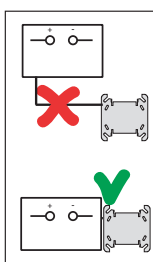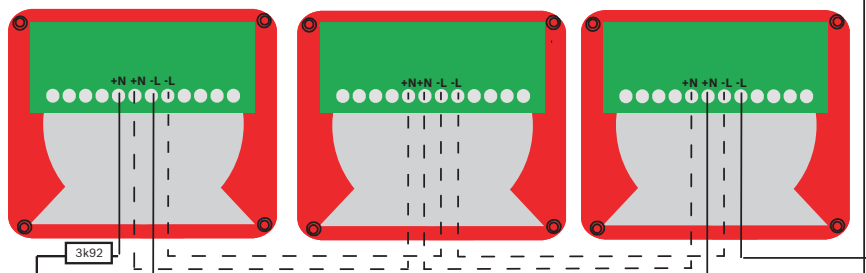






FPP-3000(ZSP135-DR)  
 FPP-5000  
 BCM-0000-B


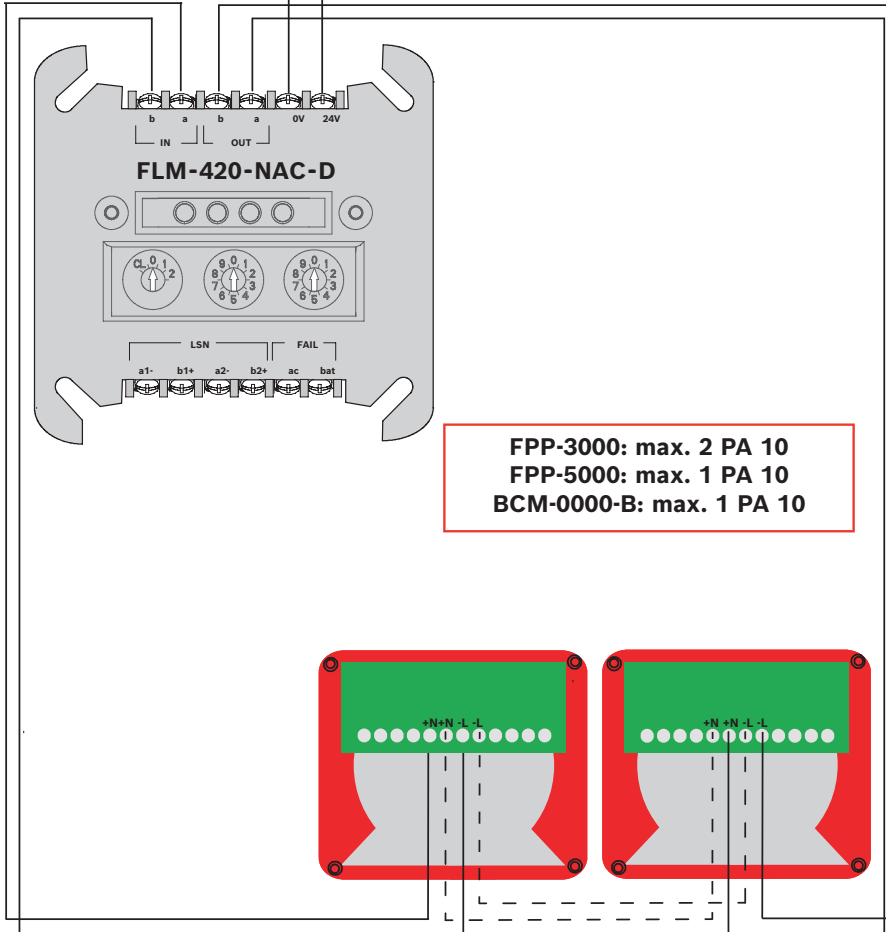


 
**FPP-3000: max. 2 PA 10**  
**FPP-5000: max. 1 PA 10**  
**BCM-0000-B: max. 1 PA 10**

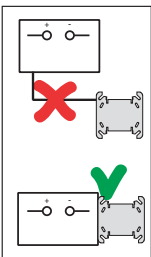

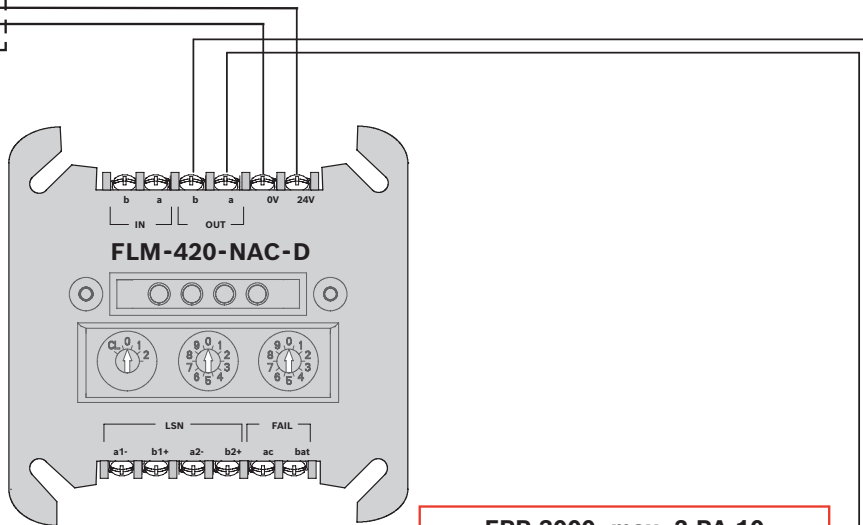


 **FPP-3000: max. 2 PA 10**  
**FPP-5000: max. 1 PA 10**  
**BCM-0000-B: max. 1 PA 10**

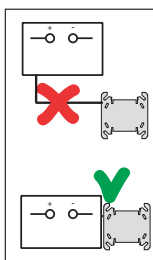
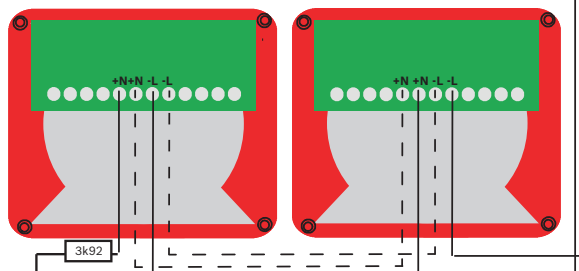





**PY X-M-10-SSM R**  
**PY X-M-10-SSM W**

 

 FPP-3000(ZSP-135-DR)  
FPP-5000  
BCM-0000-B

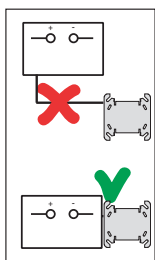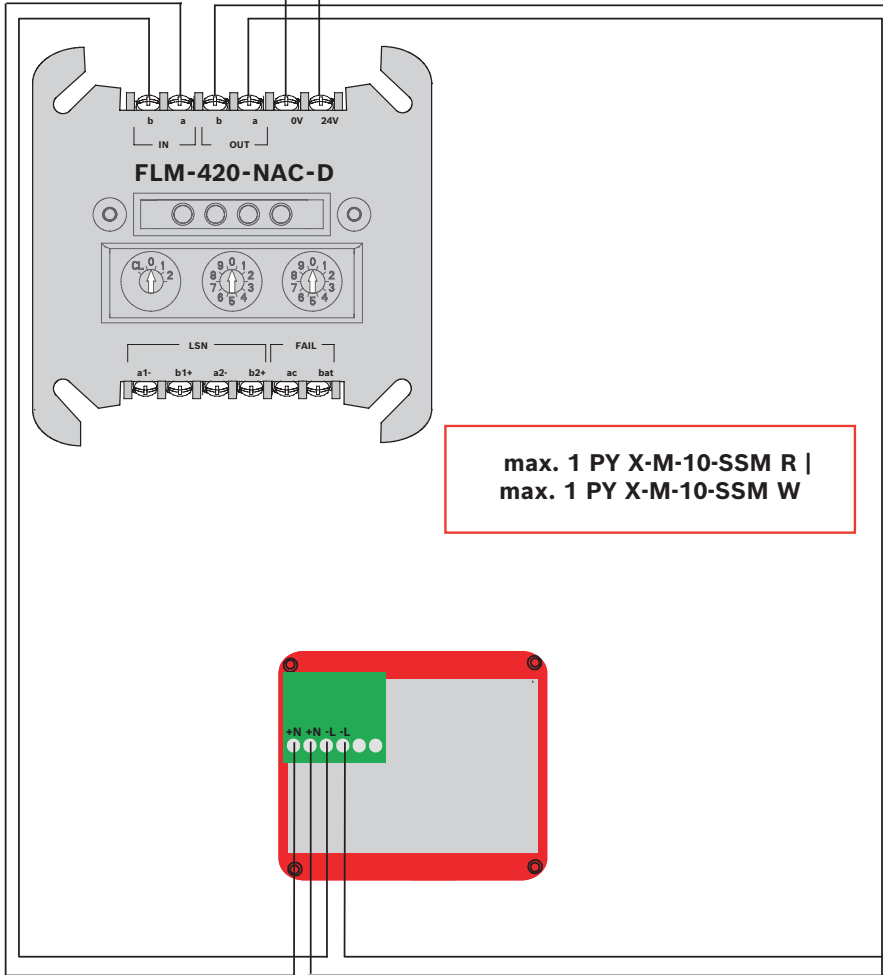






**PY X-M-10-SSM R**  
**PY X-M-10-SSM W**



FPP-3000  
FPP-5000  
BCM-0000-B




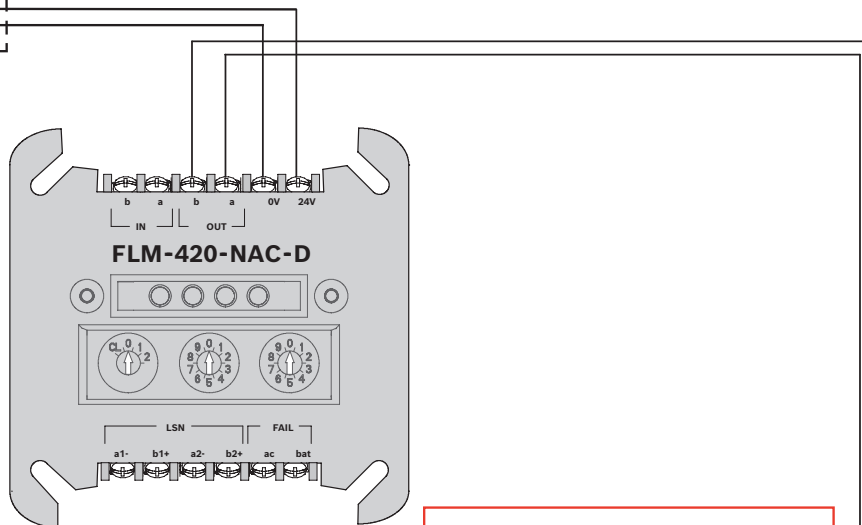


**max. 1 PY X-M-10-SSM R |**  
**max. 1 PY X-M-10-SSM W**

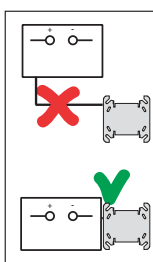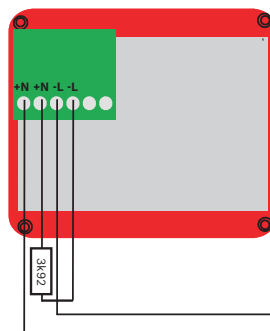










PB 2005

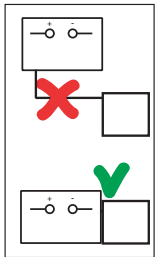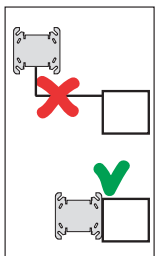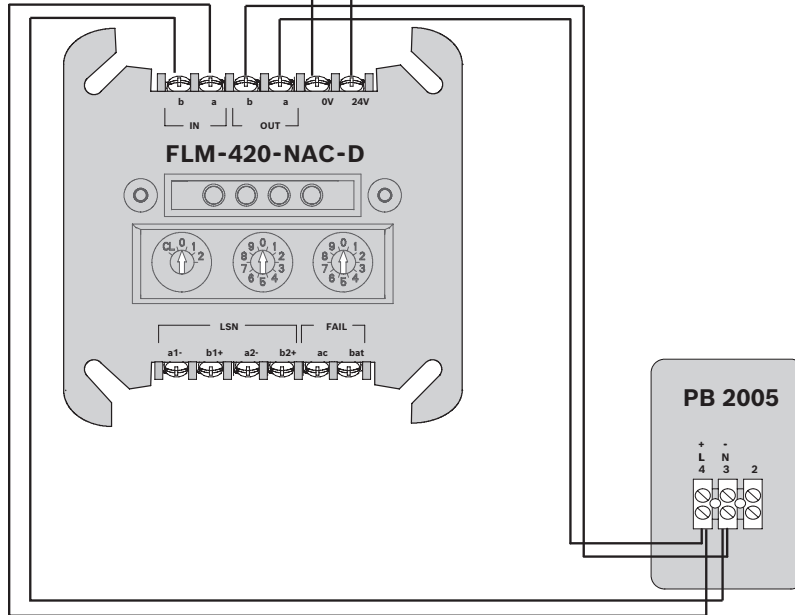 







PB 2005

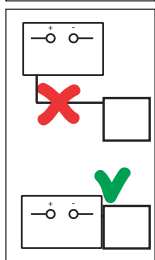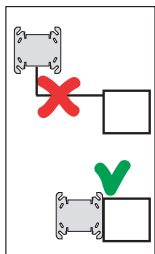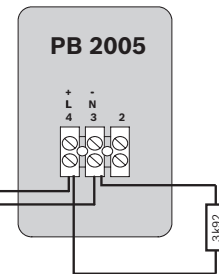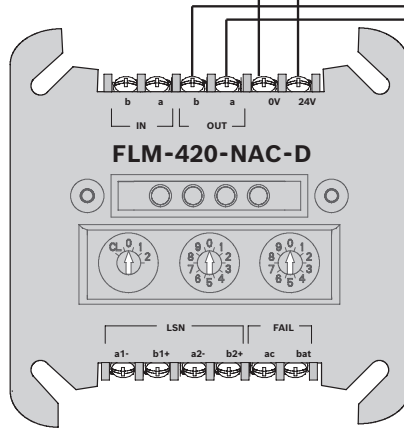 


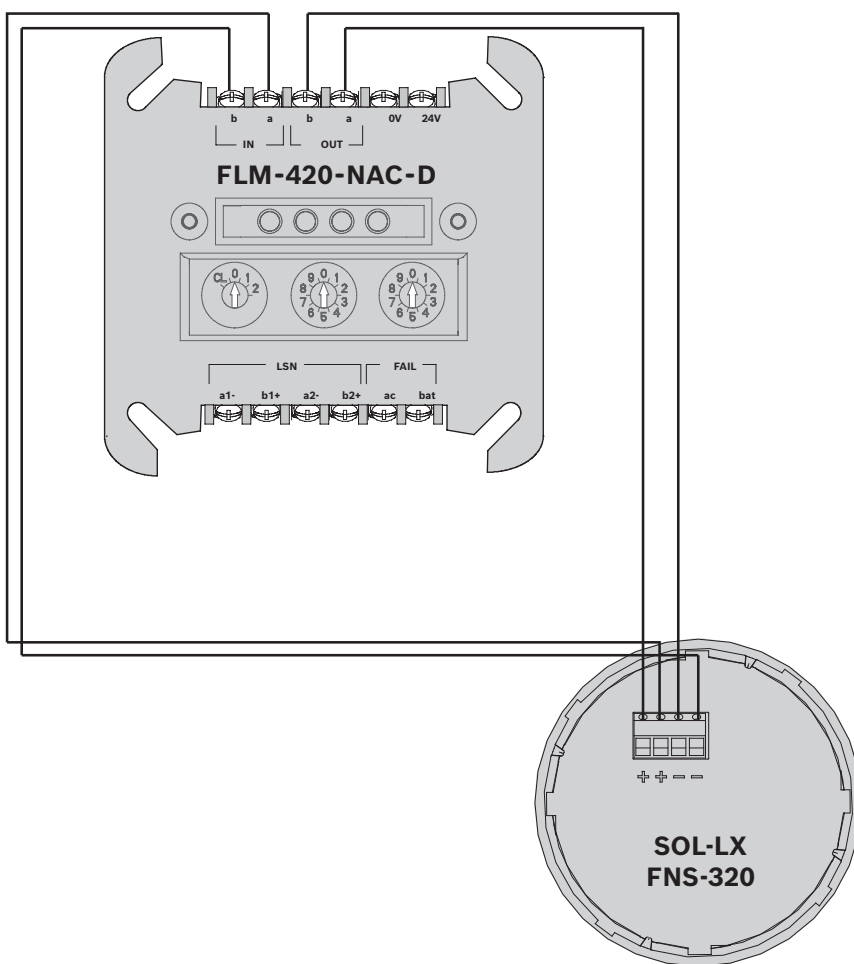 





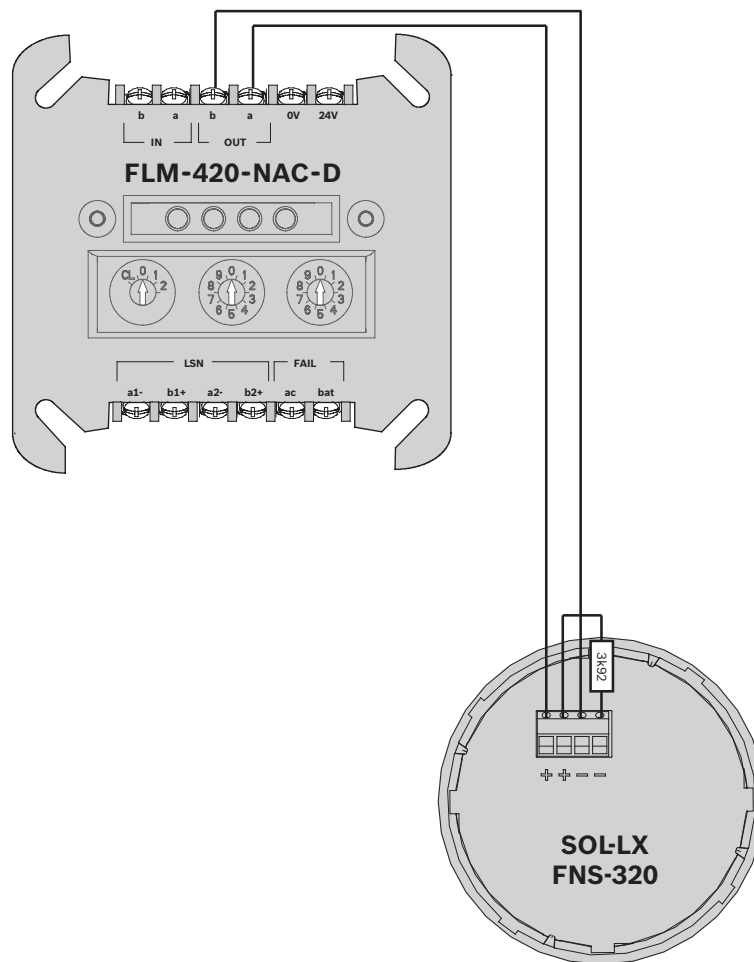 

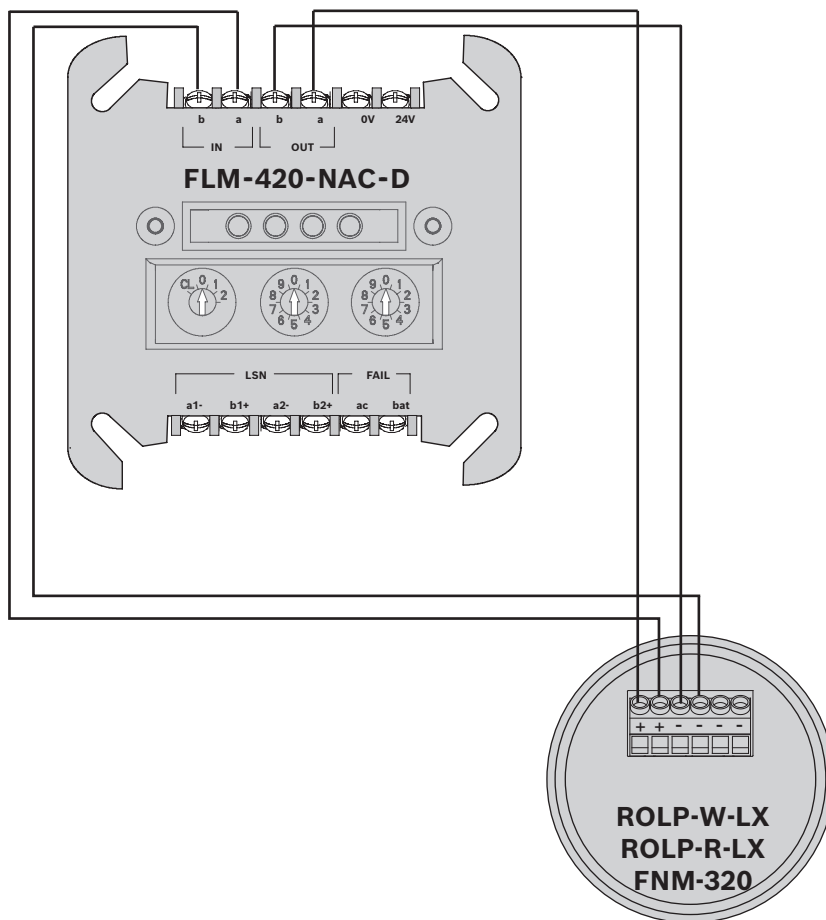  




 **ROLP-W-LX**  
**ROLP-R-LX**  
**FNM-320**

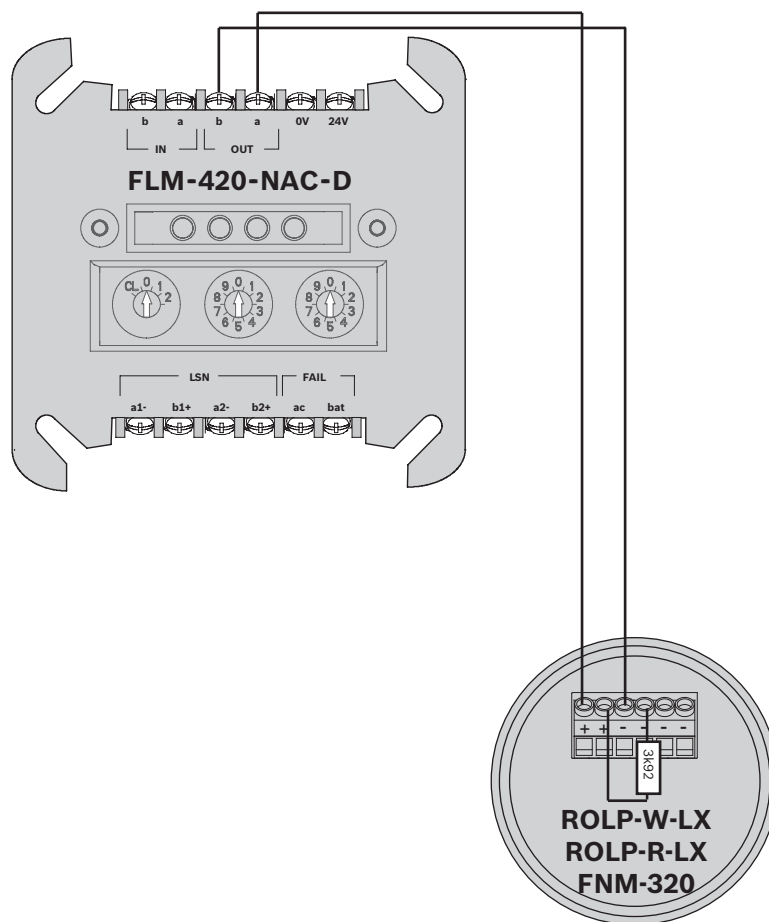




### 2.5.4 FLM-420-RHV

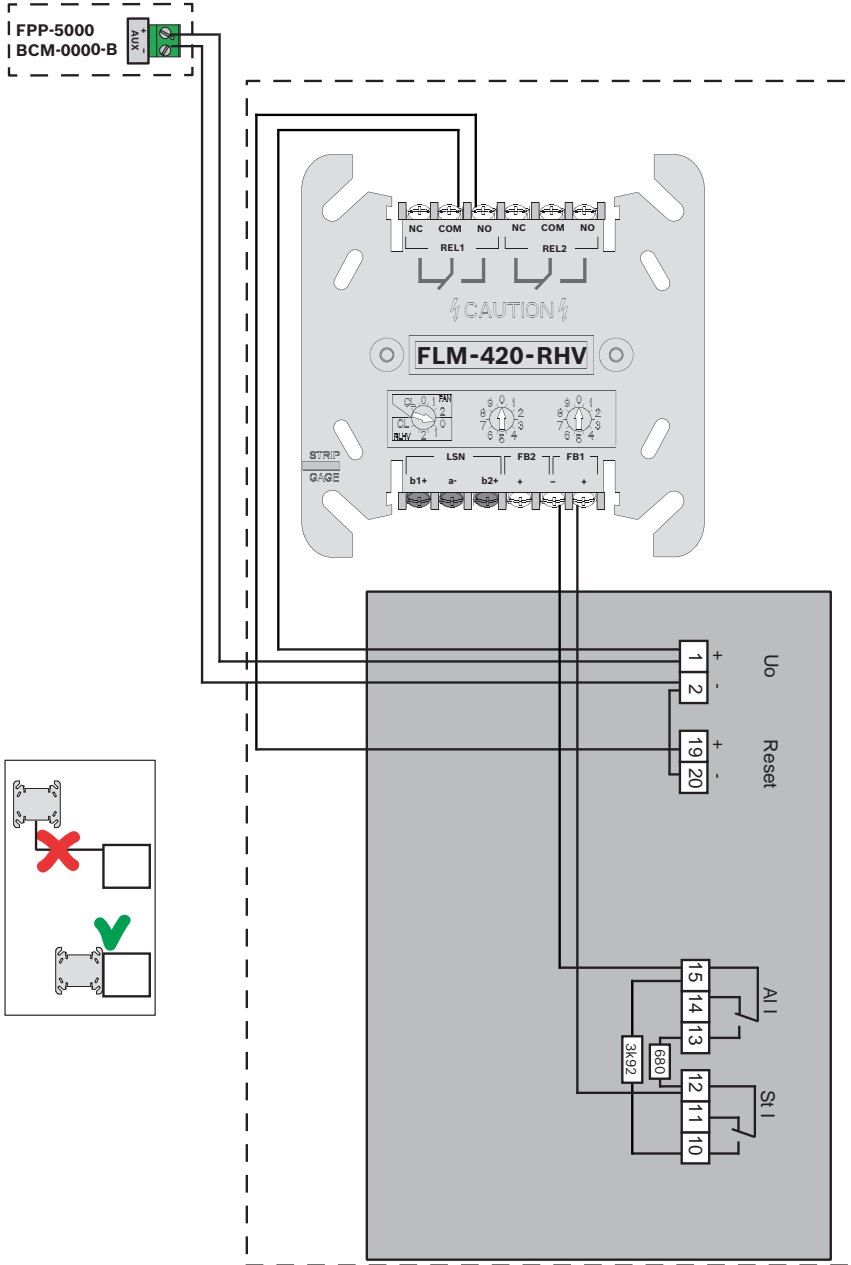



ELS


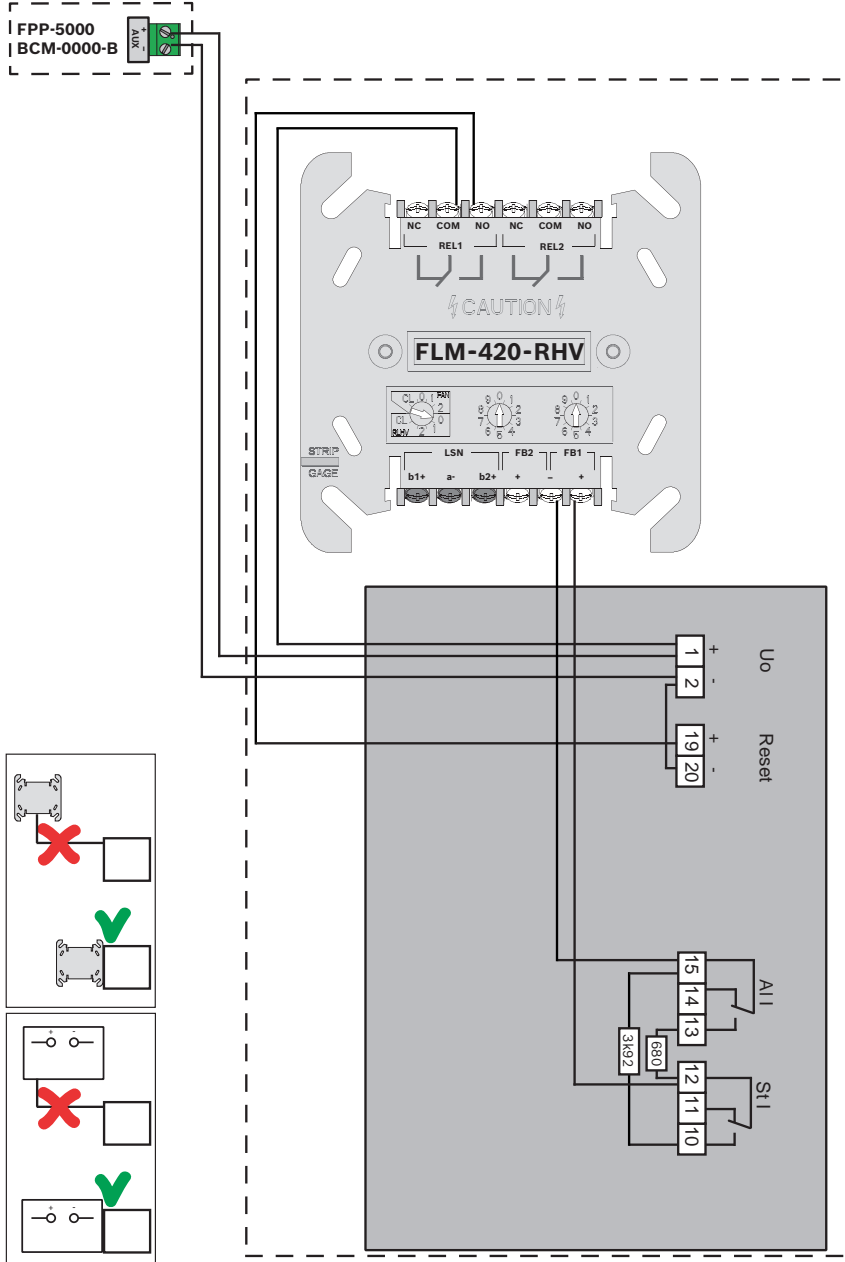


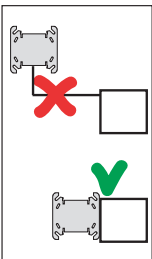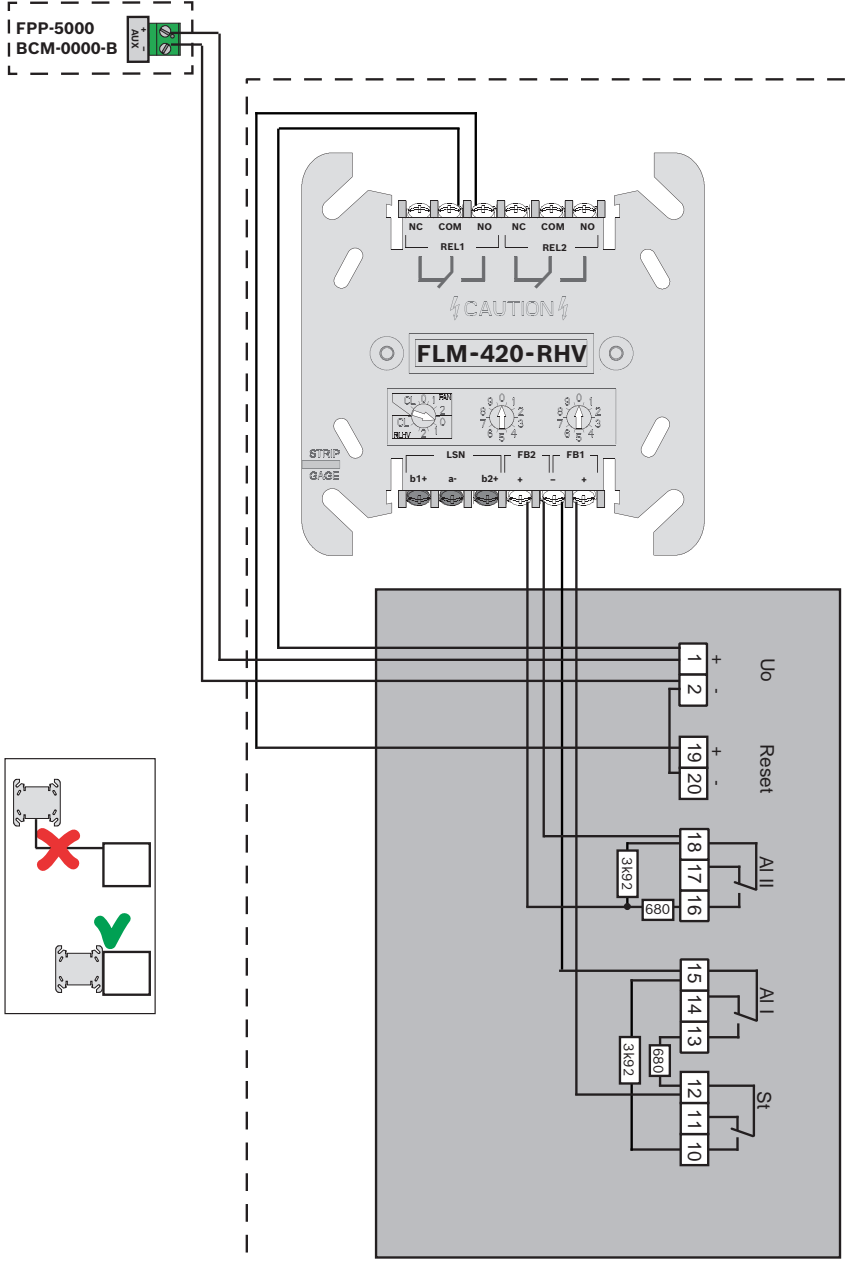




ELS

FPP-5000  
BCM-0000-B

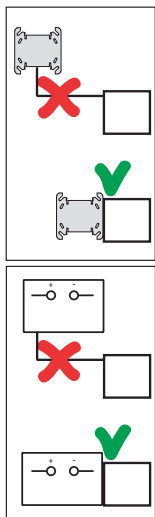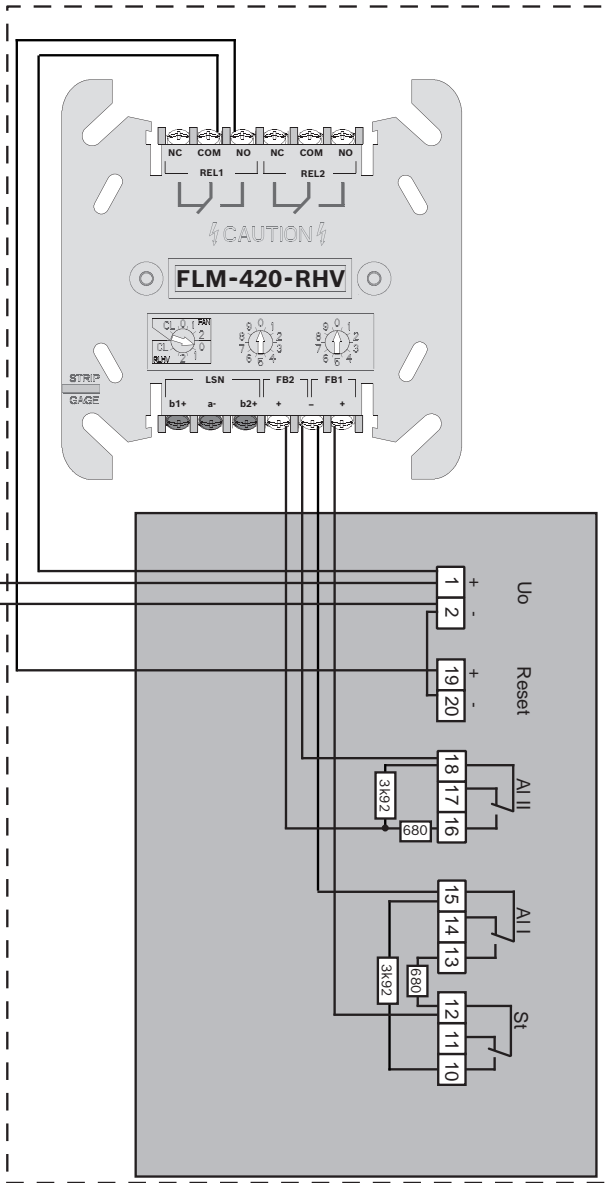


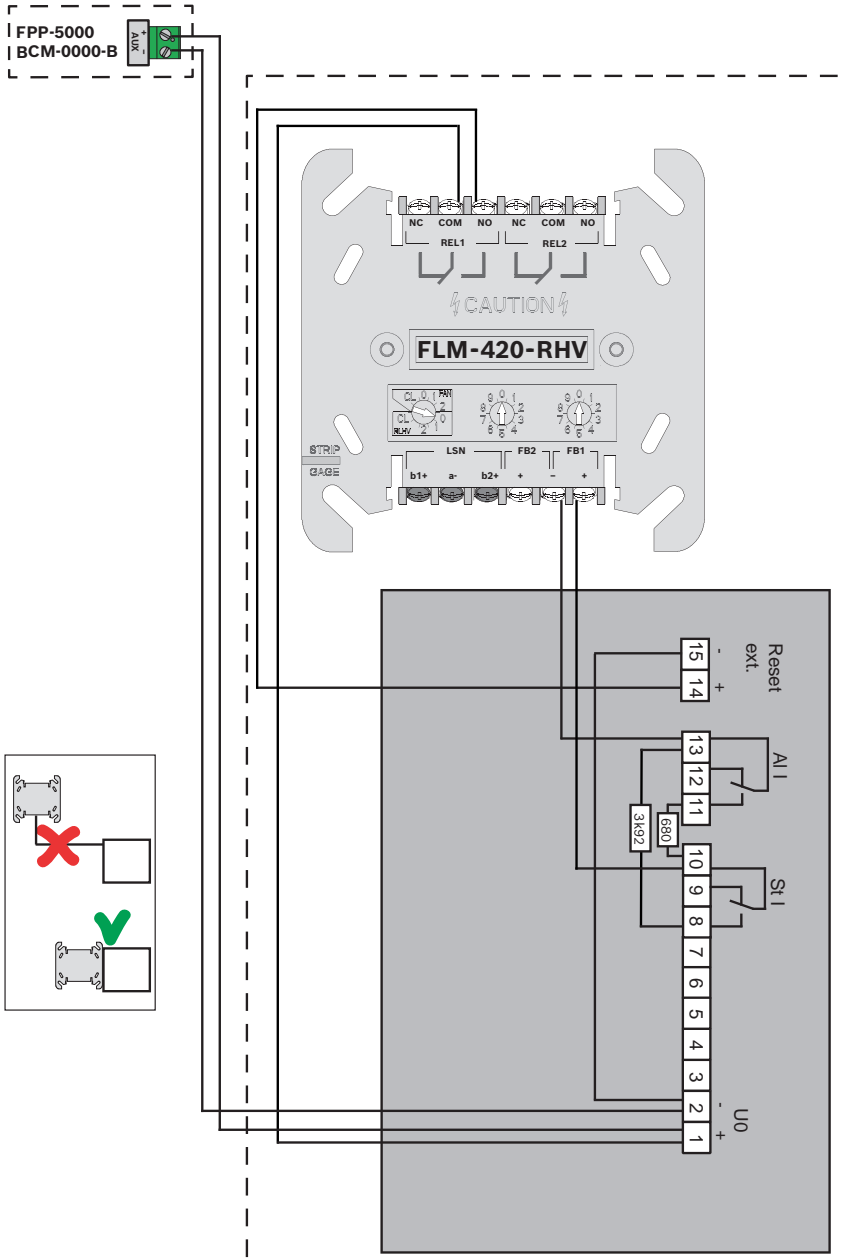






ELS

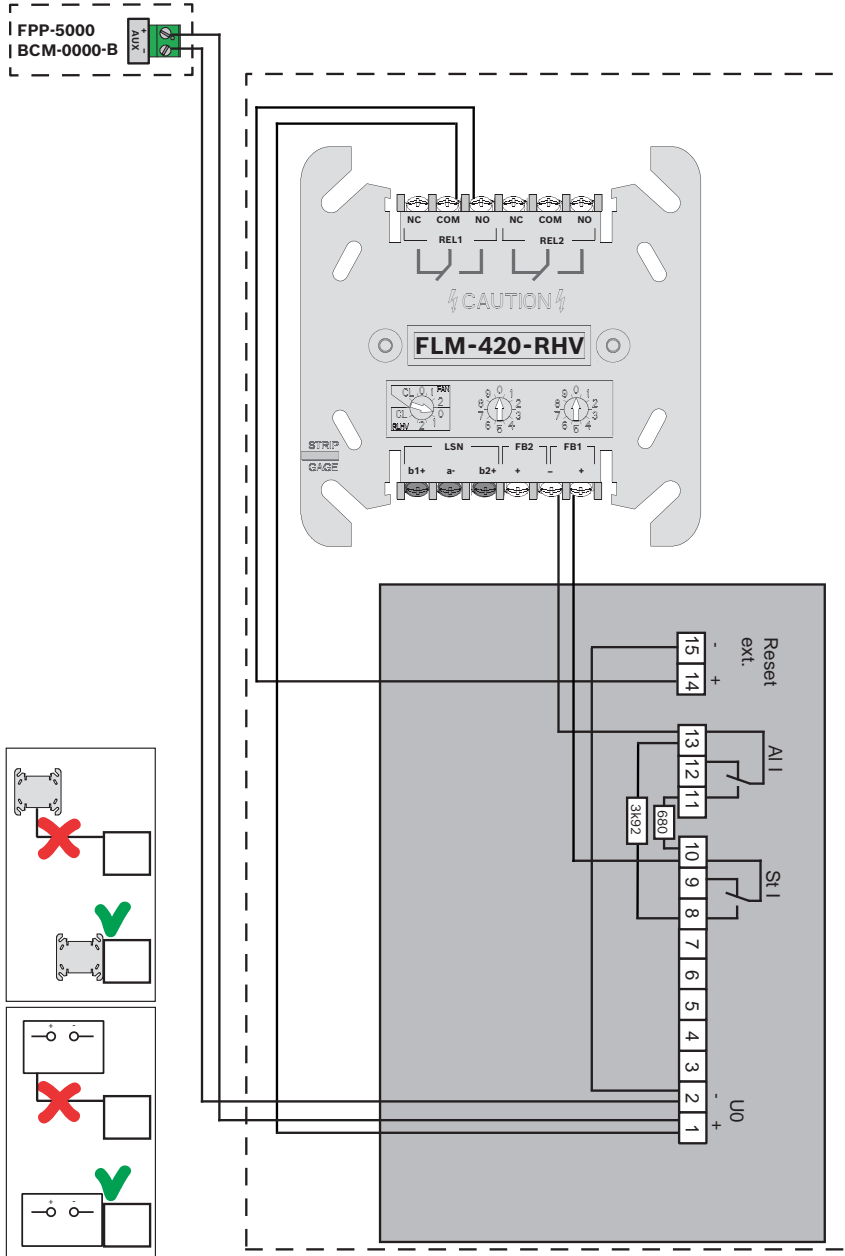






ADW 535-1

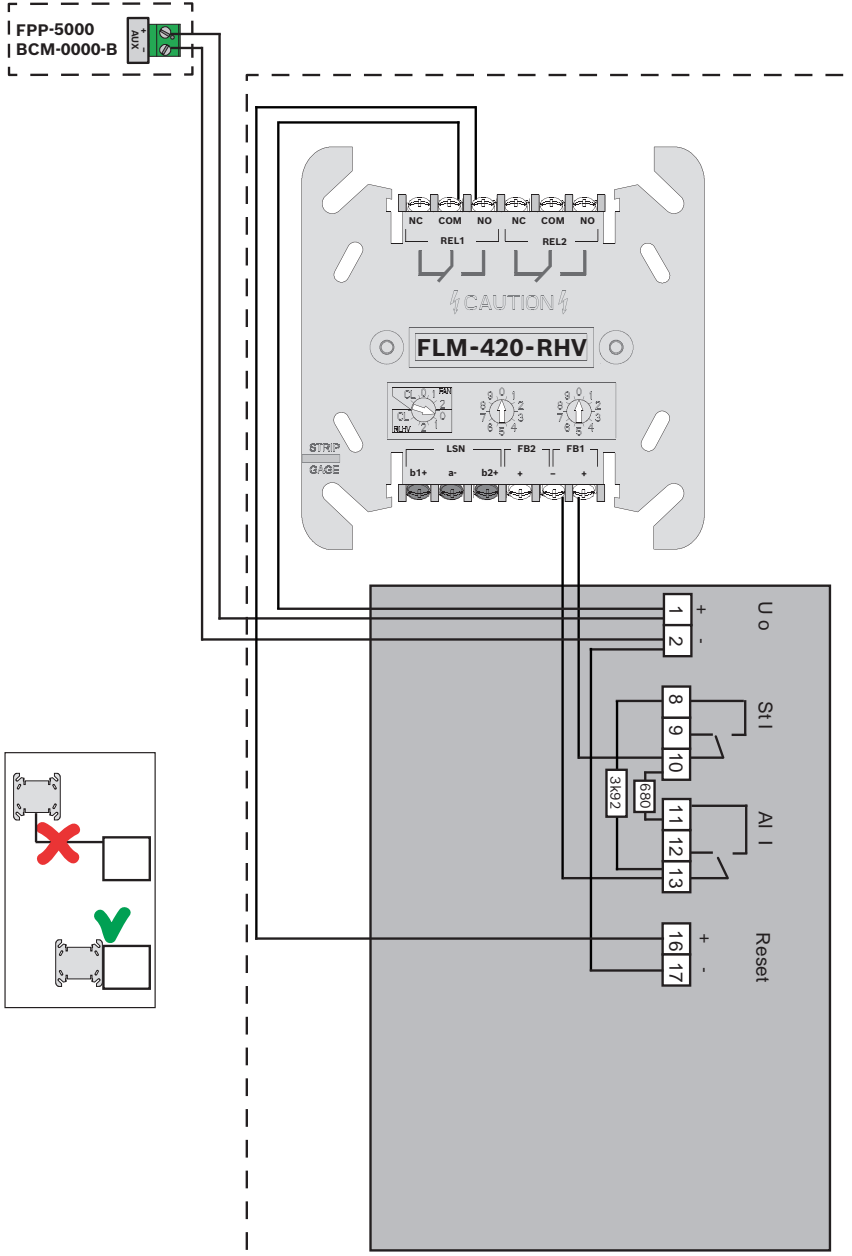




ELS

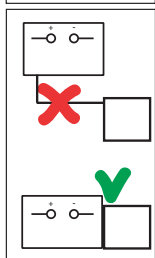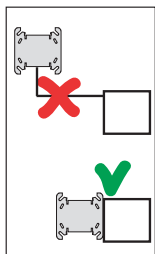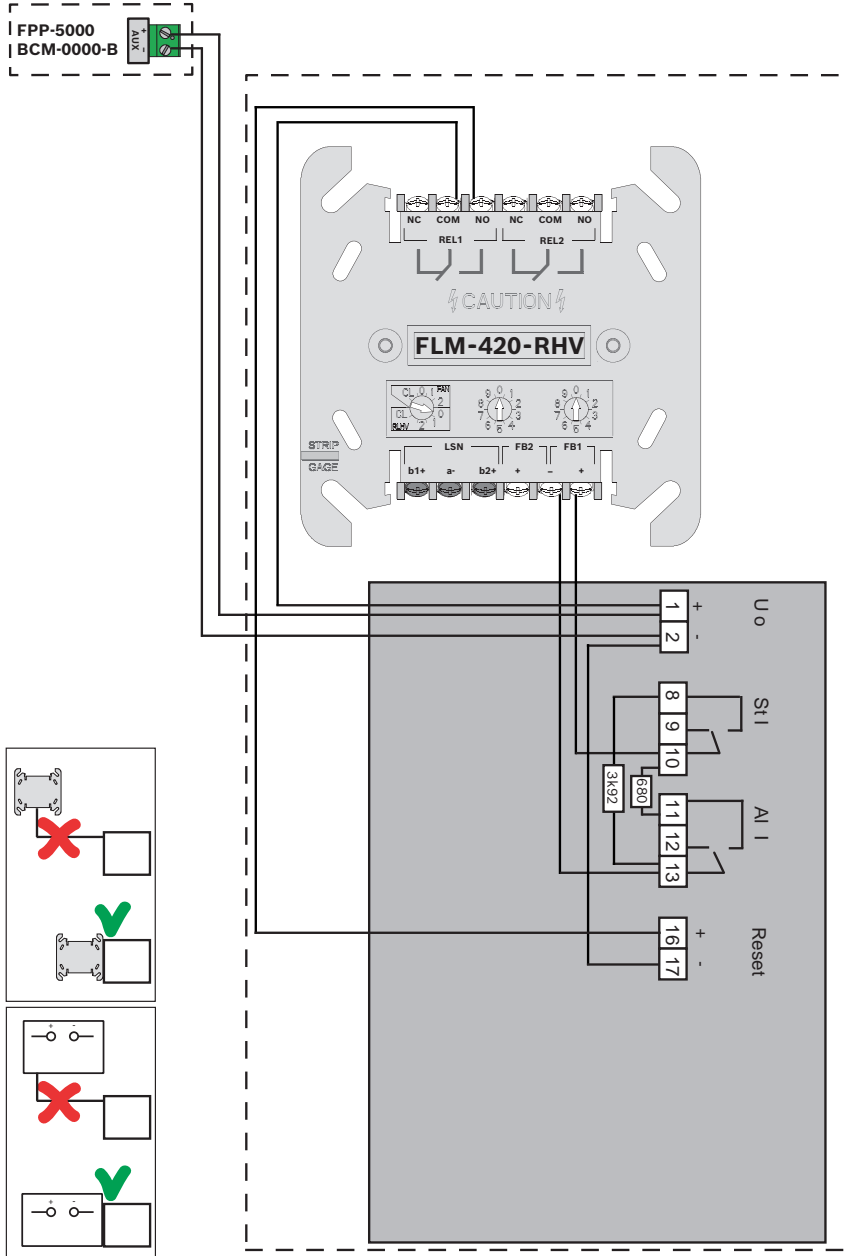



ADW 535-2


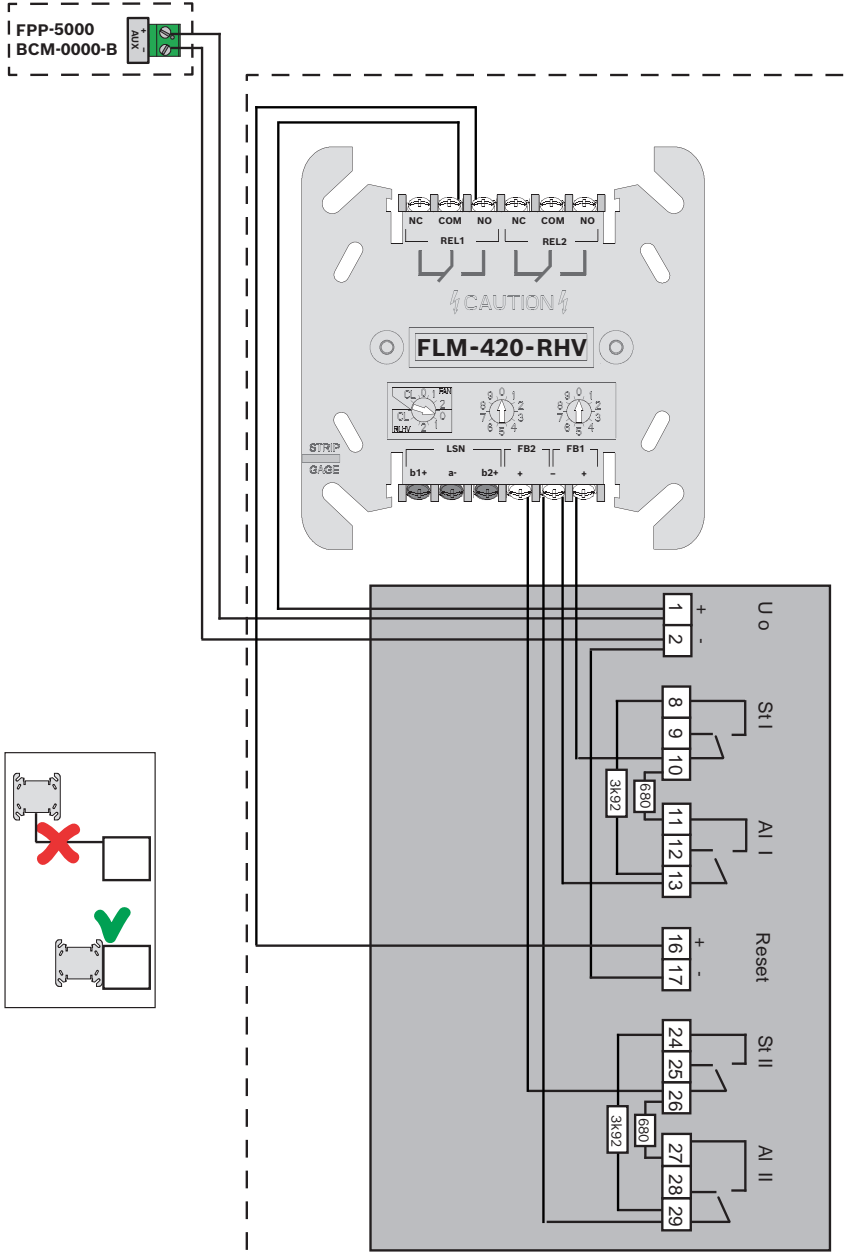




**ADW 535-2**





**ELS**

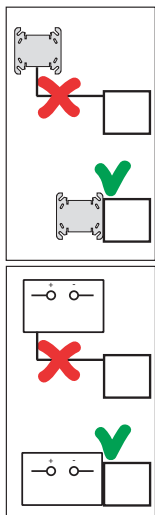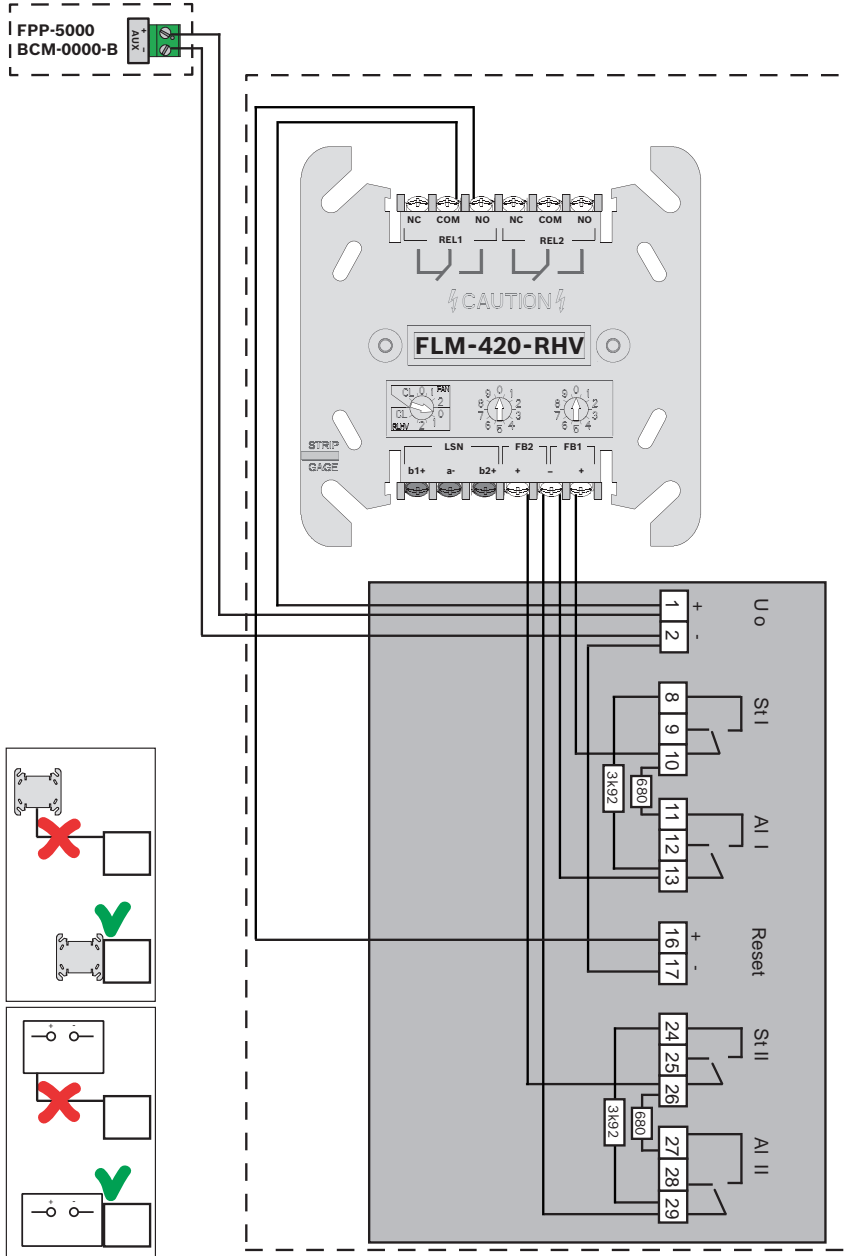






Fireray One

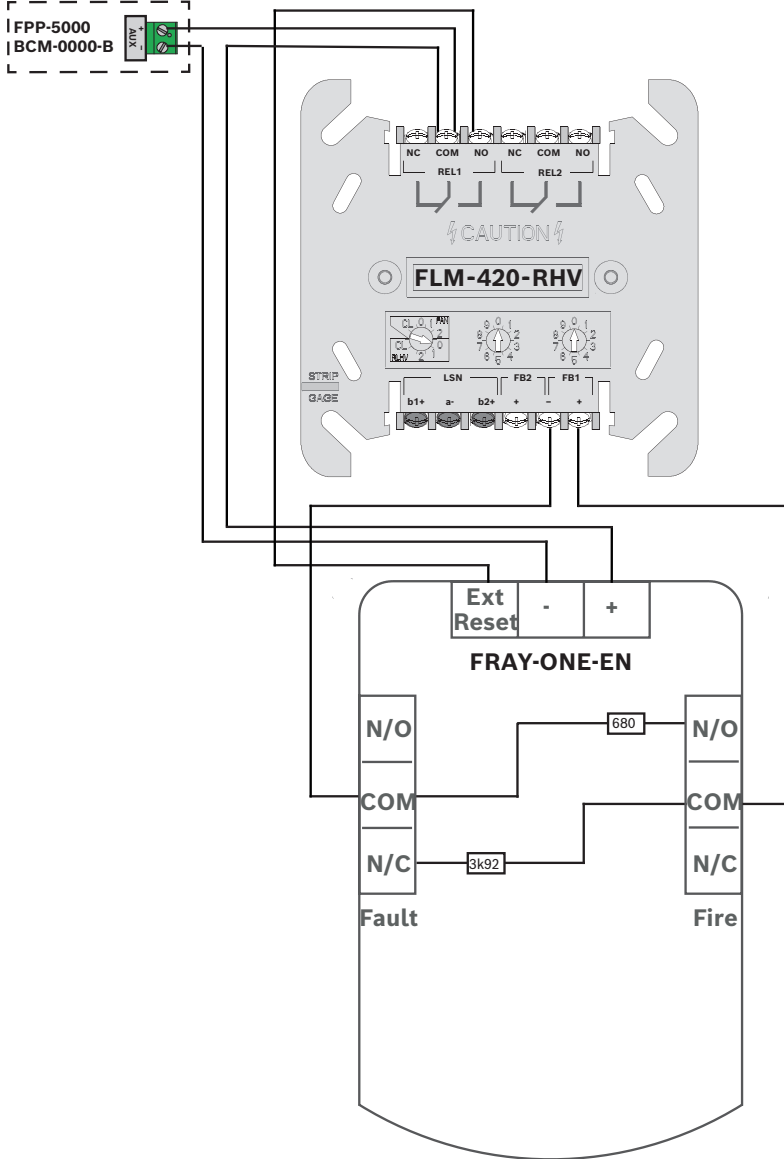

 

FPP-5000  
BCM-0000-B

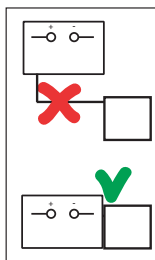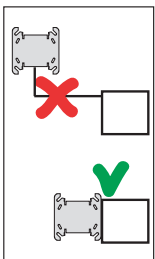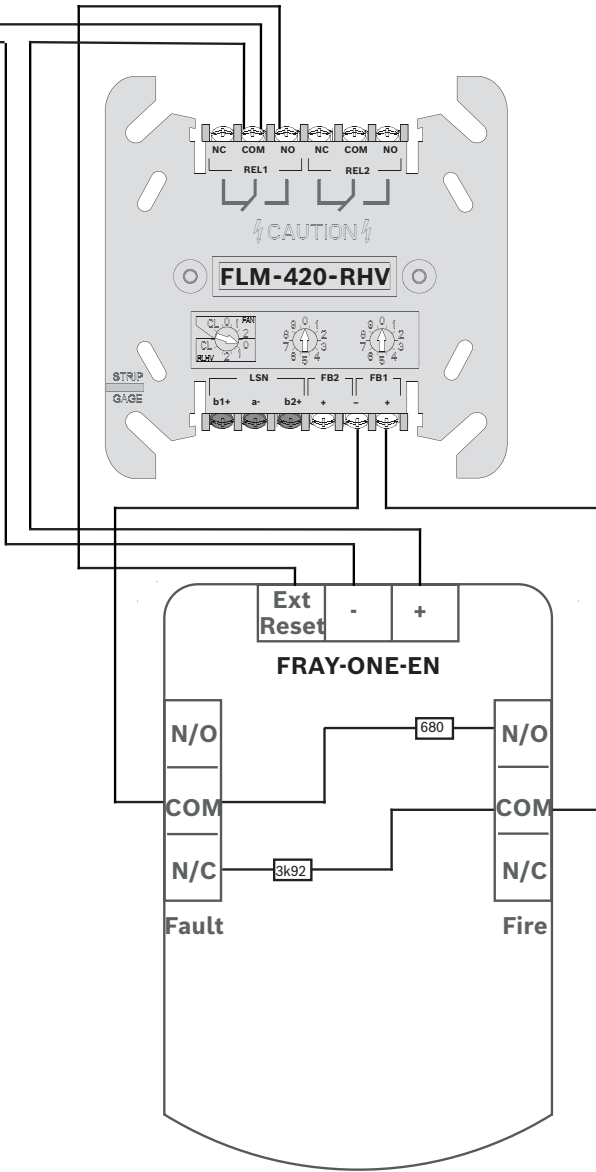


2.5.5

FLM-420-RLE-S





VdS 2496

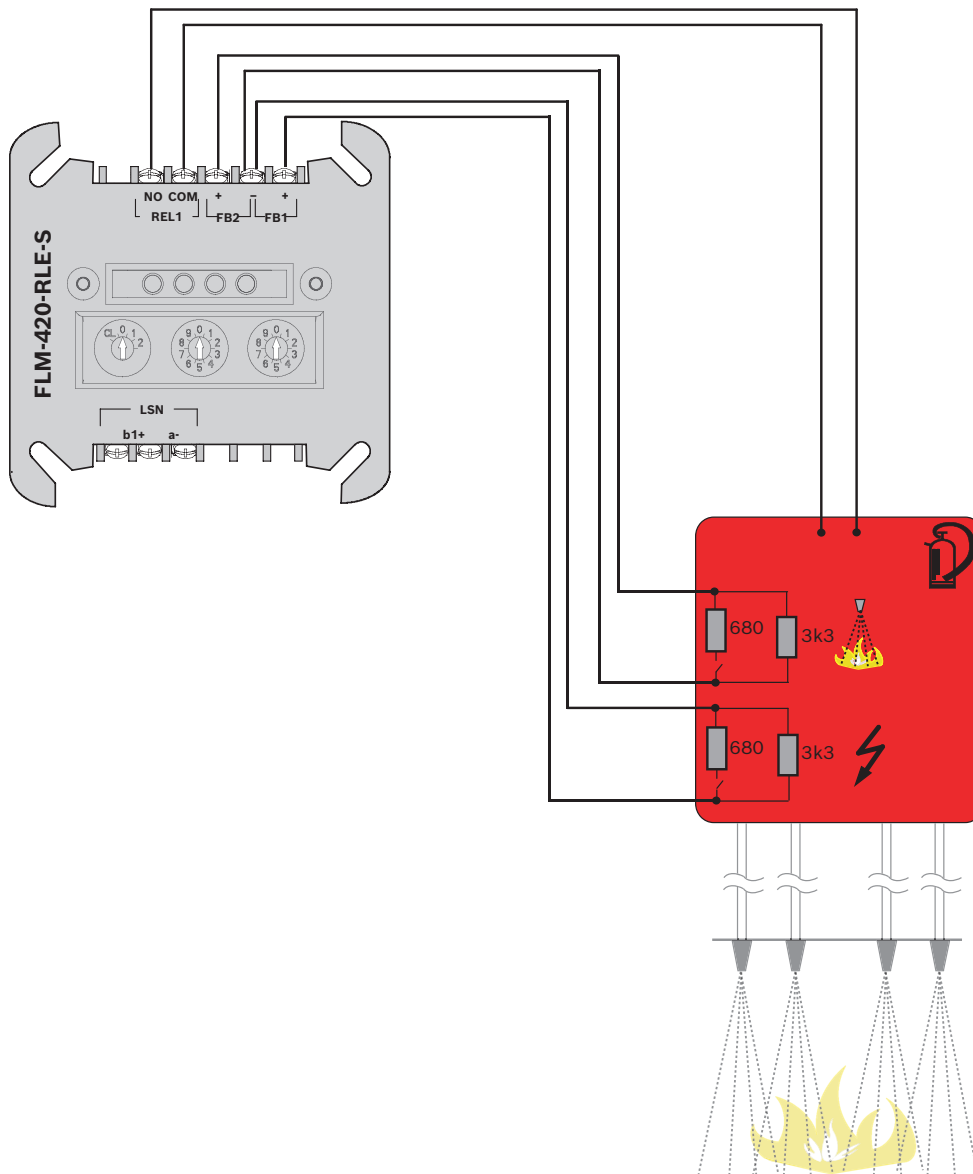






### 2.5.6 FLM-420-RLV1-E

  



Plena

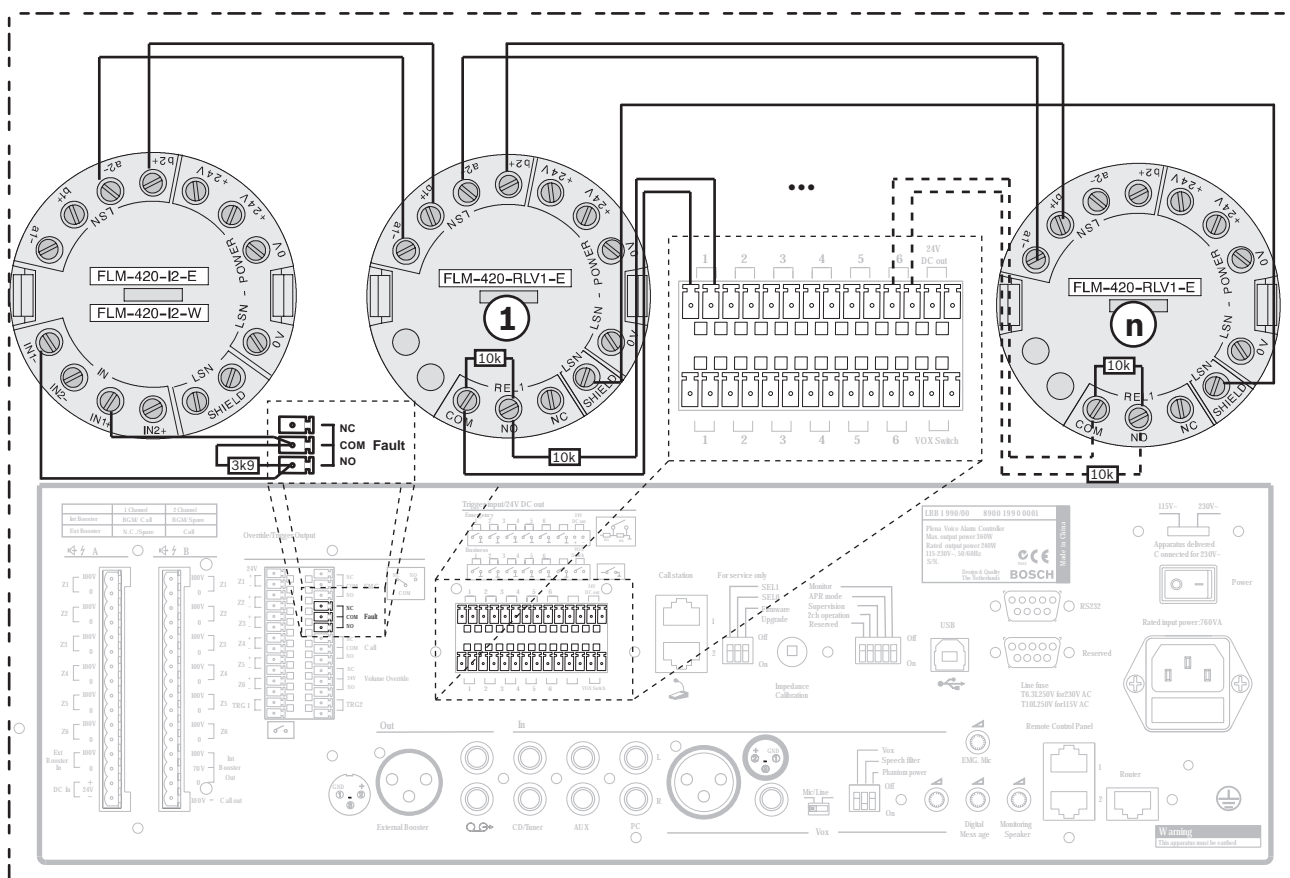

### 2.5.7 FLM-420-RLV8-S

  

Plena

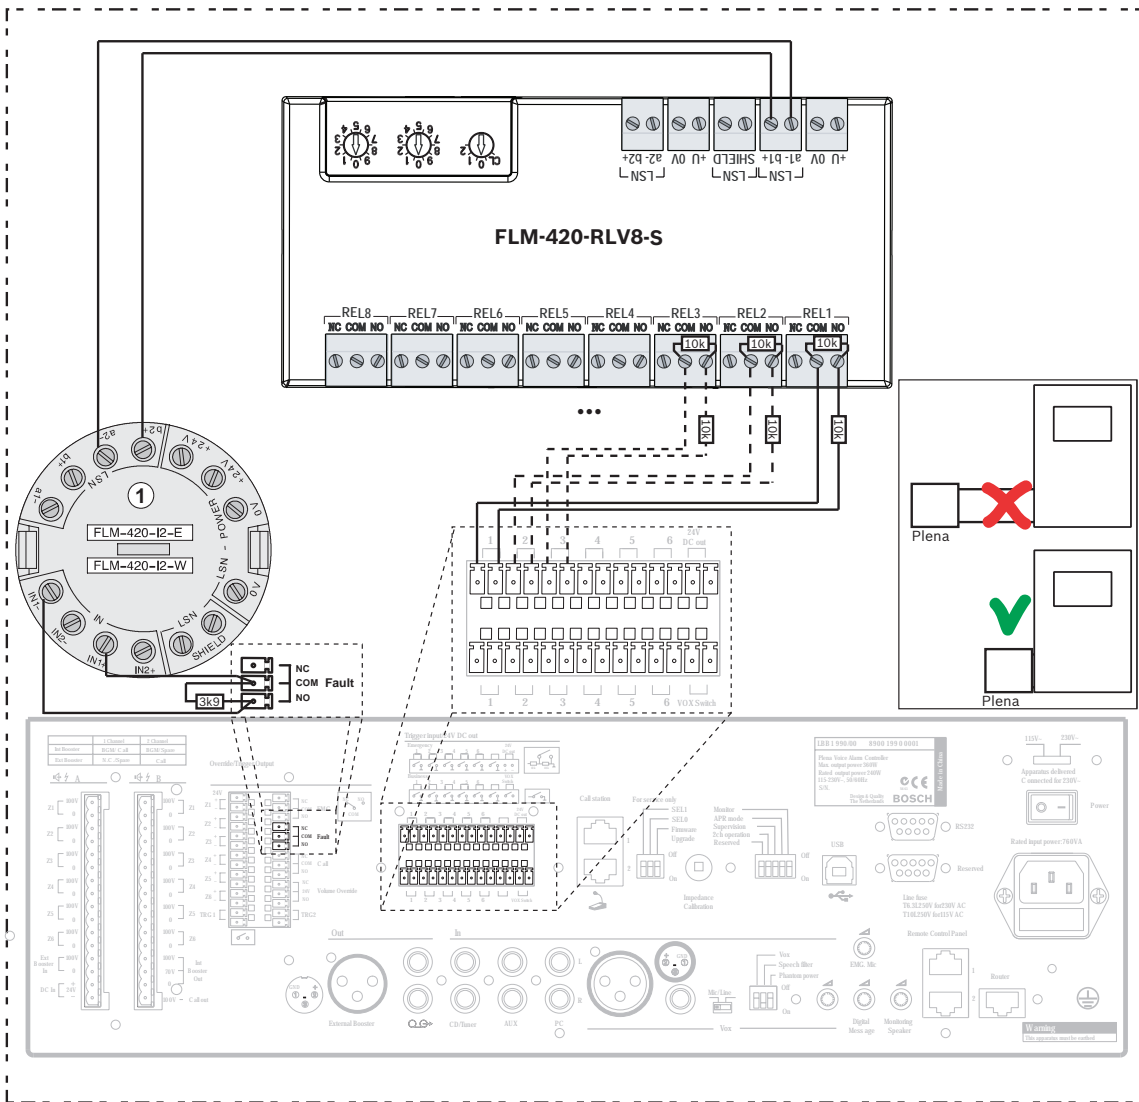 


### 2.5.8 FMF-ADP-FBF/FMF-ADP-TTY



FAT4000 FBF4000 ADP4000

FMF-FAT FMF-FBF-FAT  
FMF-FIBS-A4/-A3  
FMF-ADP

ELS

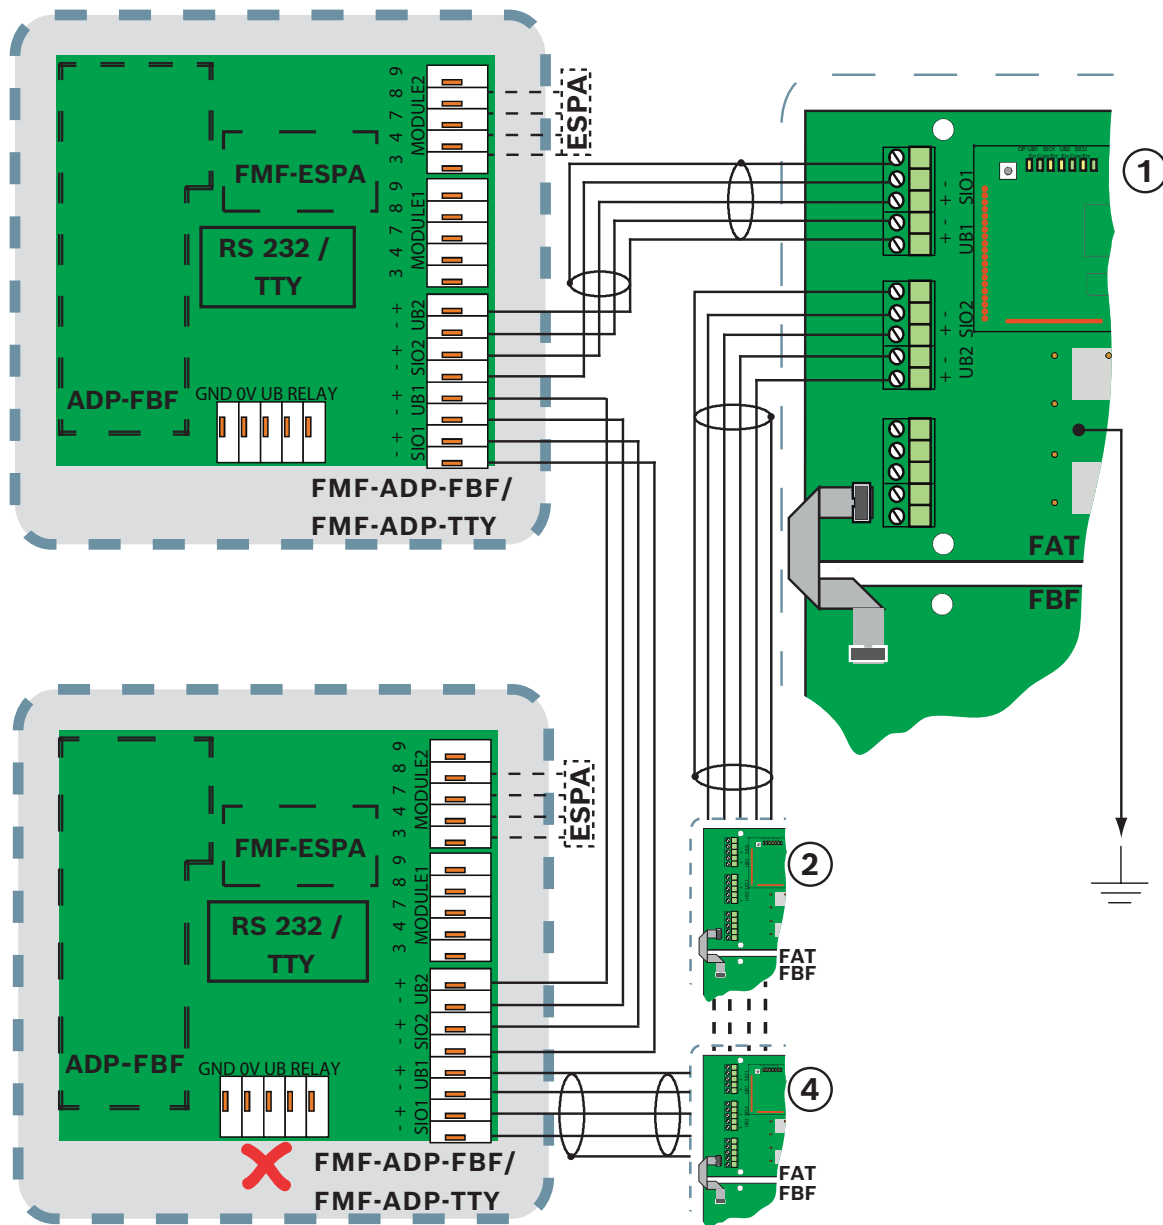

## 2.6

### EOL




 
*CZM 0004 A, page 189*

*LSN 0300 A, page 201*


*FLM-420/4-CON-S/D, page 246*

2.6.1


CZM 0004 A

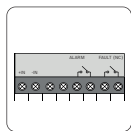


016519, 016589  
IR3 Flame Detector

 


ELS

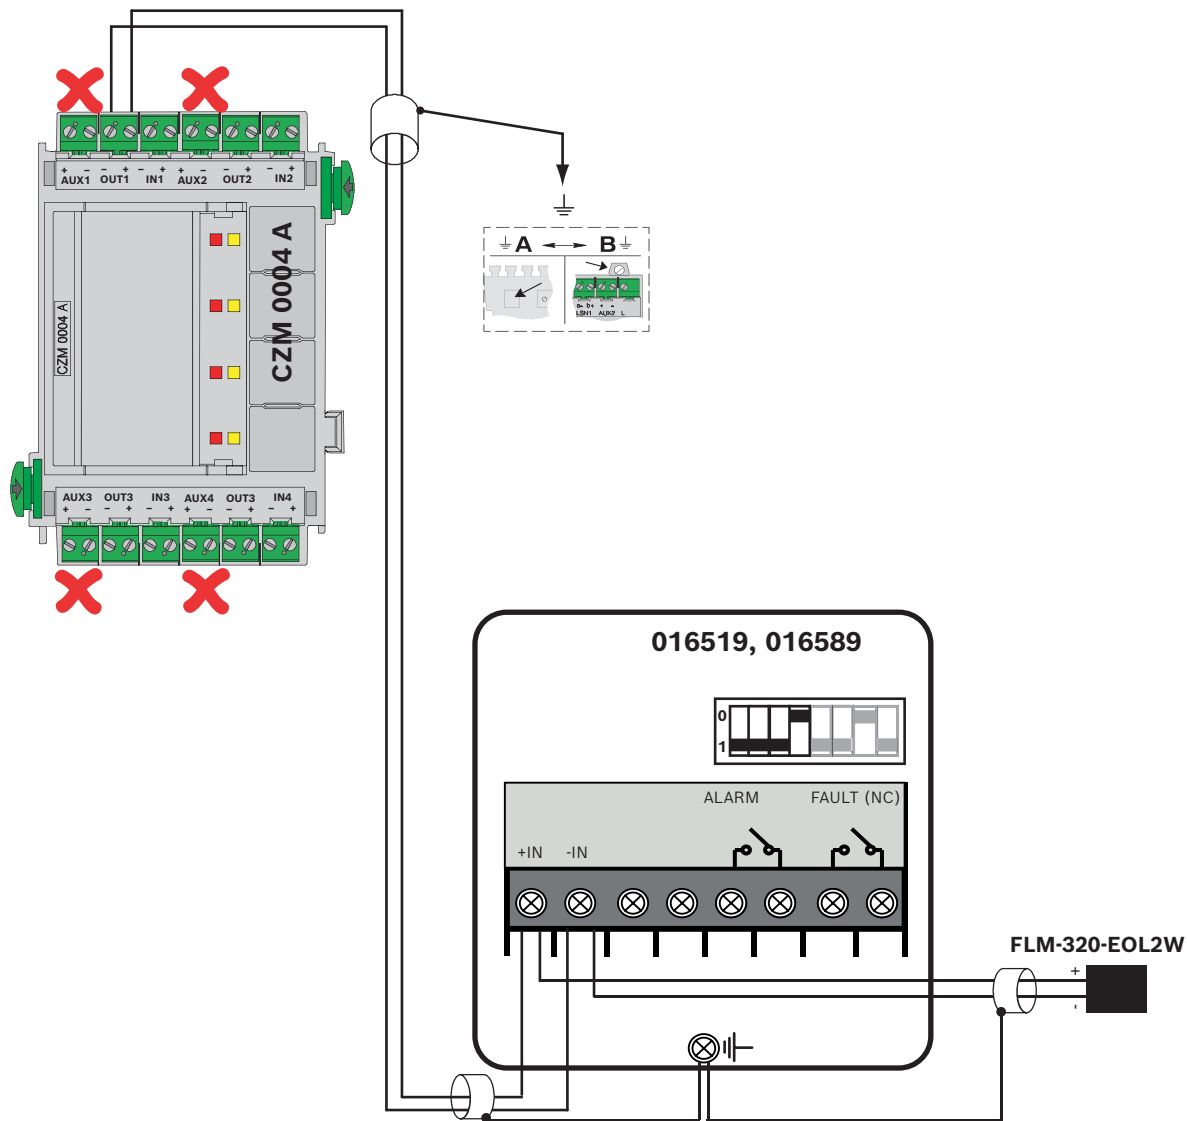


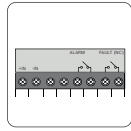

016519, 016589  
IR3 Flame Detector

 

ELS

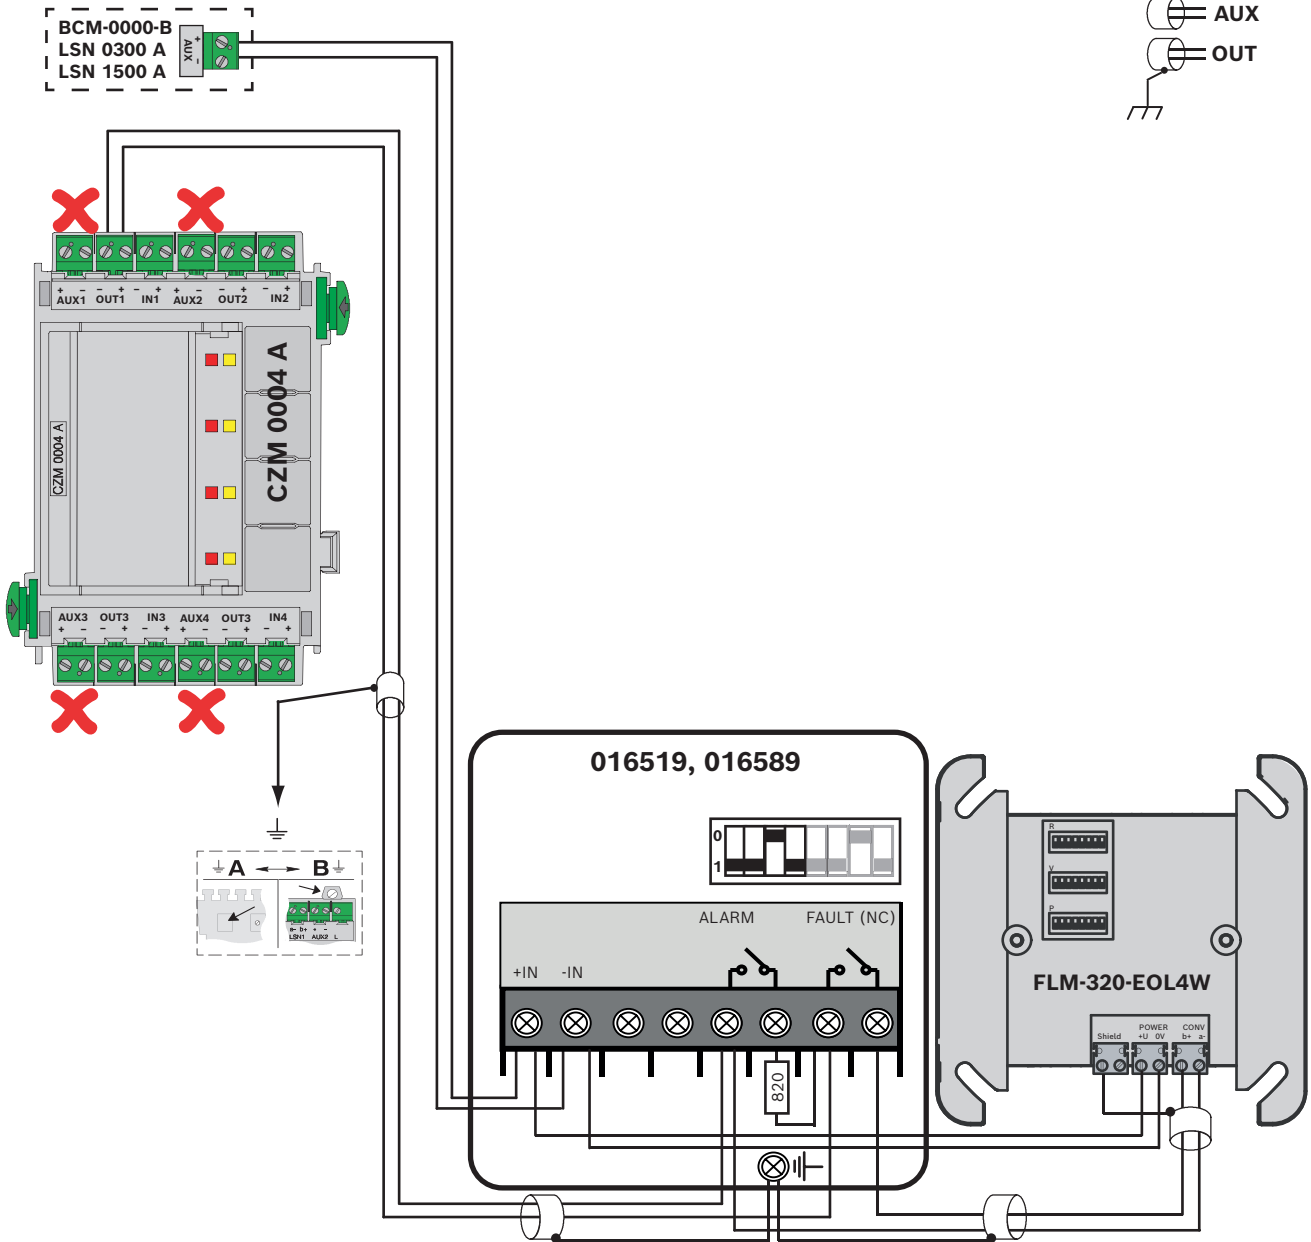





FCA-500-EU  
FCP-O 500  
FCP-O 500-P  
FCP-OC 500  
FCP-OC 500-P




 ELS

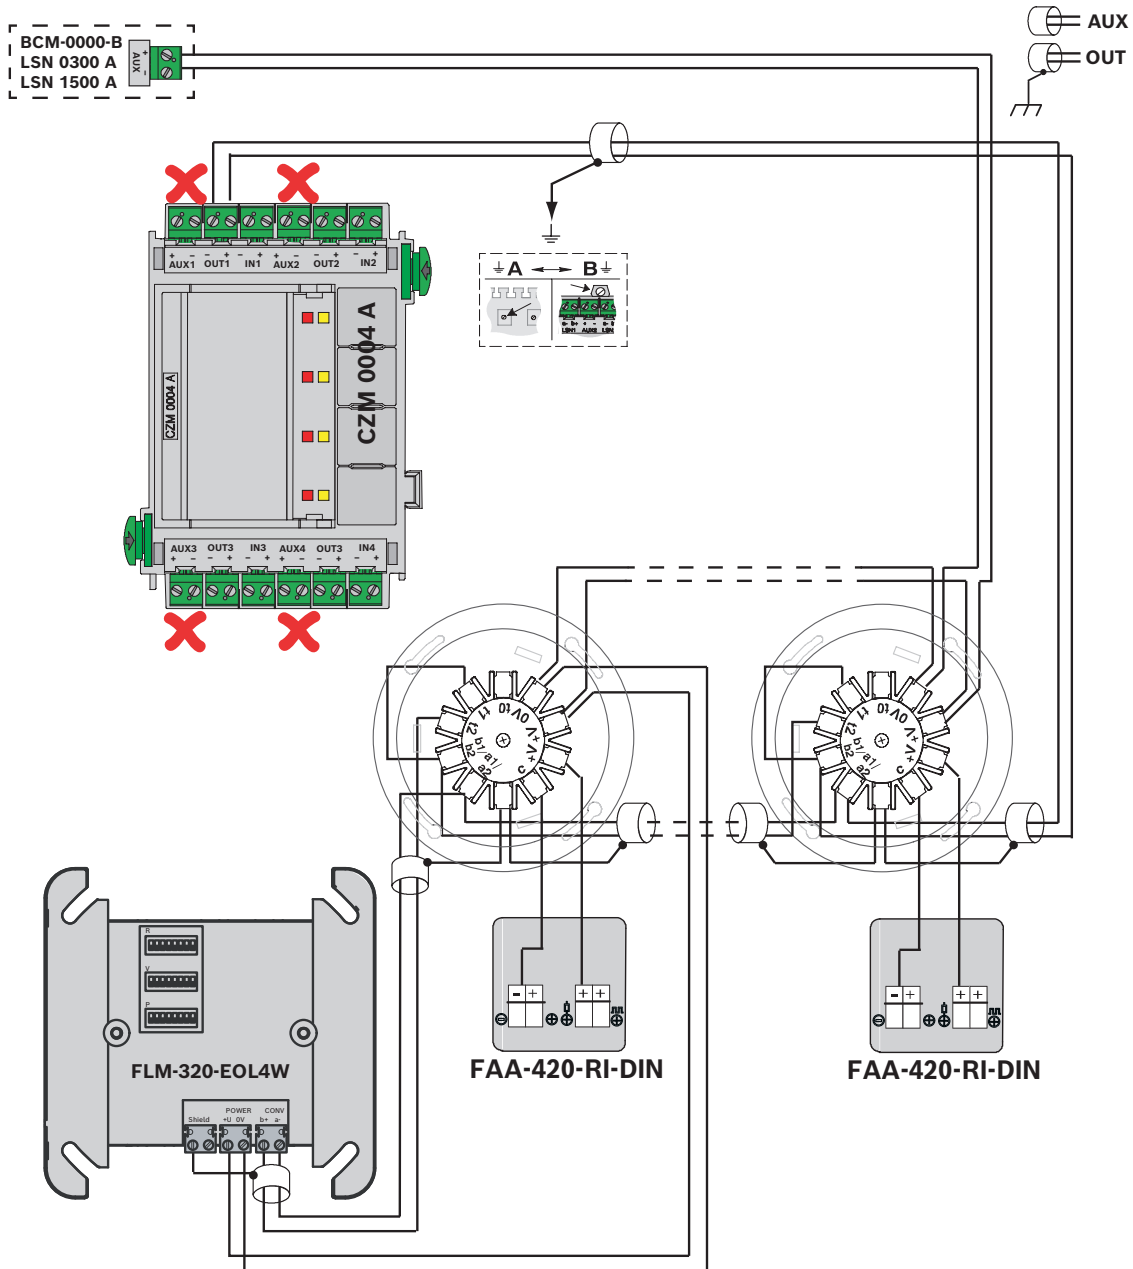







FCS-320-TM Series


 


ELS

   
BCM-0000-B  
LSN 0300 A  
LSN 1500 A

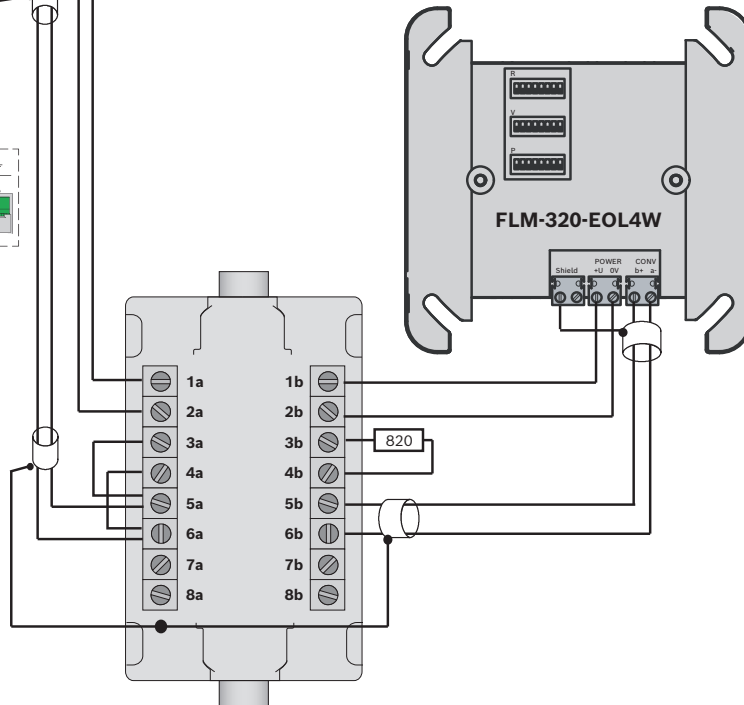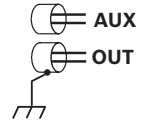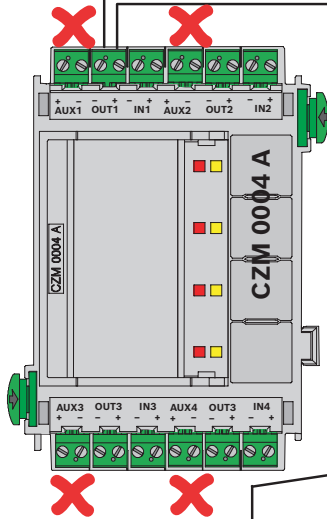






ELS

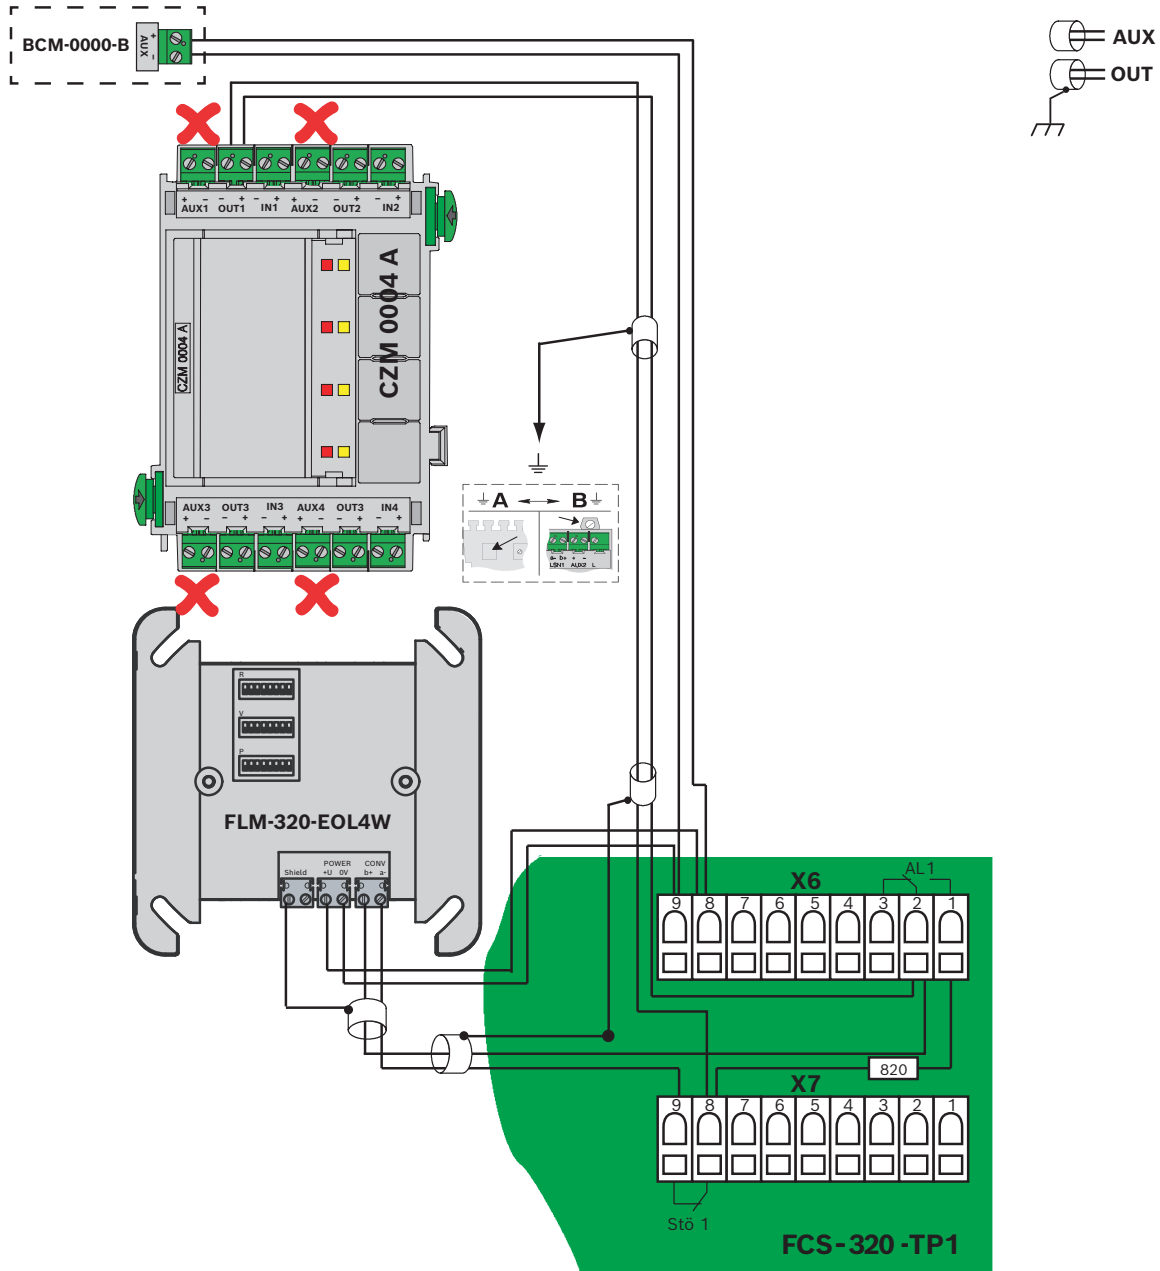


 

FCS-320-TP2



ELS

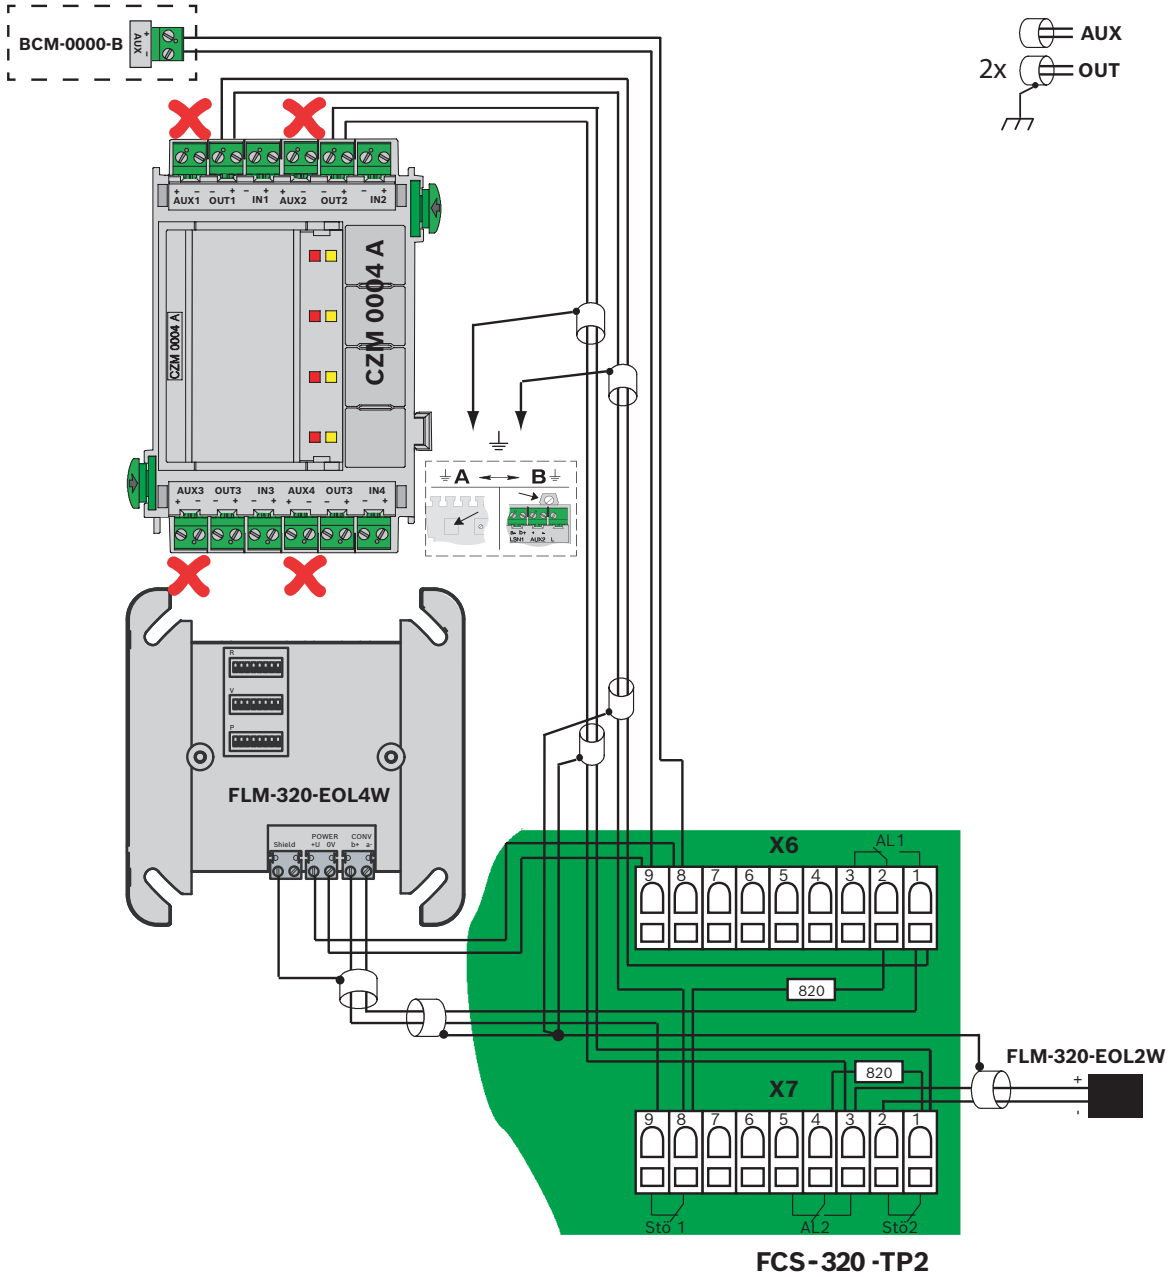




**FIRERAY3000**


1 x



**ELS**

 BCM-0000-B  
LSN 0300 A  
LSN 1500 A

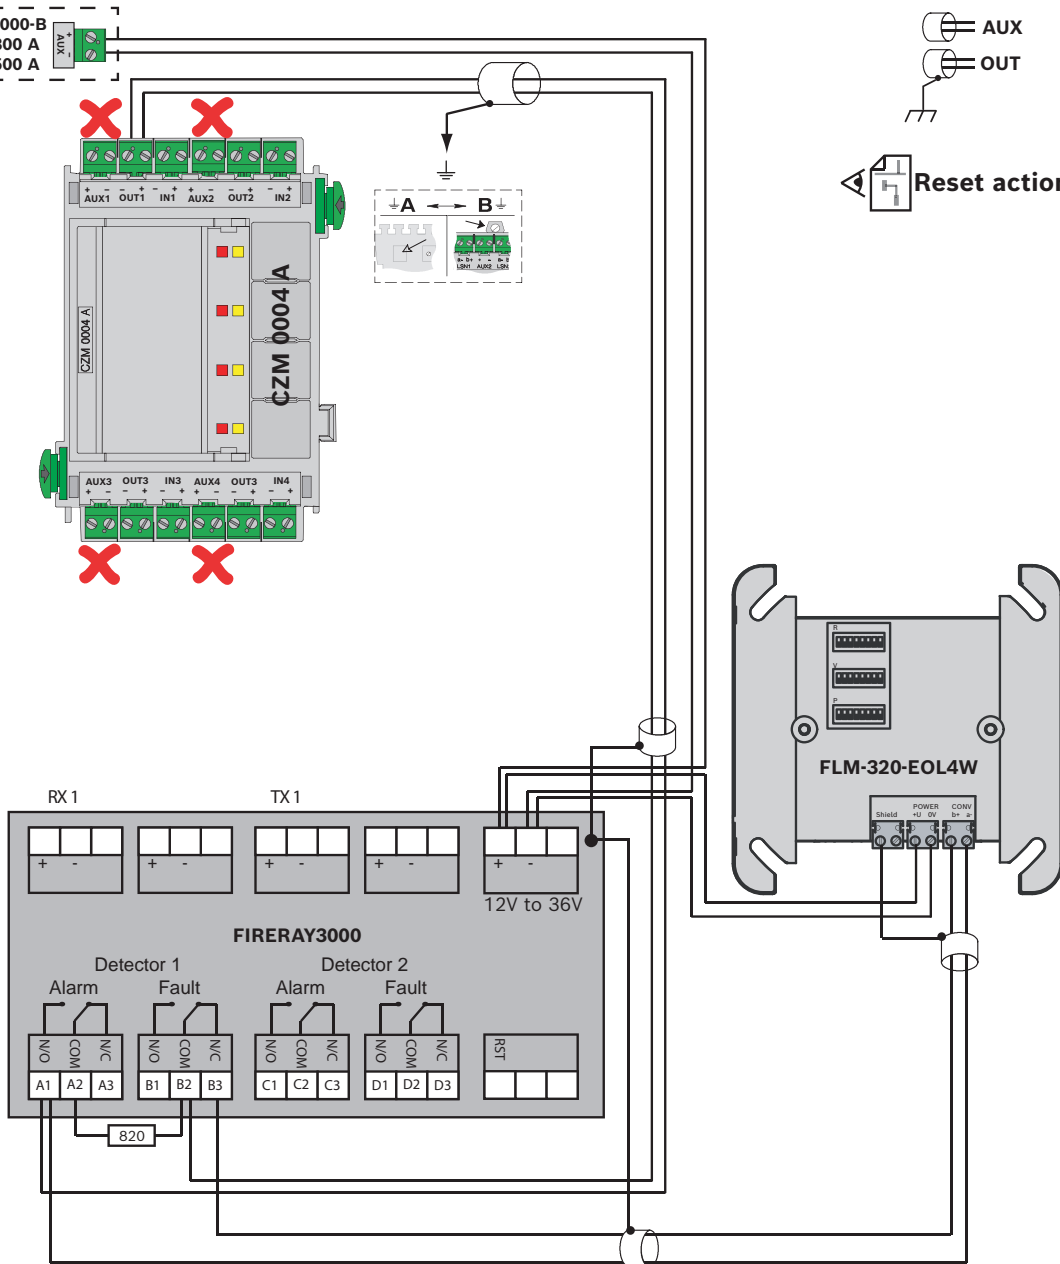








**FIRERAY3000**  
2 x **OUT1**



**ELS**

 BCM-0000-B  
LSN 0300 A  
LSN 1500 A

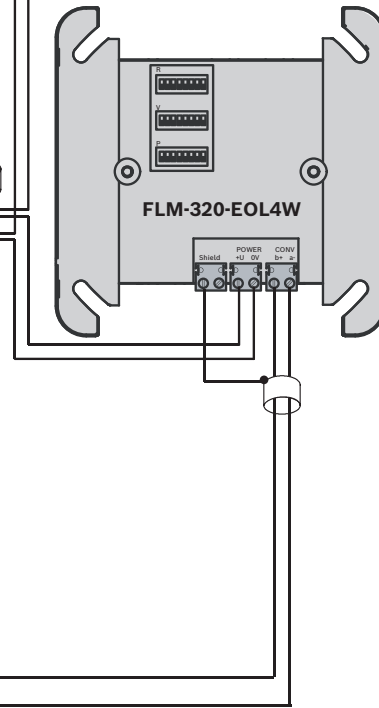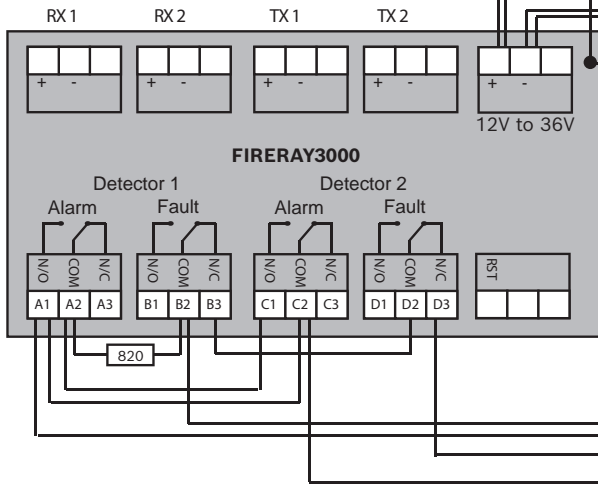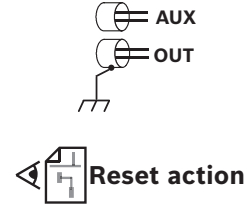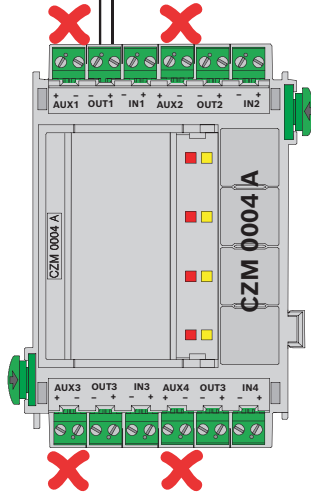





**FIRERAY3000**  
2 x **OUT1+2**






**ELS**

 BCM-0000-B  
LSN 0300 A  
LSN 1500 A

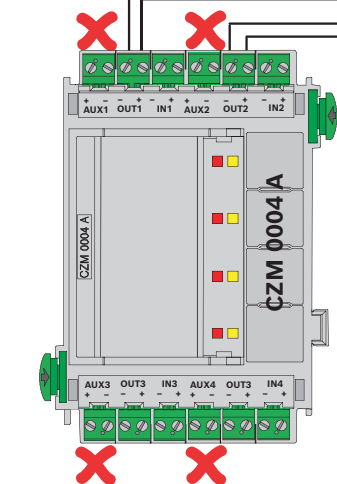

**Reset action**

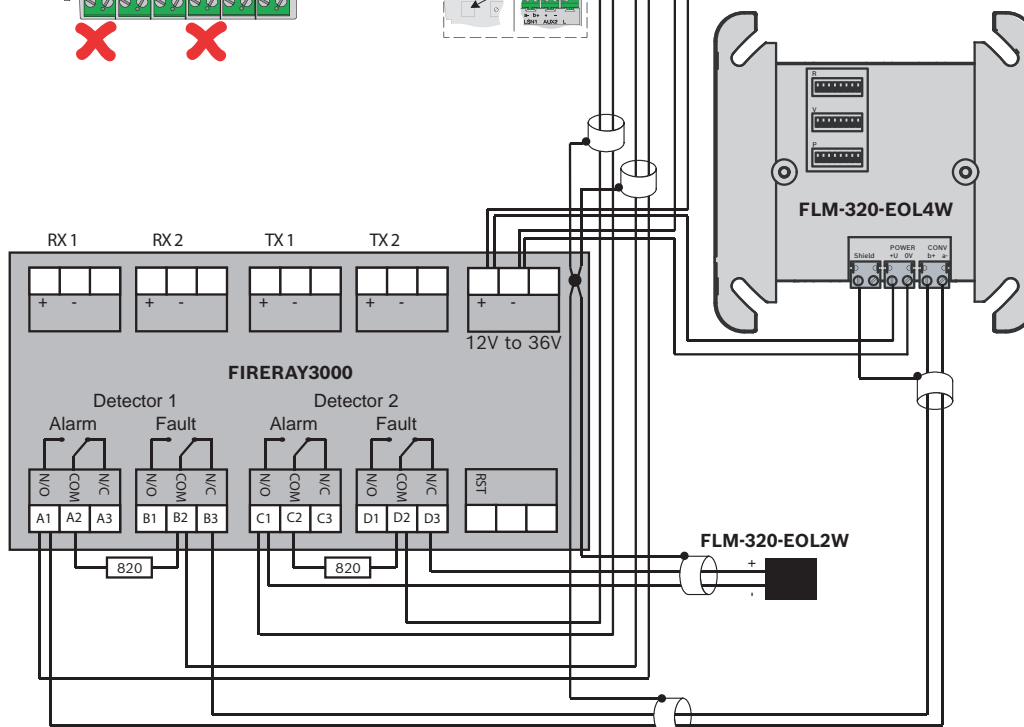 

 




**FIRERAY5000**

1 x




  **ELS**

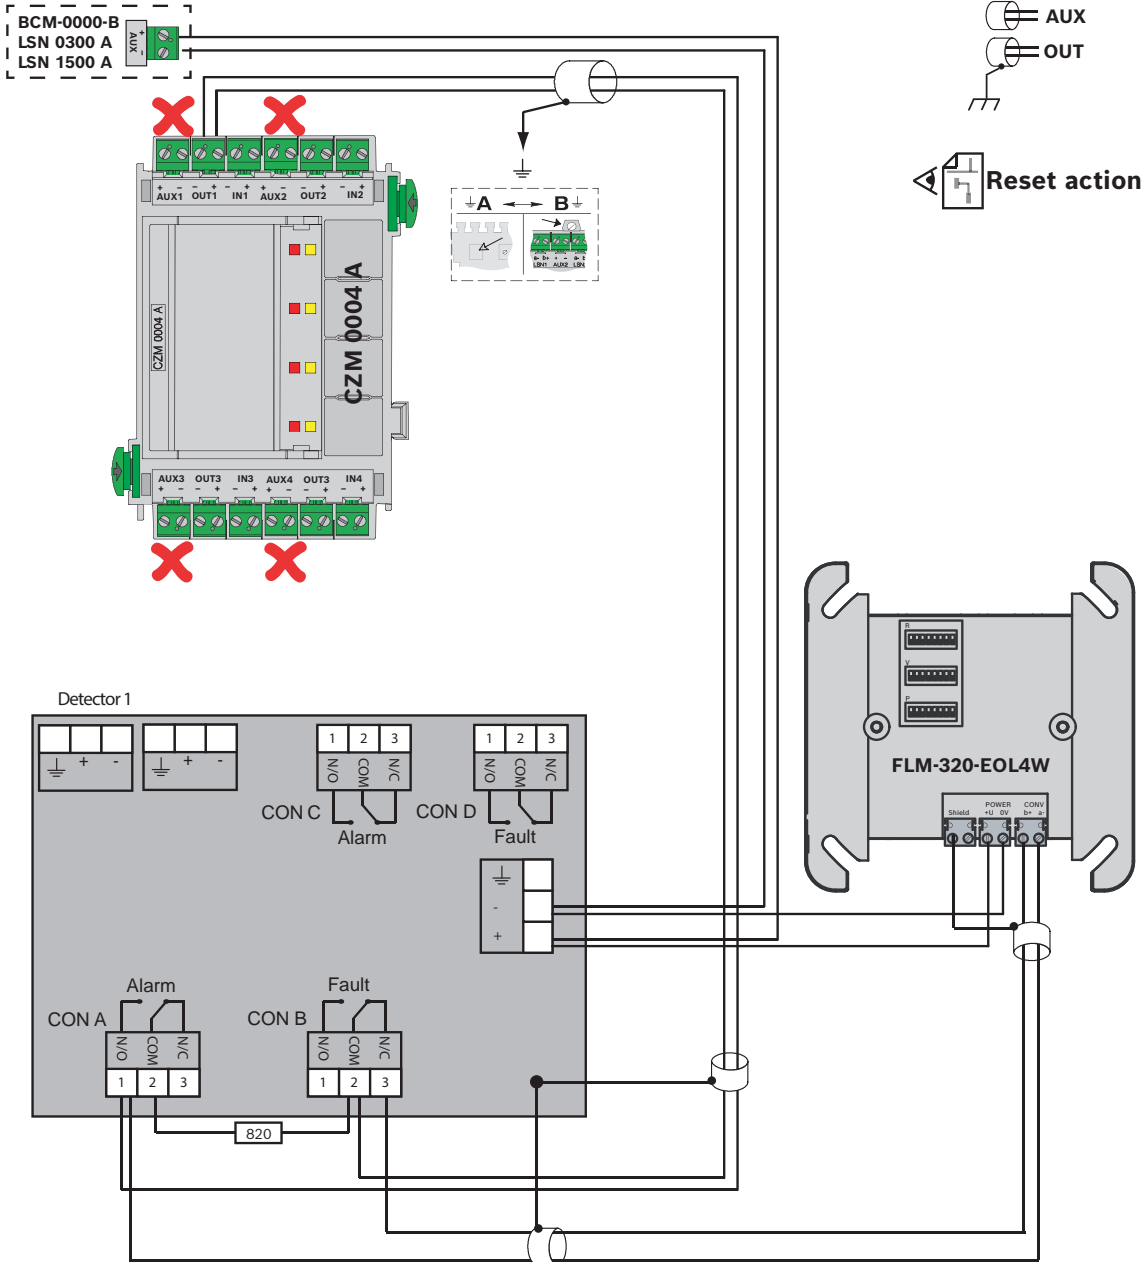






 FMC-120-DKM-G-R  
 FMC-120-DKM-H-R  
 FMC-120-DKM-G-B  
 FMC-120-DKM-H-B  
 FMC-120-DKM-G-Y



ELS

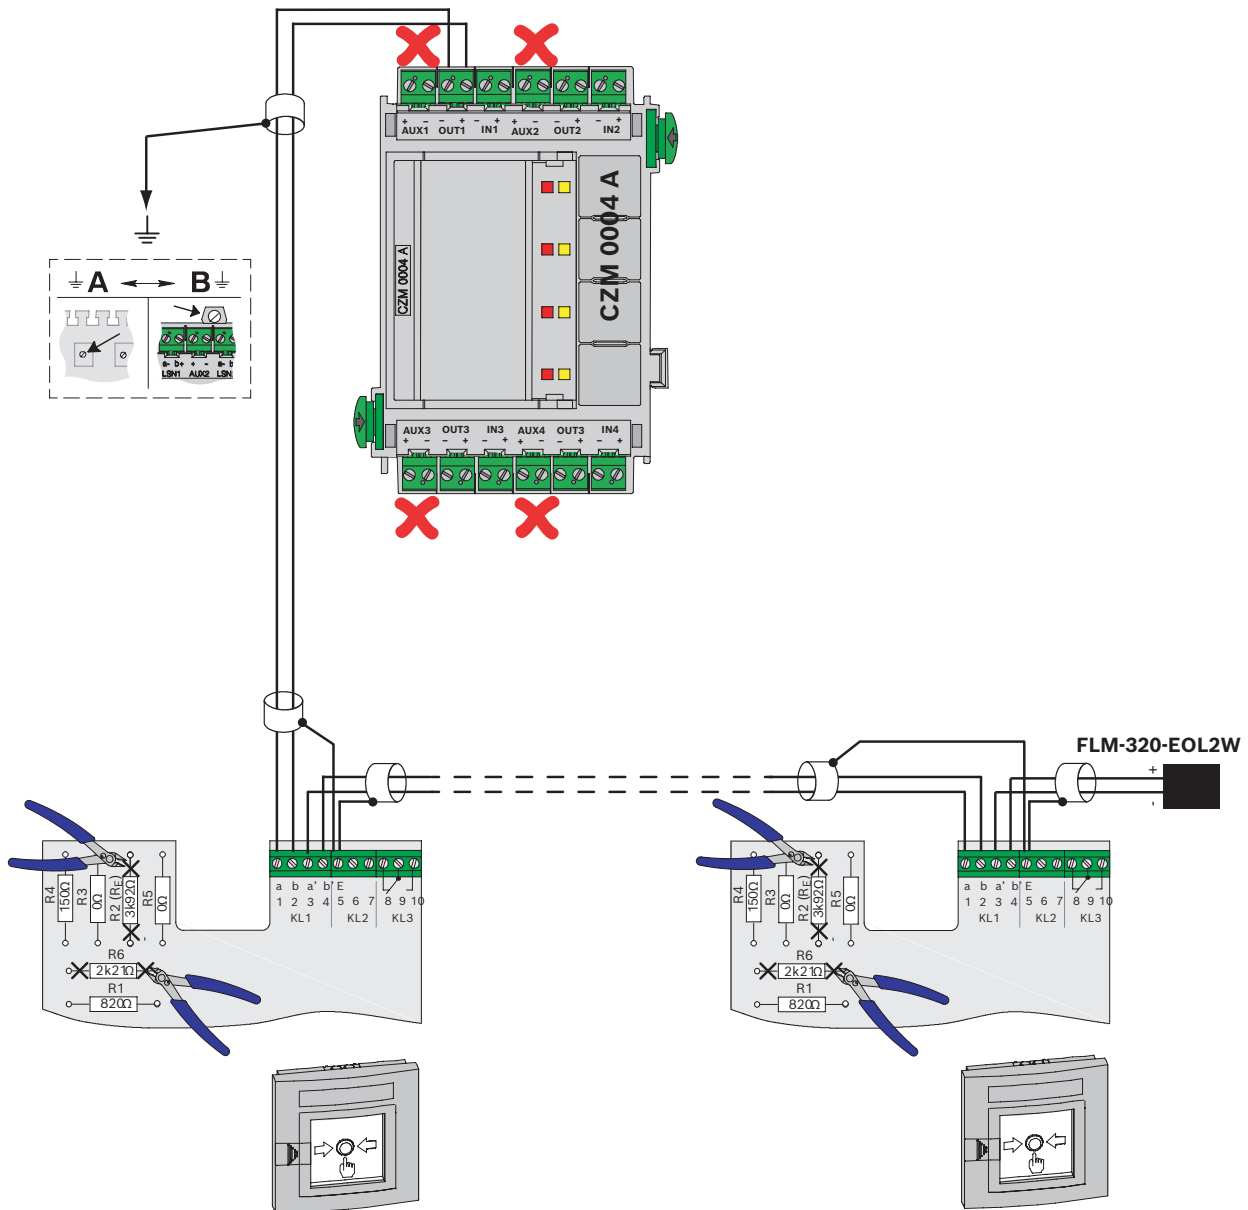


  

FMC-300RW-GSGBU  
 FMC-300RW-GSRBU  
 FMC-300RW-GSGRD  
 FMC-300RW-GSRRD  
 FMC-300RW-GSGYE  
 FMC-300RW-GSRYE





ELS

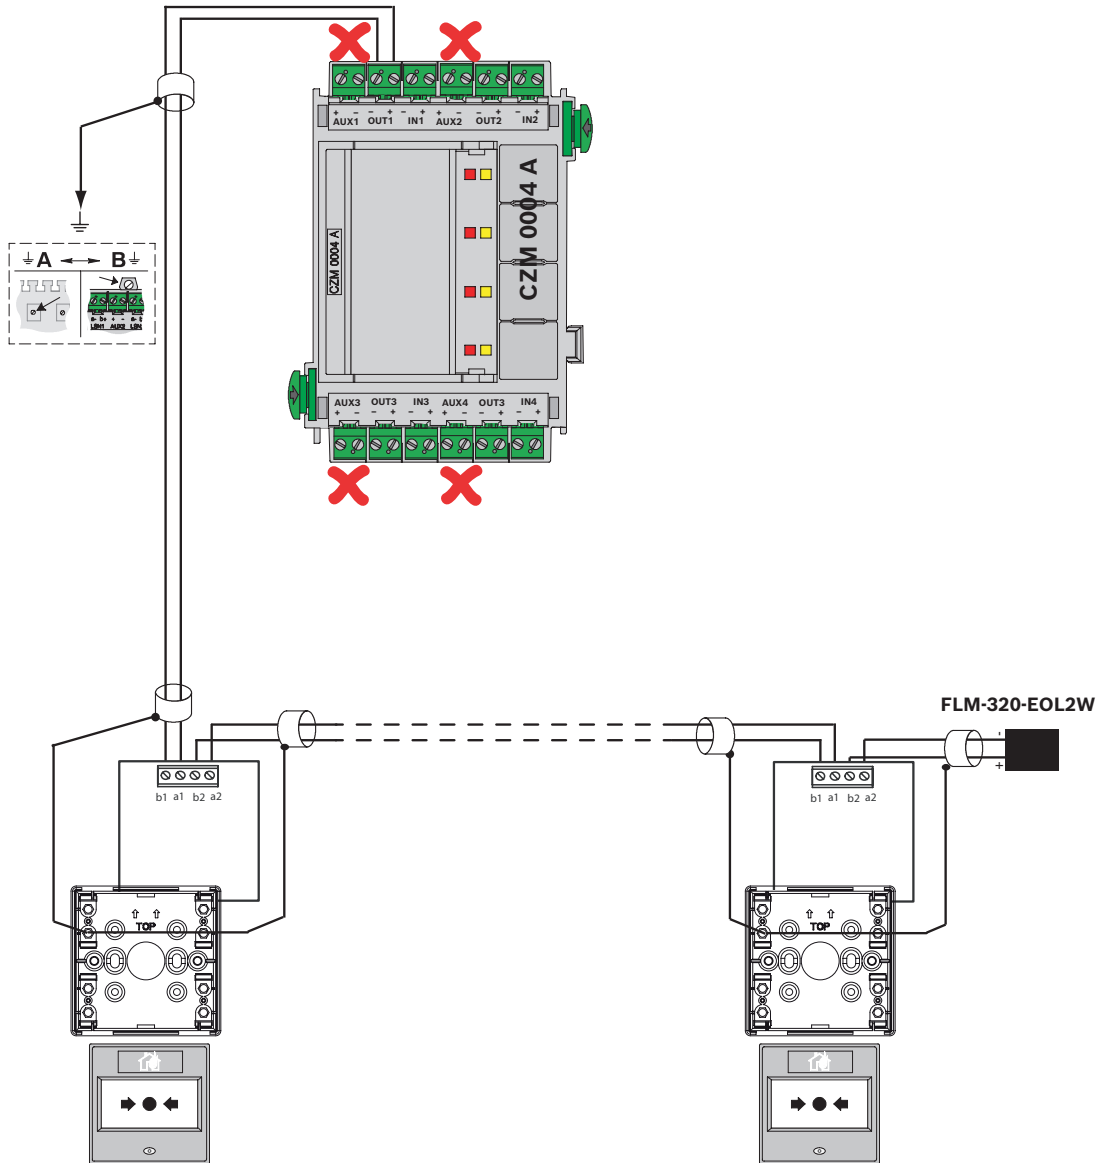


FLM-320-EOL2W




 
 
2.6.2 LSN 0300 A

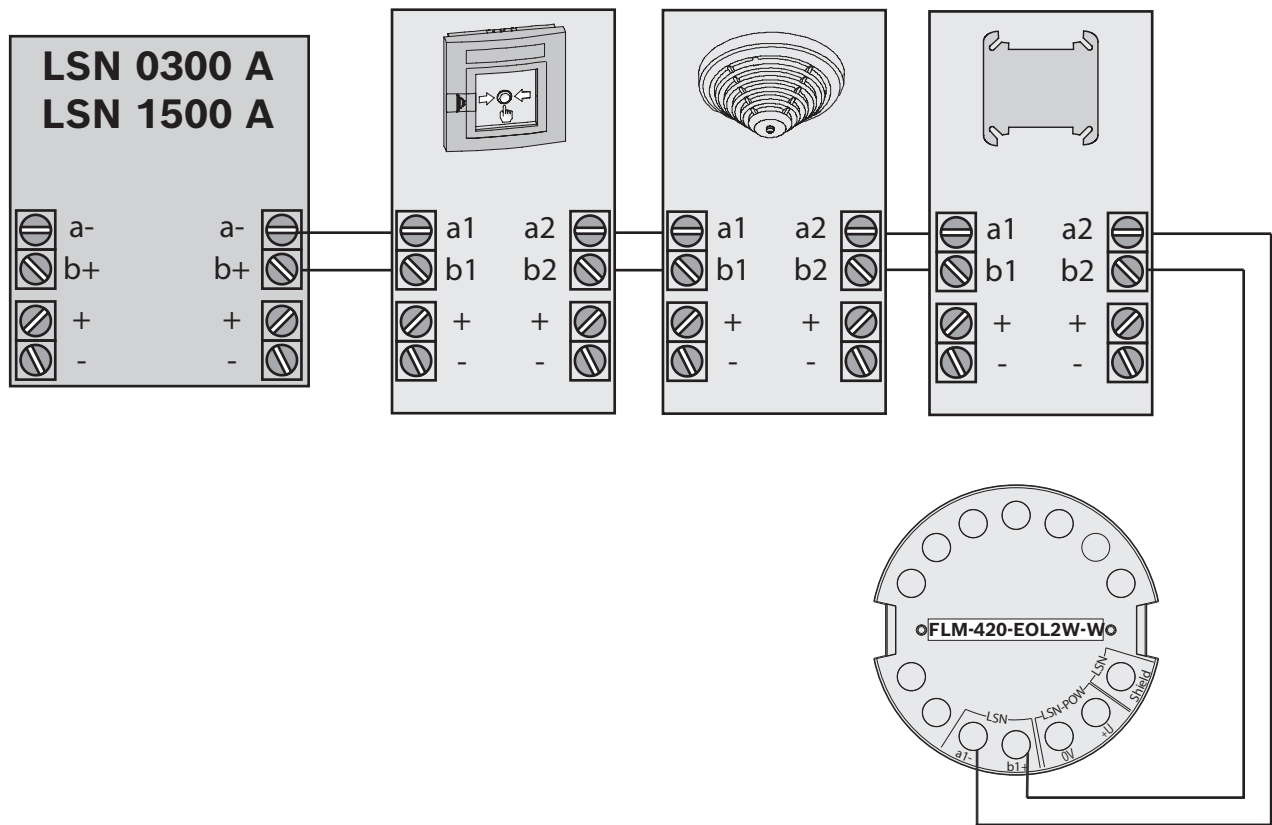




ELS


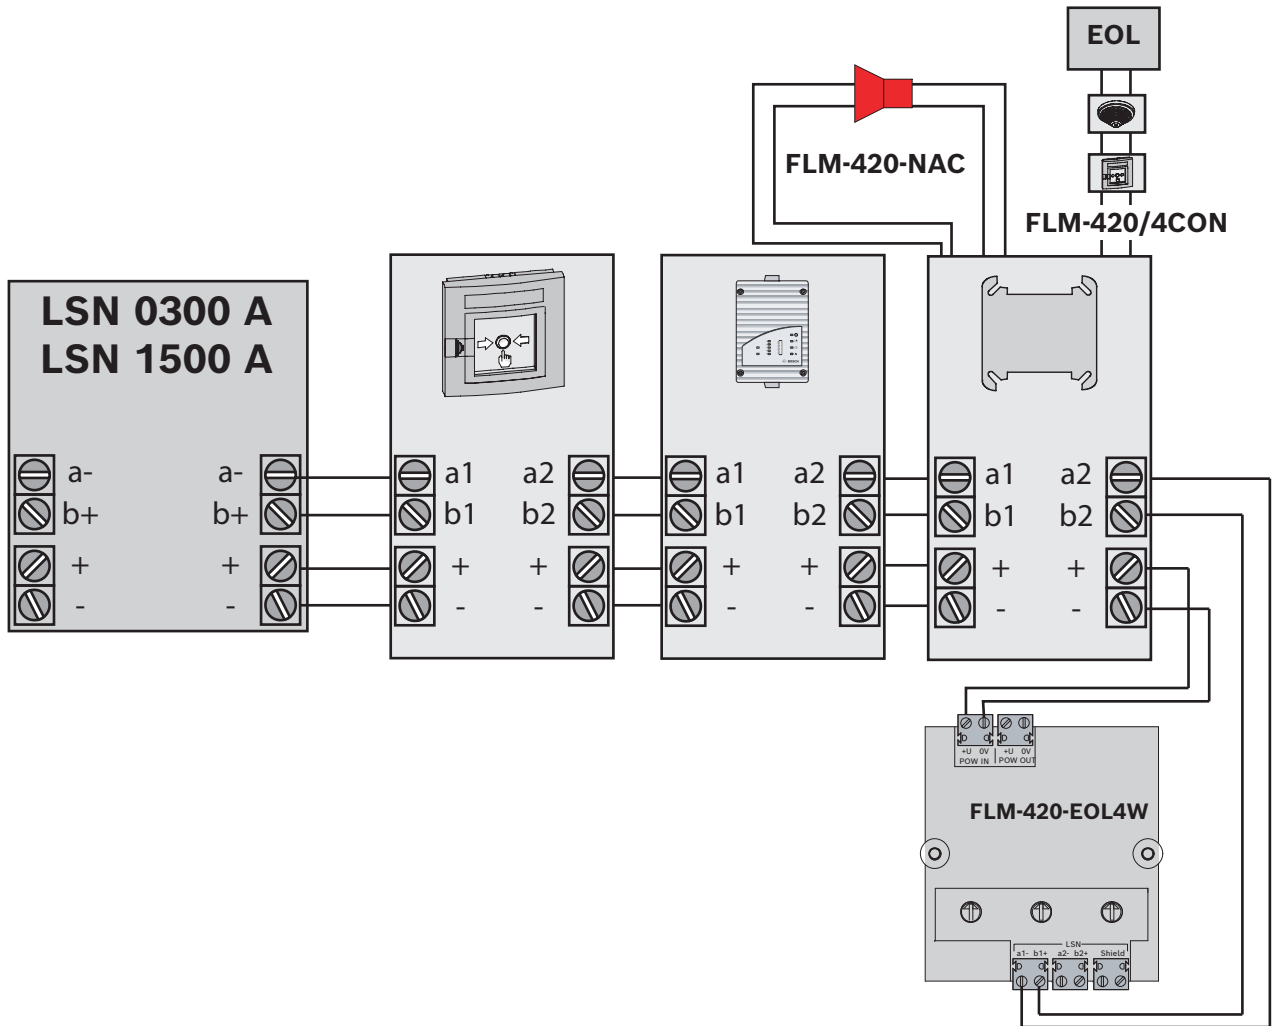


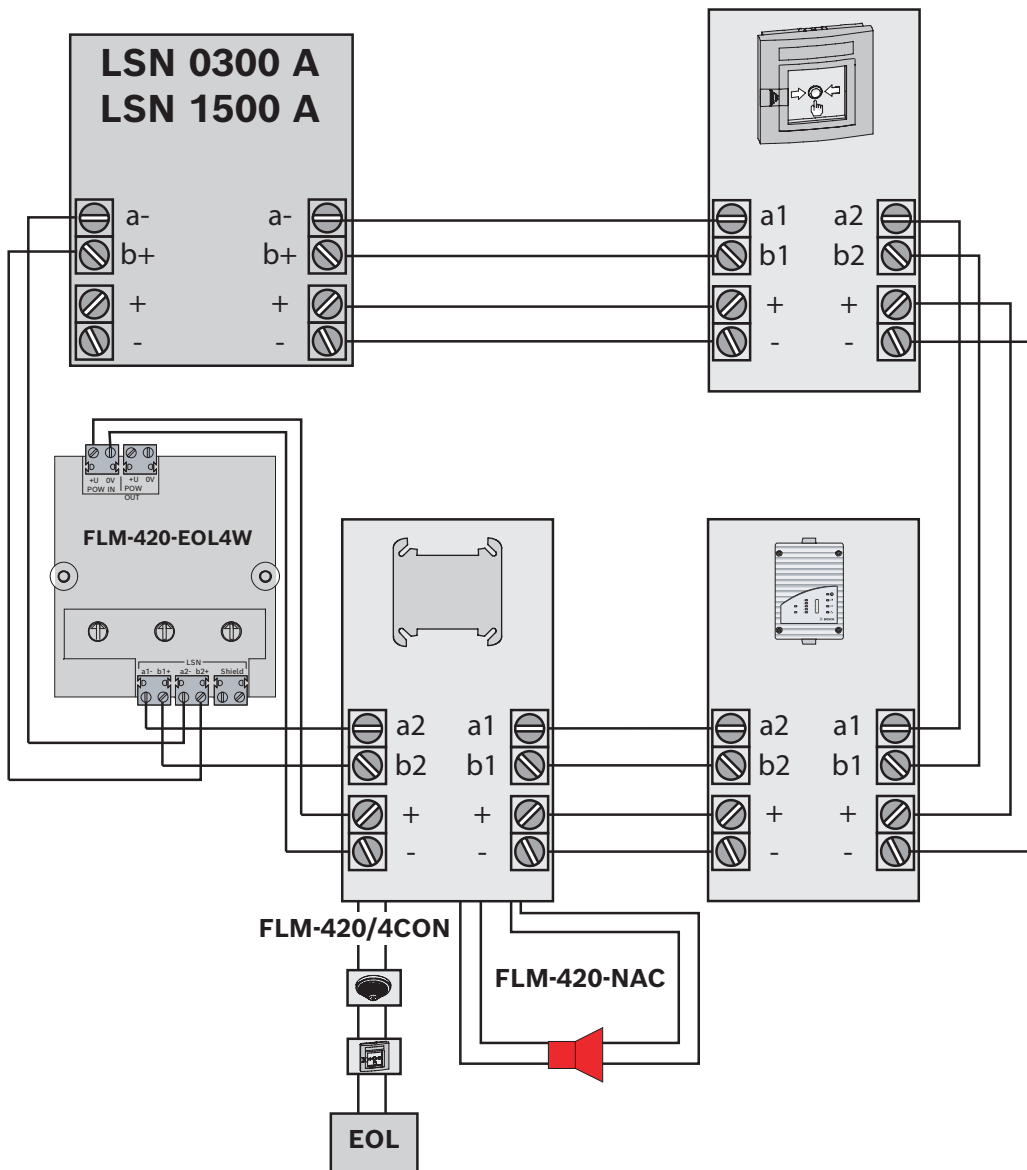 


Reset action

  ELS

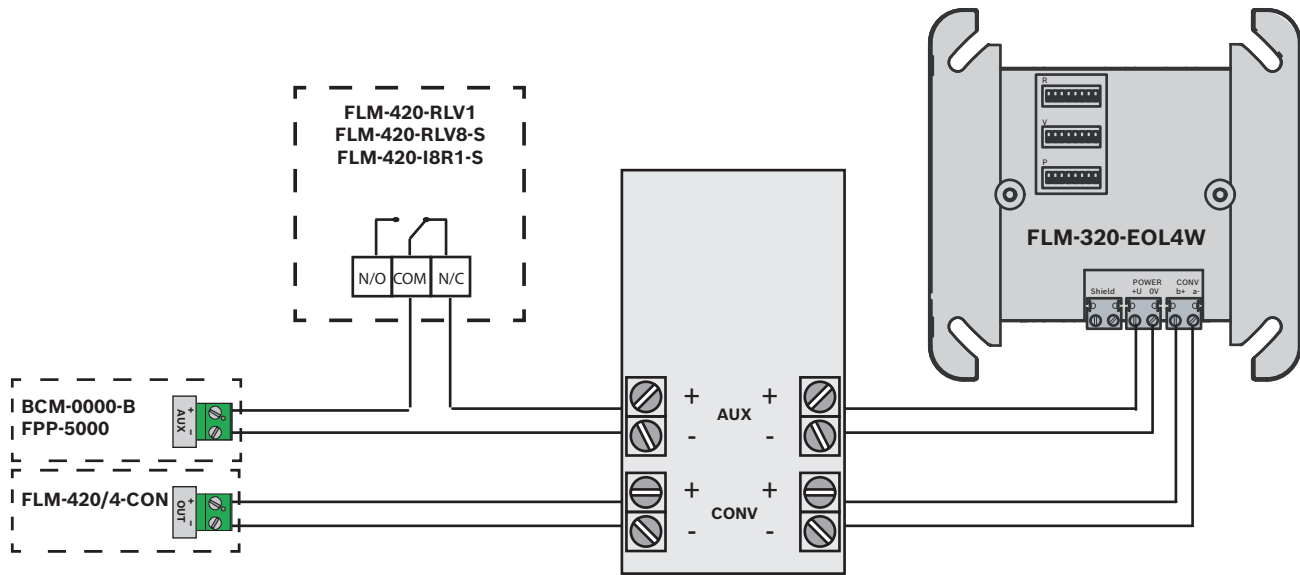






 FLM-420-I2-D  
 FLM-420-O1I1-D  
 FLM-420-RHV-D/S  
 FLM-420-RLV1-D




ELS

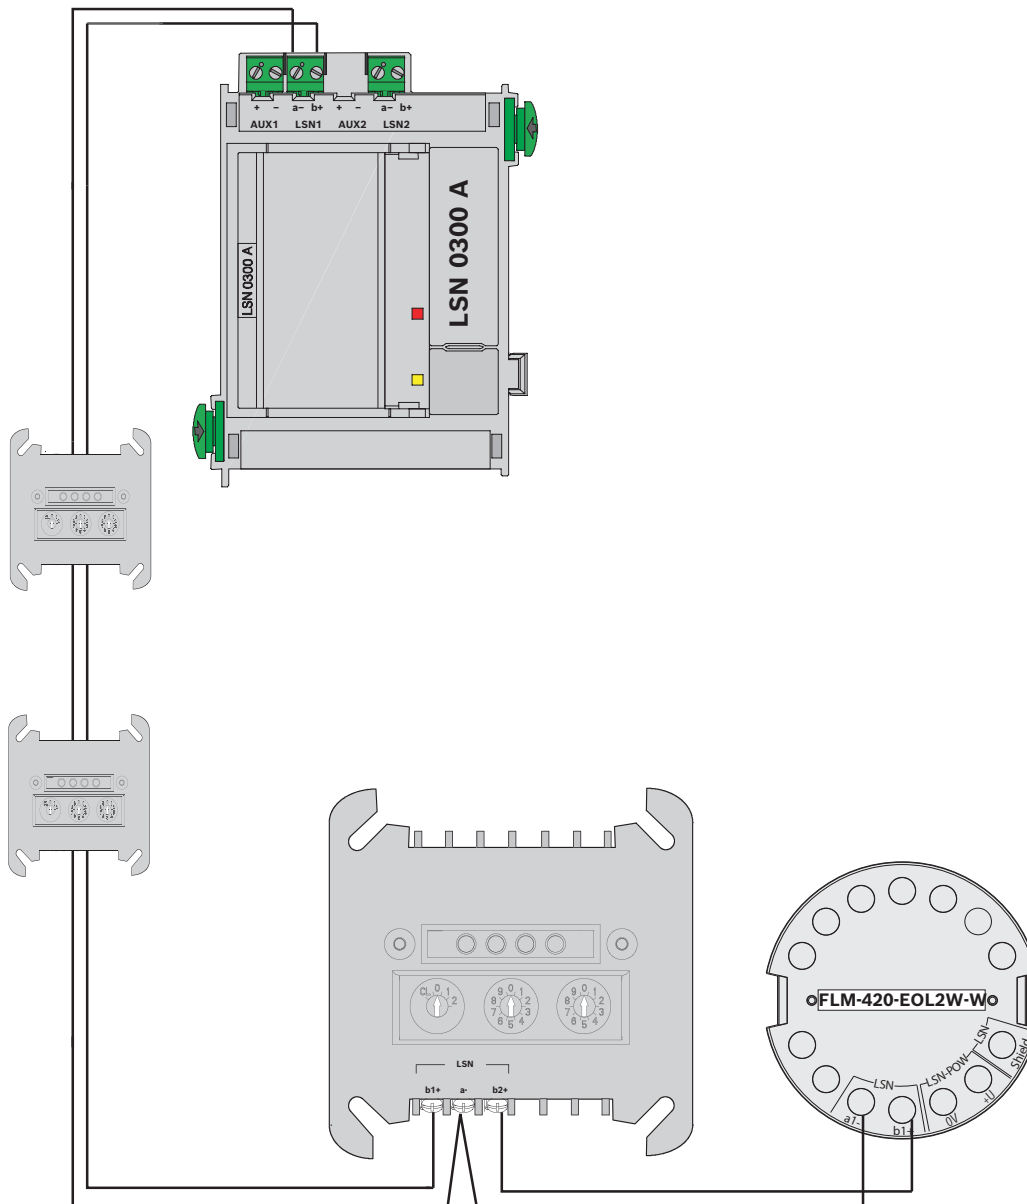


 
 


FLM-420-12-E/W

 


ELS

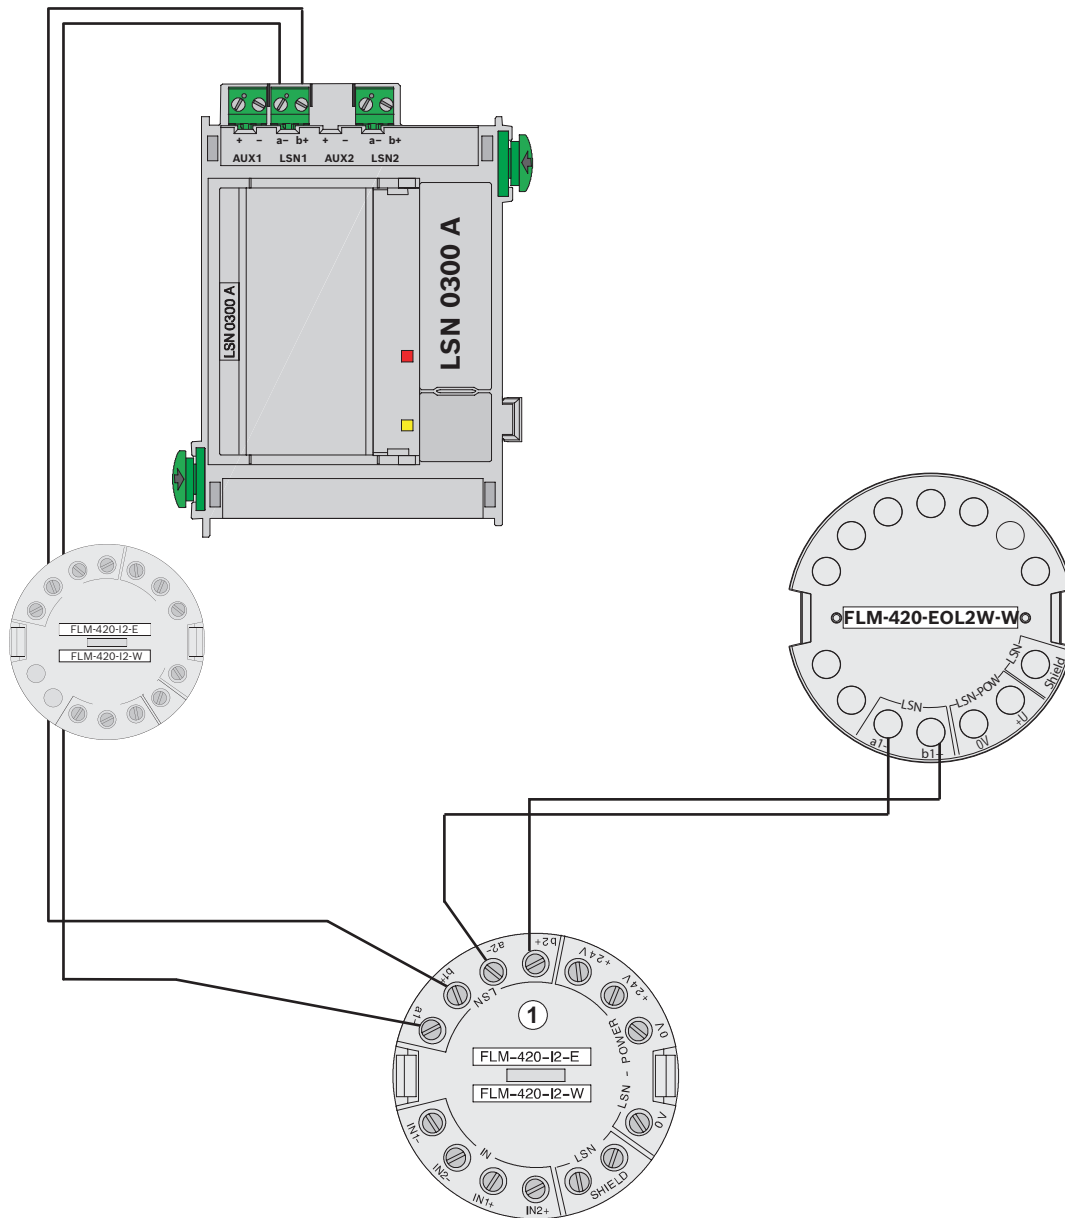


 
 


FLM-420-18R1-S

 


ELS

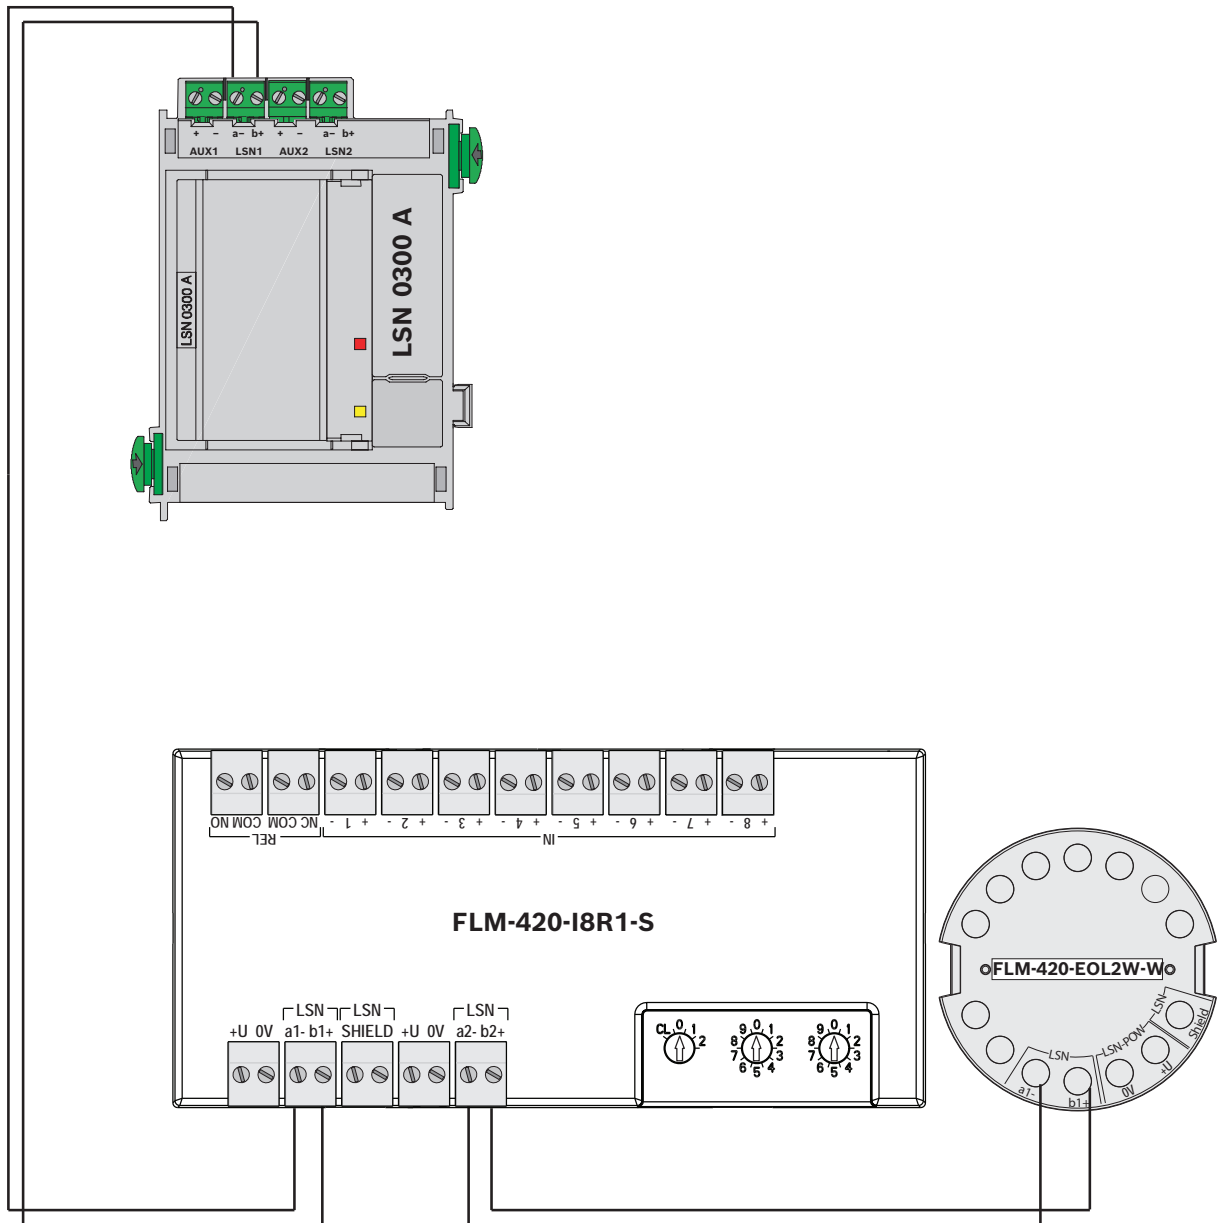


  




FLM-420-O111-E

 


ELS


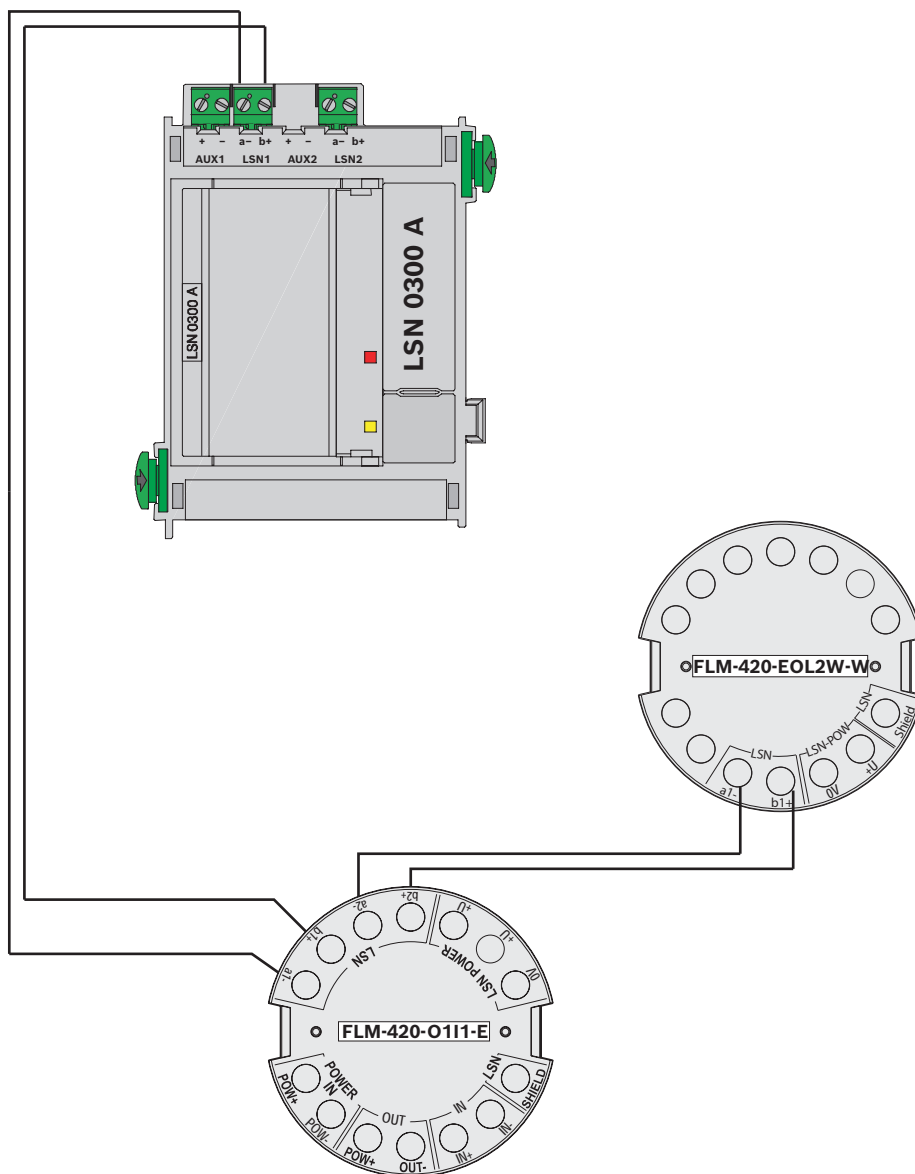




   


ELS

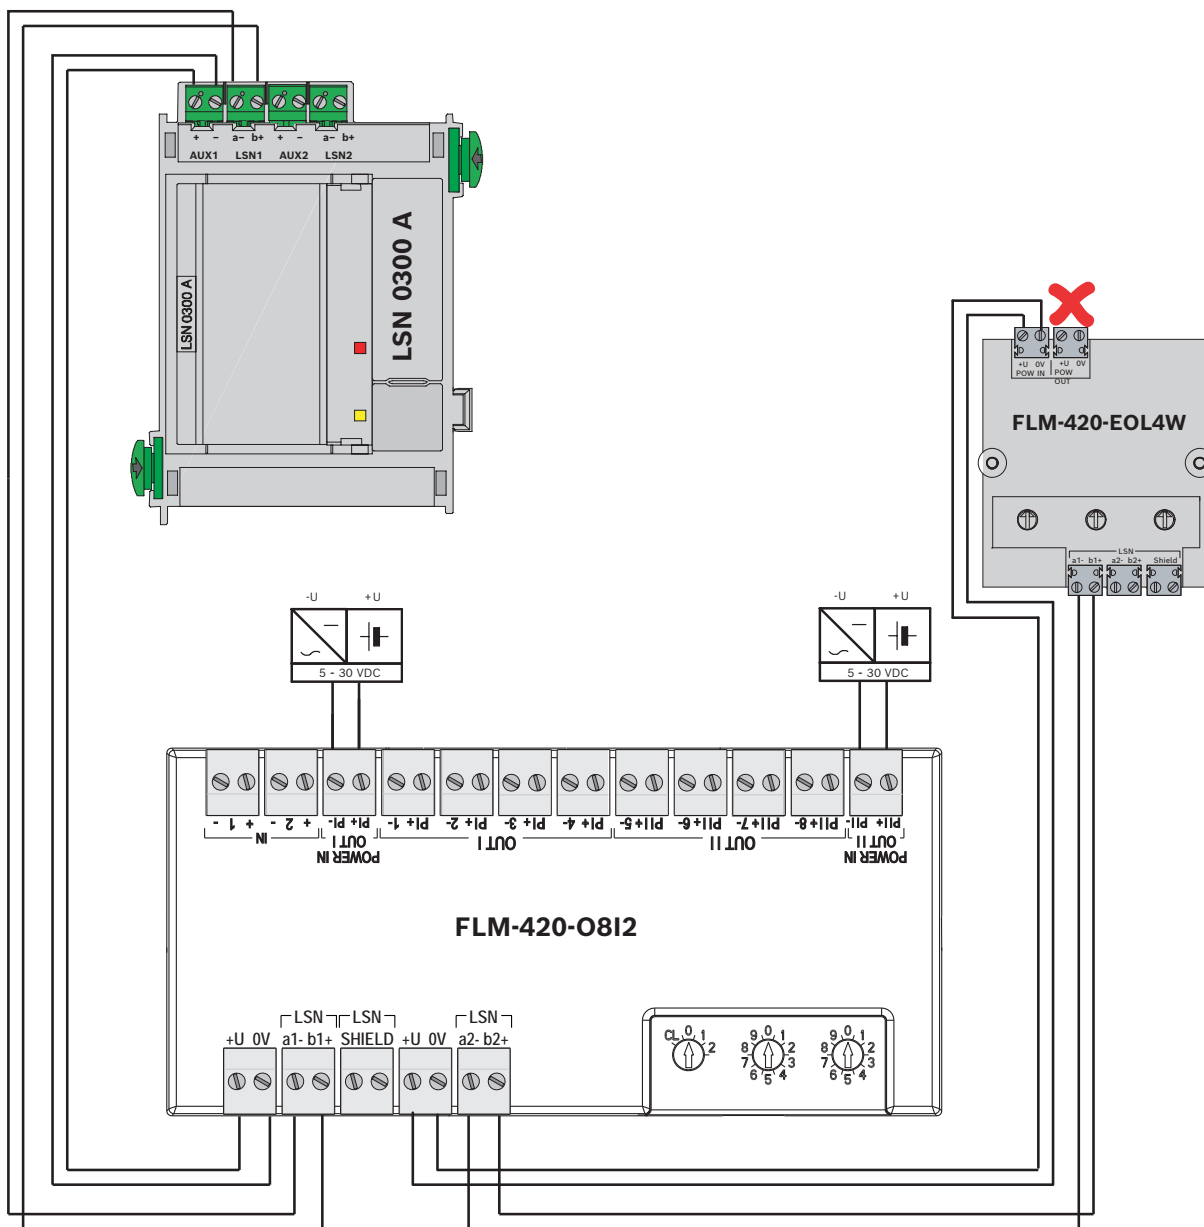




 
 



 
**FLM-420-I2-E/-W**  
**FLM-420-RLV1-E**




**ELS**

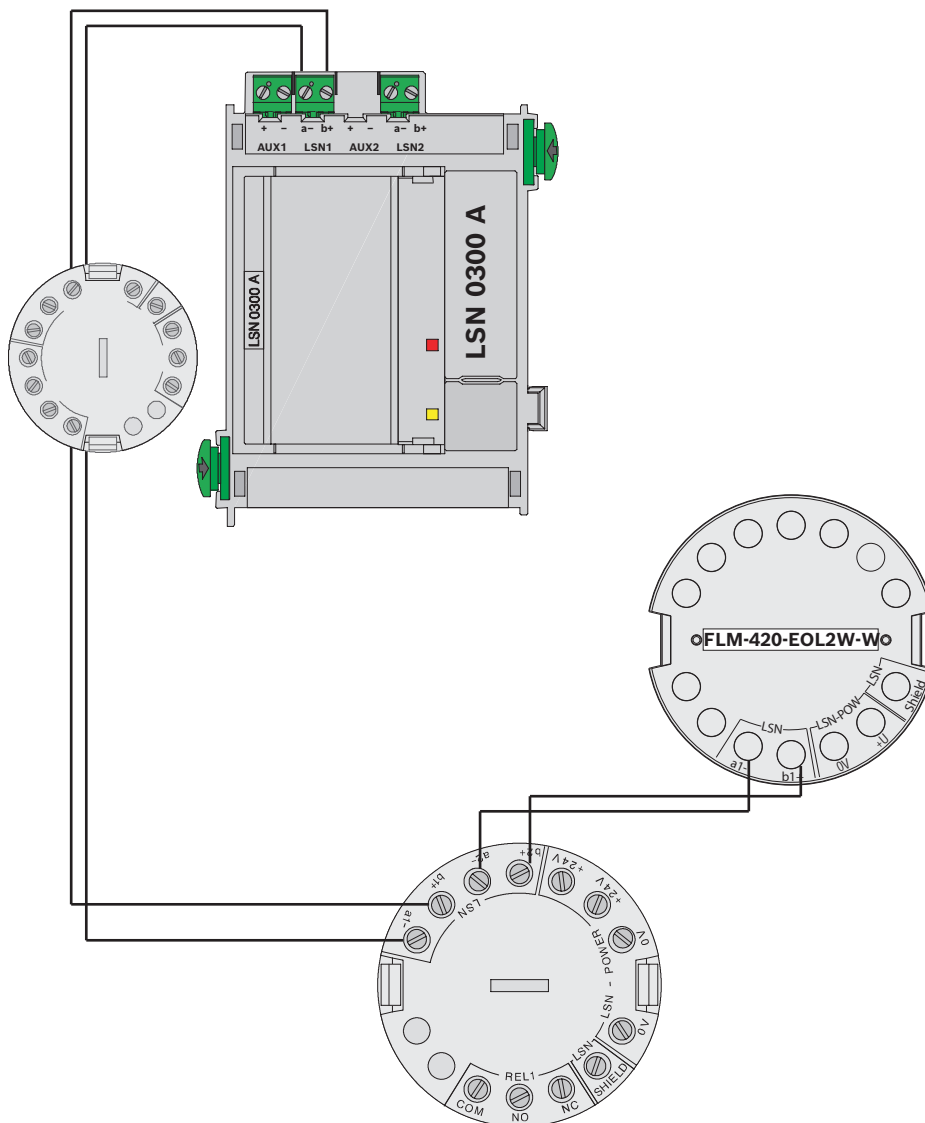


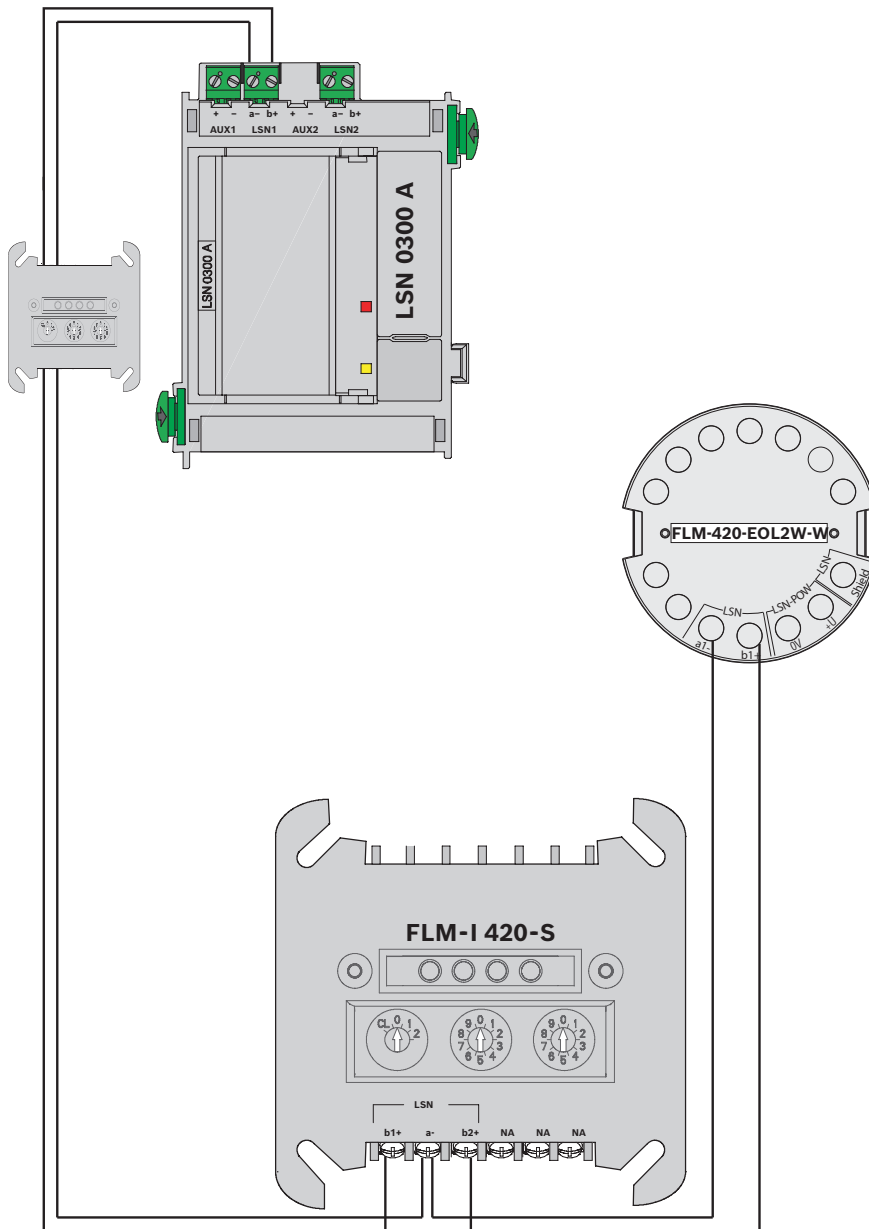   

  


ELS

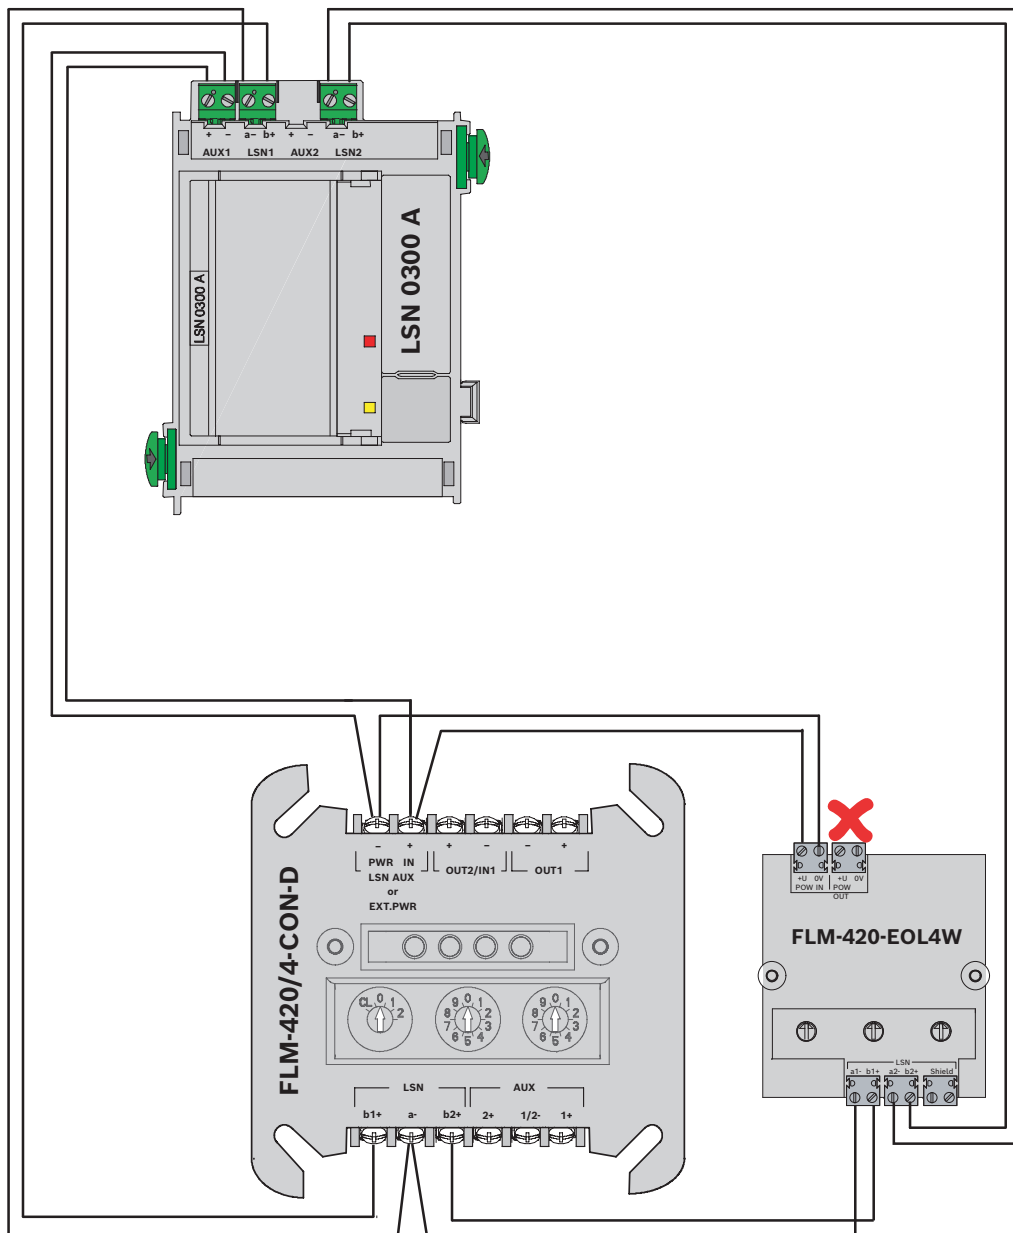


 


**FLM-420/  
4-CON-D**

 


**ELS**

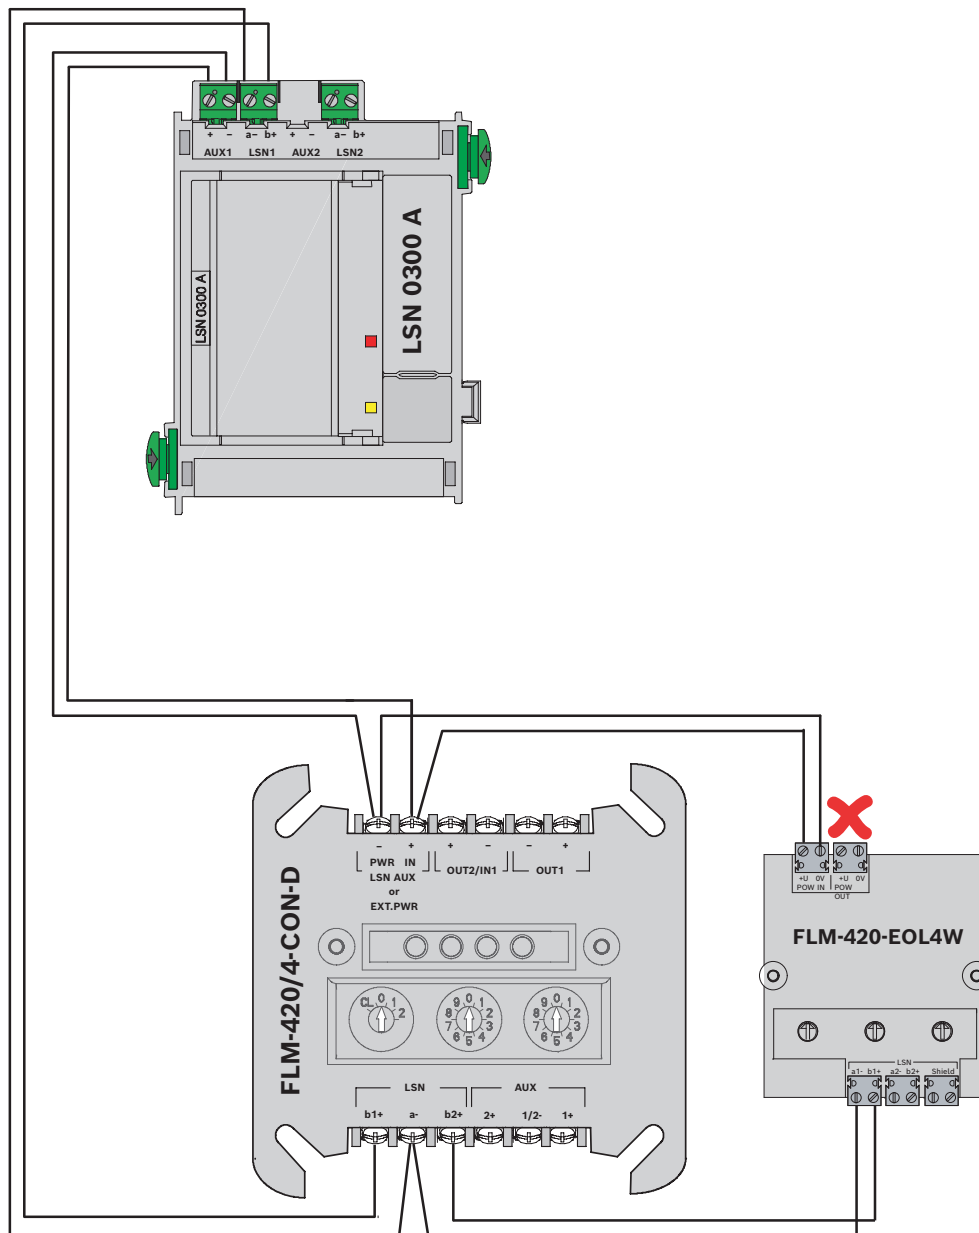




 




FLM-420-NAC-D/S

 


ELS  
EN 54-2

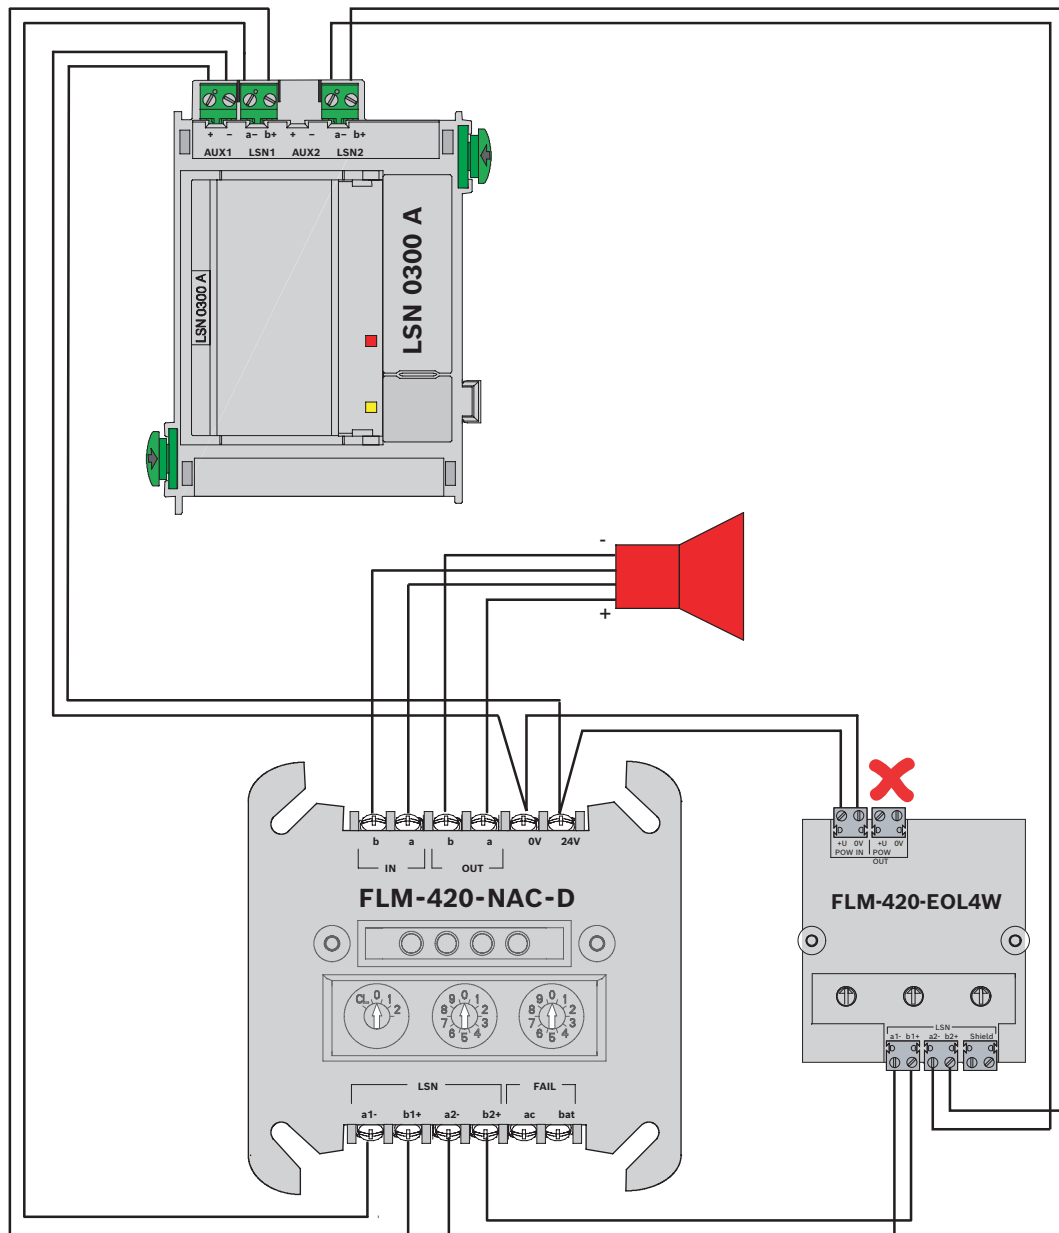

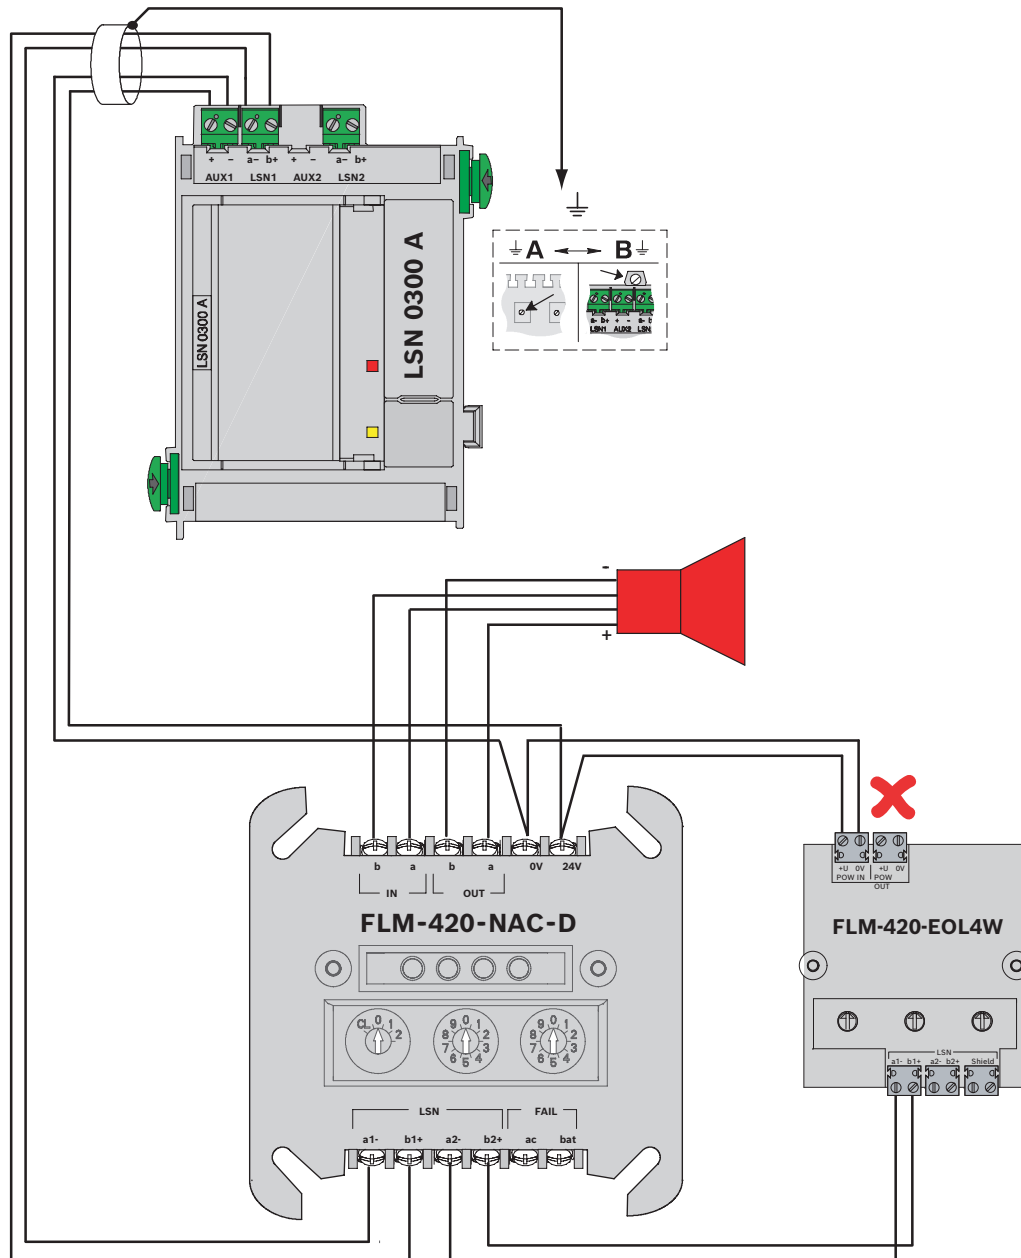  


  


FMC-210...

 


ELS

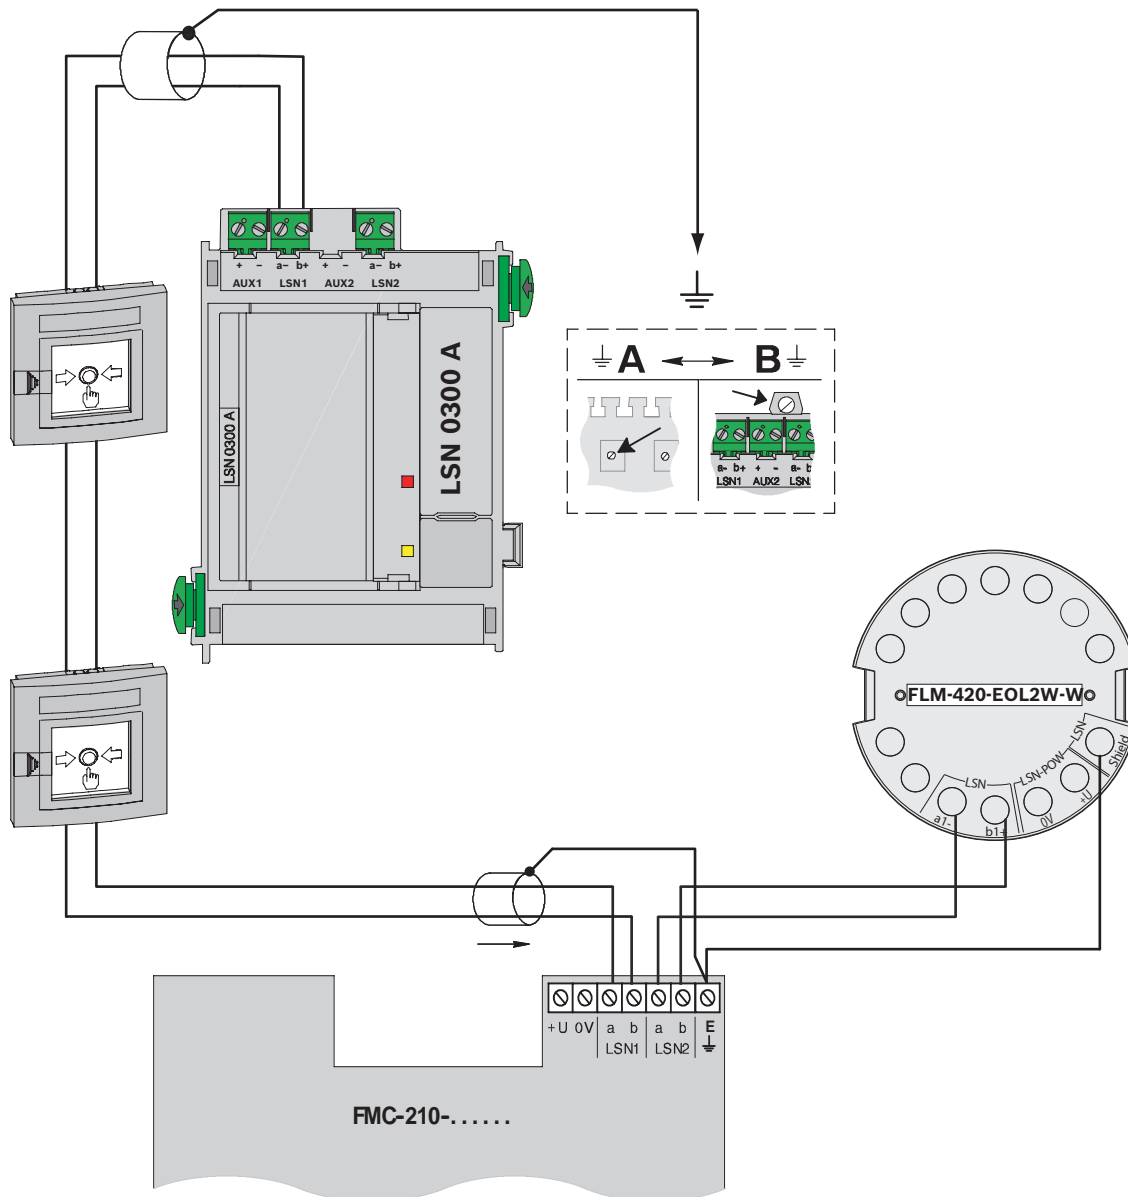




 

 **FNM-420-A /-B**  
**FNM-420U-A /-B**  
**FNM-420V-A**



**ELS**

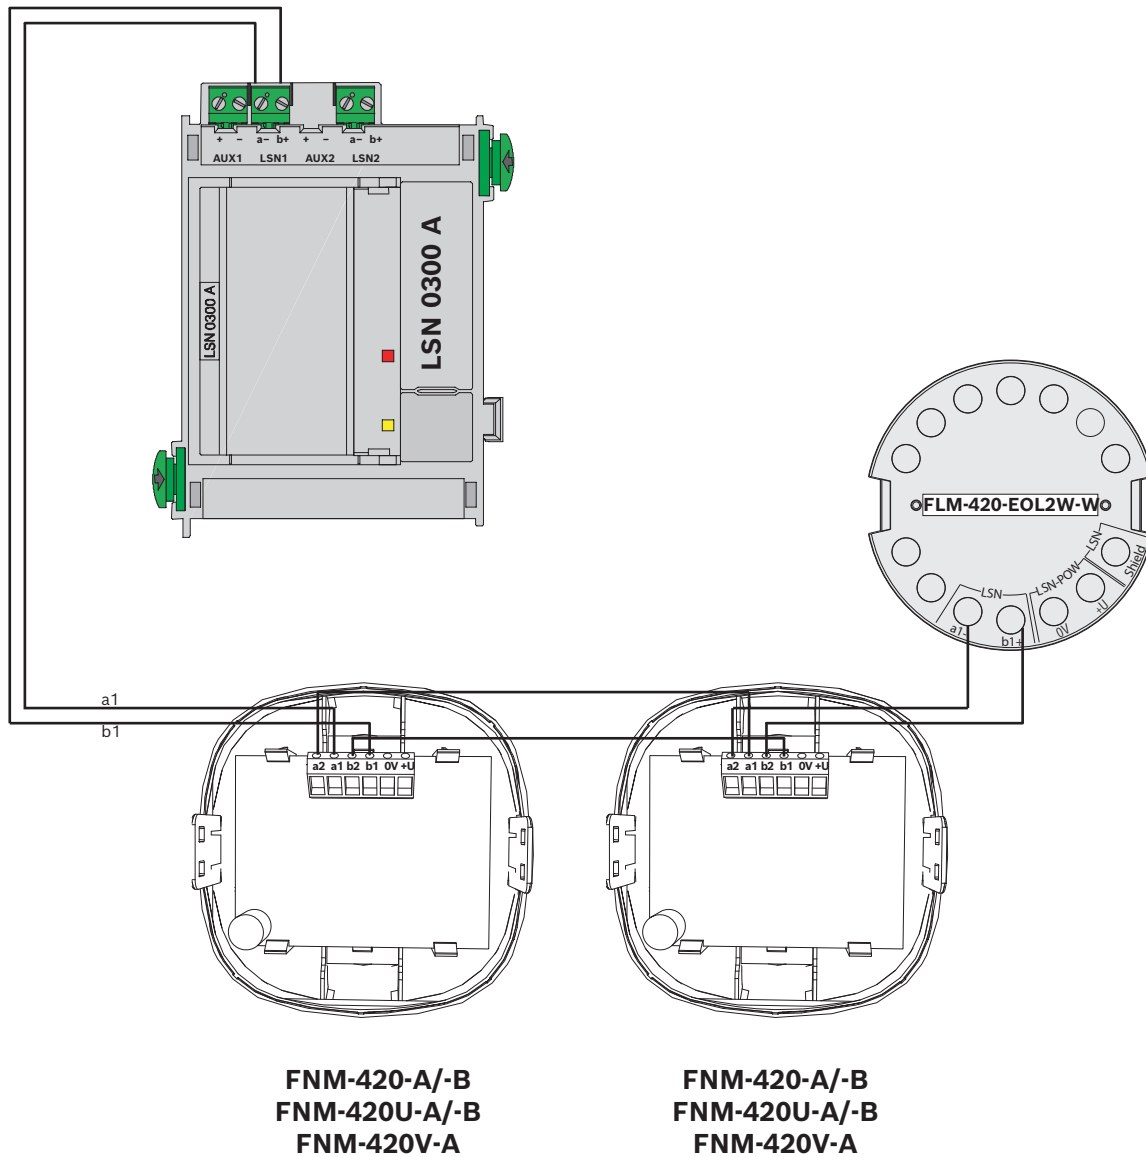




**FNM-420-A-BS**  
**FNM-420U-A-BS**



**ELS**

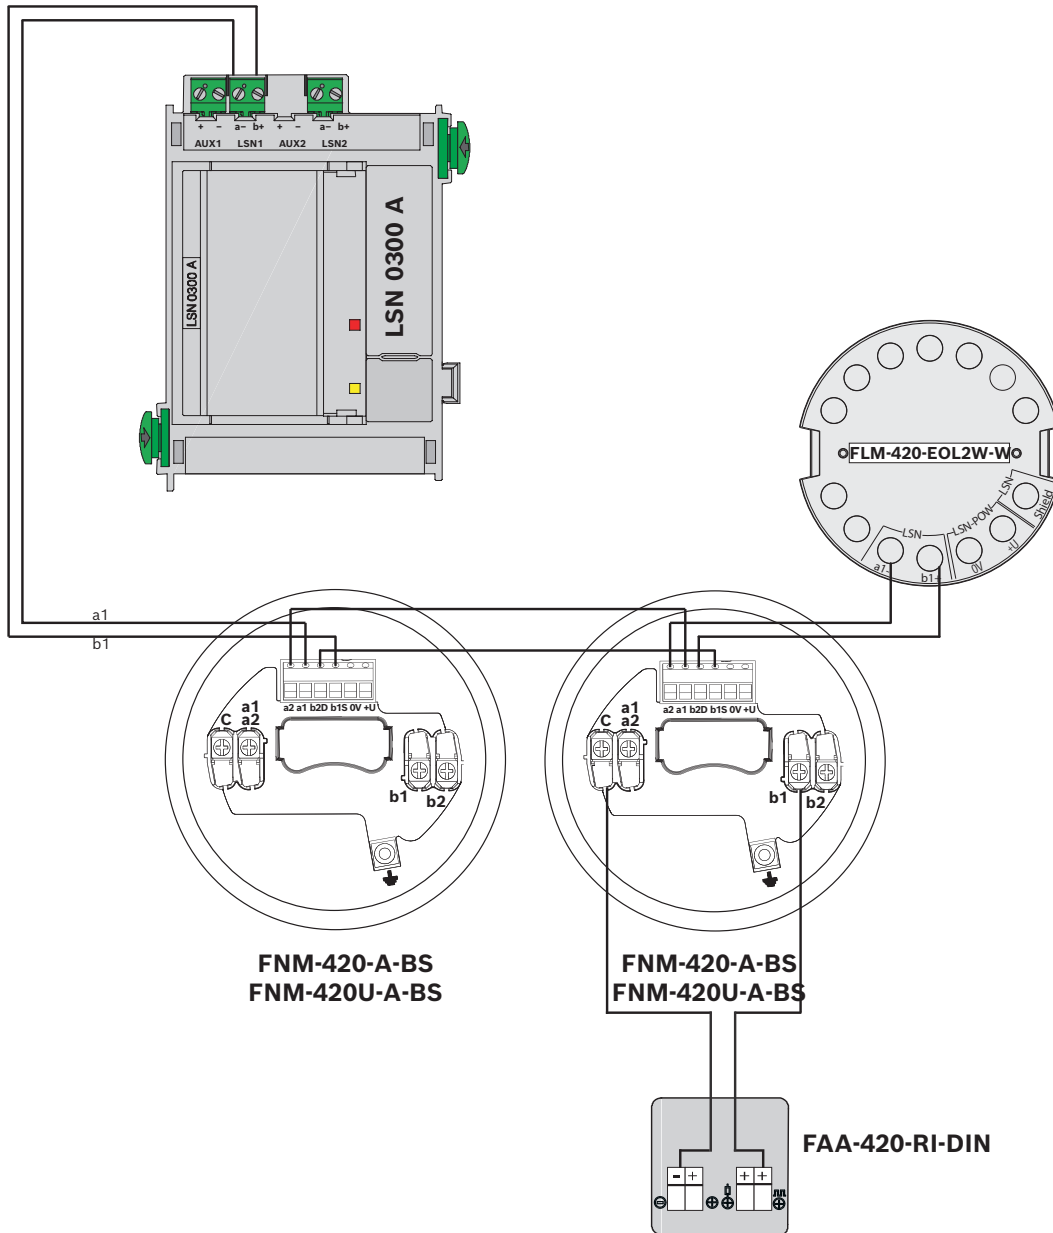





**FNM-420-A-BS**  
**FNM-420U-A-BS**



**ELS**

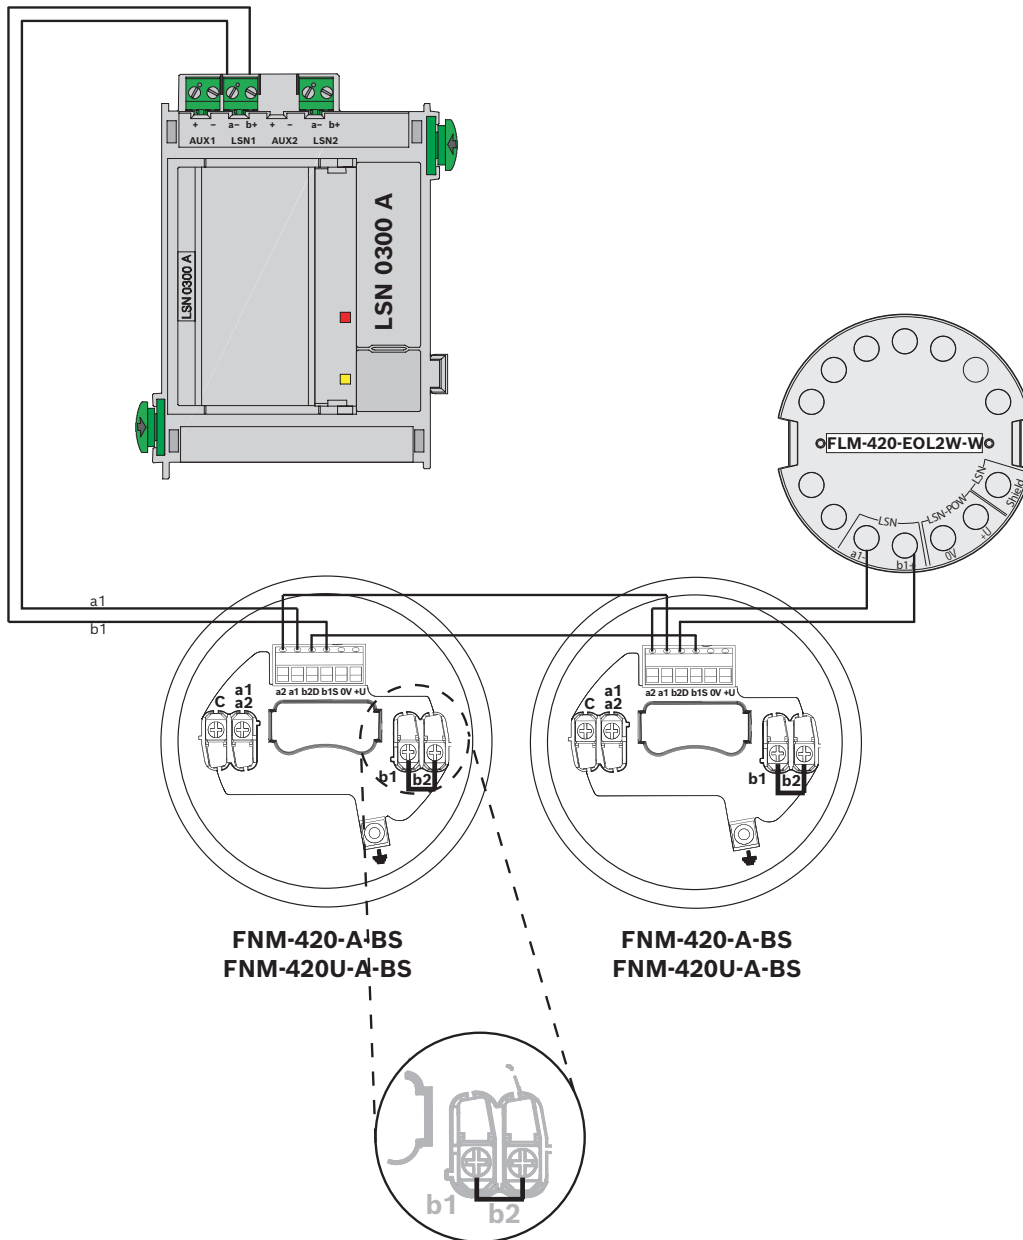


 


FAP-0520  
FAP-0520-P  
FAP-OC520  
FAP-OC-520-P




 ELS

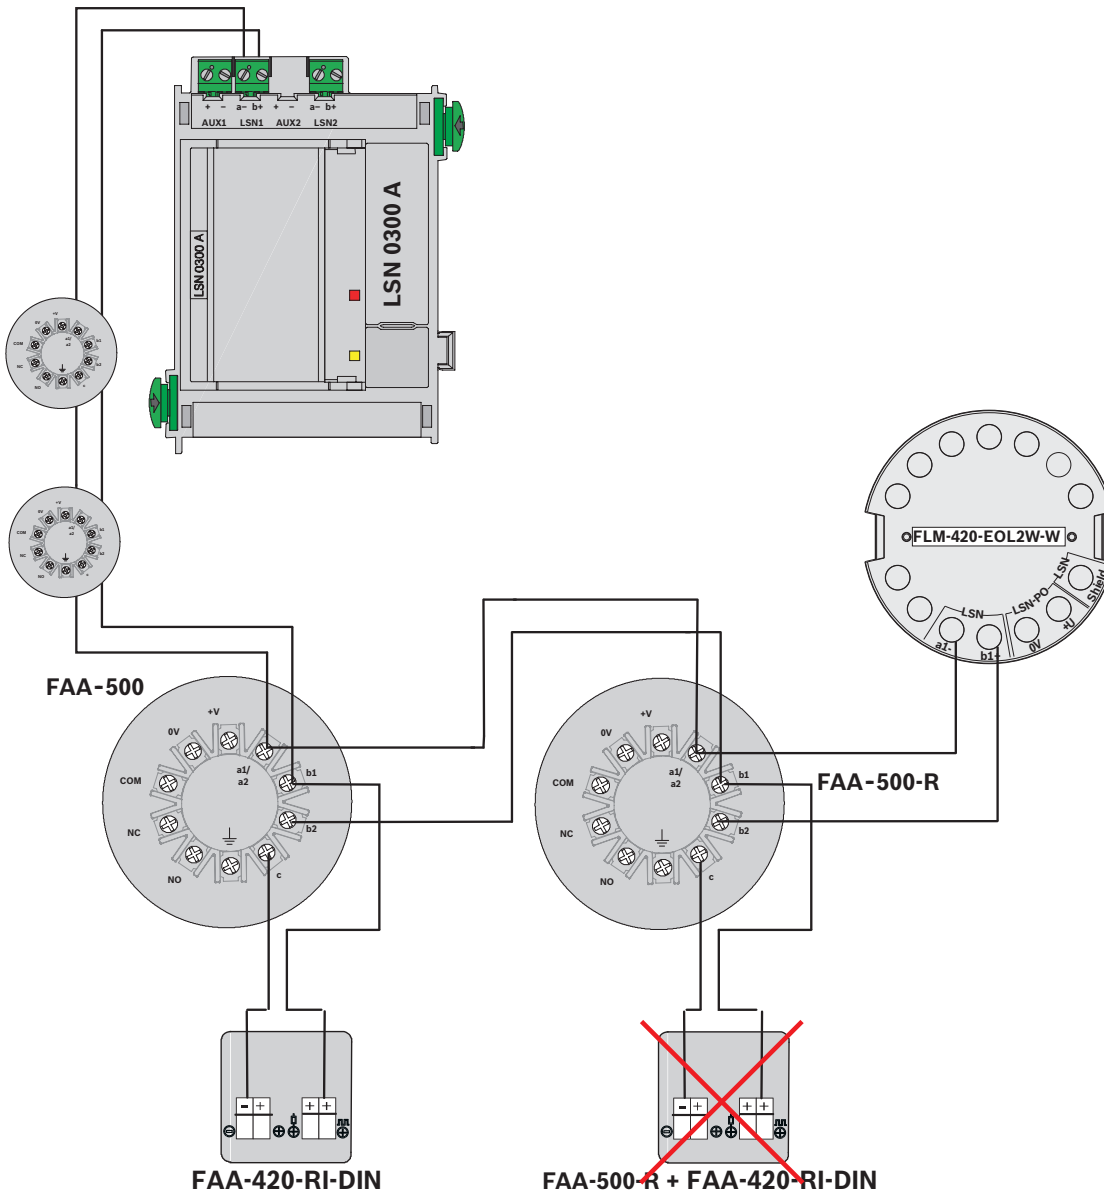





 **FAA-MSR-420**  
**FAP-425-O, FAP-425-O-R**  
**FAP-425-OT, FAP-425-OT-R**  
**FAP-425-T-R**  
**FAP-425-DO-R, FAP-425-DOT-R**  
**FAP-425-DOTC-R, FAP-425-DOTCO-R**



**ELS**

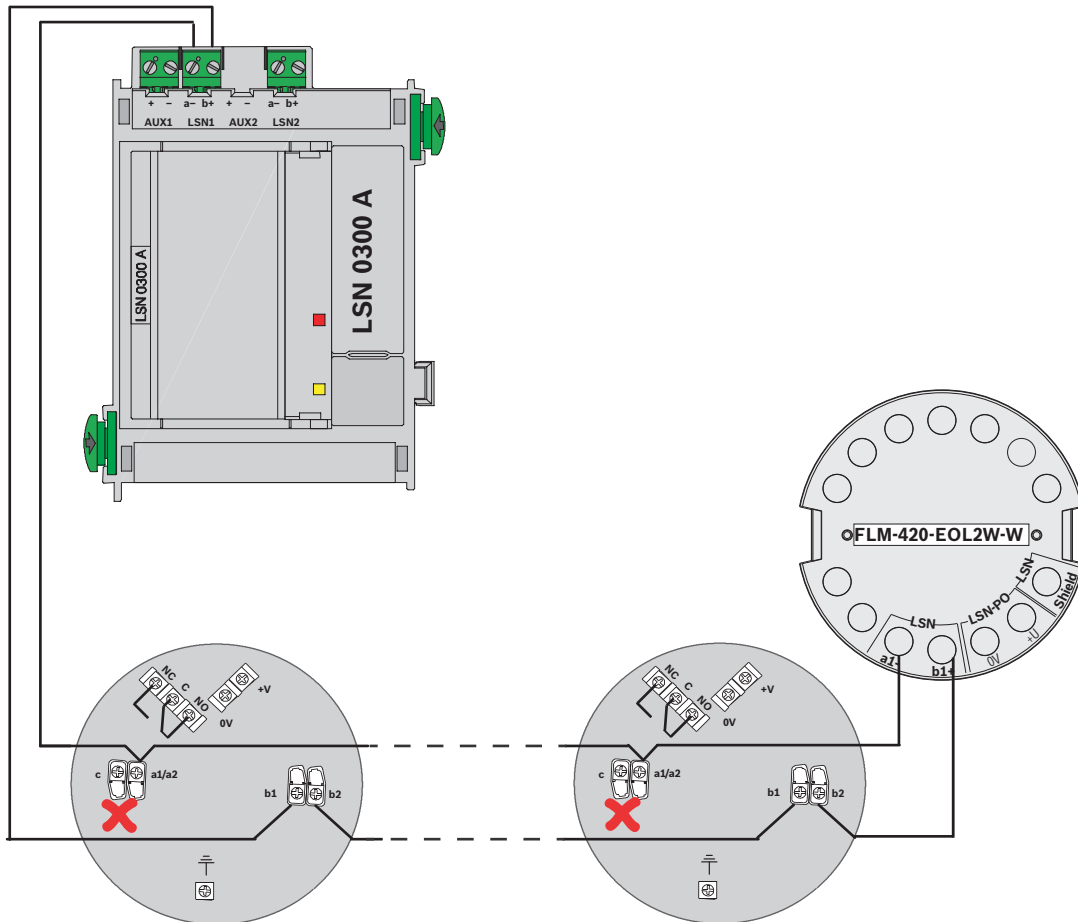


 


MS 400, MS 400 B  
 FAP-425-O, FAP-425-O-R  
 FAP-425-OT, FAP-425-OT-R  
 FAP-425-T-R  
 FAP-425-DO-R, FAP-425-DOT-R  
 FAP-425-DOTC-R, FAP-425-DOTCO-R




 ELS

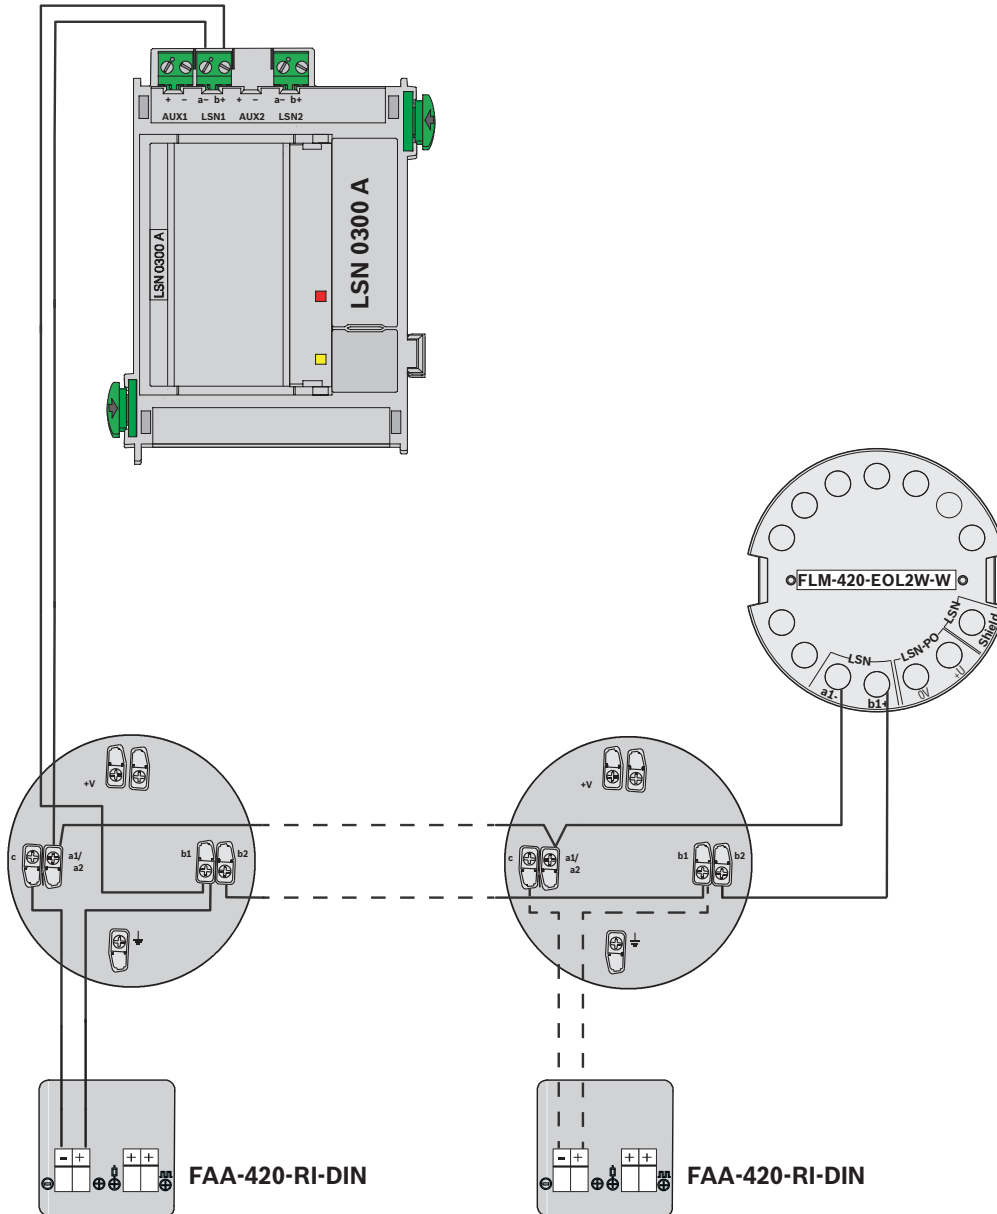





FAS-420 Series

 


ELS

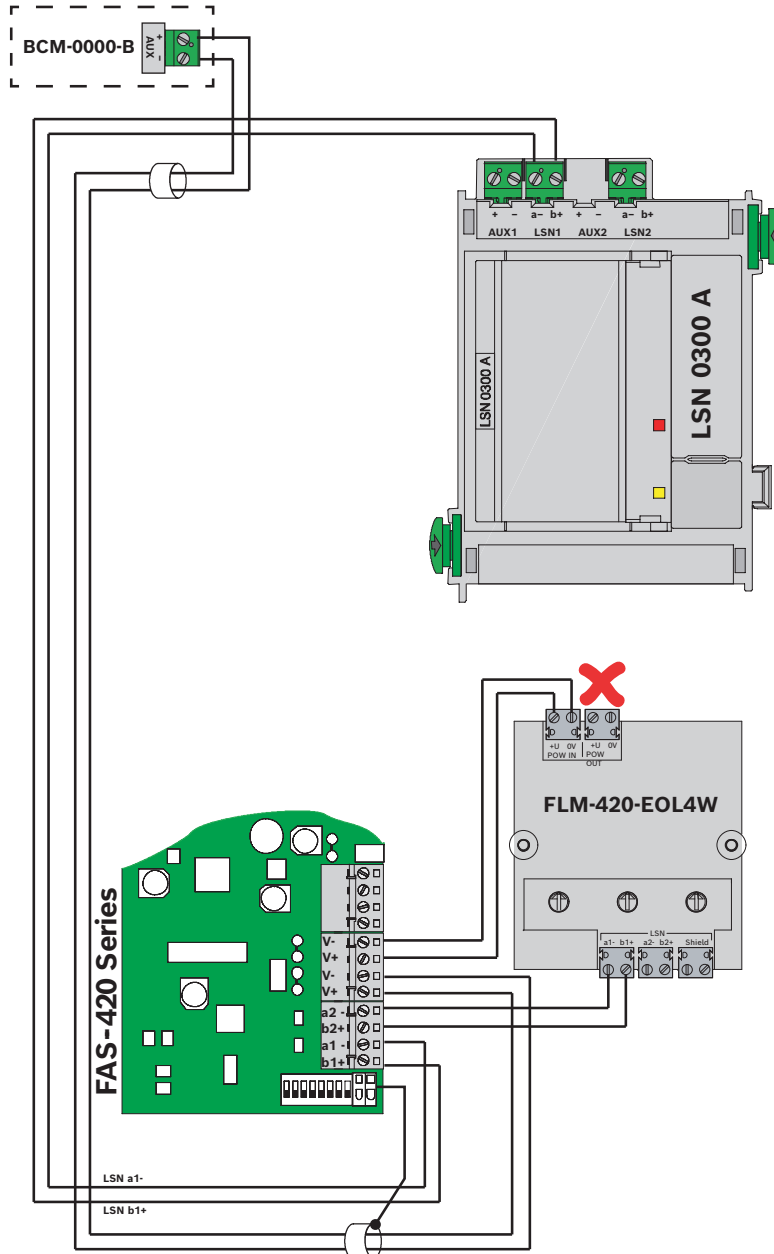


 




FAS-420 Series

 


ELS

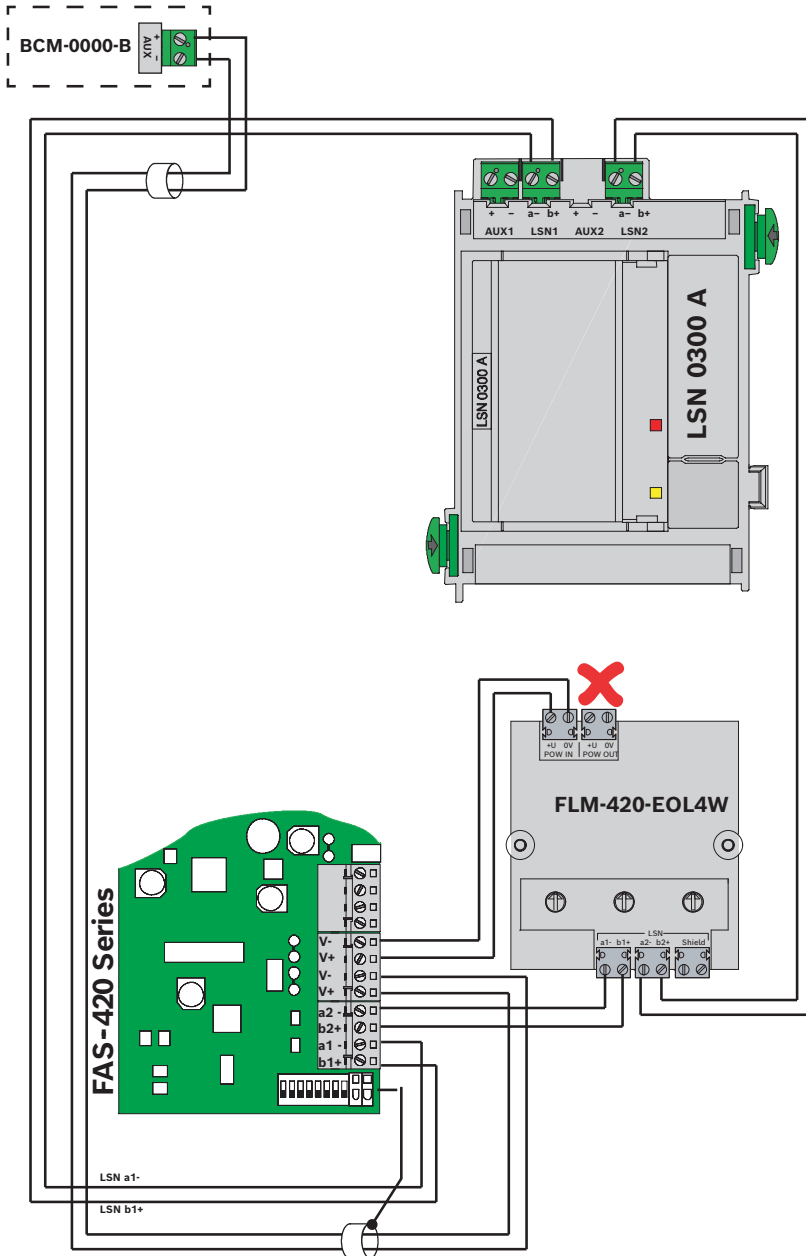




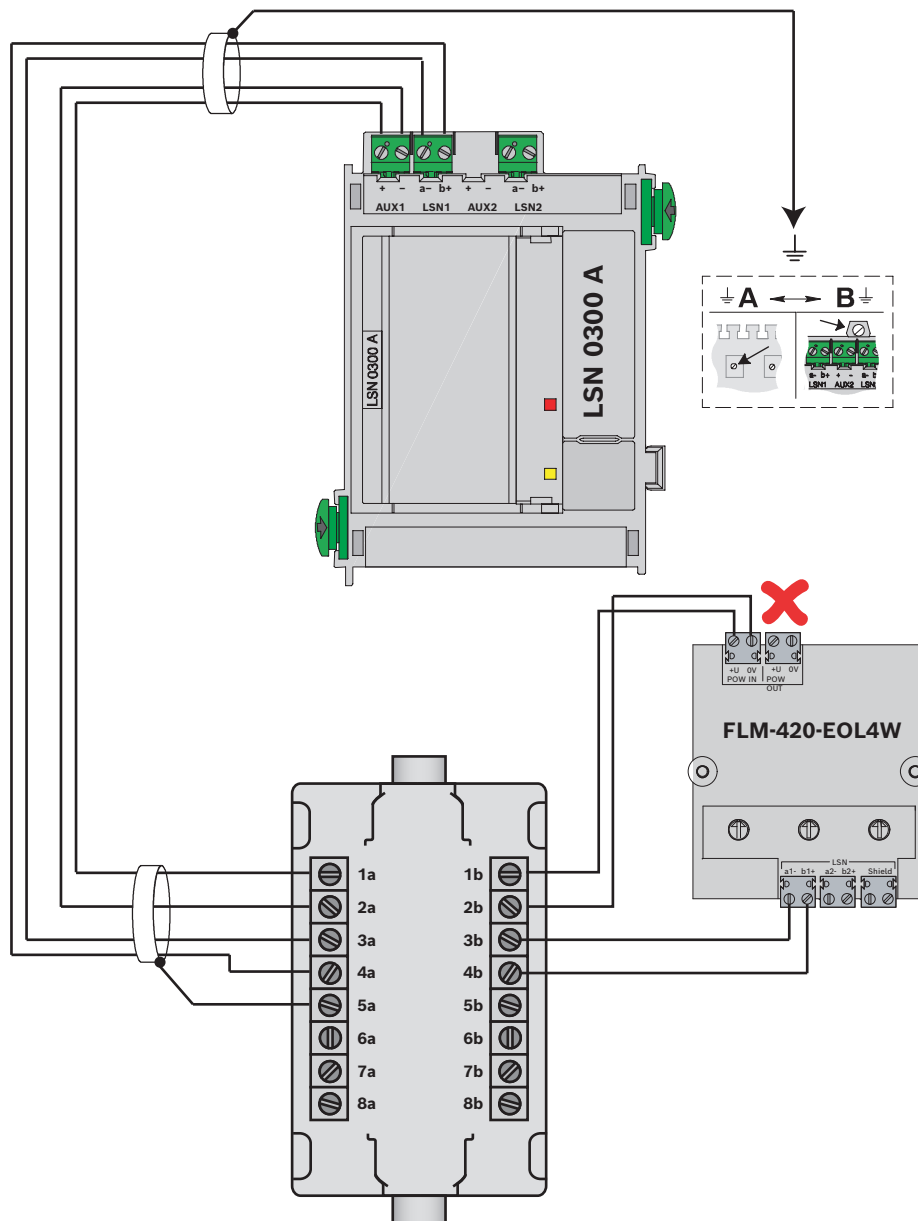  


 


FAS-420-TM Series

 


ELS

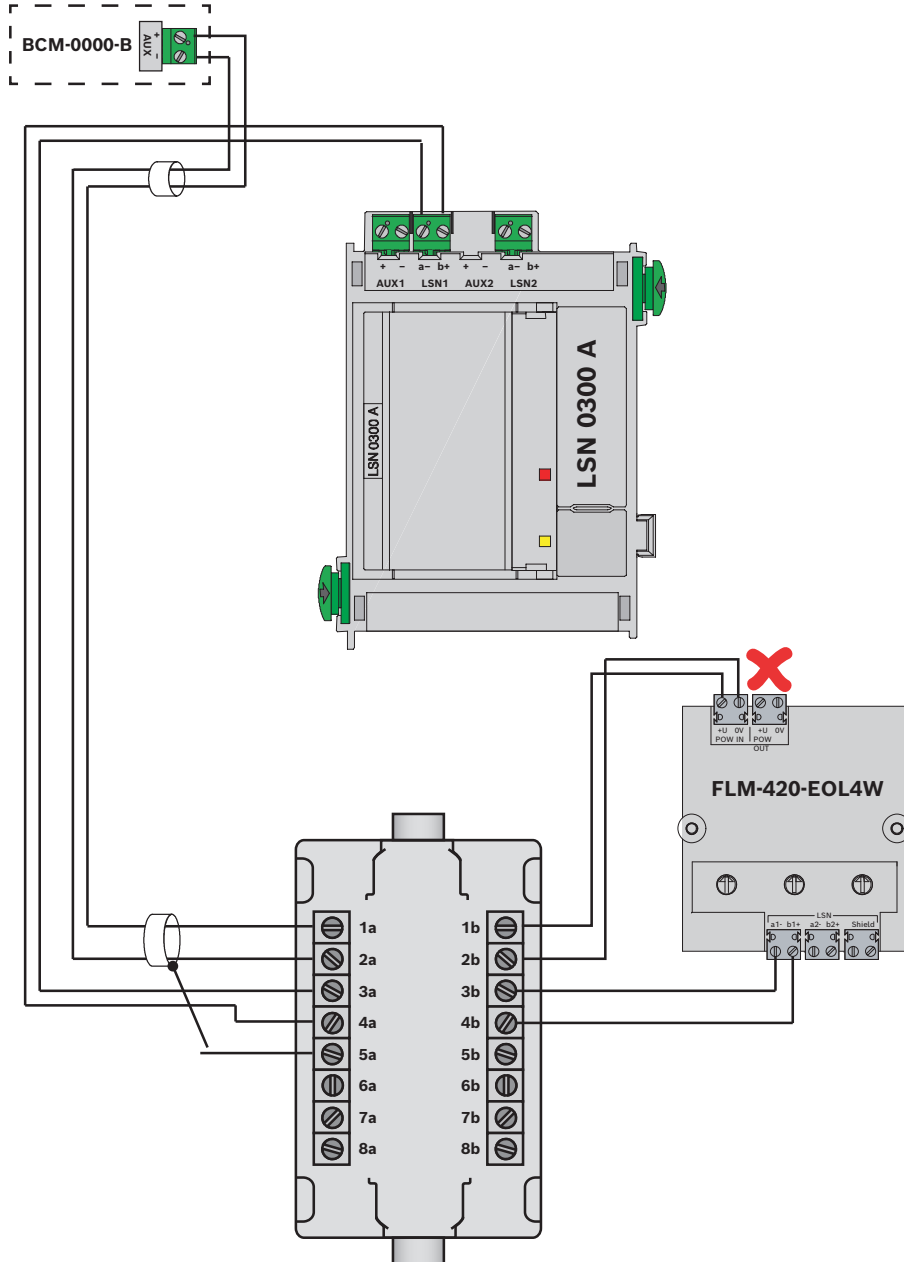


 


FAS-420-TM Series

 


ELS

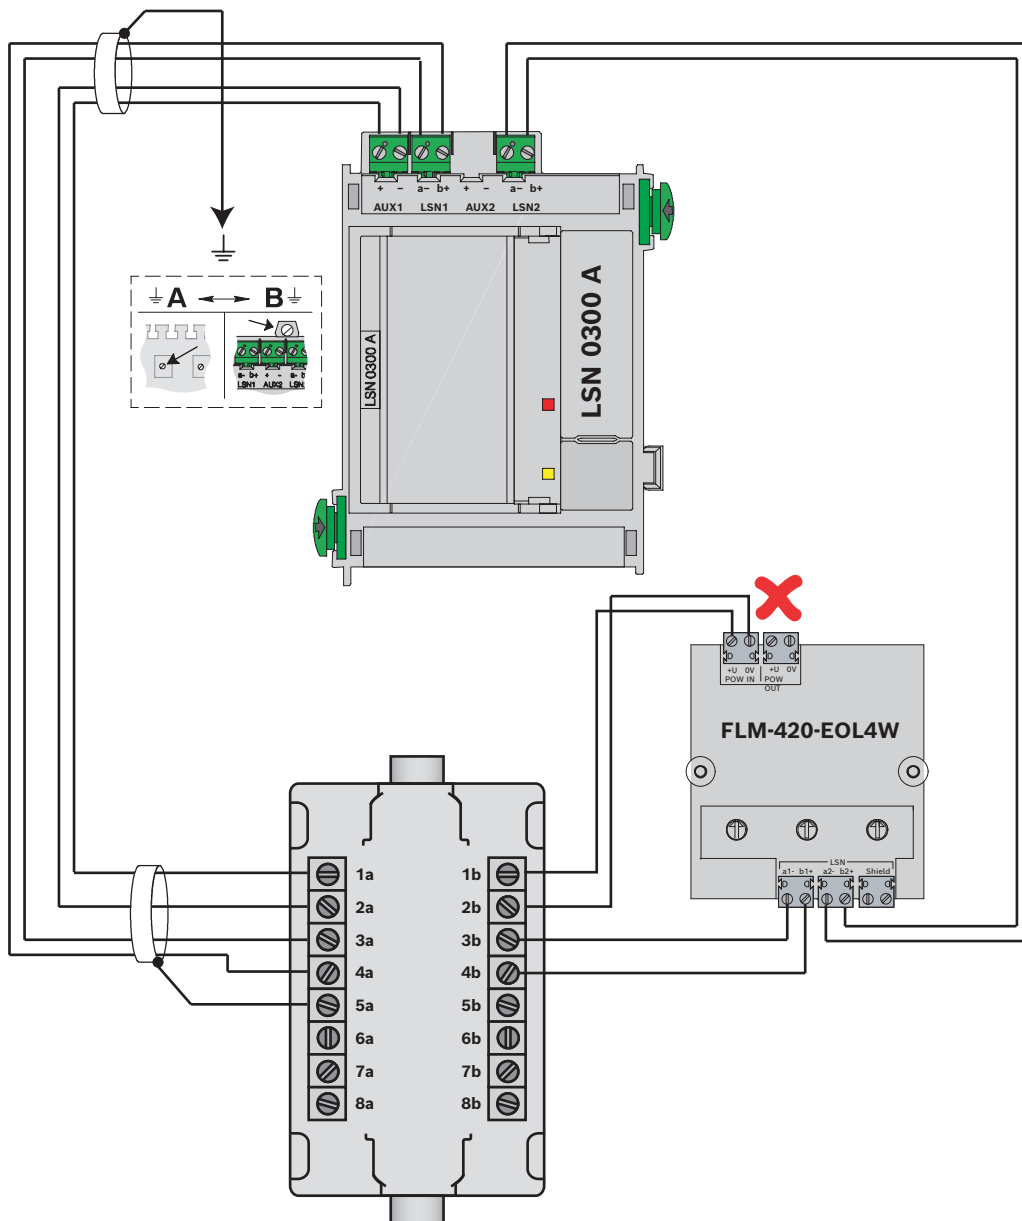


 


FAS-420-TM Series

 


ELS

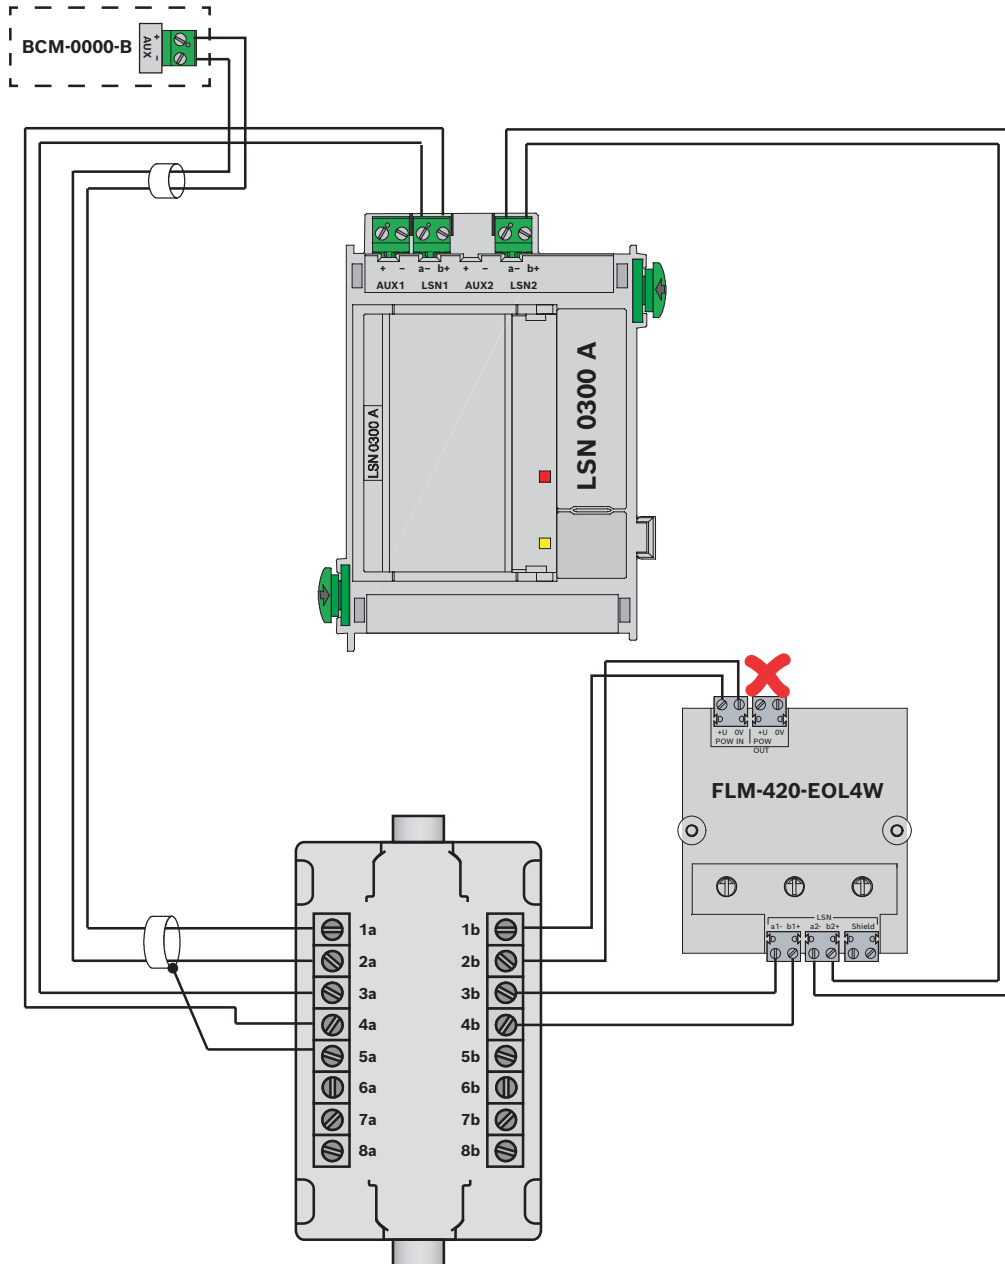


 


**FBF 100 LSN**

 


**ELS**

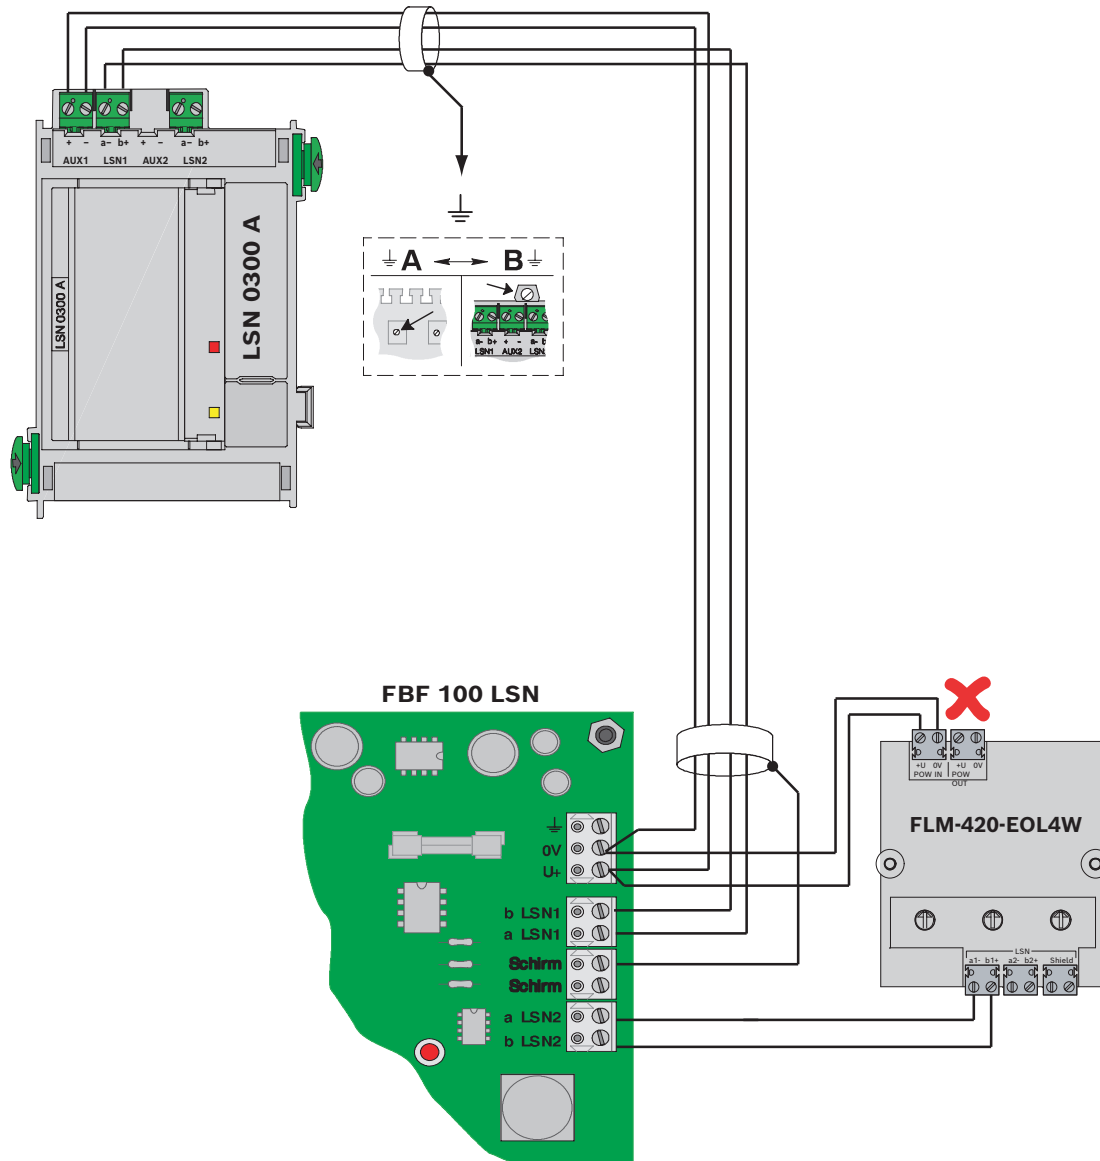


 

FBF 100 LSN

 


ELS

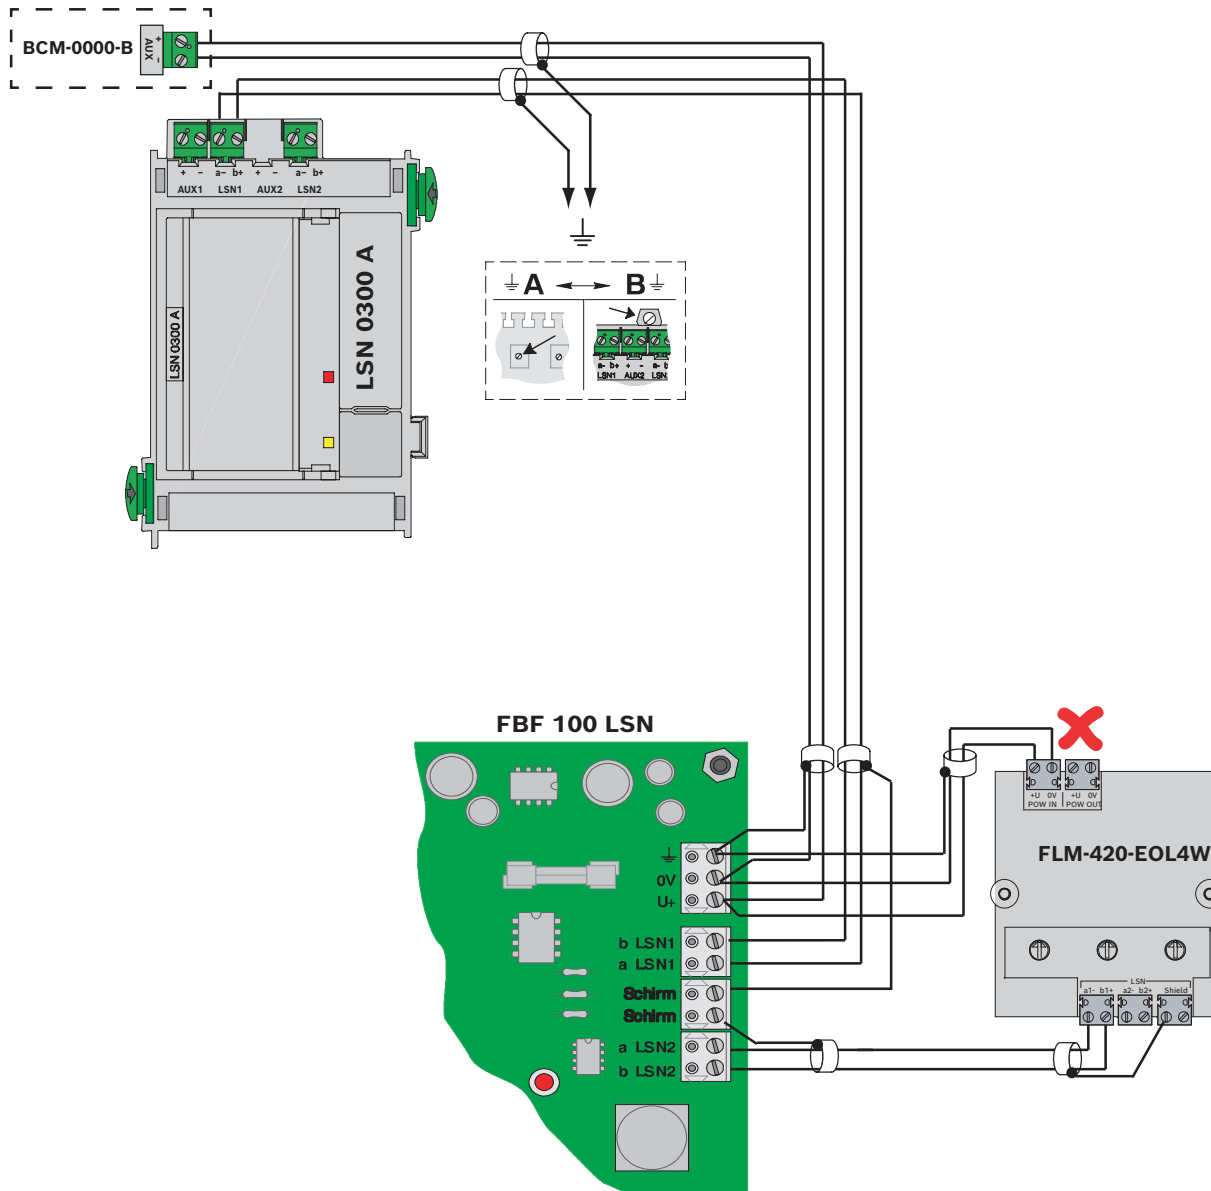





FBF 100 LSN

 


ELS

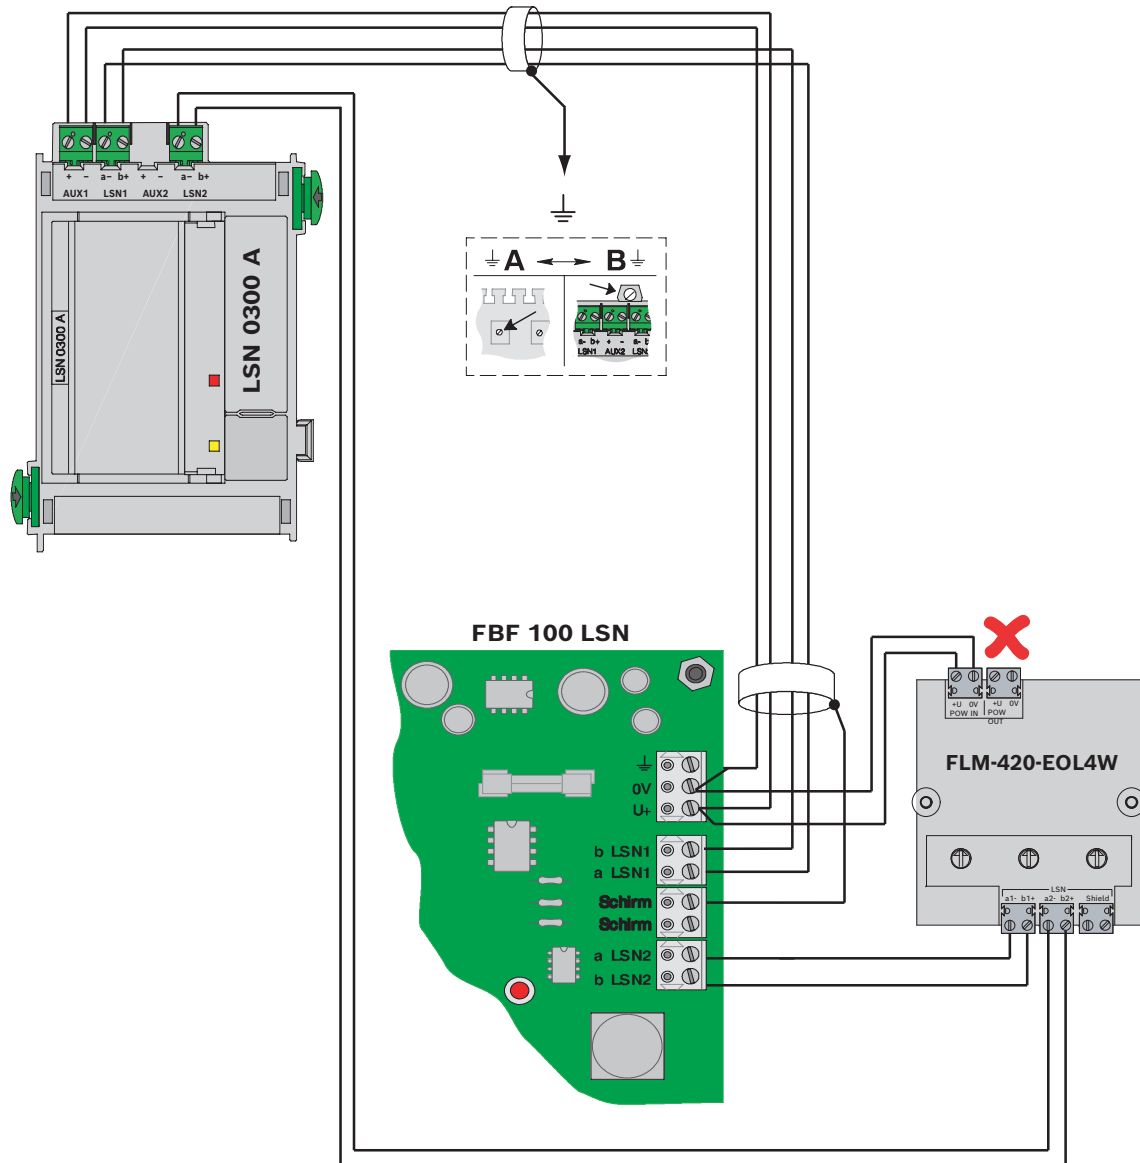


 


**FBF 100 LSN**

 


**ELS**

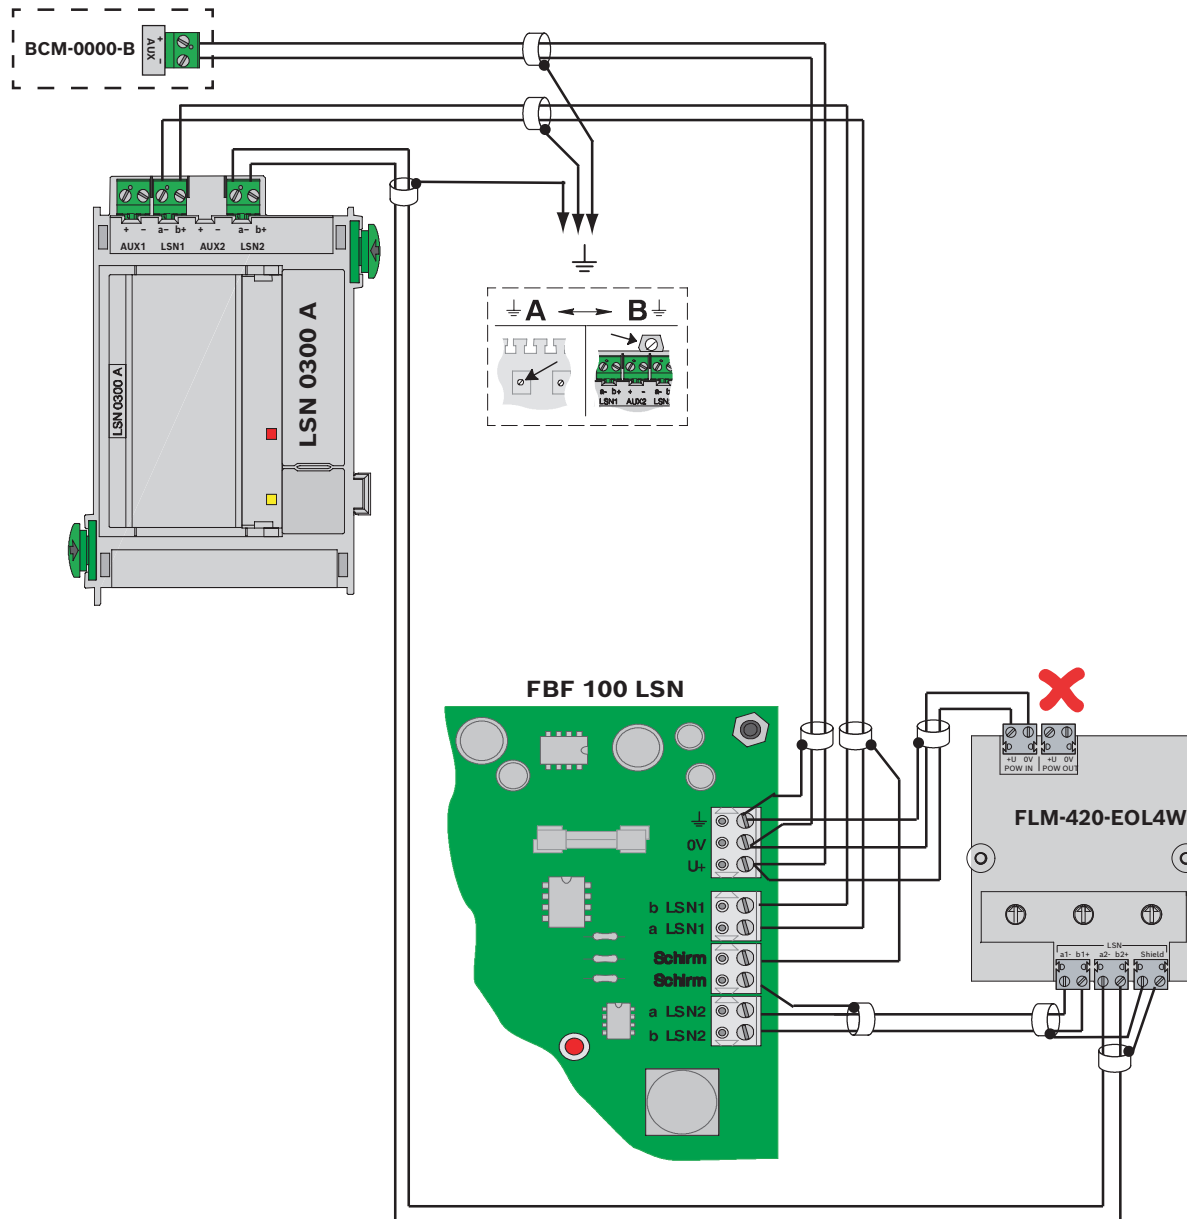





 


ATB 420 LSNi

 


ELS

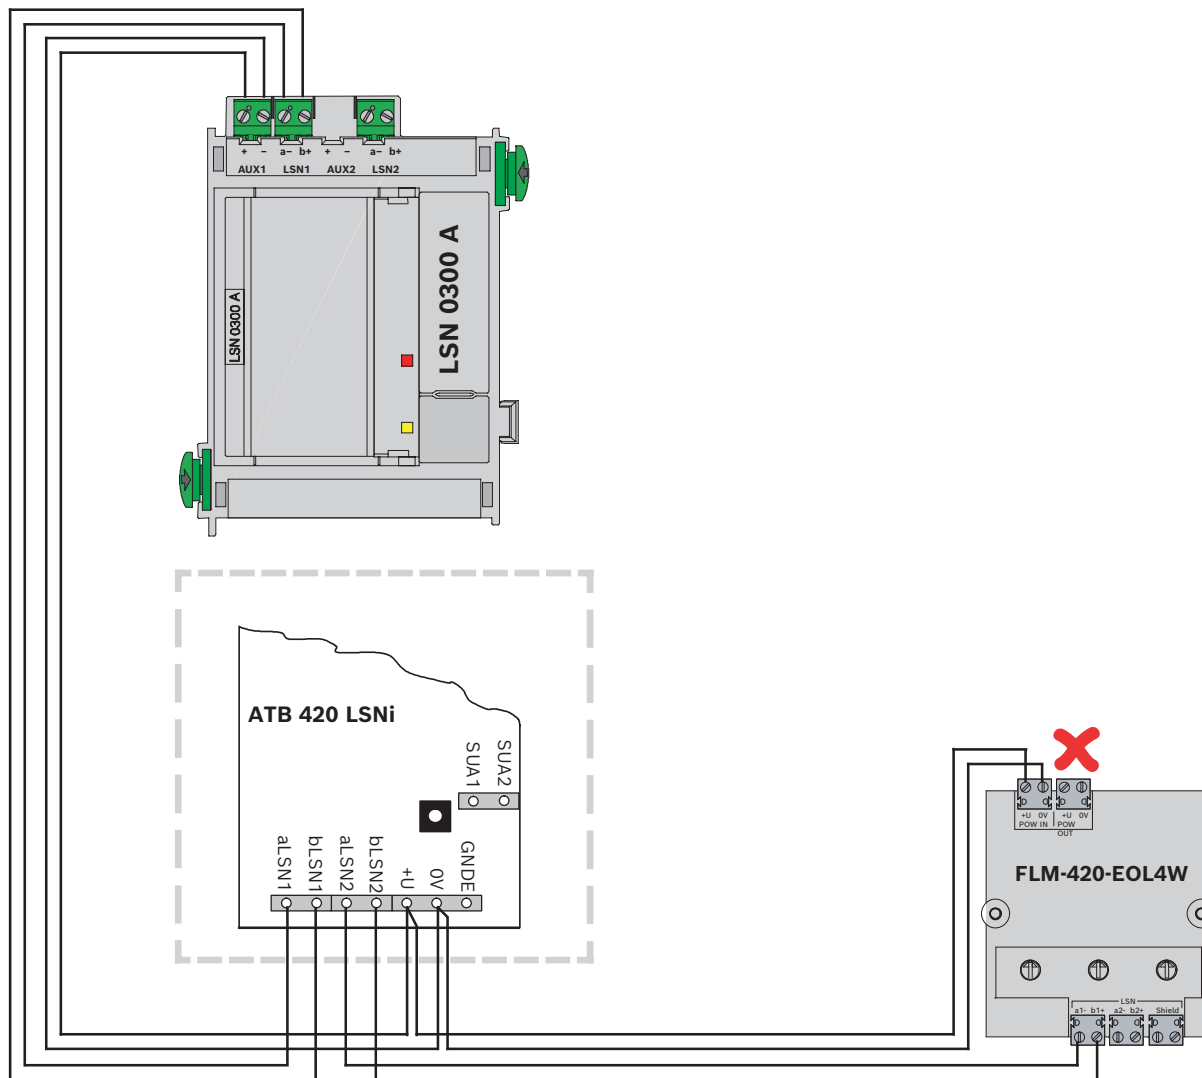


  


ATB 420 LSNi

 


ELS

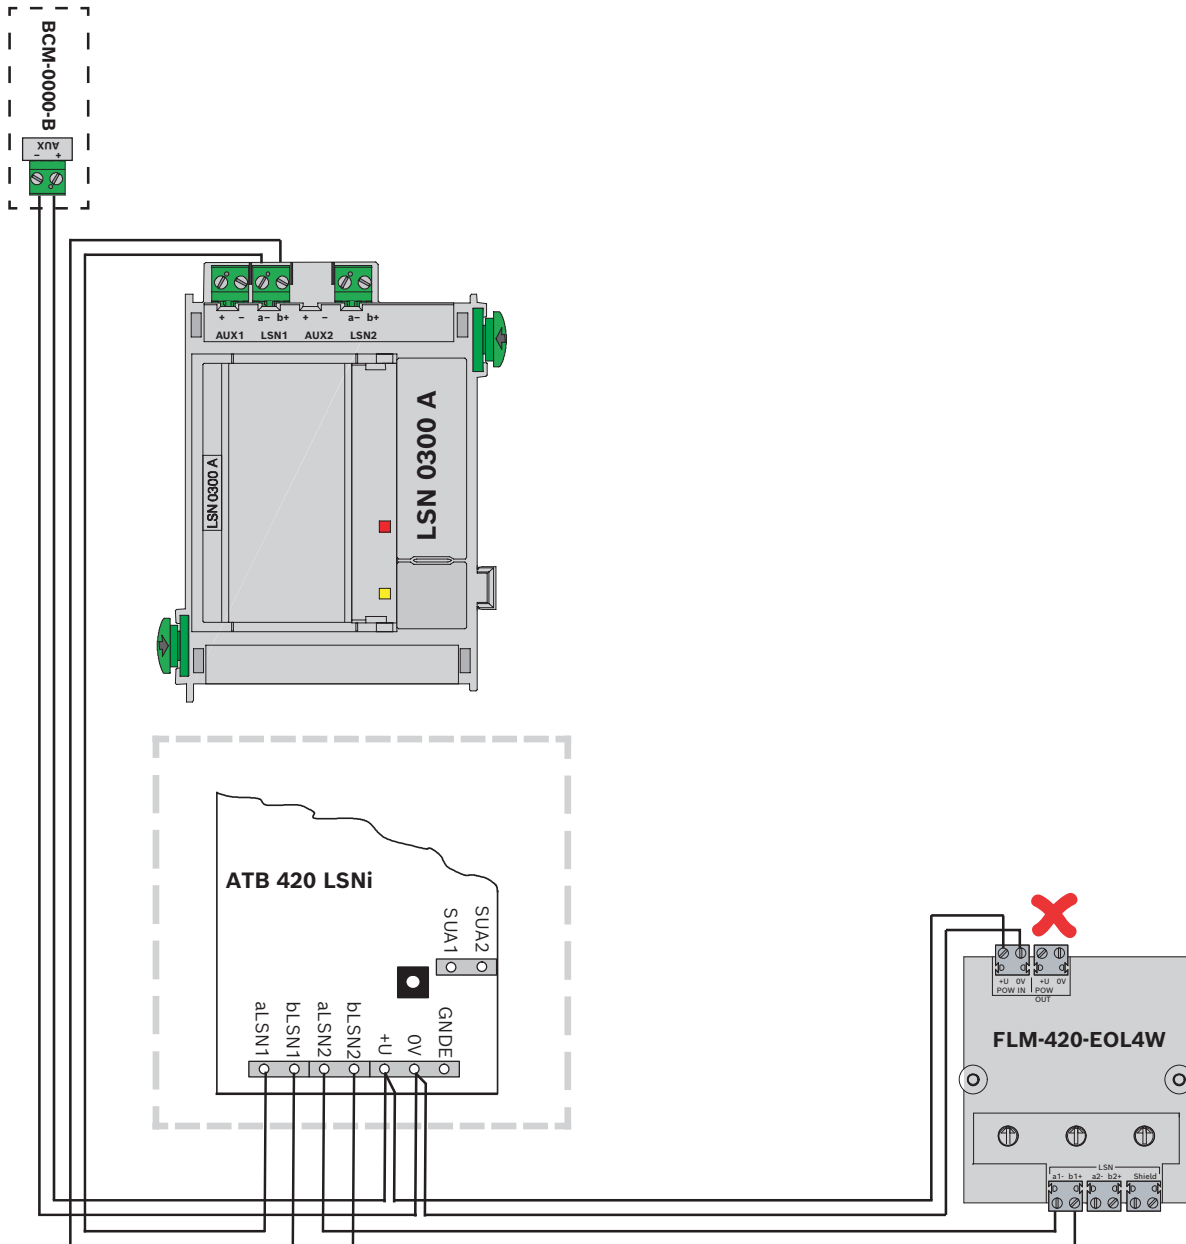


 


ATB 420 LSNi

 


ELS

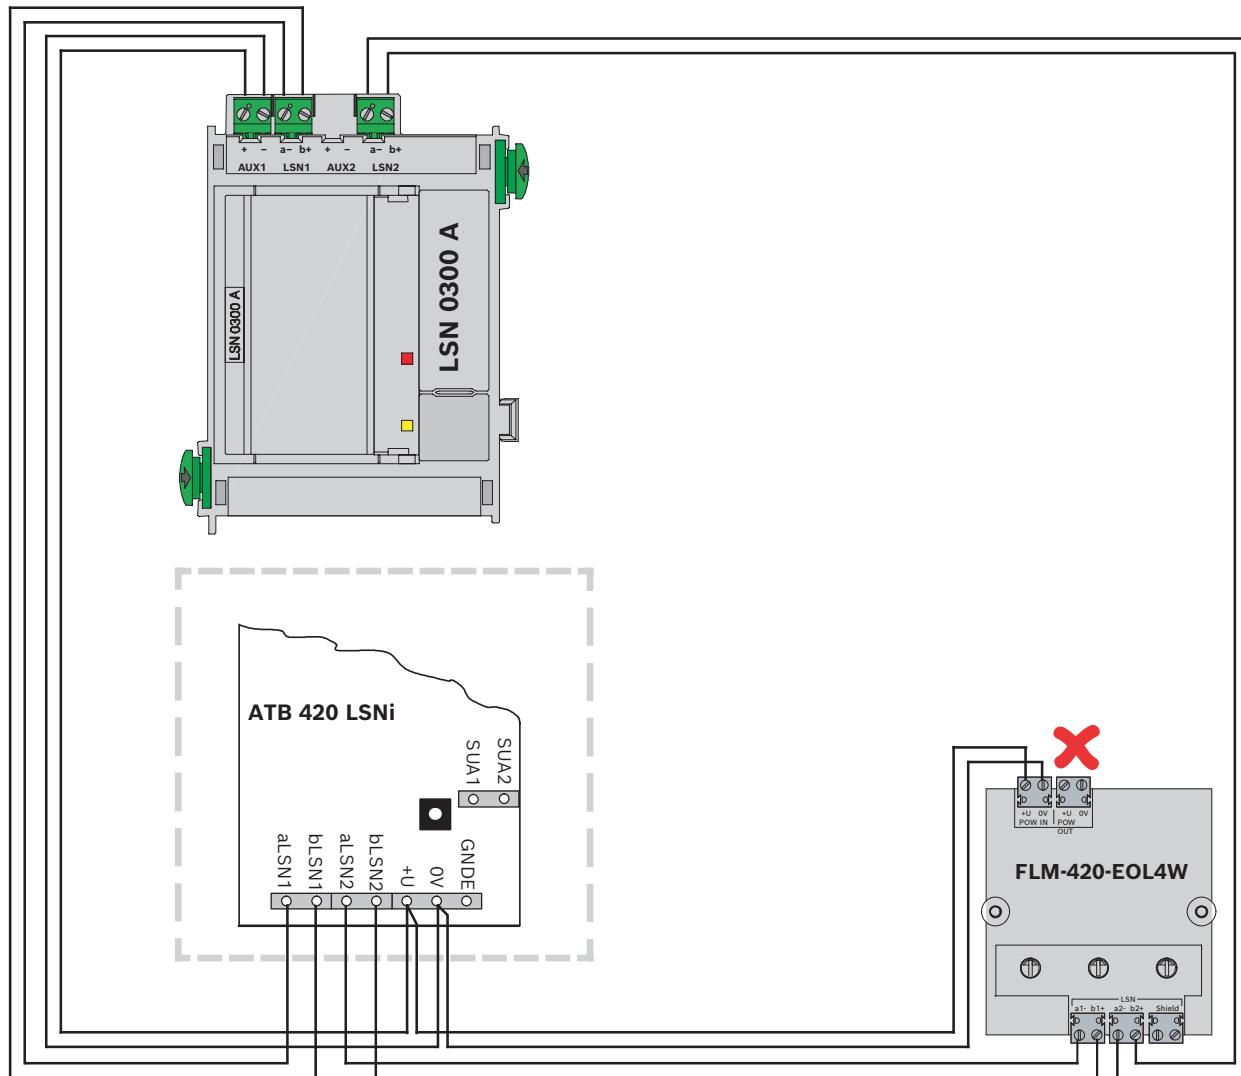


 

ATB 420 LSNi

 


ELS

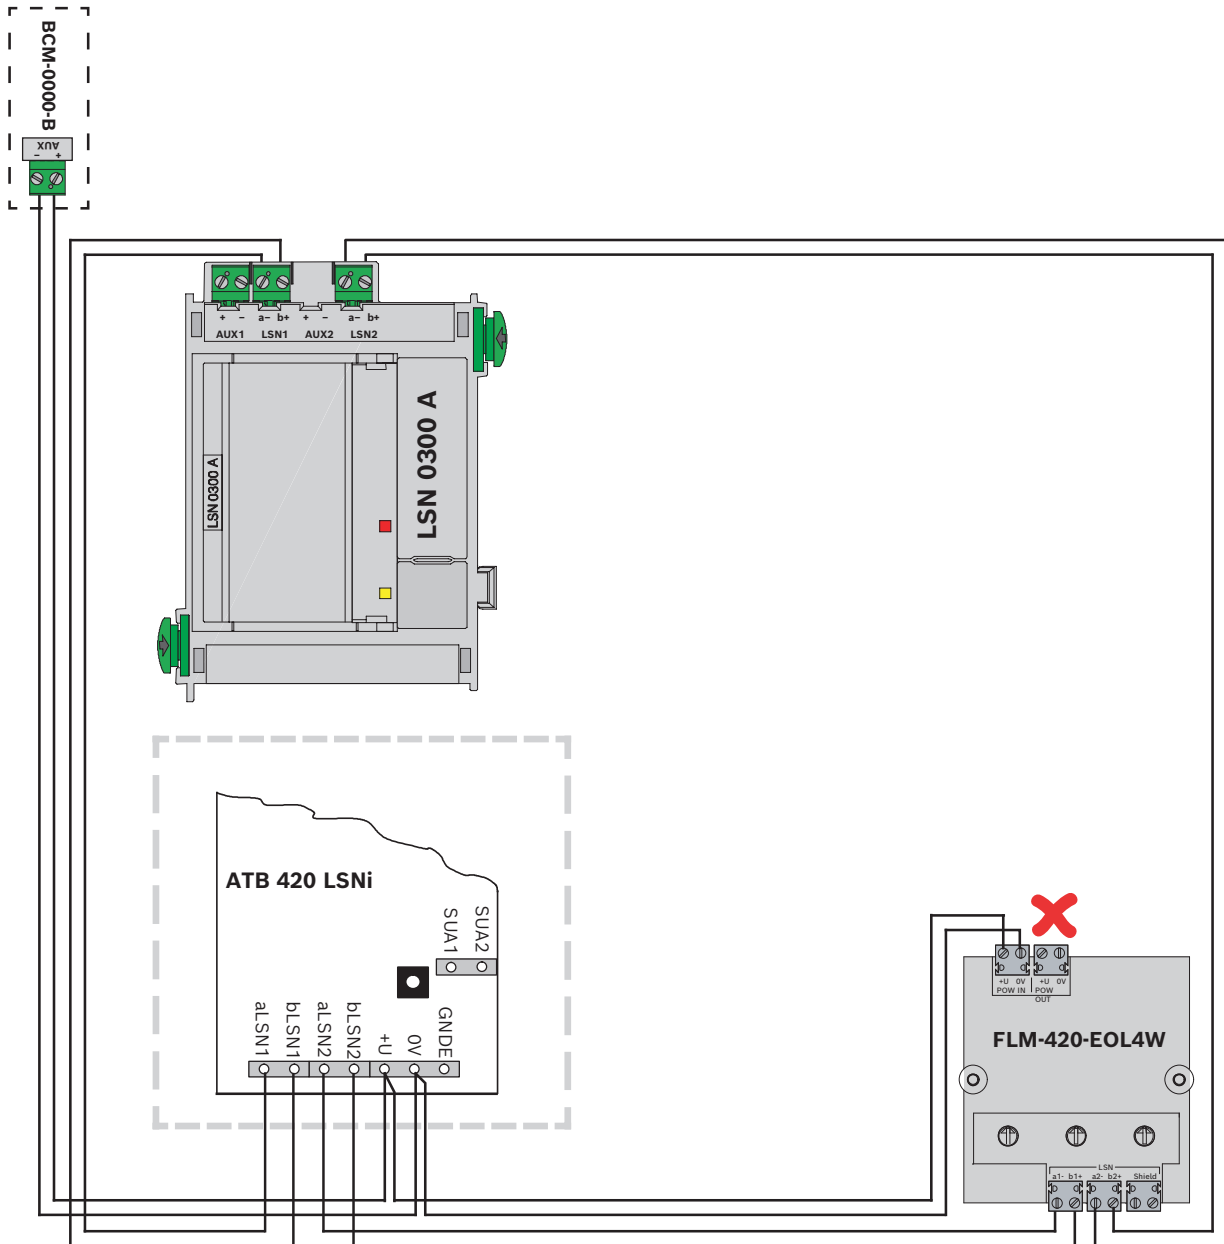




**BAT 100 LSN  
ATG 420 LSNi**

 


**ELS**

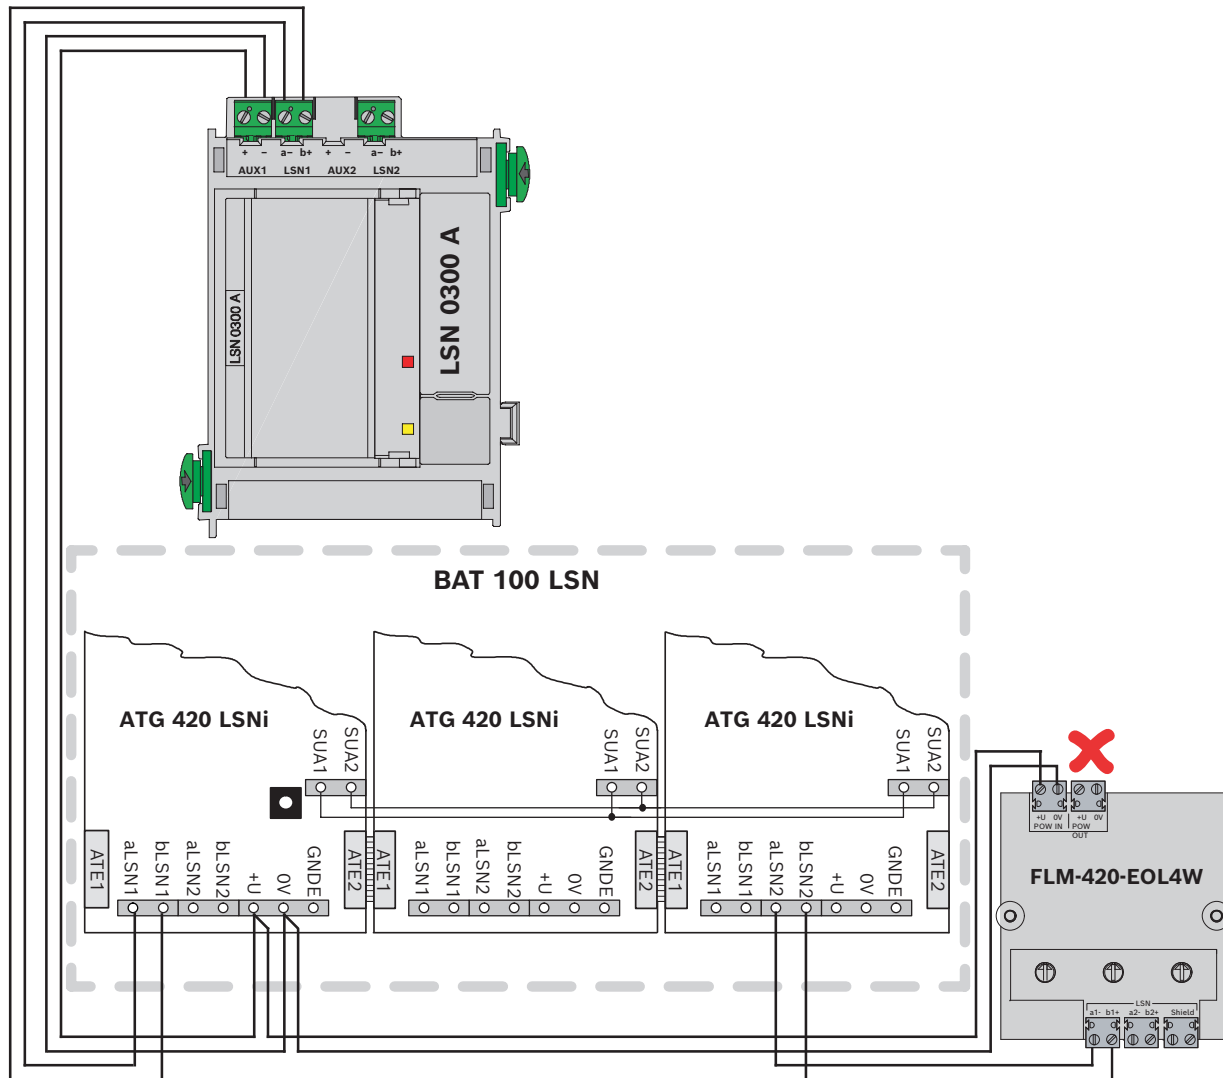




BAT 100 LSN  
ATG 420 LSNi

 


ELS

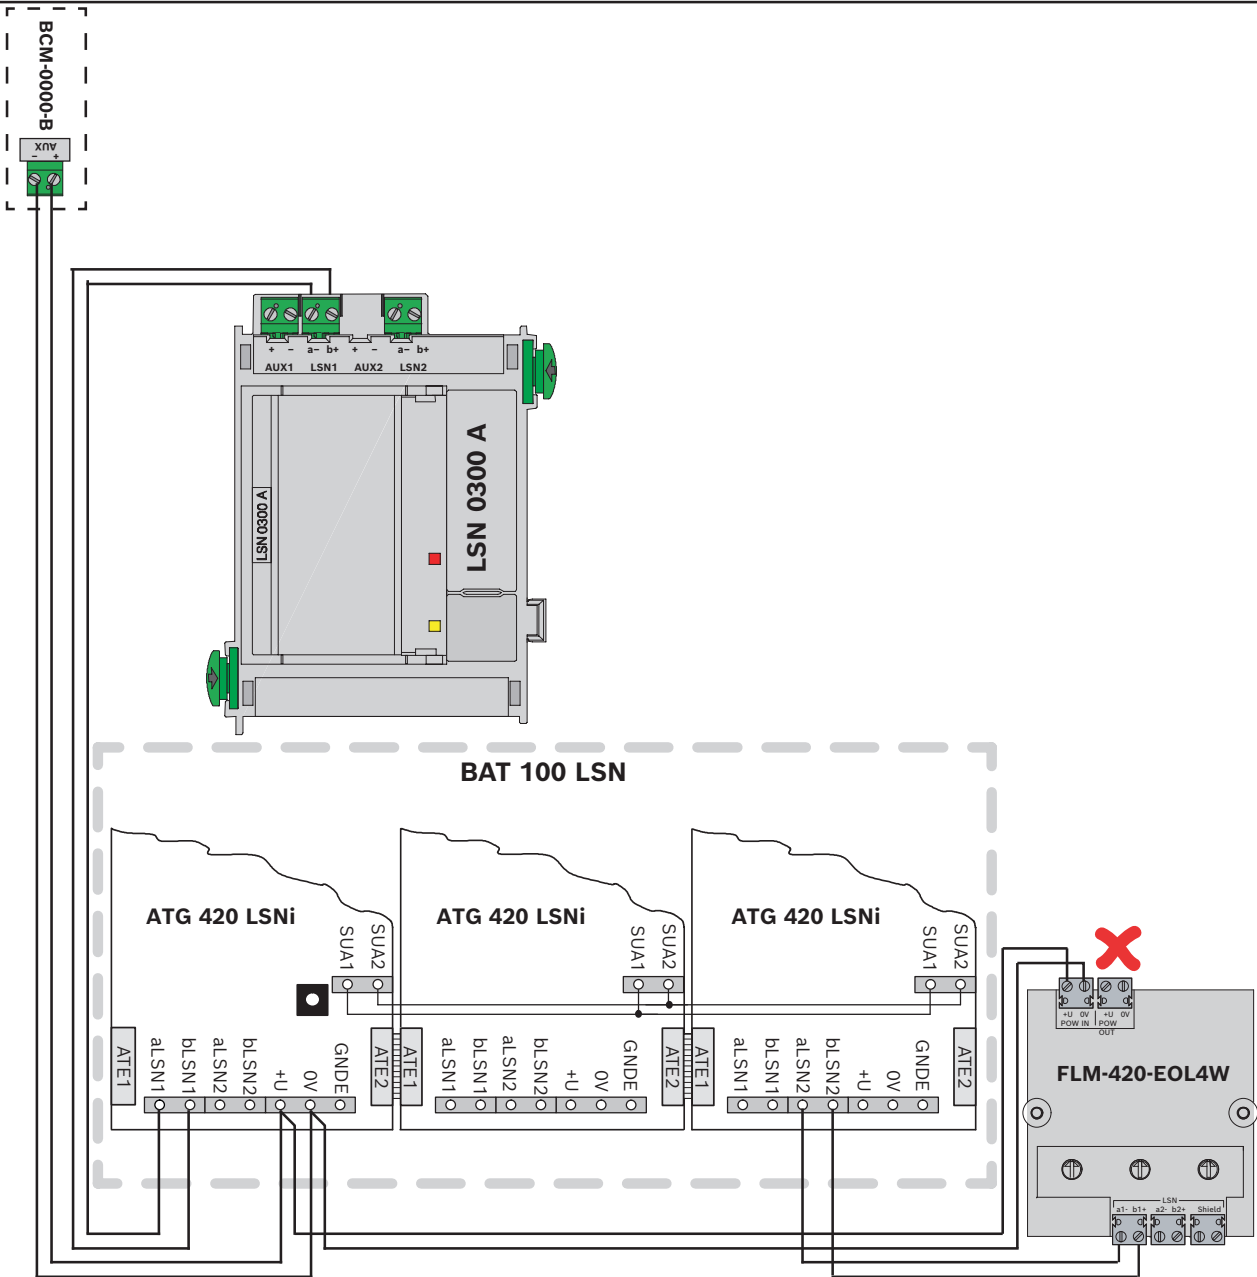




**BAT 100 LSN  
ATG 420 LSNi**

 


**ELS**

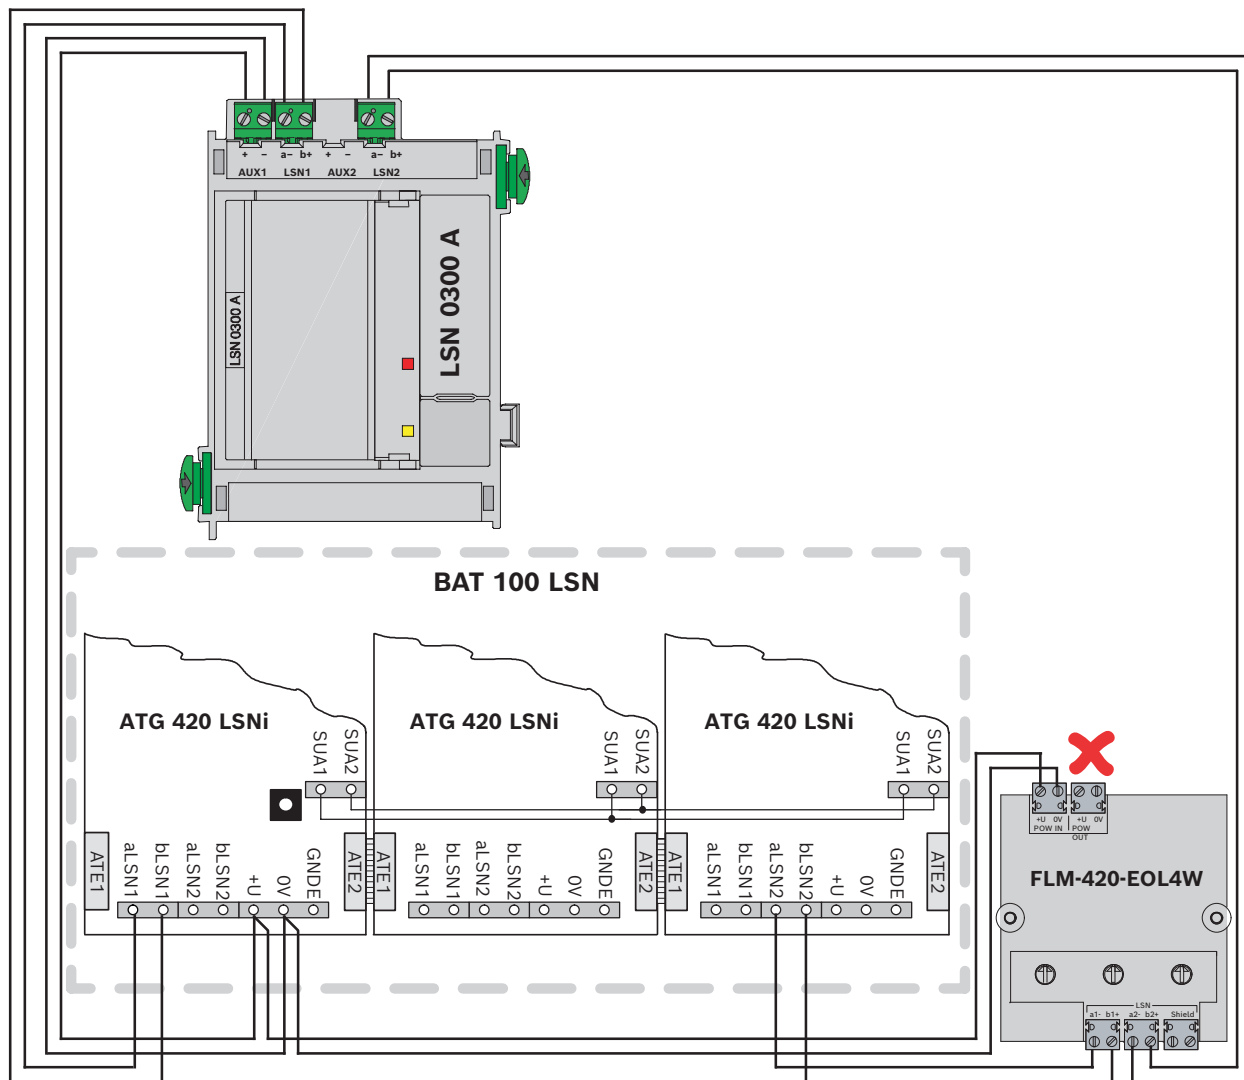




BAT 100 LSN  
ATG 420 LSNi

 

ELS

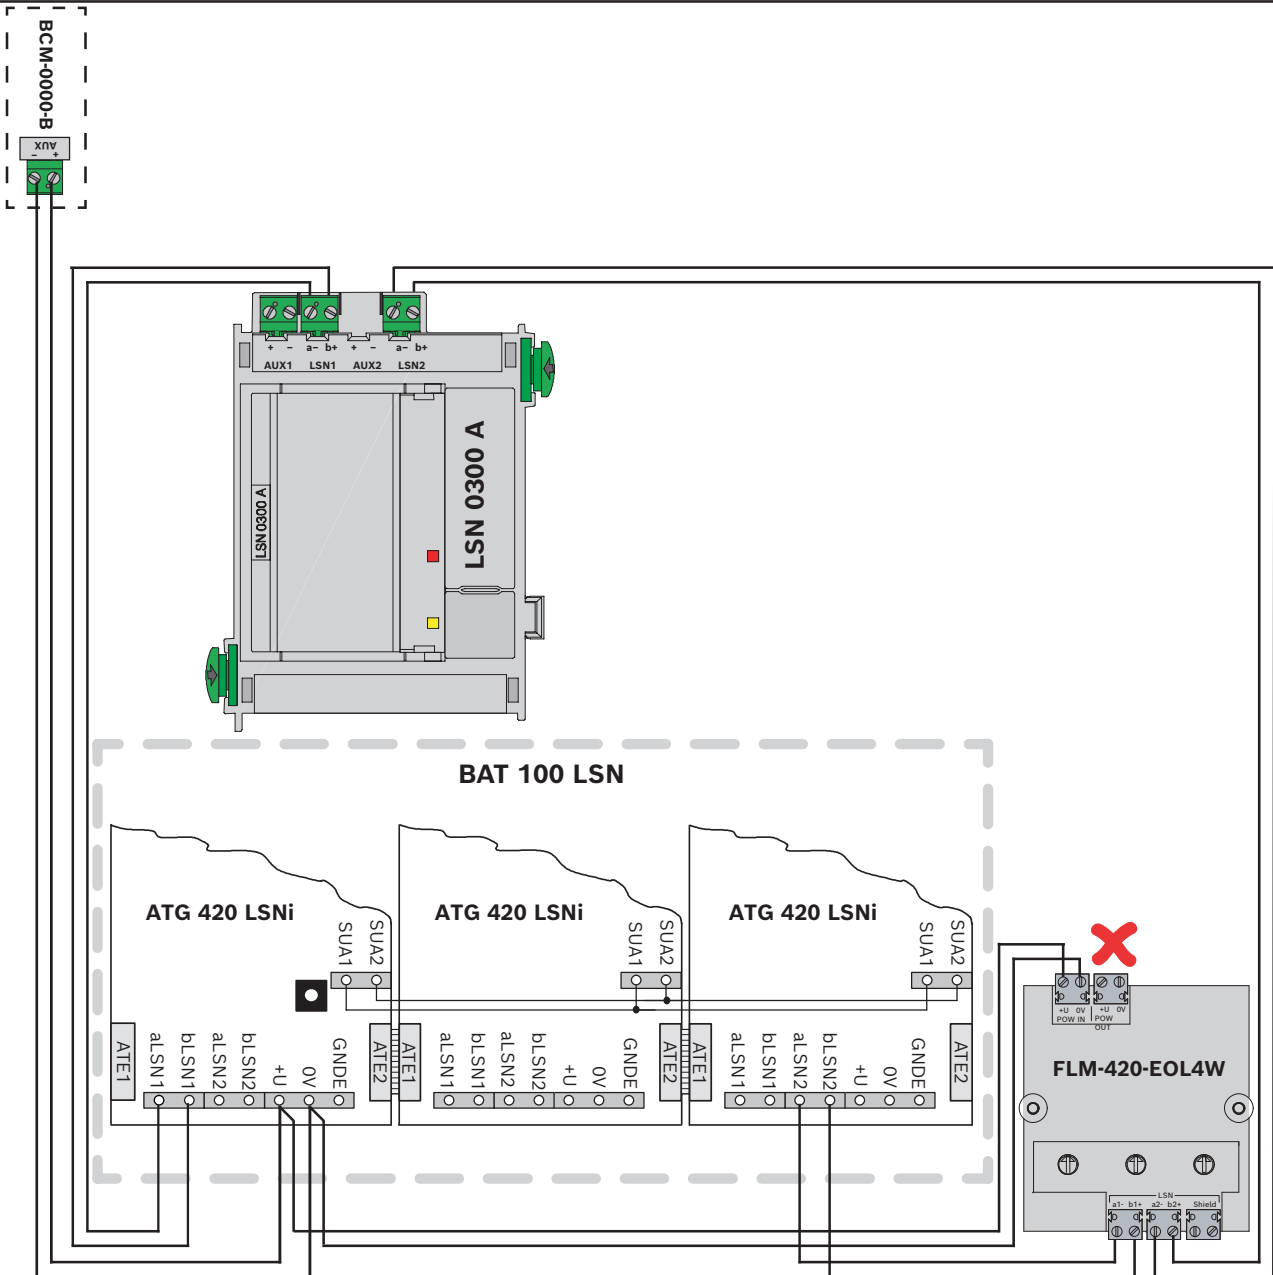






**FNX-425U-WFWH**  
**FNX-425U-RFWH**  
**FNX-425U-WFRD**  
**FNX-425U-RFRD**



**ELS**

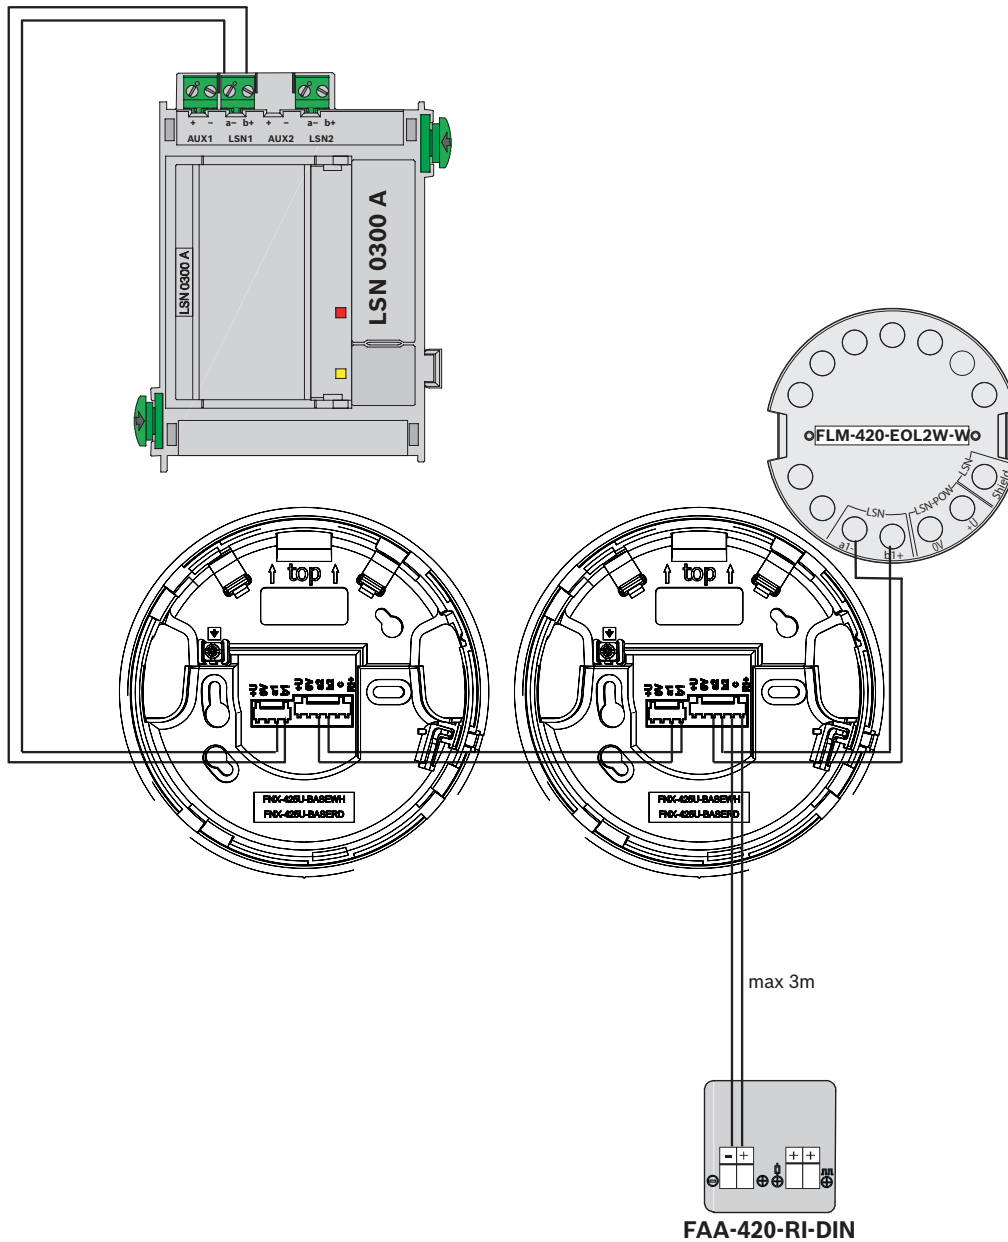





FNX-425U-WFWH  
 FNX-425U-RFWH  
 FNX-425U-WFRD  
 FNX-425U-RFRD

+ FNX-425U-COVWH  
 FNX-425U-COVRD




ELS

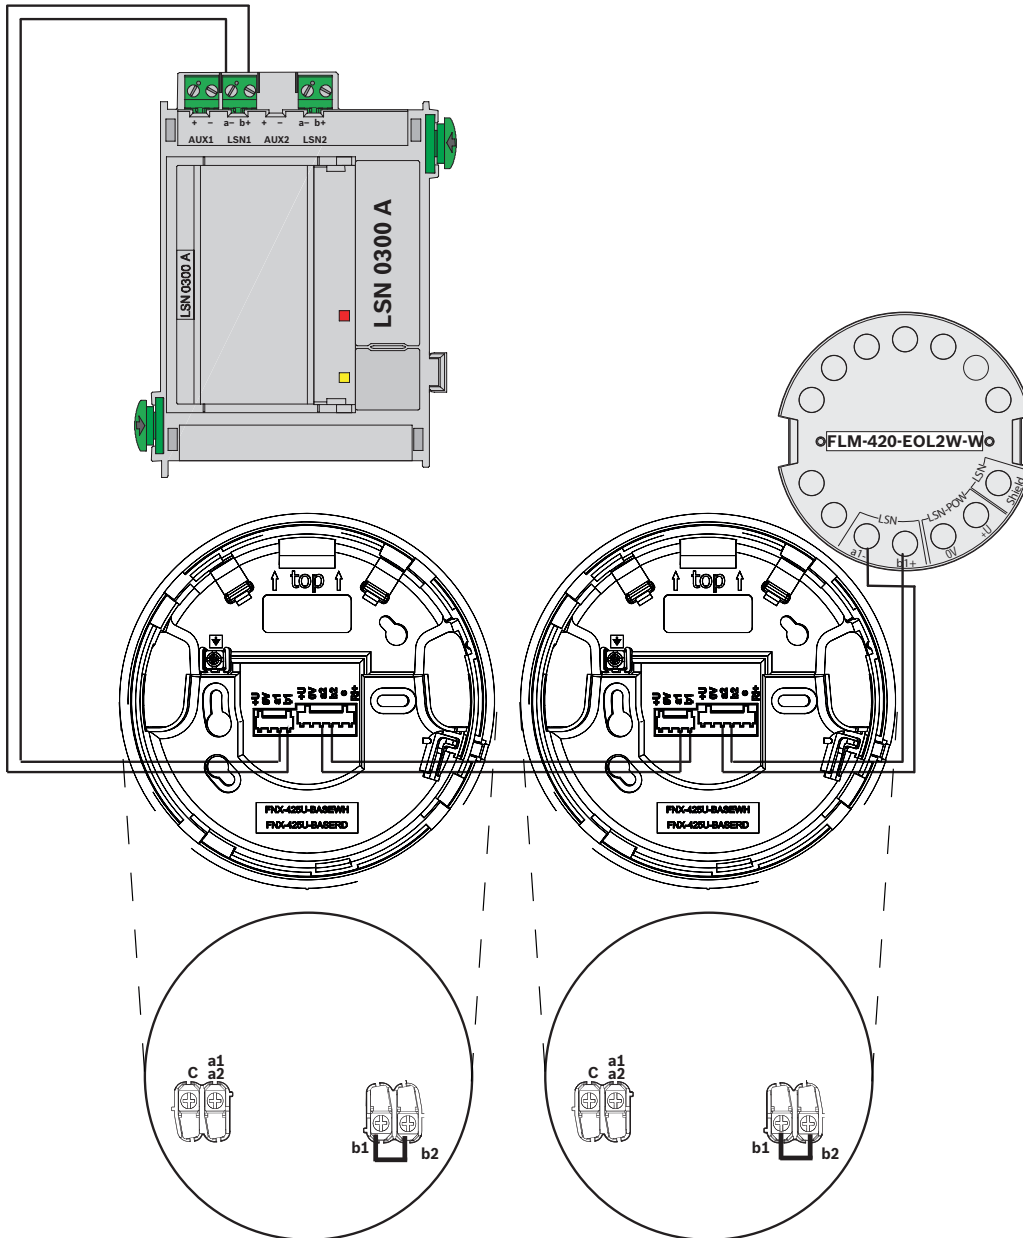

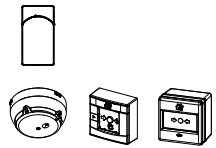


**FWI-270**

 **FDOOT271-O**  
**FDM275-O**  
**FDM273-O**




**ELS**

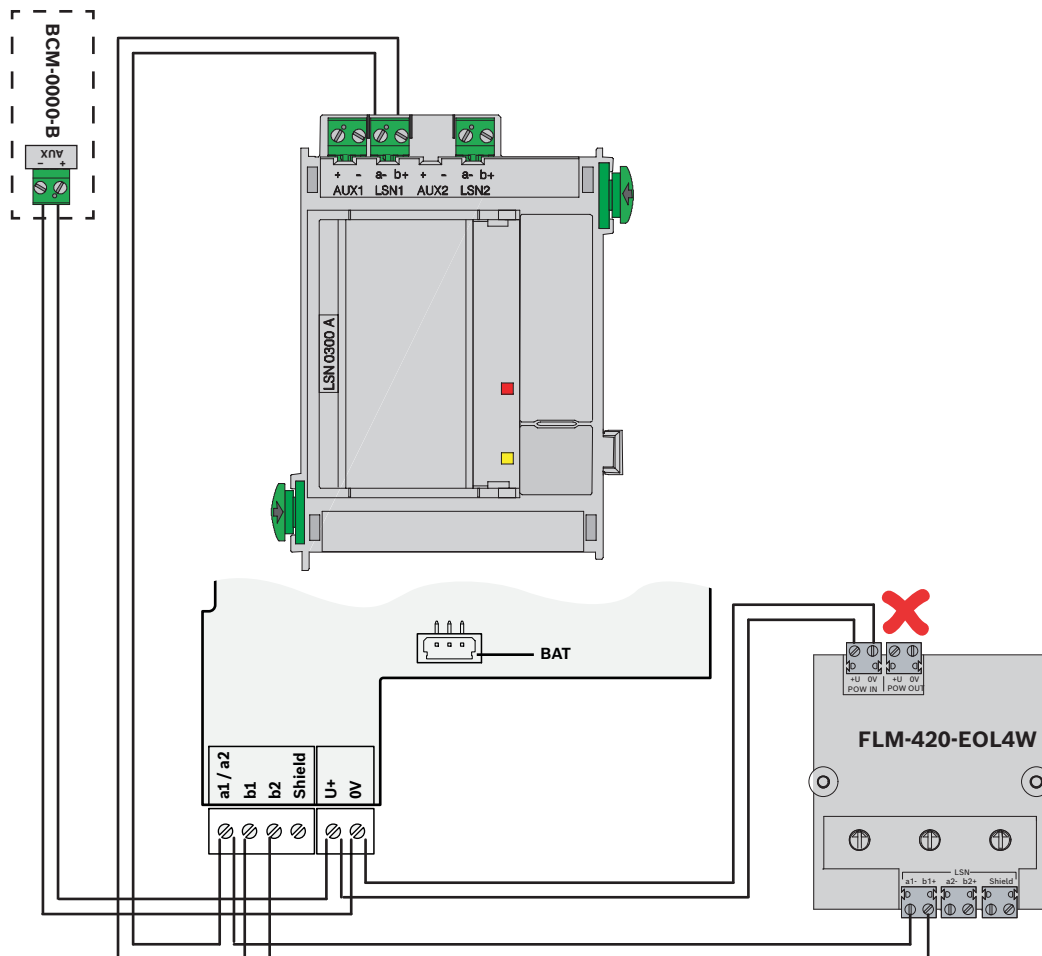





**FWI-270**

 **FDOOT271-O**  
**FDM275-O**  
**FDM273-O**




**ELS**

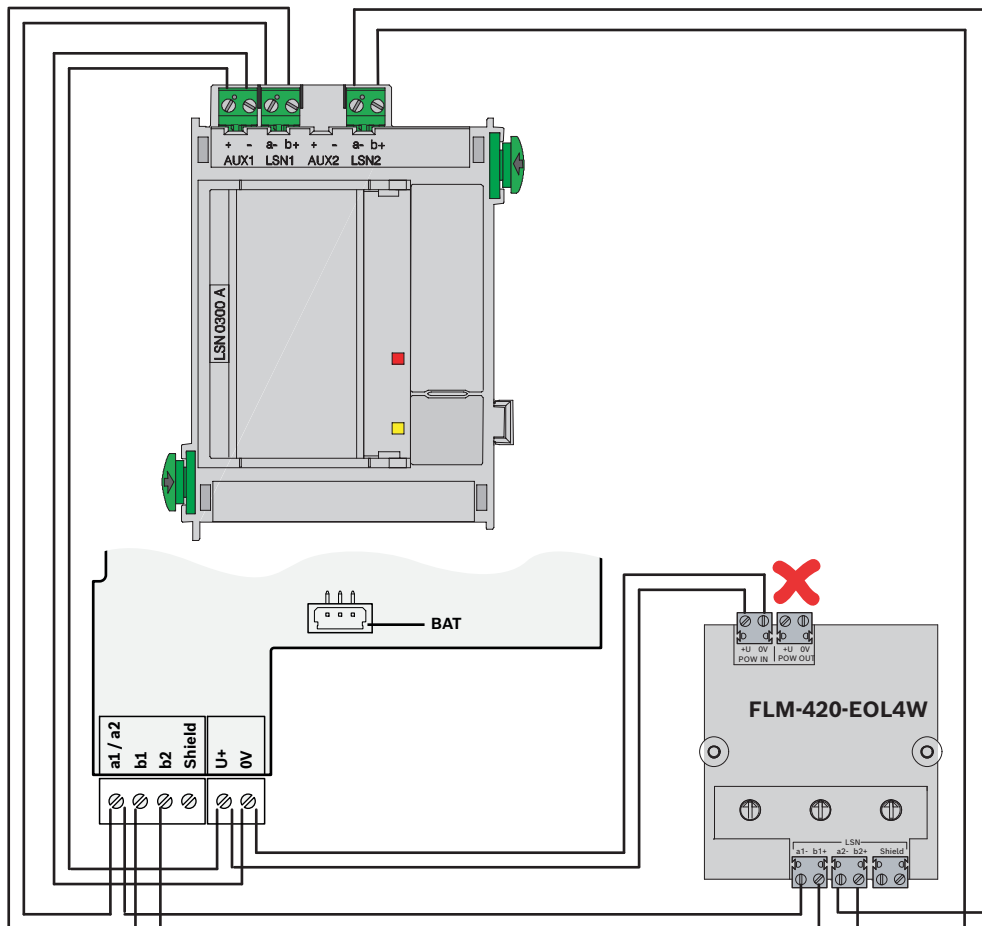

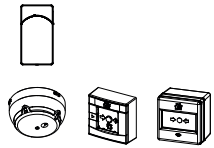


**FWI-270**


 
**FDOOT271-O**  
**FDM275-O**  
**FDM273-O**




**ELS**

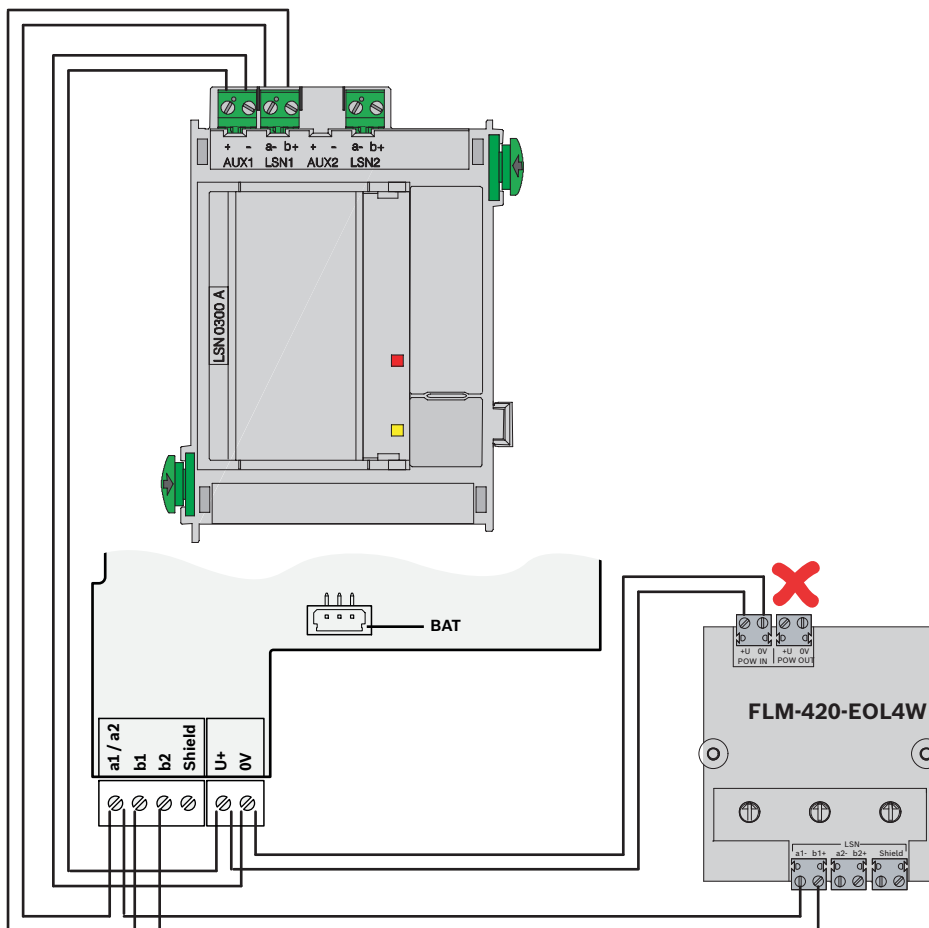


### 2.6.3 FLM-420/4-CON-S/D

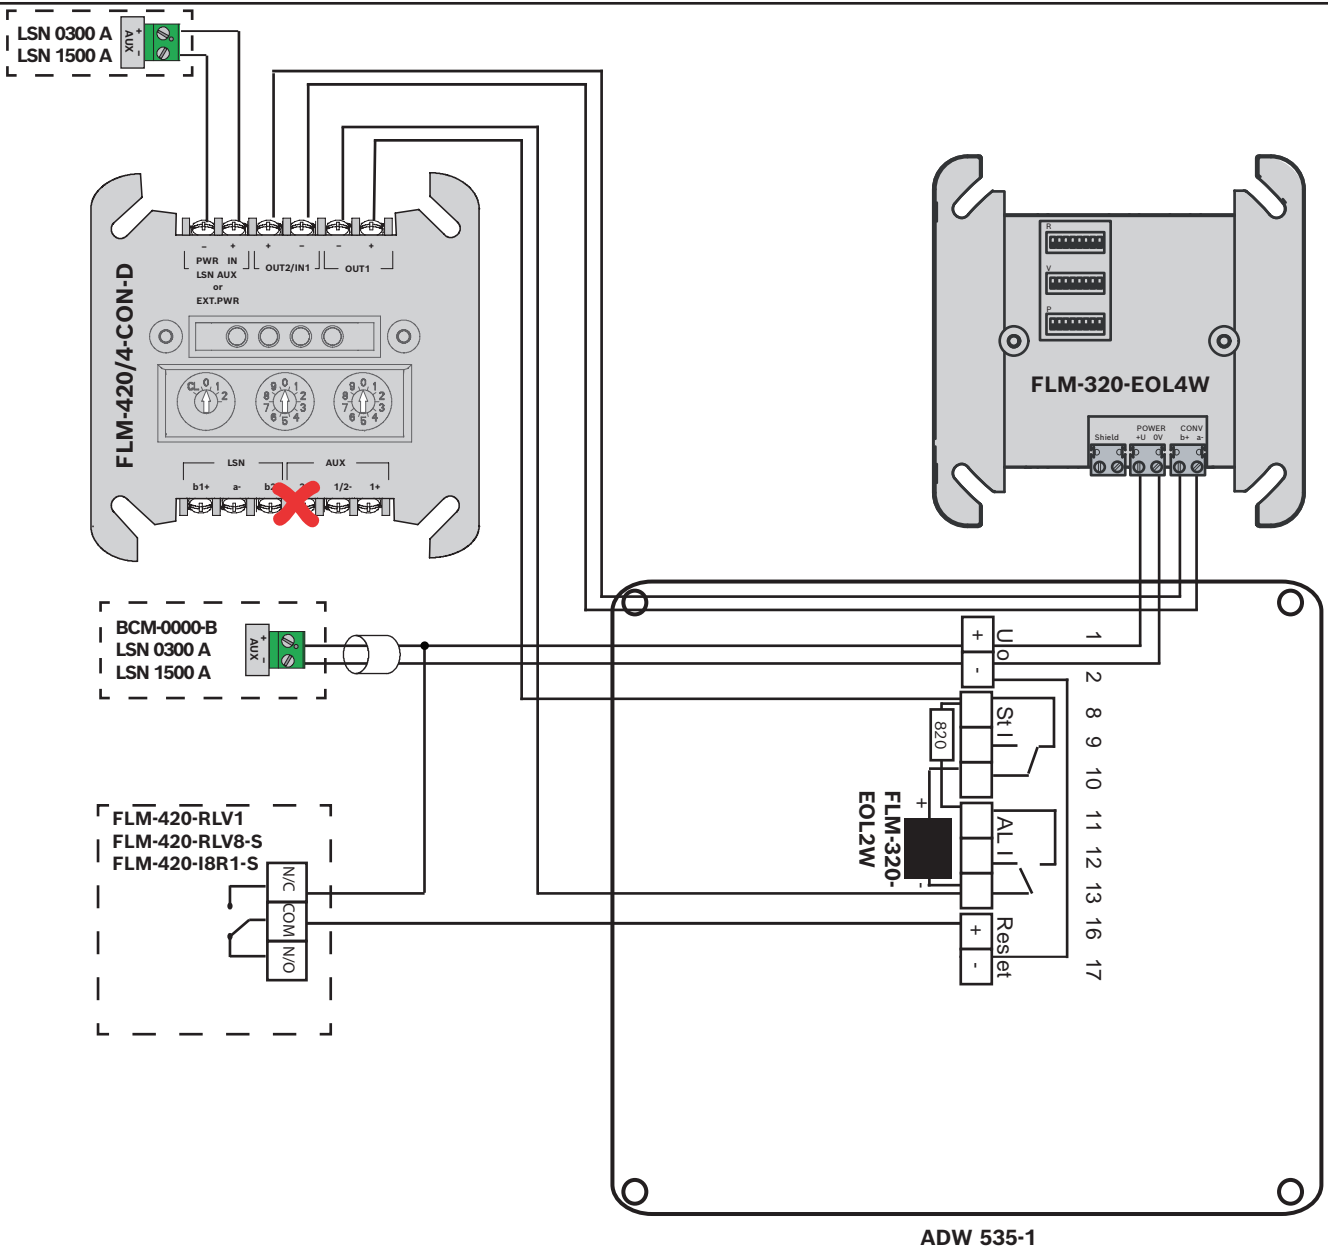 


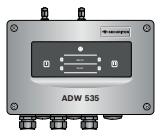


ADW 535-2

 

ELS

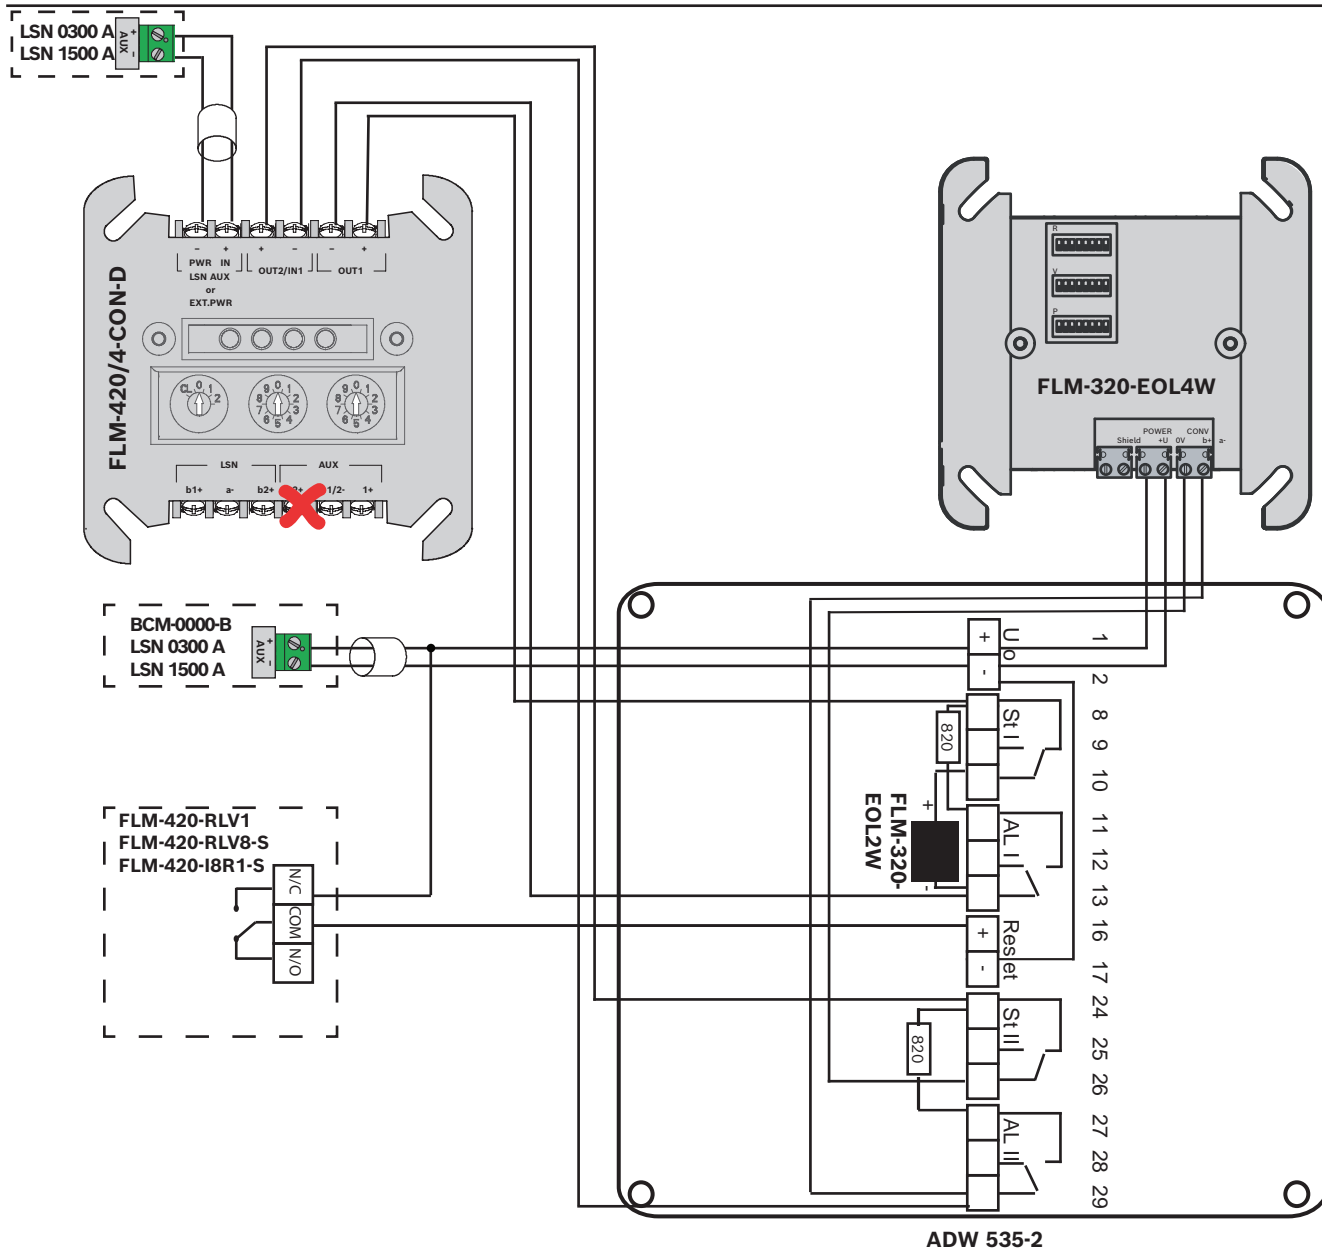


ADW 535-2

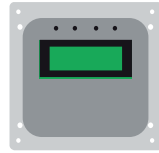

ALARMLINE II




ELS

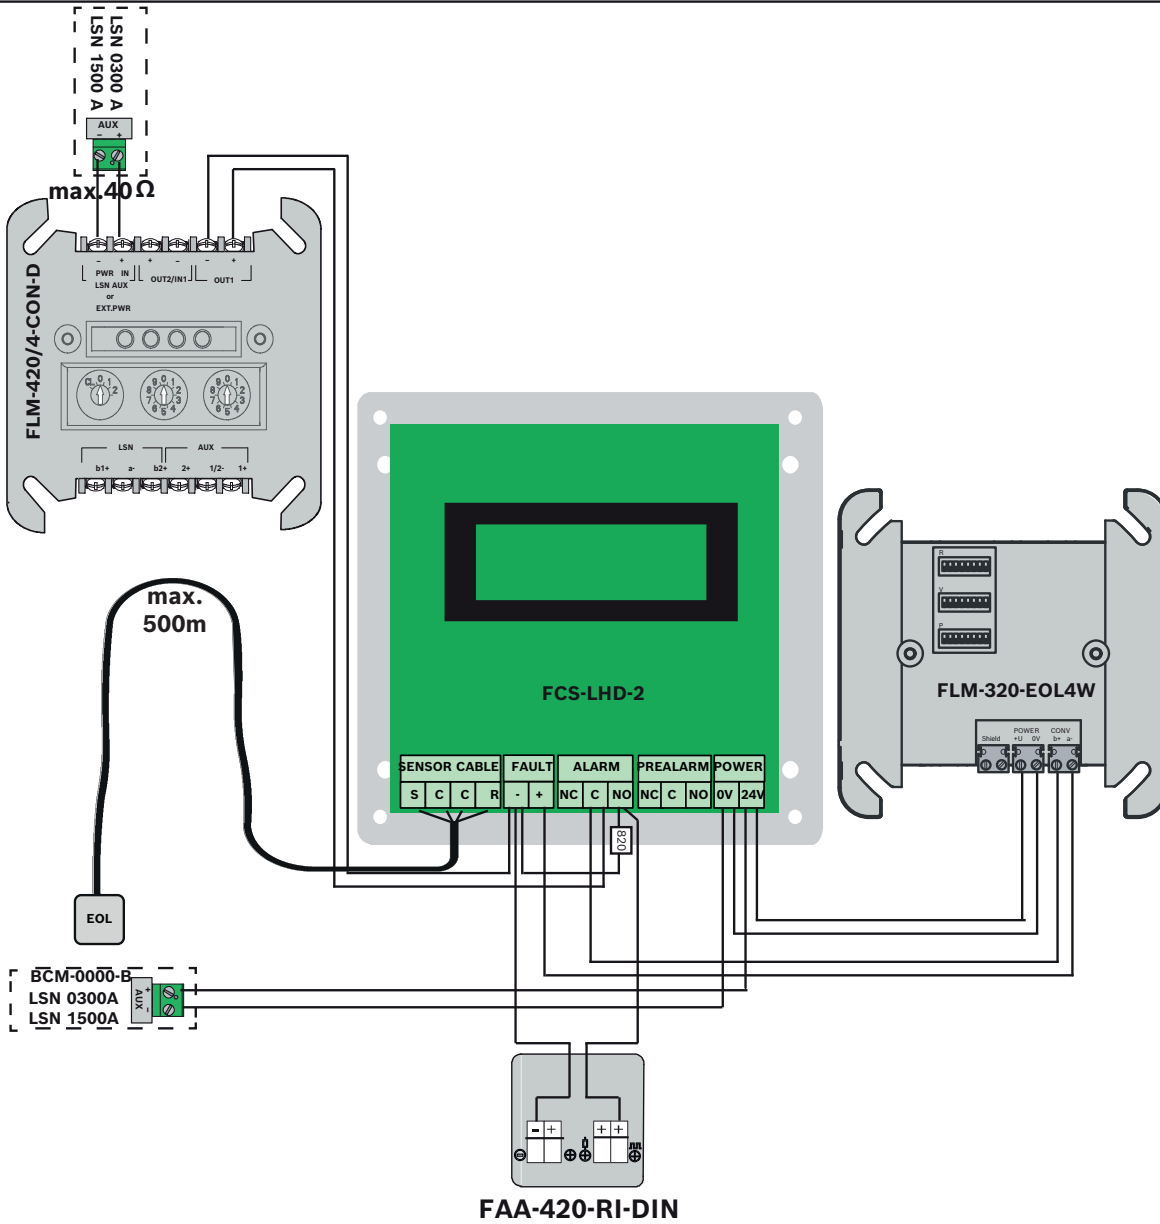







 
thefirebeam nano  
thefirebeam standard  
thefirebeam foveo




ELS


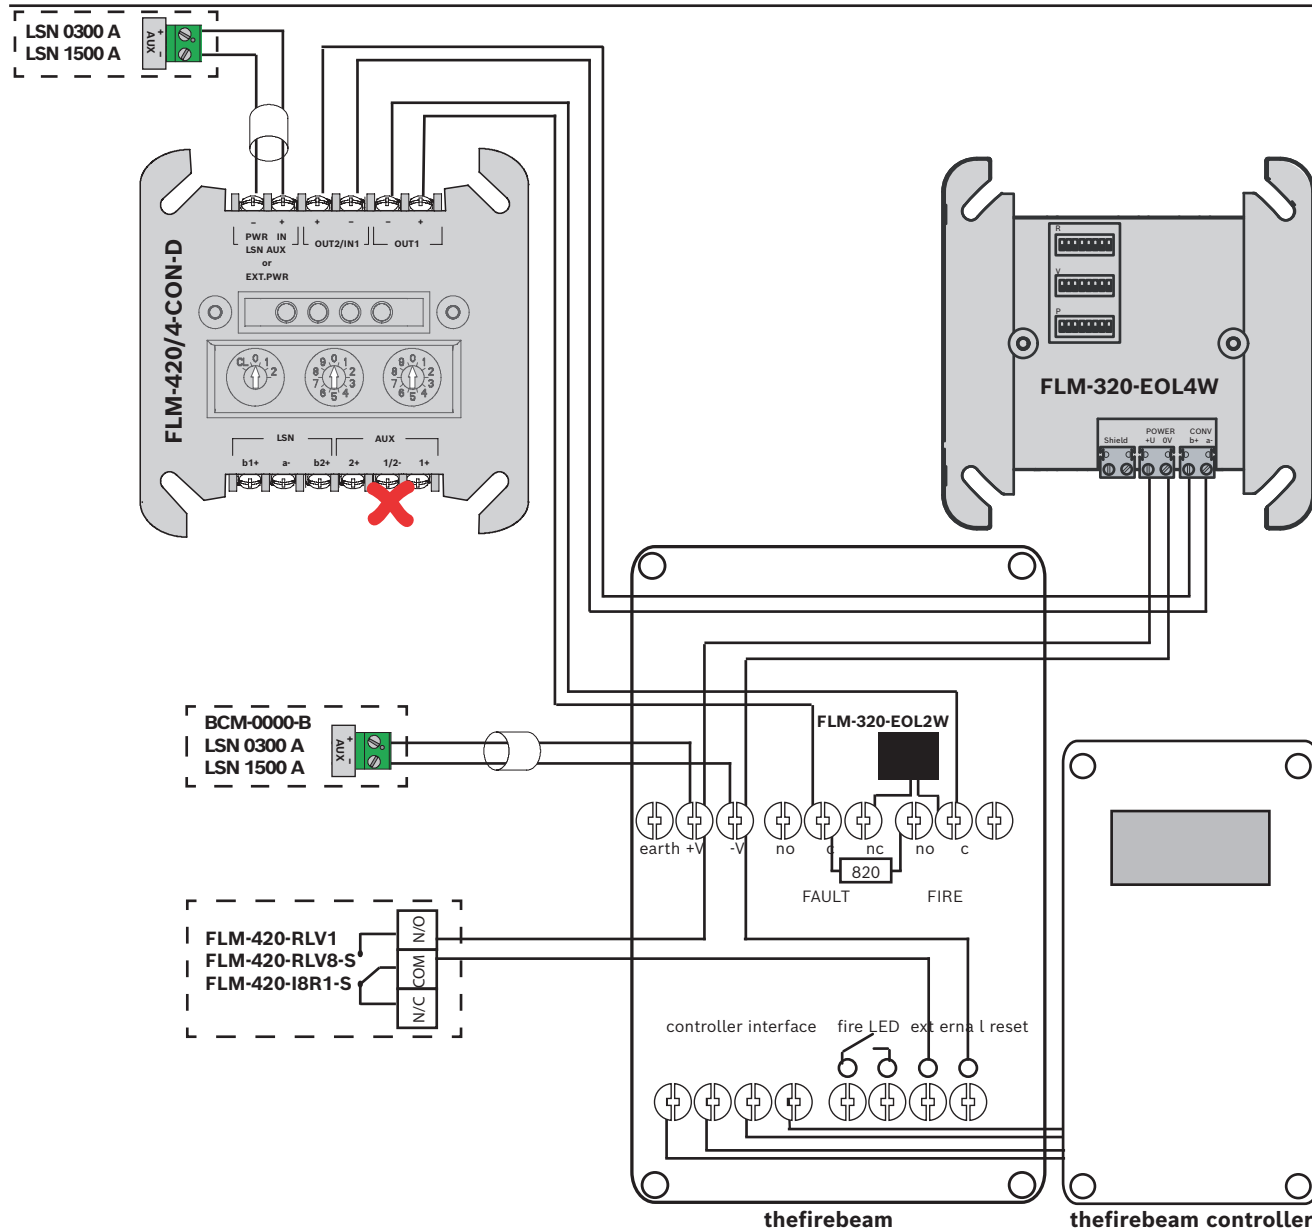



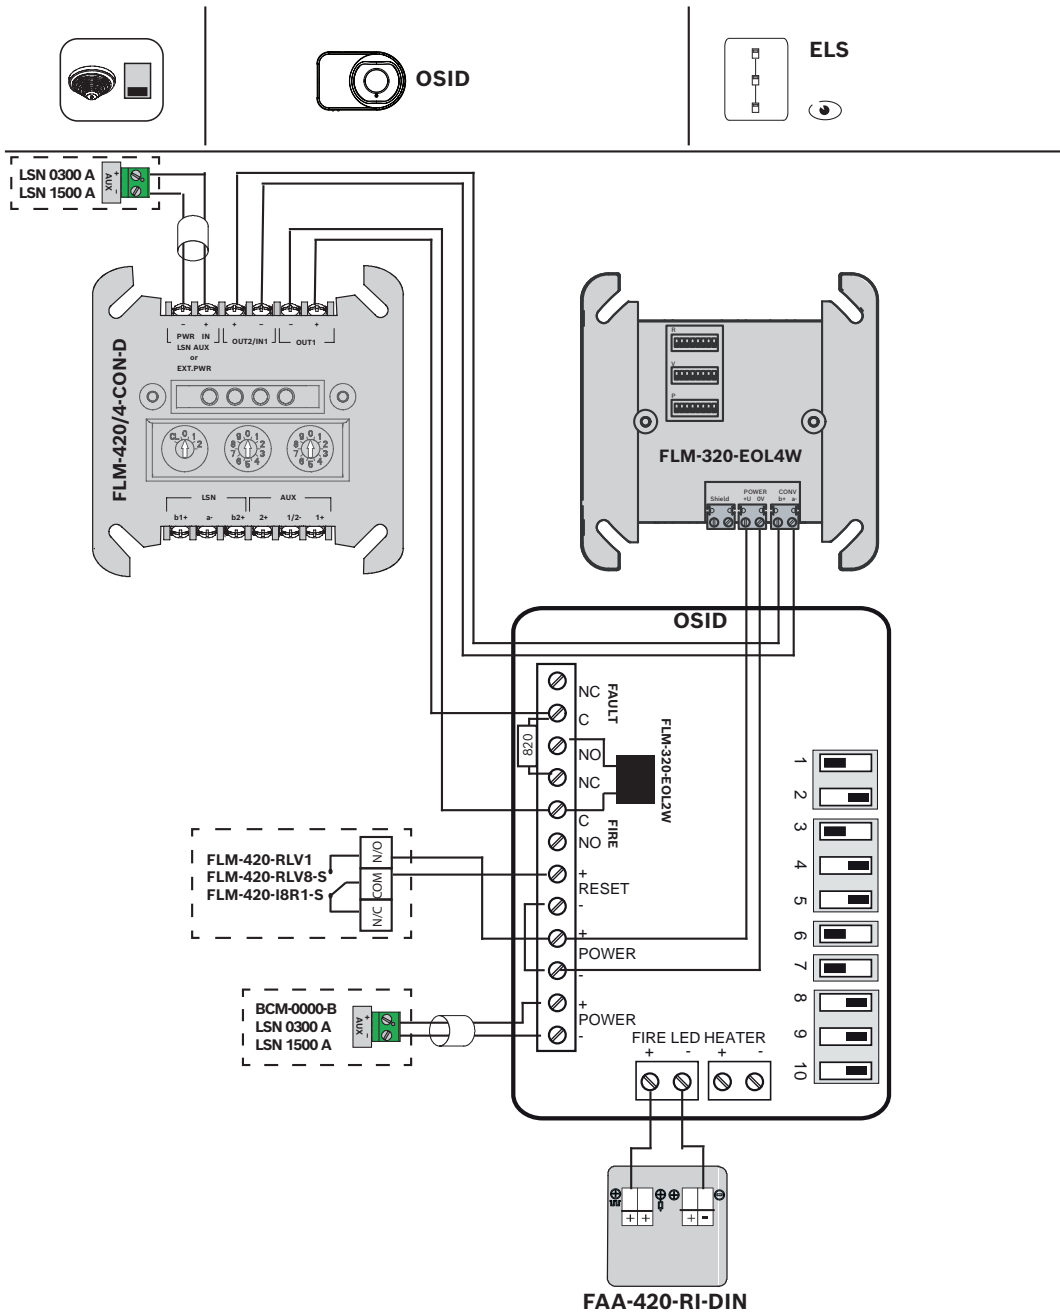


 


ELS

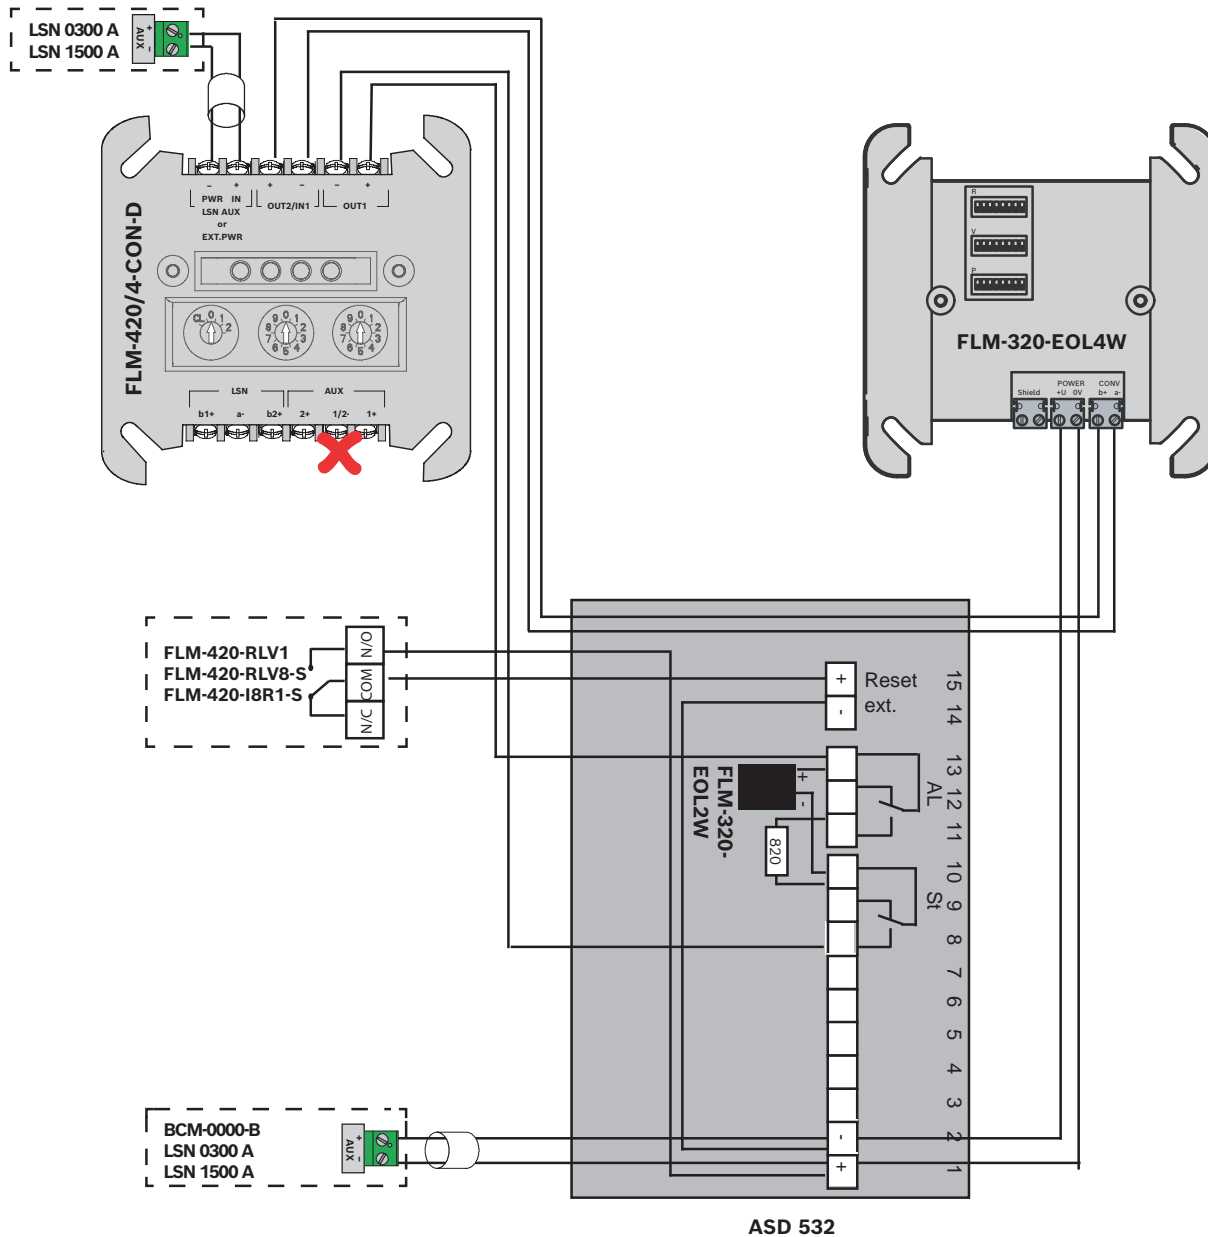


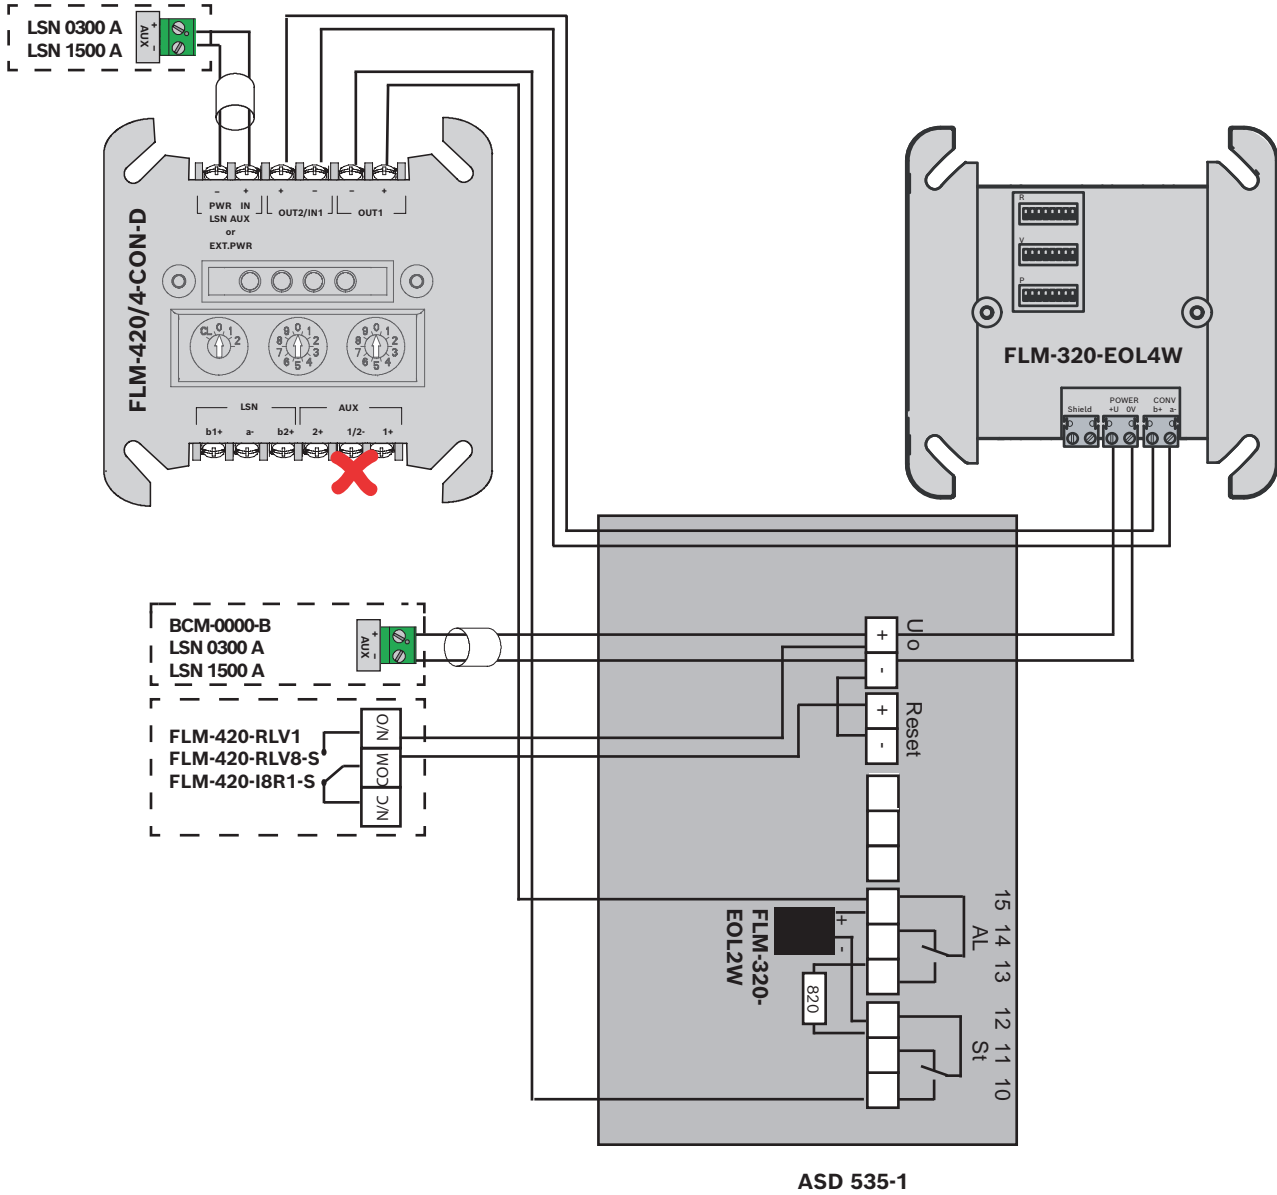 

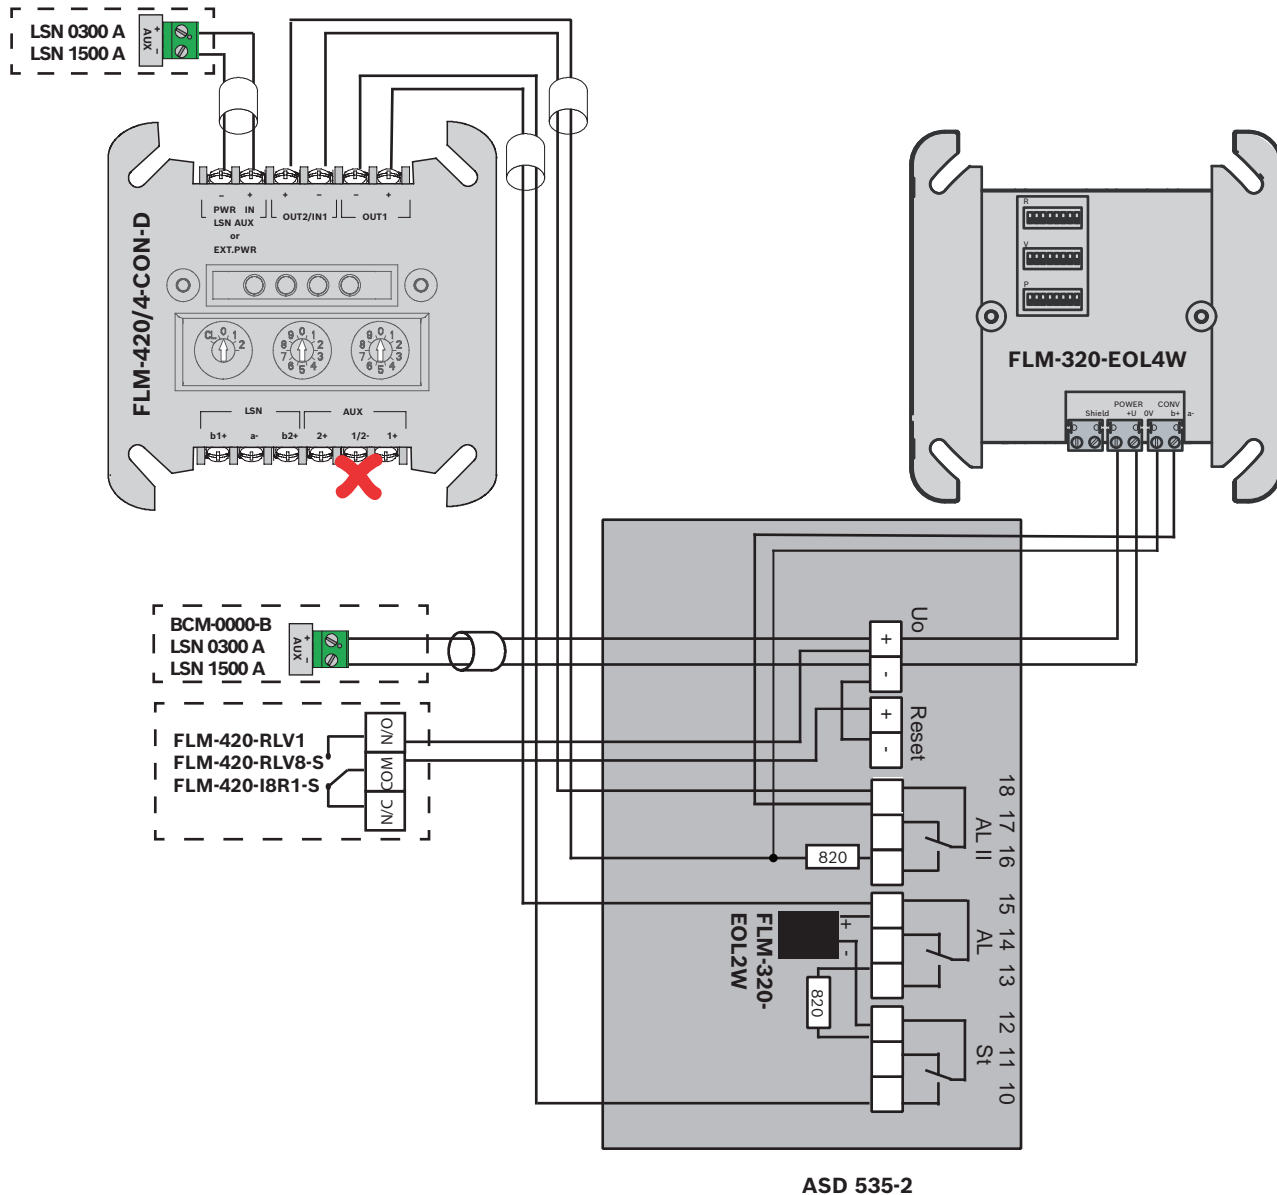 



 




FCS-LWM-1

 


ELS

  BCM-0000-B  
LSN 0300 A  
LSN 1500 A

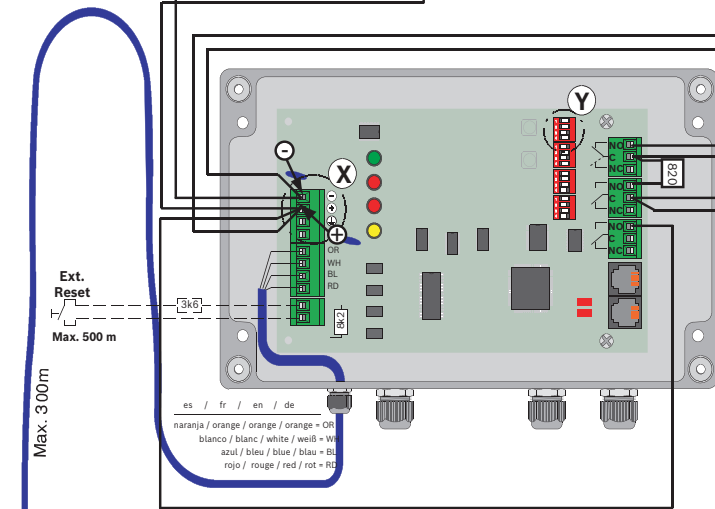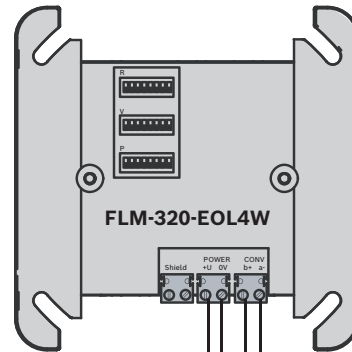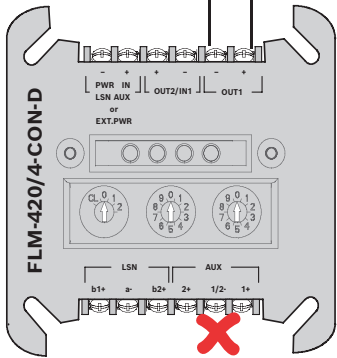





 FMC-120-DKM-G-R FMC-120-DKM-G-Y  
 FMC-120-DKM-H-R FMC-120-EST-G-B  
 FMC-120-DKM-G-B  
 FMC-120-DKM-H-B




ELS

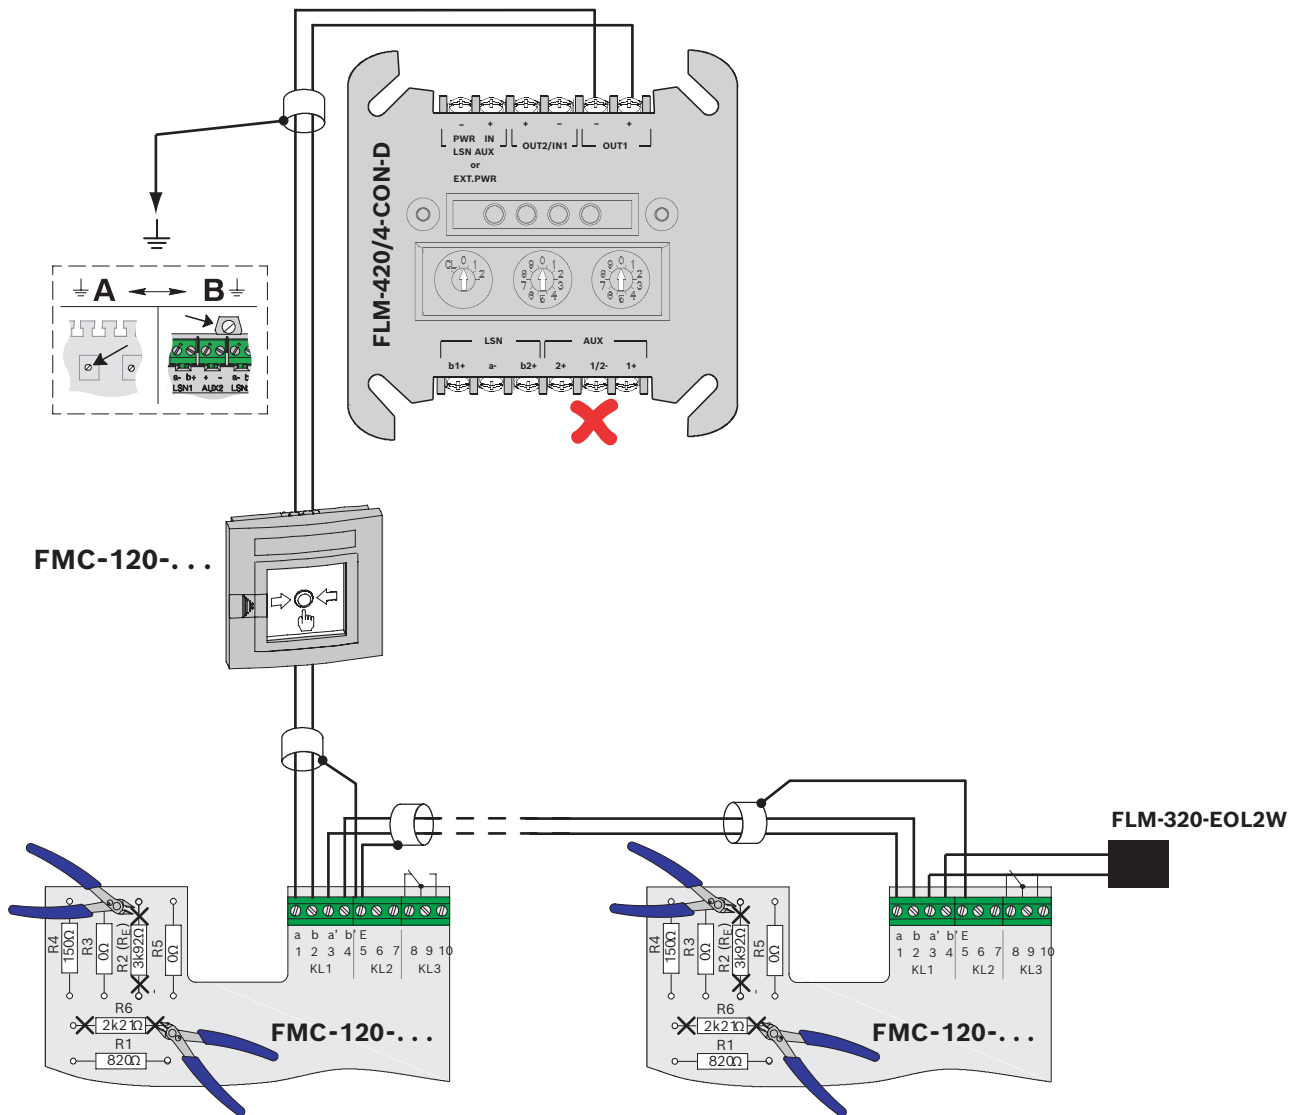


 


FMC-300

 

ELS

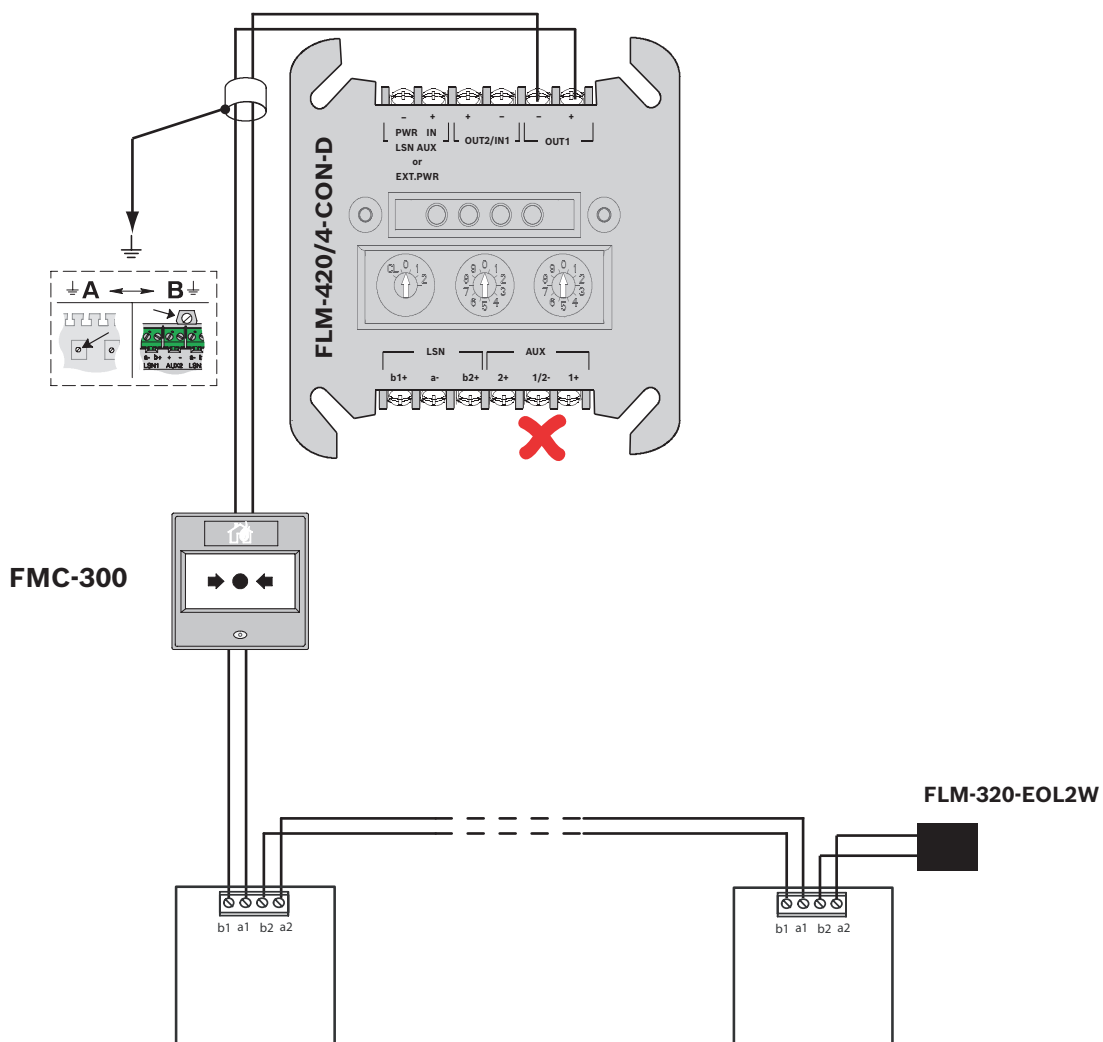




 

MSS 400, MSS 400 B  
 FCH-320-T320  
 FCH-T320-R470, FCH-T320-FSA  
 FCP-O320, FCP-O320-R470  
 FCP-OC320, FCP-OC320-R470  
 FCP-OT320, FCP-OT320-R470



ELS

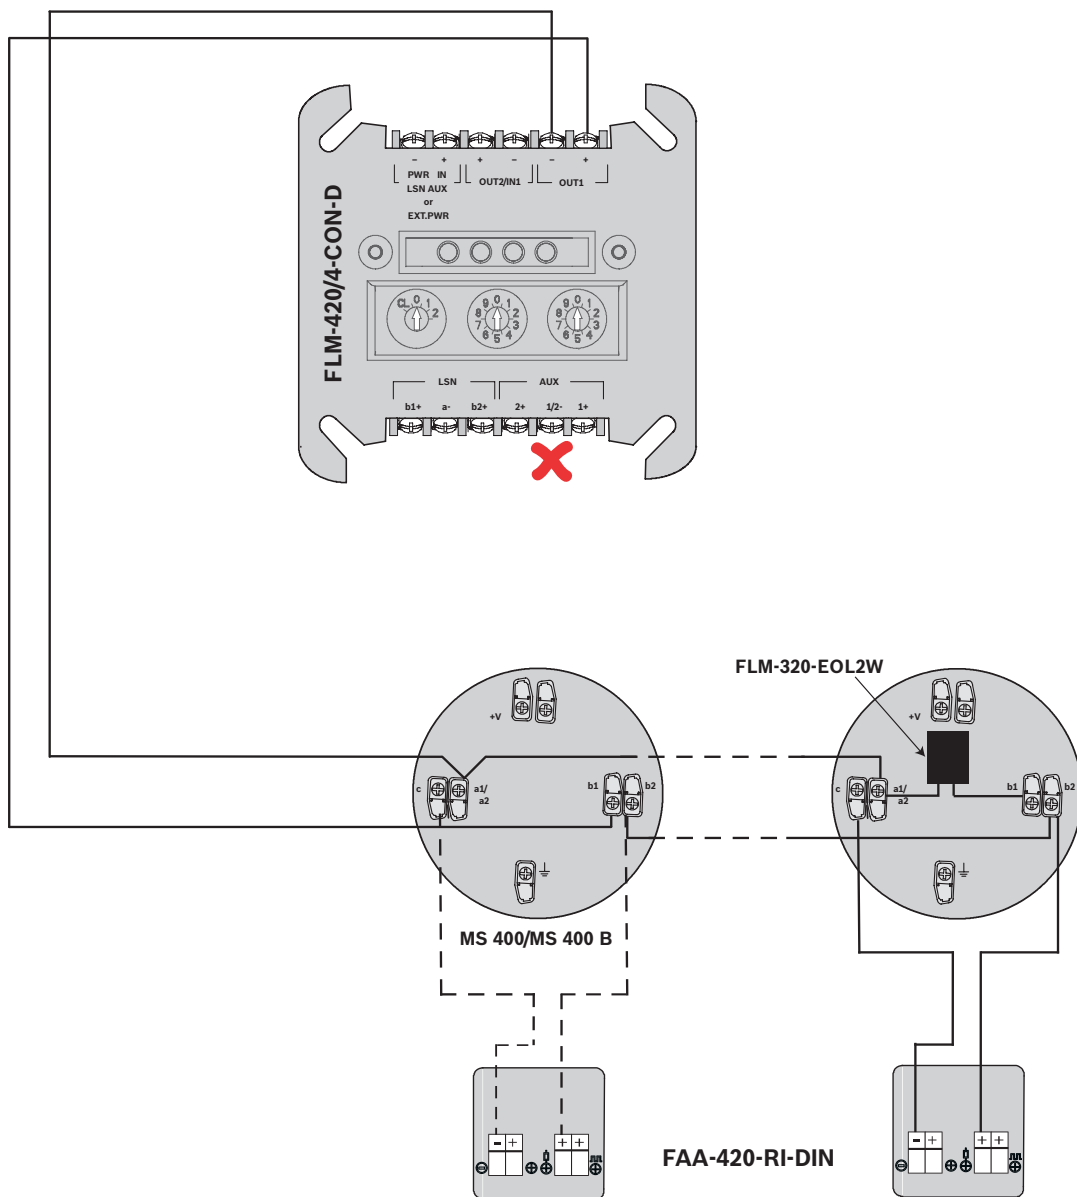





FCP-500



 ELS

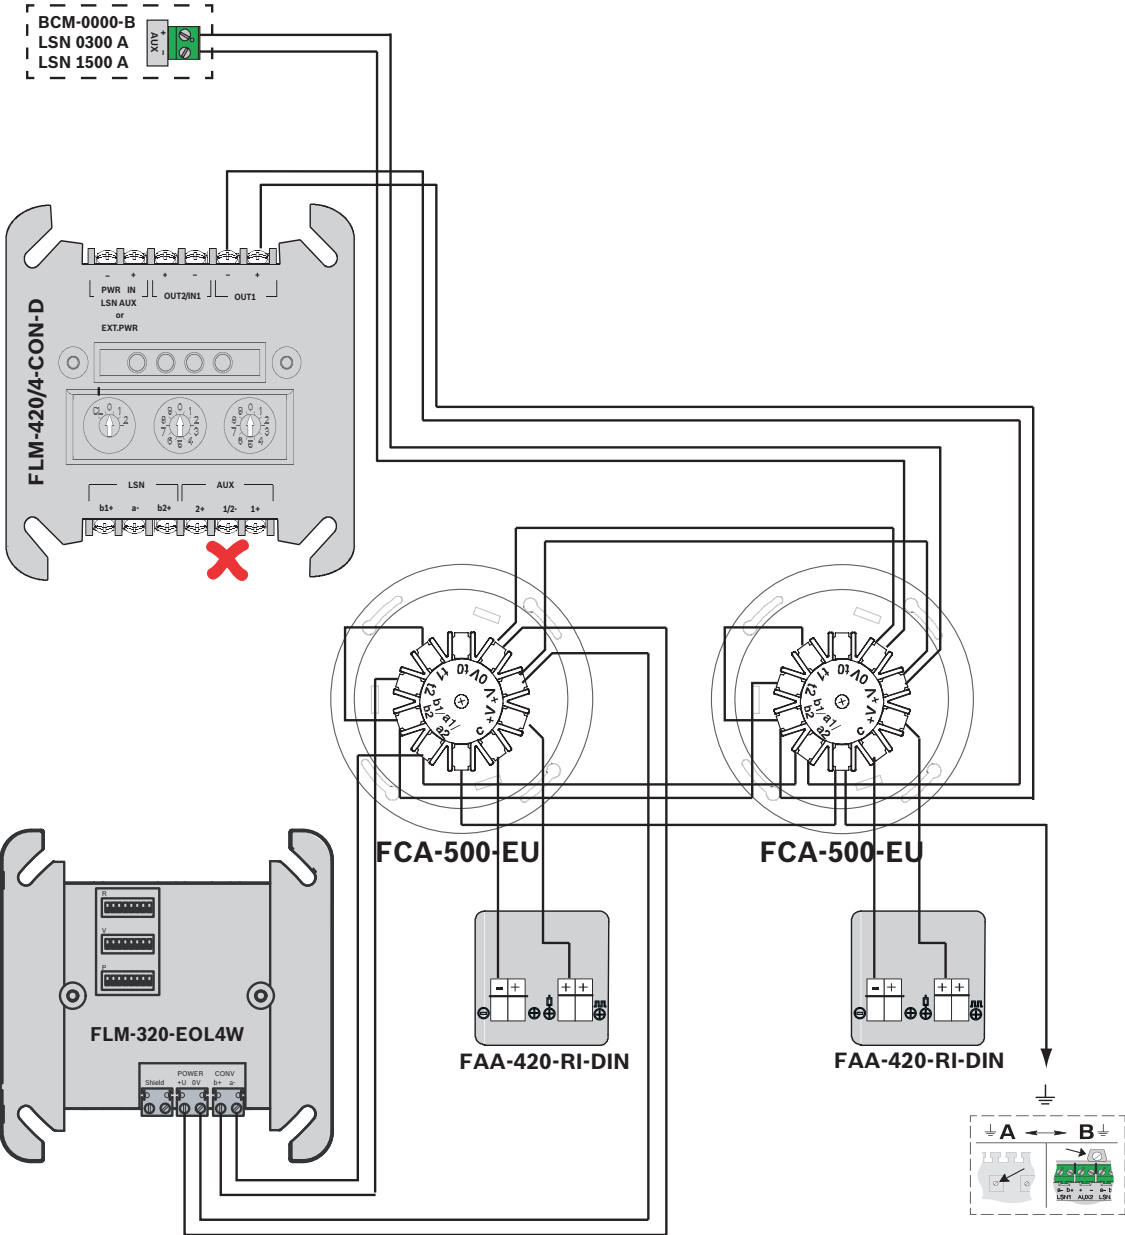





FCS-320-TM Series




 ELS

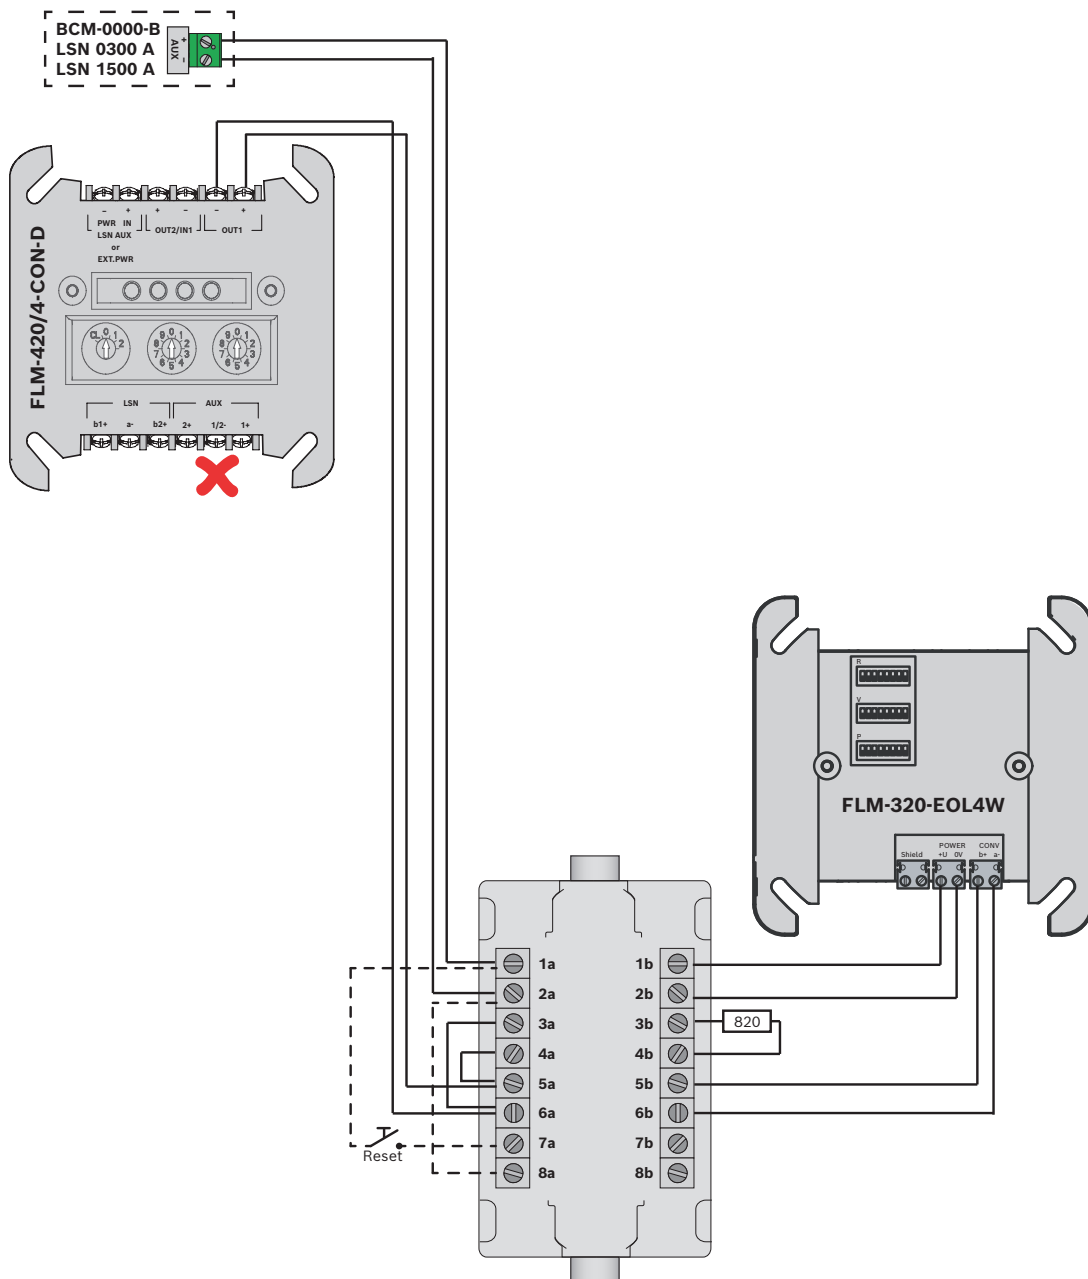





FCS-320-TP Series

 

ELS

 BCM-0000-B  
LSN 0300 A  
LSN 1500 A

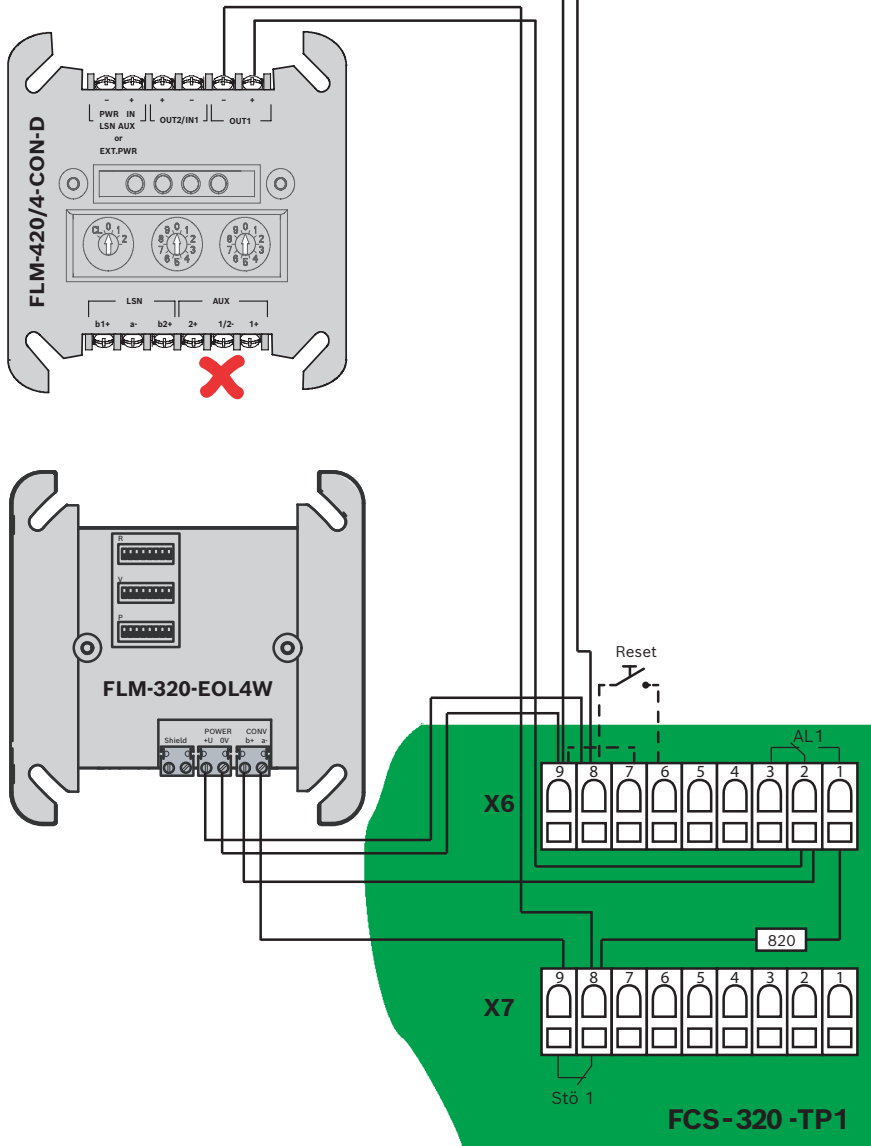






FCS-320-TP Series






ELS

BCM-0000-B  
LSN 0300 A  
LSN 1500 A

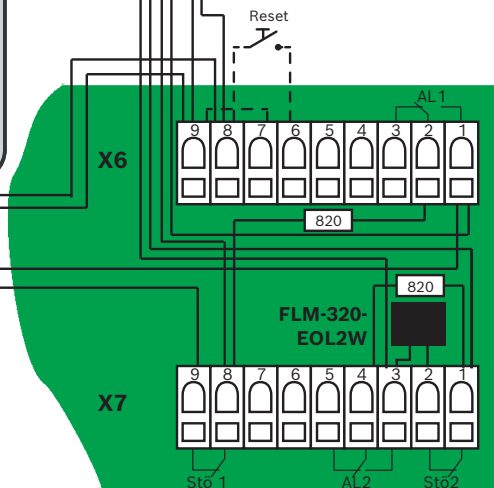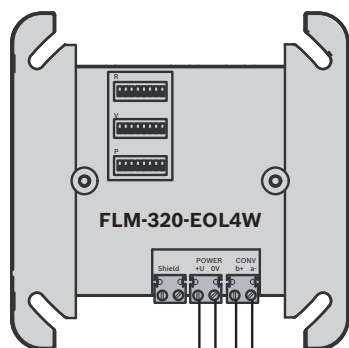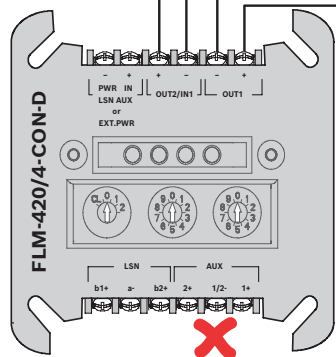


FCS-320-TP2

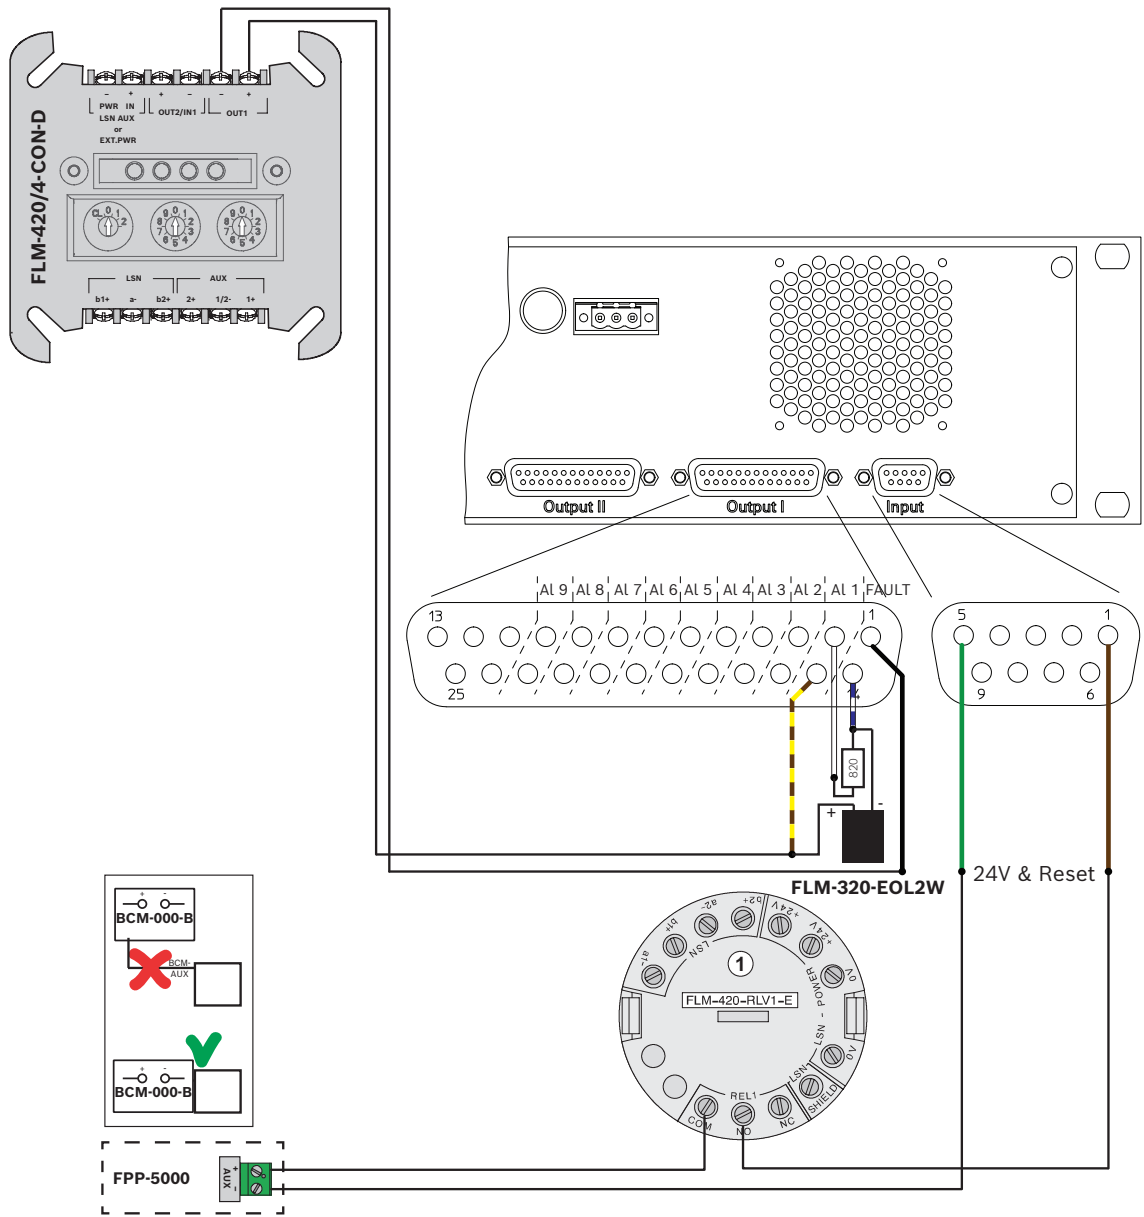 


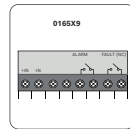


 **016519, 016589**  
**IR3 Flame Detector**




**ELS**

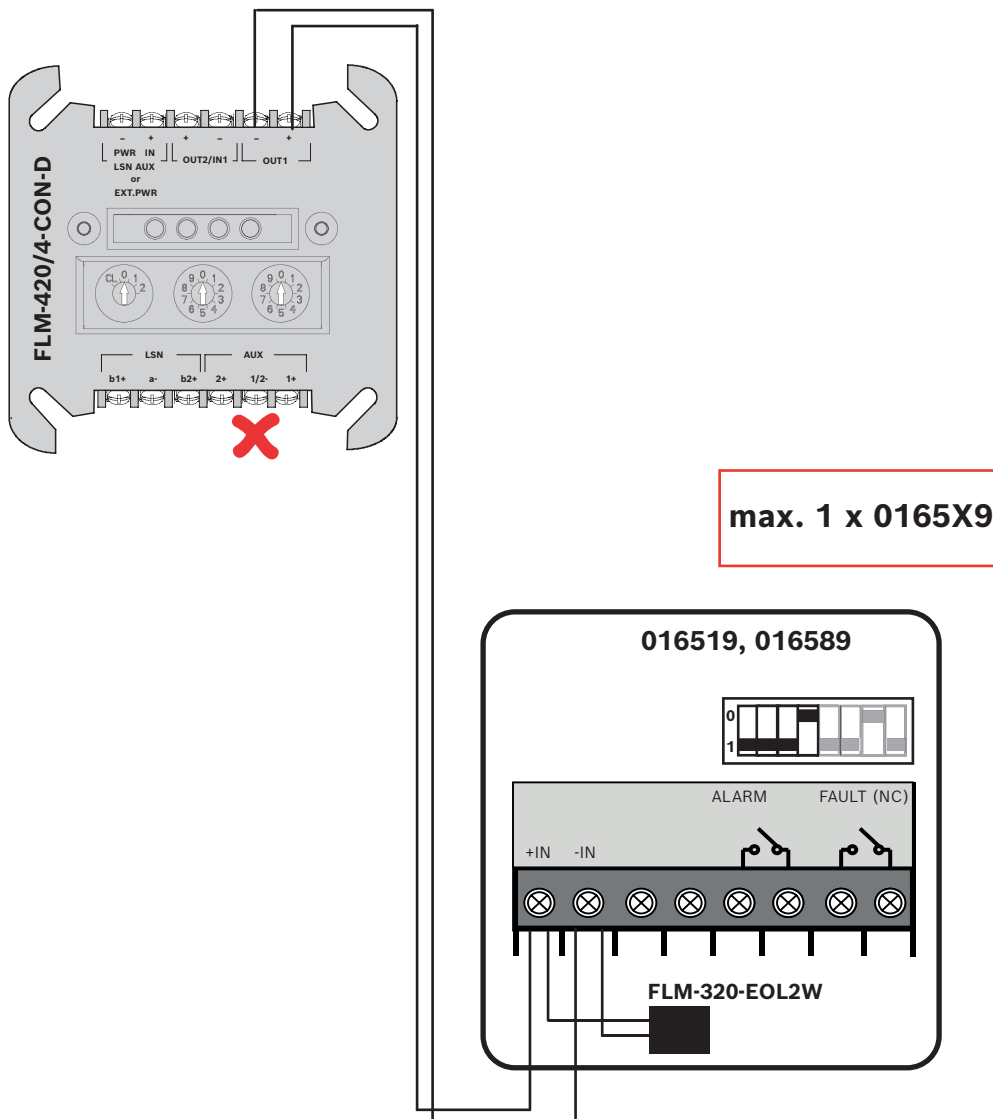


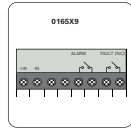

016519, 016589  
IR3 Flame Detector

 


ELS

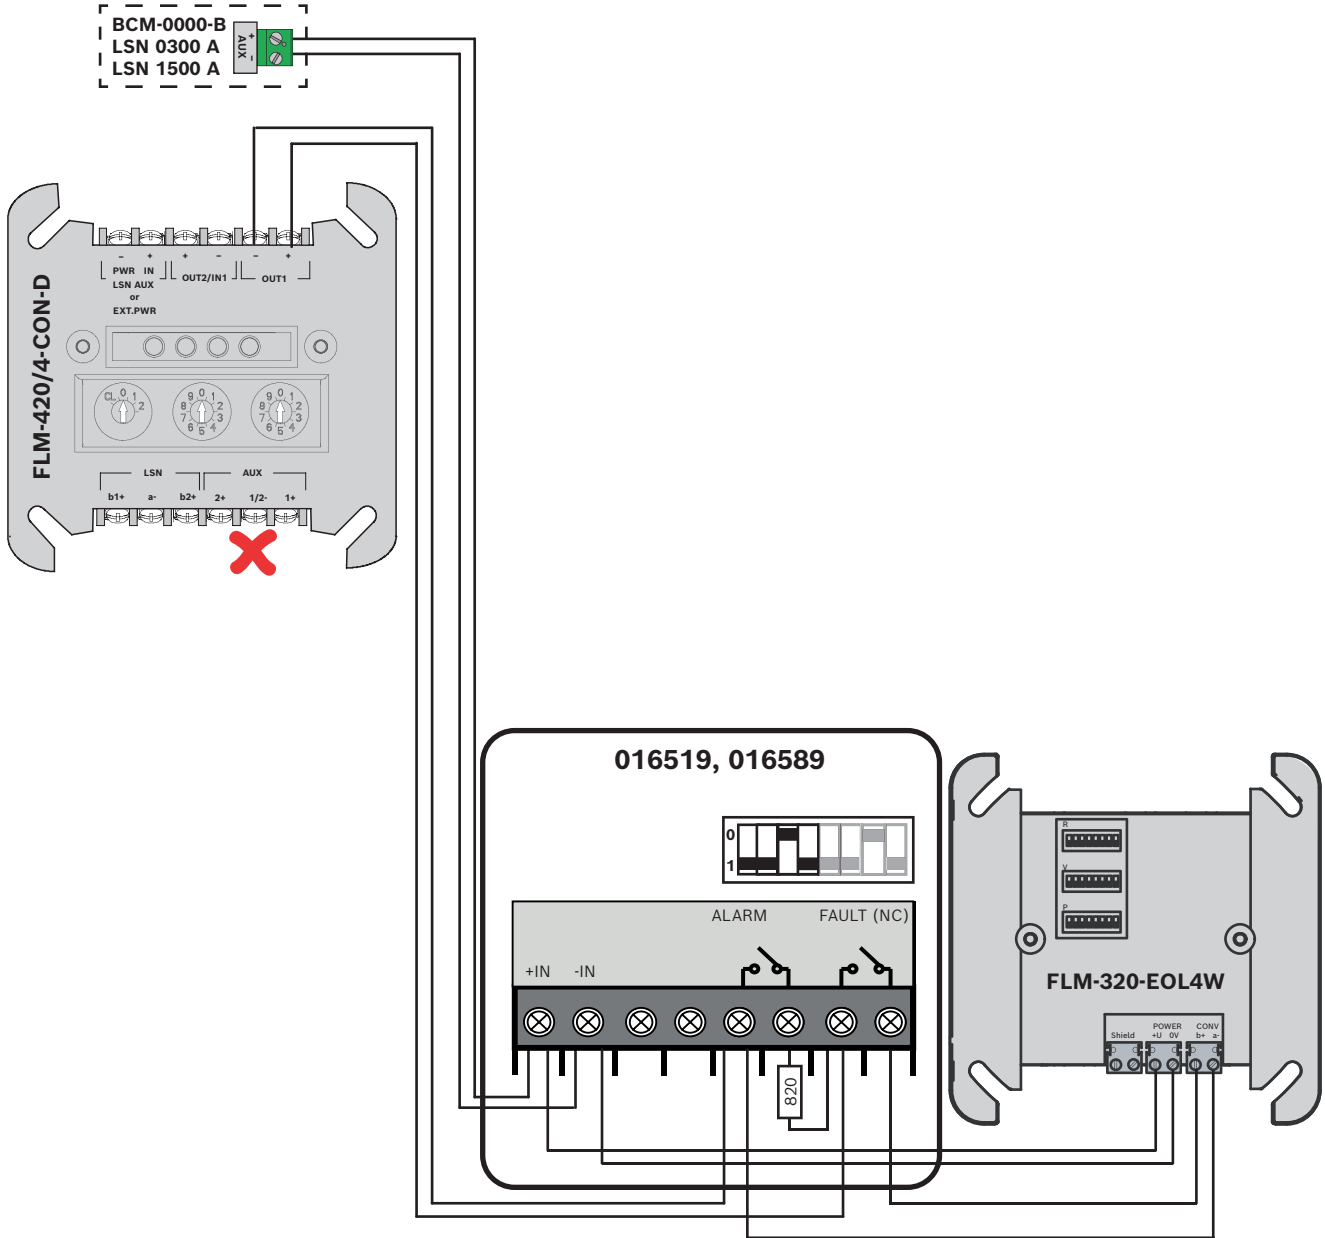






**Fireray 50RV  
Fireray 100RV**

 


**ELS**

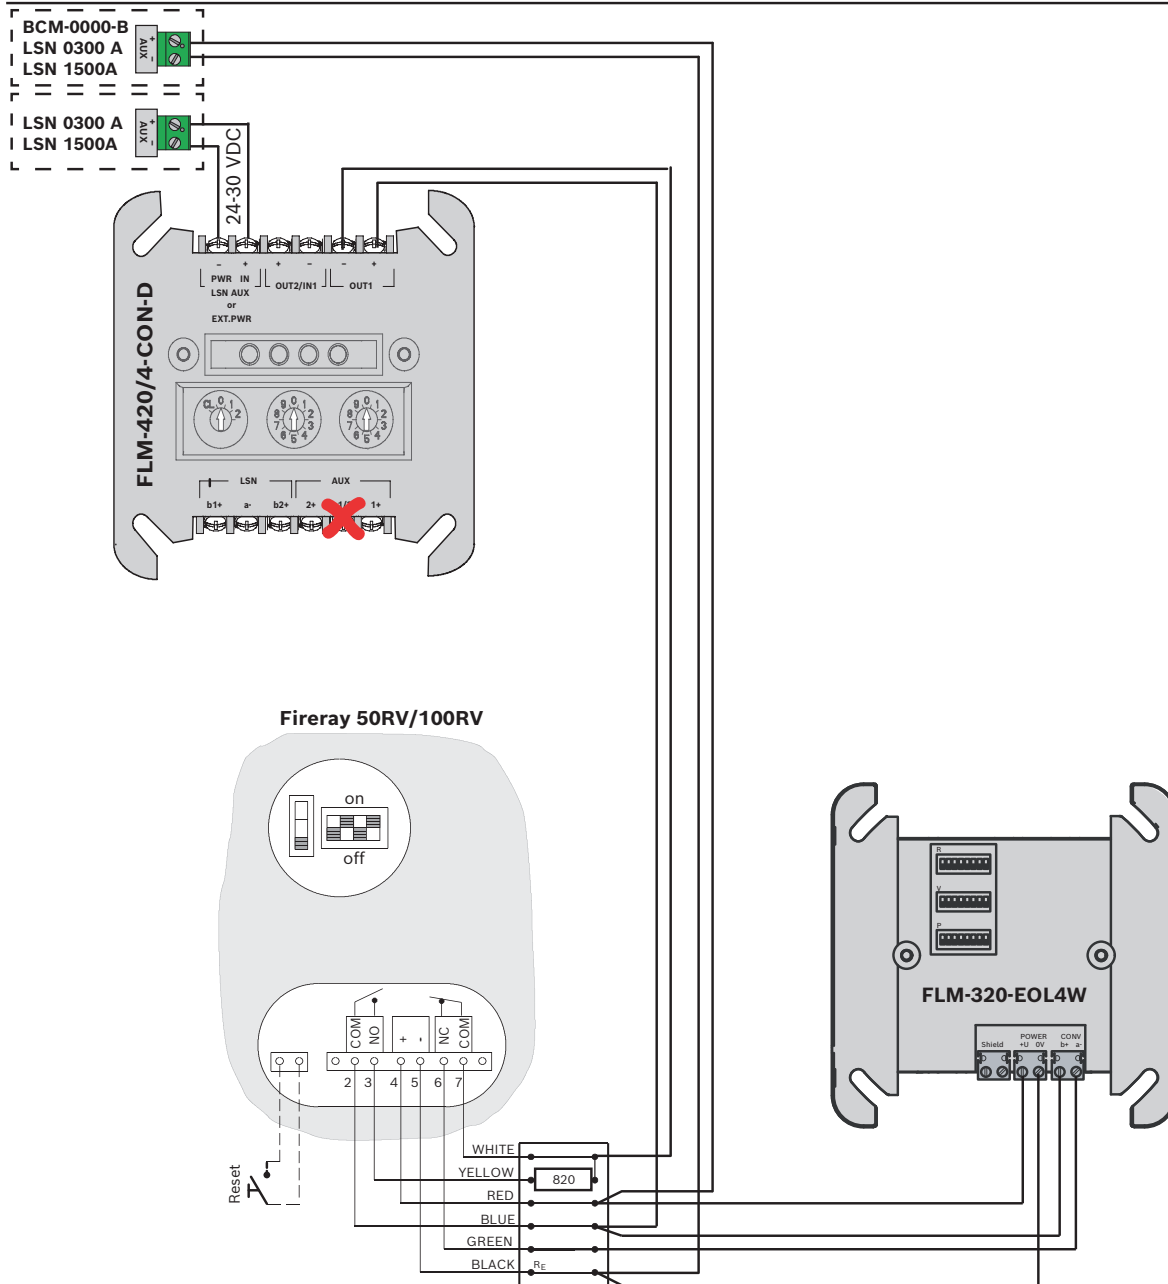




**FIRERAY3000**

 1 x




**ELS**

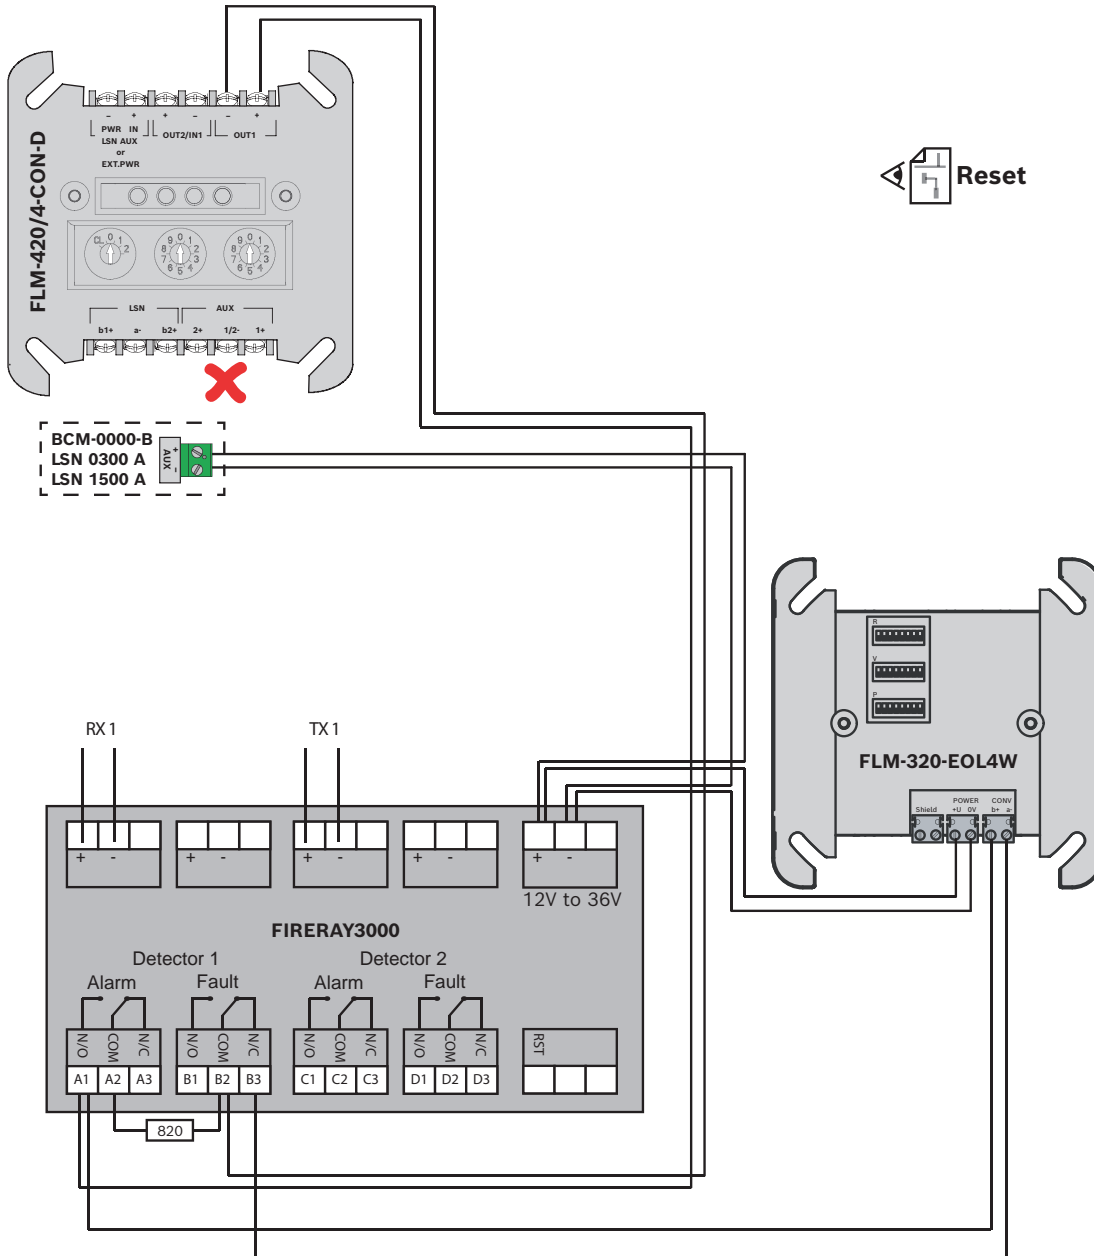




**FIRERAY3000**  
2 x  **OUT1**

 

**ELS**

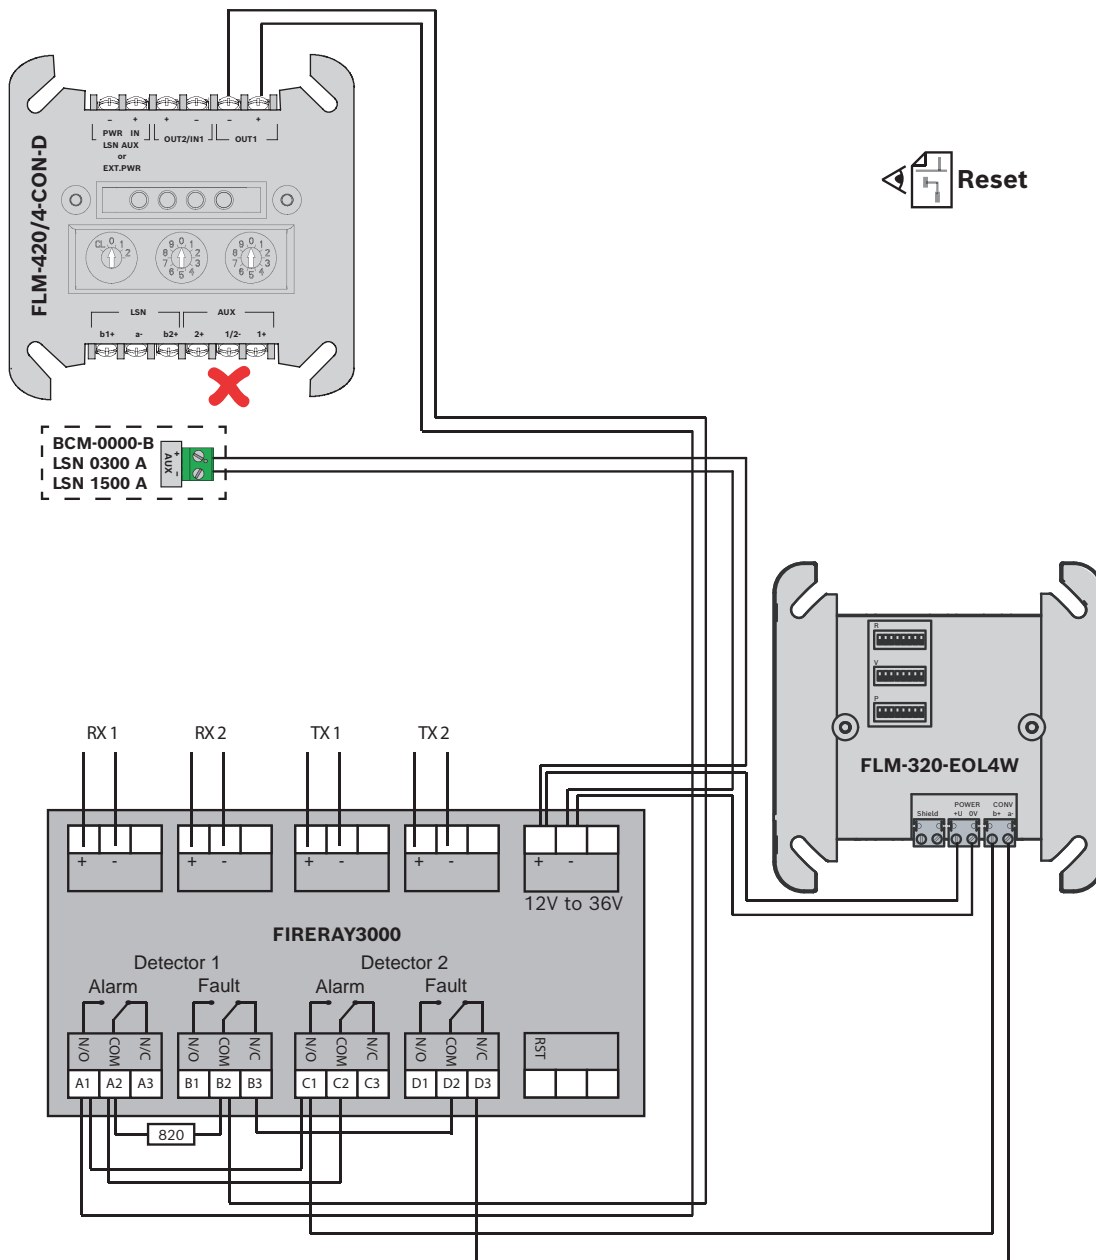




**FIRERAY3000**  
2 x **OUT1+2**



**ELS**

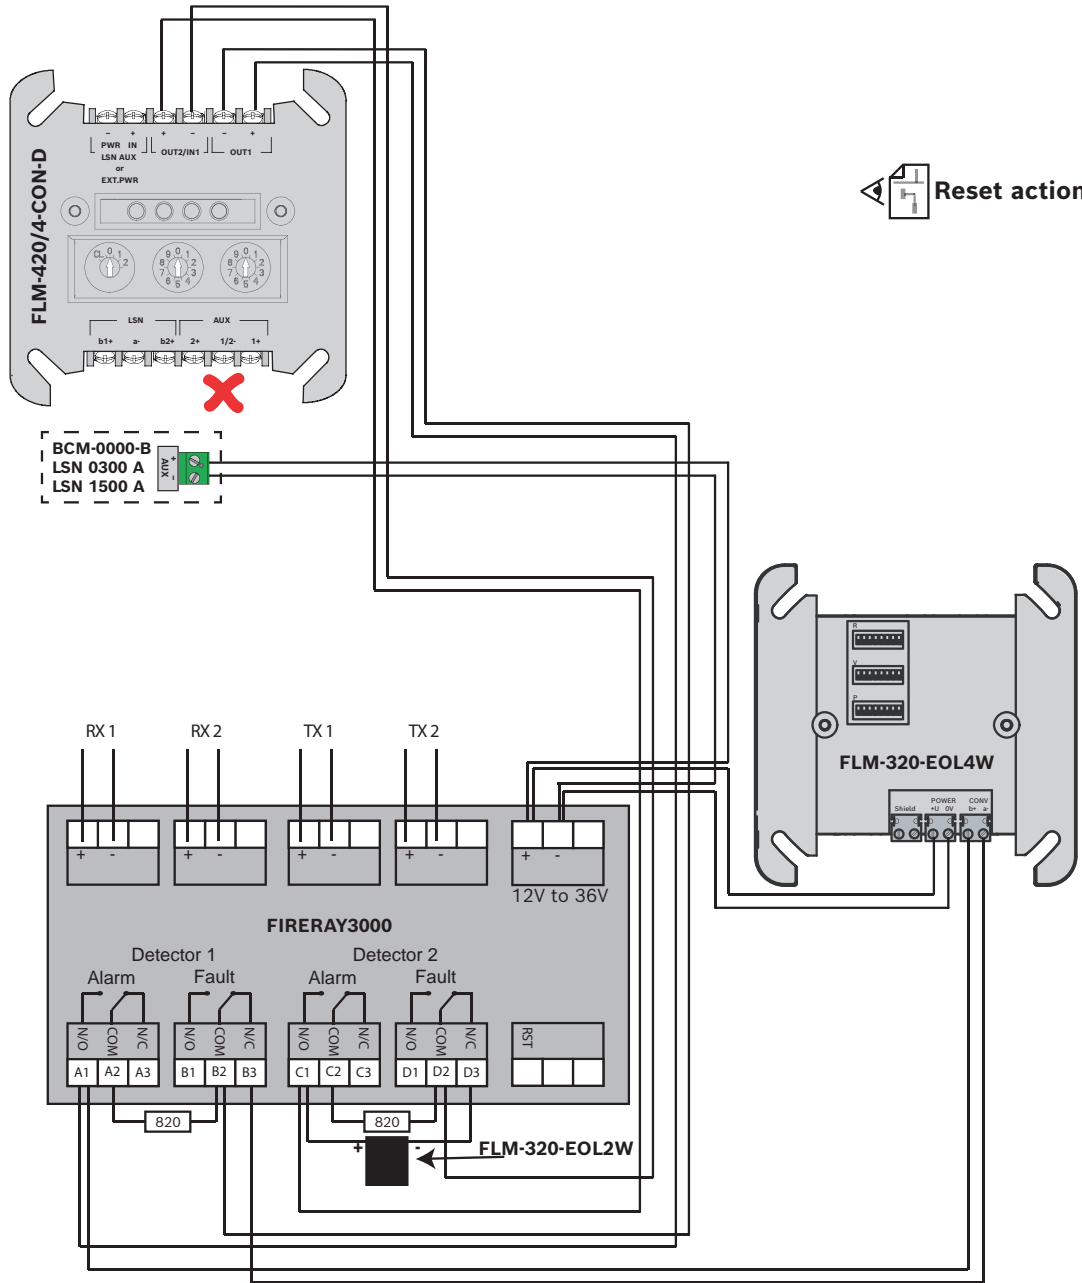




**FIRERAY5000**

1 x 



**ELS**

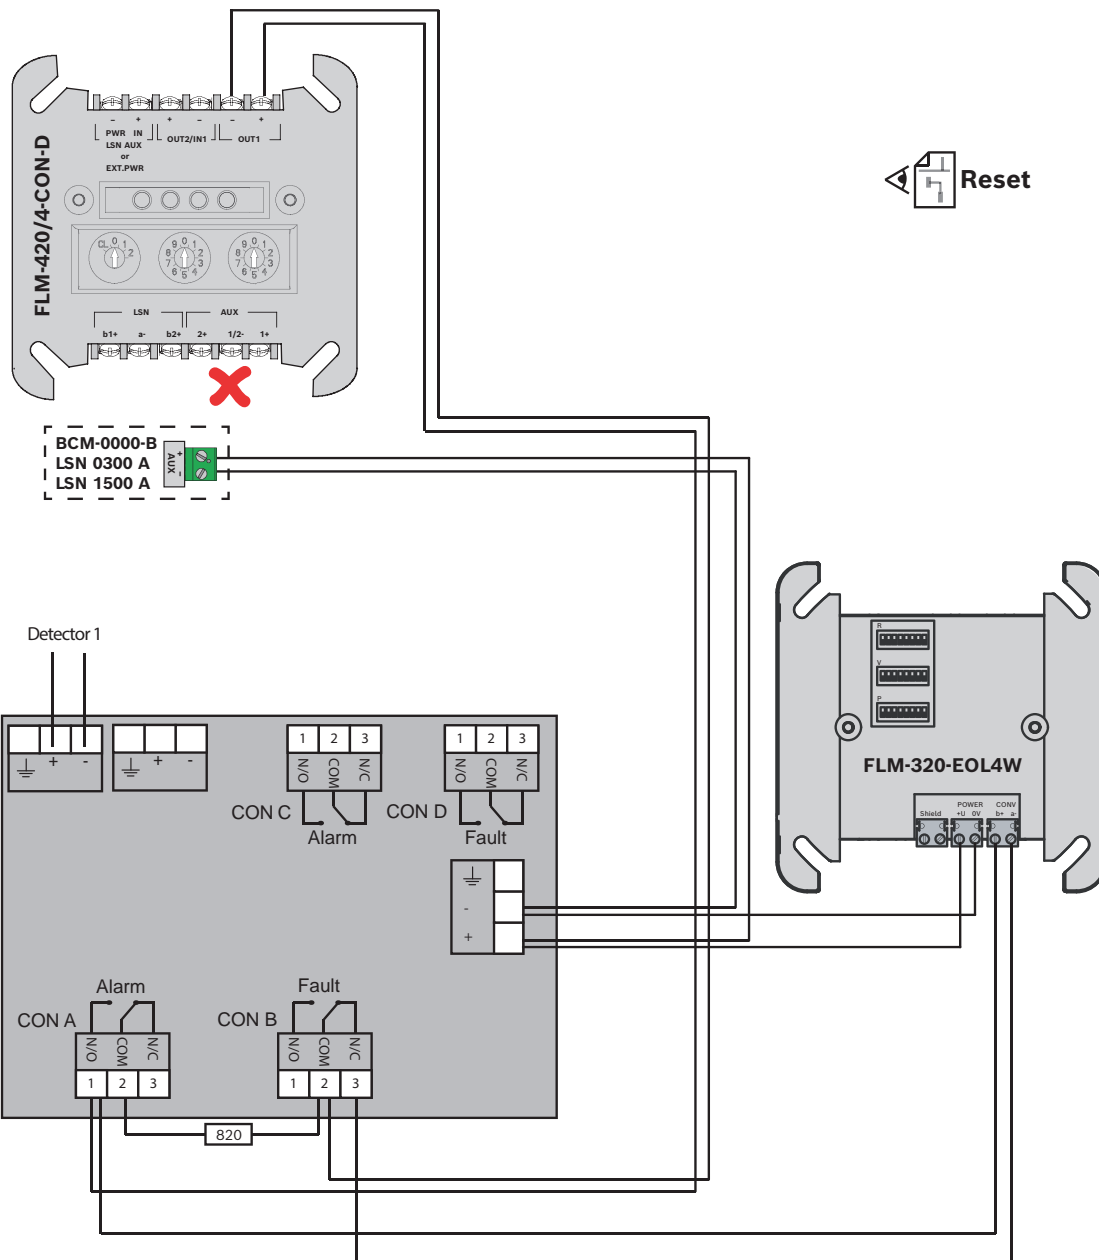




**FIRERAY5000**

2 x  **OUT1**




**ELS**

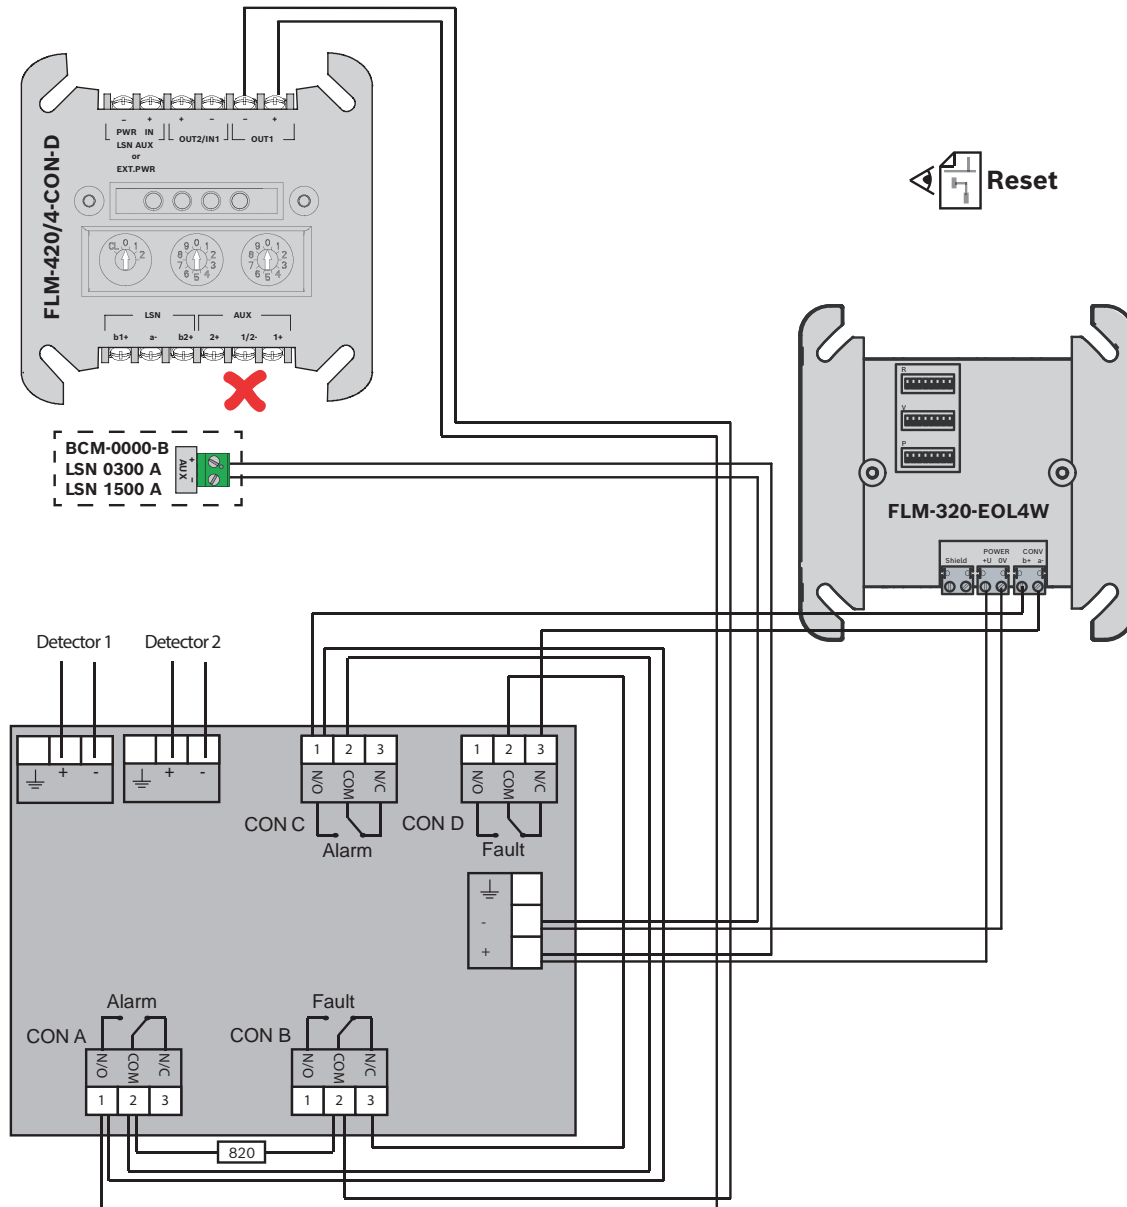




 
DC1192, SB3  
 OOH740-A9-Ex  
 DO1101A-Ex  
 DT1101A-Ex/DT1102A-Ex  
 DF1101-Ex  
 DM1103B-Ex



BCM-0000-B  
 LSN 0300 A  
 LSN 1500 A

BCM-0000-B  
 LSN 0300 A  
 LSN 1500 A

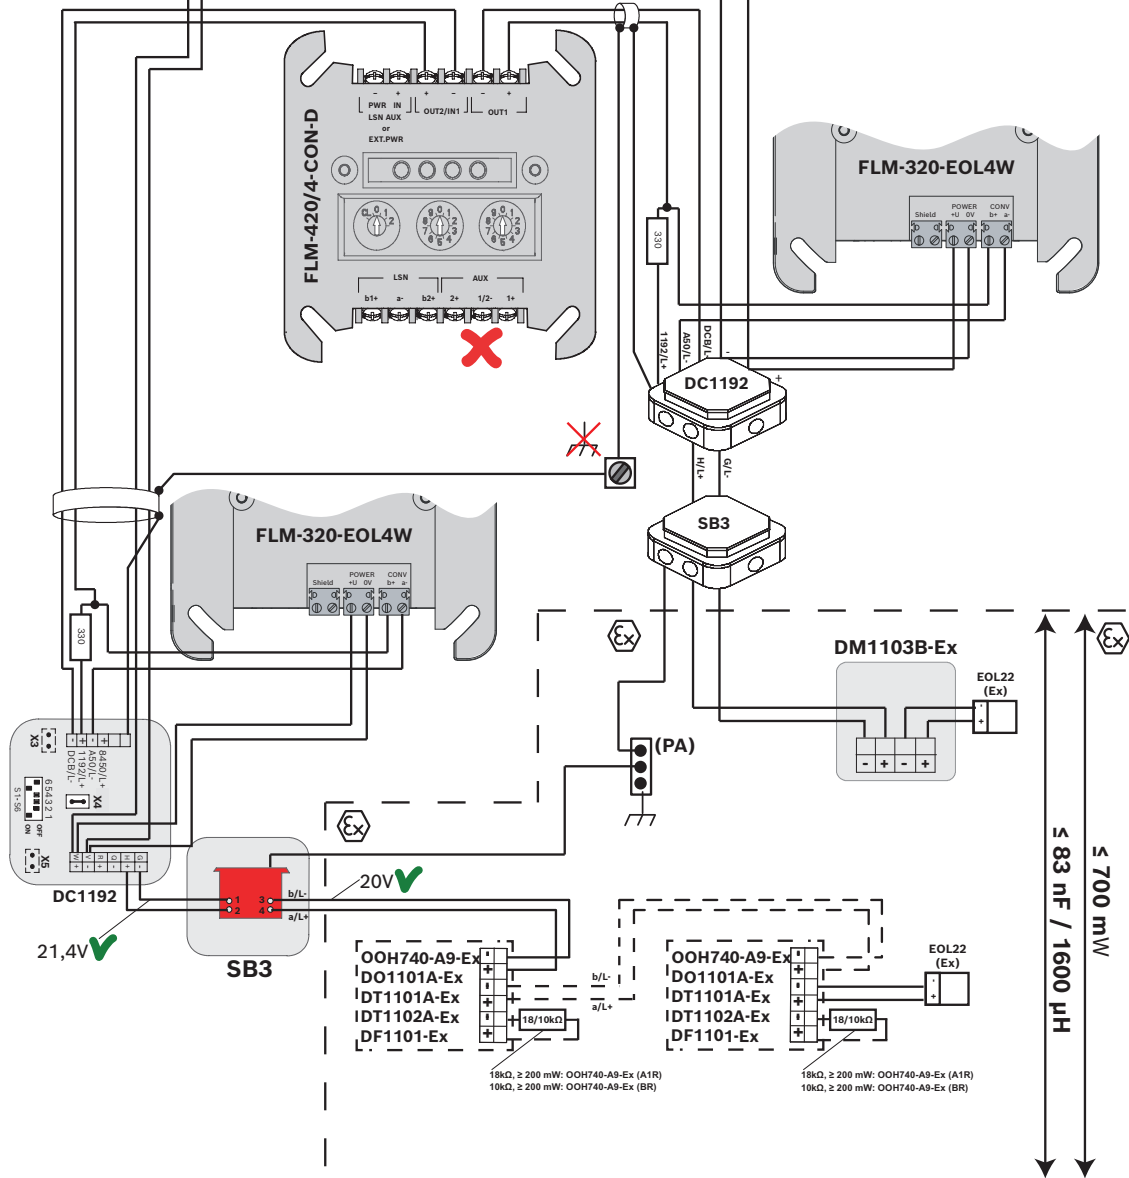


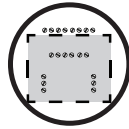

UniVario WMX5000  
 UniVario FMX5000  
 UniVario KMX5000



ELS

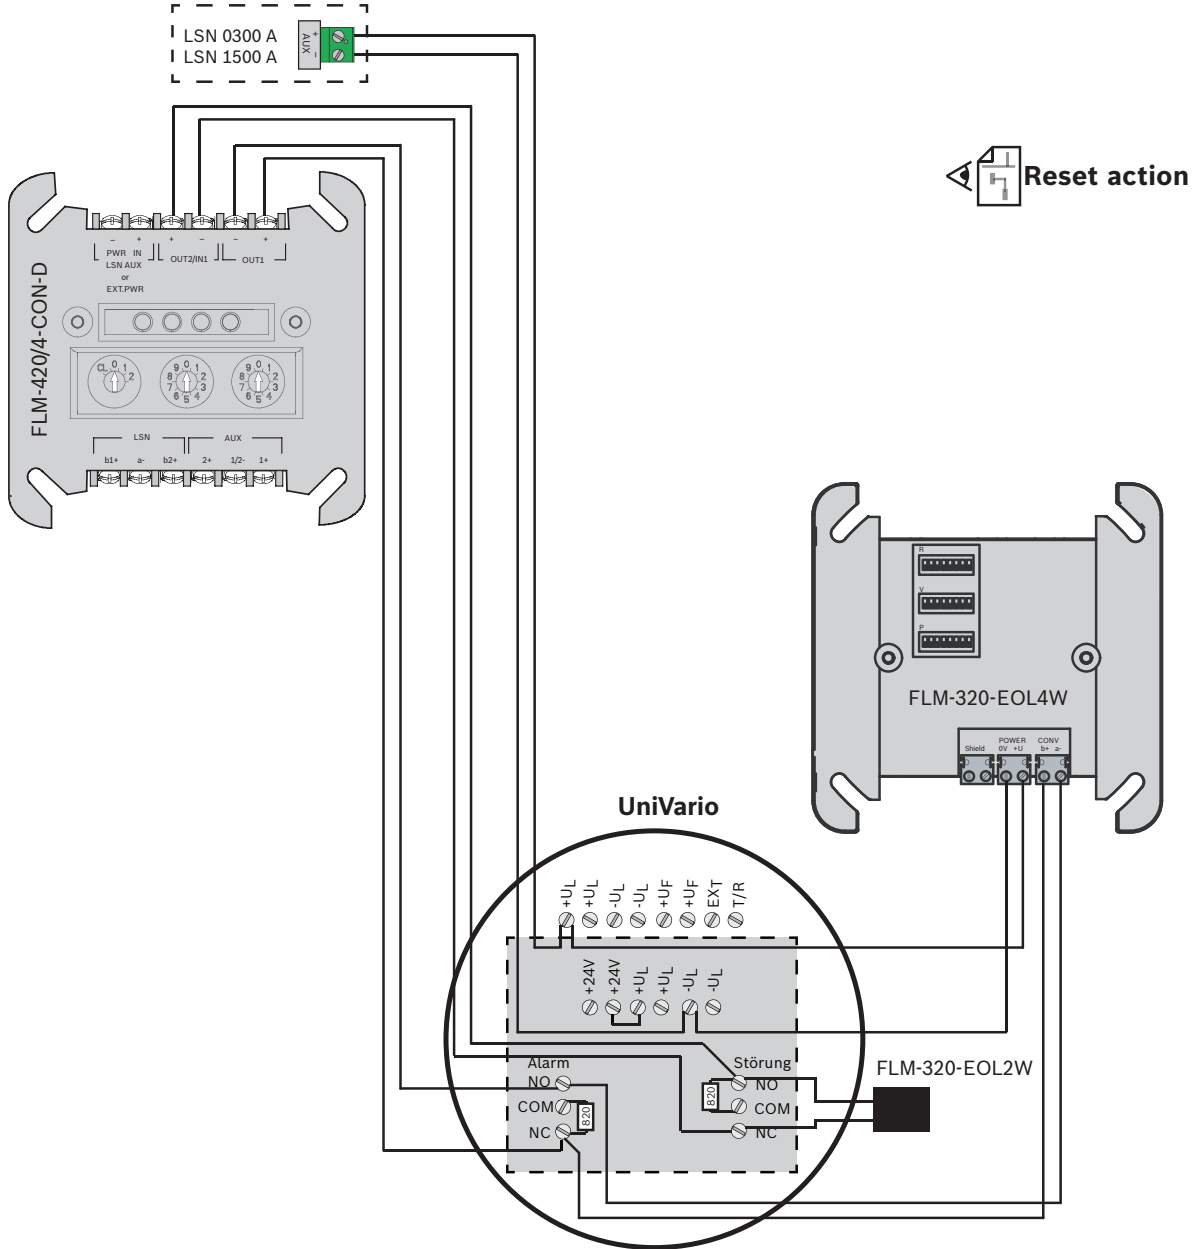



# Index

## Numerics

016519 ->	
CZM 0004 A	52, 53
FLM-420/4-CON-D	134, 135, 136, 137
FLM-420/4-CON-D (EOL)	263, 264
016589 ->	
CZM 0004 A	53
FCS-LWM-1	52
FLM-420/4-CON-D	134, 135, 136, 137
FLM-420/4-CON-D (EOL)	263, 264
2014/2 Ex ->	
FLM-420/4-CON-D	155
2014/2 GLU-Ex ->	
FLM-420/4-CON-D	155
837 ->	
FAA-MSR 420	17, 18
FLM-420-RHV	27, 28
838 ->	
FAA-MSR 420	17, 18
FLM-420-RHV	27, 28
858 ->	
FAA-MSR 420	17, 18
FLM-420-RHV	27, 28

## A

ADW 535-1 ->	
FLM-420/4-CON-D (EOL)	246
FLM-420-RHV	178, 179
ADW 535-2 ->	
FLM-420/4-CON-D (EOL)	247
FLM-420-RHV	180, 181
ALARMLINE II ->	
FLM-420/4-CON-D	125
FLM-420/4-CON-D (EOL)	248
ASD 532 ->	
FLM-420/4-CON-D (EOL)	251
FLM-420-RHV	176, 177
ASD 535-1 ->	
FLM-420/4-CON-D (EOL)	252
FLM-420-RHV	172, 173
ASD 535-2 ->	
FLM-420/4-CON-D (EOL)	253
FLM-420-RHV	174, 175
ASD 535-3 ->	
FLM-420-RHV	172, 173
ASD 535-4 ->	
FLM-420-RHV	174, 175
AT5000 IP/GPRS ->	
ENO 0000 A/B	61
ATB 420 LSNi ->	
LSN 0300 A	93
LSN 0300 A (EOL)	233, 234, 235, 236
ATG 420 LSNi ->	
LSN 0300 A	94
LSN 0300 A (EOL)	237, 238, 239, 240

## B

BCM-0000-B ->	
FPP-5000-TI	11
FPP-5000-TI13	12
BTS 80 ->	
FAA-MSR 420	19, 20
BTS 80 EMB ->	
FLM-420-RHV	29, 30
BTS 80 FLB ->	
FAA-MSR 420	19, 20
FLM-420-RHV	29, 30

<b>C</b>		<b>D</b>	
C31B ->		DC1192, SB3 ->	
LSN 0300 A	103, 104	FLM-420/4-CON-D	149, 150
CZM 0004 A		FLM-420/4-CON-D (EOL)	271
016519	52, 53	DF 1192	
016589	52, 53	FAA-420-RI-DIN	151
FCA-500	58	DF 1192 ->	
FCS-320-TM	54	FLM-420/4-CON-D	151
FCS-320-TP1	55	DF1101-A-EX ->	
FCS-320-TP2	56	FLM-420/4-CON-D	149, 150
FCS-LWM-1	57	FLM-420/4-CON-D (EOL)	271
Fireray 100RV	45	DIBT	
Fireray 50RV	45	837 -> FAA-MSR 420	17, 18
FIRERAY3000	46, 47, 48	837 -> FLM-420-RHV	27, 28
FIRERAY5000	49, 50, 51	838 -> FAA-MSR 420	17, 18
FMC-120	59	838 -> FLM-420-RHV	27, 28
FMC-300	60	858 -> FAA-MSR 420	17, 18
		858 -> FLM-420-RHV	27, 28
		BTS 80 EMB -> FAA-MSR 420	19, 20
		BTS 80 EMB -> FLM-420-RHV	29, 30
		BTS 80 FLB -> FAA-MSR 420	19, 20
		BTS 80 FLB -> FLM-420-RHV	29, 30
		ED 100 -> FAA-MSR-420	15, 16
		ED 100 -> FLM-420-RHV	25, 26
		ED 250 -> FAA-MSR-420	15, 16
		ED 250 -> FLM-420-RHV	25, 26
		GT 40 R -> FAA-MSR 420	17, 18
		GT 40 R -> FLM-420-RHV	27, 28
		GT 42 R -> FAA-MSR 420	17, 18
		GT 42 R -> FLM-420-RHV	27, 28
		GT 50 R -> FAA-MSR 420	17, 18
		GT 50 R -> FLM-420-RHV	27, 28
		GT 60 R -> FAA-MSR 420	17, 18
		GT 60 R -> FLM-420-RHV	27, 28
		GT 63 R -> FAA-MSR 420	17, 18
		GT 63 R -> FLM-420-RHV	27, 28
		GT 70 R -> FAA-MSR 420	17, 18
		GT 70 R -> FLM-420-RHV	27, 28
		GT 70 R 050.01 Ex -> FAA-MSR 420	17, 18
		GT 70 R 050.01 Ex -> FLM-420-RHV	27, 28
		Slimdrive EMD-F -> FAA-MSR-420	21, 22
		Slimdrive EMD-F -> FLM-420-RHV	31, 32
		Slimdrive EMD-F-IS -> FAA-MSR-420	21, 22
		Slimdrive EMD-F-IS -> FLM-420-RHV	31, 32
		TS 4000 E -> FAA-MSR-420	23, 24
		TS 4000 E -> FLM-420-RHV	33, 34
		TS 4000 EFS -> FAA-MSR-420	23, 24
		TS 4000 EFS -> FLM-420-RHV	33, 34
		TS 4000 E-IS -> FAA-MSR-420	23, 24

TS 4000 E-IS -> FLM-420-RHV	33, 34	EOL	201, 202, 203
TS 5000 E -> FAA-MSR-420	23, 24	016519 -> FLM-420/4-CON-D	263, 264
TS 5000 E -> FLM-420-RHV	33, 34	016519 ->:CZM 0004 A	189, 190
TS 5000 E-IS -> FAA-MSR-420	23, 24	016589 -> FLM-420/4-CON-D	263, 264
TS 5000 E-IS -> FLM-420-RHV	33, 34	016589 ->:CZM 0004 A	190
TS 5000 E-ISM -> FAA-MSR-420	23, 24	ADW 535-1 -> FLM-420/4-CON-D	246
TS 5000 E-ISM -> FLM-420-RHV	33, 34	ADW 535-2 -> FLM-420/4-CON-D	247
TS 550 E -> FAA-MSR-420	23, 24	ALARMLINE II -> FLM-420/4-CON-D	248
TS 550 E -> FLM-420-RHV	33, 34	ASD 532 -> FLM-420/4-CON-D	251
TS 73 EMF -> FAA-MSR 420	19, 20	ASD 535-1 -> FLM-420/4-CON-D	252
TS 73 EMF -> FLM-420-RHV	29, 30	ASD 535-2 -> FLM-420/4-CON-D	253
TS 93 EMF -> FAA-MSR 420	19, 20	ATB 420 LSNi -> LSN 0300 A	233, 234, 235, 236
TS 93 EMF -> FLM-420-RHV	29, 30	ATG 420 LSNi -> LSN 0300 A	237, 238, 239, 240
TS 93 GSR/EMF1 -> FAA-MSR 420	19, 20	CZM 0004 A: FCS-320-TM	192
TS 93 GSR/EMF1 -> FLM-420-RHV	29, 30	CZM 0004 A: FCS-320-TP1	193
TS 93 GSR/EMF2 -> FAA-MSR 420	19, 20	CZM 0004 A: FCS-320-TP2	194
TS 93 GSR/EMF2 -> FLM-420-RHV	29, 30	CZM 0004 A: FIRERAY3000	195, 196, 197
TSA 160 NT F -> FAA-MSR-420	23, 24	CZM 0004 A: FIRERAY5000	198
TSA 160 NT F -> FLM-420-RHV	33, 34	CZM 0004 A: FMC-120	199
TSA 160 NT F-IS -> FAA-MSR-420	23, 24	CZM 0004 A: FMC-300	200
TSA 160 NT F-IS -> FLM-420-RHV	33, 34	CZM 0004 A:016519	190
TSA 160 NT F-IS/TS -> FAA-MSR-420	23, 24	CZM 0004 A:016589	189, 190
TSA 160 NT F-IS/TS -> FLM-420-RHV	33, 34	CZM 0004 A:FCA-500-EU	191
TSZ 0400 -> FLM-420/4-CON-D	36	CZM 0004A:016519	189
TSZ 0400 -> FLM-420-I2-E/-W	37	CZM 0004A:016589	189
TSZ 0400 -> FLM-420-O1I1-E	38	DC1192, SB3 -> FLM-420/4-CON-D	271
DM 1103B-X ->		DF1101-A-EX -> FLM-420/4-CON-D	271
FLM-420/4-CON-D	149, 150	DM 1103B-X -> FLM-420/4-CON-D	271
FLM-420/4-CON-D (EOL)	271	DO1101-A-EX -> FLM-420/4-CON-D	271
DO1101-A-EX ->		FAA-500 -> LSN 0300 A	220
FLM-420/4-CON-D	149, 150	FAA-500-R -> LSN 0300 A	220
FLM-420/4-CON-D (EOL)	271	FAA-MSR 420 -> LSN 0300 A	221
<b>E</b>		FAP-425	257
ED 100 ->		FAP-425 -> LSN 0300 A	221, 222
FAA-MSR-420	15, 16	FAP-520 -> LSN 0300 A	220
FLM-420-RHV	25, 26	FAS-420 -> LSN 0300 A	223, 224
ED 250 ->		FAS-420-TM -> LSN 0300 A	225, 226, 227, 228
FAA-MSR-420	15, 16	FBF 100 LSN -> LSN 0300 A	229, 230, 231, 232
FLM-420-RHV	25, 26	FCA-500-EU -> FLM-420/4-CON-D	258
ELS VdS 2489	7, 68	FCA-500-EU ->:CZM 0004 A	191
ENO 0000 A		FCH-320	257
TF2F	63	FCH-320 -> LSN 0300 A	222
ENO 0000 A/B		FCP-320	257
AT5000 IP/GPRS	61	FCP-320 -> LSN 0300 A	222
GÜ 101-B	66, 67	FCS-320-TM -> FLM-420/4-CON-D	259
MDL-F	62	FCS-320-TM ->:CZM 0004 A	192
UE-F-D/T	65	FCS-320-TP1 -> FLM-420/4-CON-D	260
ENO 0000 B		FCS-320-TP1 ->:CZM 0004 A	193
TF2F	64	FCS-320-TP2 -> FLM-420/4-CON-D	261

FCS-320-TP2 ->:CZM 0004 A	194	WMX-5000 -> FLM-420/4-CON-D	272
FCS-LHD-2 -> FLM-420/4-CON-D	248	<b>F</b>	
FCS-LWM-1 -> FLM-420/4-CON-D	254	FAA-420-RI-DIN ->	
FireRay 50RV/100RV -> FLM-420/4-CON-D	265	DF 1192	151
FIRERAY3000 -> FLM-420/4-CON-D	266, 267, 268	FAA-500	89, 220
FIRERAY3000 ->:CZM 0004 A	195, 196, 197	FAA-MSR 420	90, 221
FIRERAY5000 -> FLM-420/4-CON-D	269, 270	FAA-MSR-420	39, 40, 41
FIRERAY5000 ->:CZM 0004 A	198	FAD-0420	82
FLM-420/4-CON -> LSN 0300 A	212, 213	FAP-425	91, 222, 257
FLM-420-I2-D -> LSN 0300 A	205	FCA-500	58, 128, 129
FLM-420-I2-E/-W -> LSN 0300 A	206	FCA-500-EU	258
FLM-420-I8R1-S -> LSN 0300 A	207	FCH-320	91, 154, 222, 257
FLM-420-NAC-D -> LSN 0300 A	214, 215	FCP-320	91, 154, 222, 257
FLM-420-O1I1-D -> LSN 0300 A	205	FCS-LWM-1	57, 126, 127
FLM-420-O1I1-E -> LSN 0300 A	208	FNM-420-A-BS	87, 218
FLM-420-O8I2-S -> LSN 0300 A	209	FNM-420U-A-BS	87, 218
FLM-420-RHV -> LSN 0300 A	205	MS 400/MS 400 B	91, 154, 222, 257
FLM-420-RLV1-D -> LSN 0300 A	205	FAA-420-RI-ROW ->	
FLM-420-RLV1-E -> LSN 0300 A	210	FAA-MSR-420	39
FLM-I 420-S -> LSN 0300 A	211	FAA-500	
FMC-120 ->:CZM 0004 A	199	FAA-420-RI-DIN	89, 220
FMC-120-DKM -> FLM-420/4-CON-D	255	FAA-500 ->	
FMC-120-EST -> FLM-420/4-CON-D	255	LSN 0300 A	89
FMC-210-... -> LSN 0300 A	216	LSN 0300 A (EOL)	220
FMC-300 -> FLM-420/4-CON-D	256	FAA-500-R ->	
FMC-300 ->:CZM 0004 A	200	LSN 0300 A (EOL)	220
FNM-420-A/-B -> LSN 0300 A	217	FAA-MSR 420	
FNM-420-A-BS -> LSN 0300 A	218, 219	FAA-420-RI-DIN	90, 221
FNM-420U-A/-B -> LSN 0300 A	217	FAA-MSR 420 ->	
FNM-420U-A-BS -> LSN 0300 A	218, 219	63 R	17, 18
FNM-420V-A -> LSN 0300 A	217	837	17, 18
FNX-425U-RFRD ->:LSN 0300 A	241, 242	838	17, 18
FNX-425U-RFWH ->:LSN 0300 A	241, 242	858	17, 18
FNX-425U-WFRD ->:LSN 0300 A	241, 242	GT 40 R	17, 18
FNX-425U-WFWH ->:LSN 0300 A	241, 242	GT 42 R	17, 18
FWI-270 -> LSN 0300 A	243, 244, 245	GT 50 R	17, 18
KMX-5000 -> FLM-420/4-CON-D	272	GT 60 R	17, 18
LSN 0300 A:FNX-425U-RFRD	241, 242	GT 70 R	17, 18
LSN 0300 A:FNX-425U-RFWH	241, 242	GT 70 R 050.01 Ex	17, 18
LSN 0300 A:FNX-425U-WFRD	241, 242	LSN 0300 A	90
LSN 0300 A:FNX-425U-WFWH	241, 242	LSN 0300 A (EOL)	221
MS 400/MS 400 B -> FLM-420/4-CON-D	257	FAA-MSR 420 -> BTS 80 EMB	19, 20
MS 400/MS 400 B -> LSN 0300 A	222	FAA-MSR 420 -> BTS 80 FLB	19, 20
N4387A -> FLM-420/4-CON-D	262	FAA-MSR 420 -> TS 73 EMF	19, 20
OSID -> FLM-420/4-CON-D	250	FAA-MSR 420 -> TS 93 EMF	19, 20
Reset action	204	FAA-MSR 420 -> TS 93 GSR/EMF1	19, 20
thefirebeam -> FLM-420/4-CON-D	249		
Typ K -> FLM-420/4-CON-D	271		
UniVario -> FLM-420/4-CON-D	272		

FAA-MSR 420 -> TS 93 GSR/EMF2	19, 20	FCA-500-EU ->	
FAA-MSR-420		FLM-420/4-CON-D	128, 129
ED 100	15, 16	FLM-420/4-CON-D (EOL)	258
ED 250	15, 16	FCH-320	
FAA-420-RI-DIN	39, 40, 41	FAA-420-RI-DIN	91, 154, 222, 257
FAA-420-RI-ROW	39	FCH-320 ->	
Slimdrive EMD-F	21, 22	FLM-420/4-CON-D	154
Slimdrive EMD-F-IS	21, 22	FLM-420/4-CON-D (EOL)	257
TS 4000 E	23, 24	LSN 0300 A	91
TS 4000 EFS	23, 24	LSN 0300 A (EOL)	222
TS 4000 E-IS	23, 24	FCP-320	
TS 5000 E	23, 24	FAA-420-RI-DIN	91, 154, 222, 257
TS 5000 E-IS	23, 24	FCP-320 ->	
TS 5000 E-ISM	23, 24	FLM-420/4-CON-D	154
TS 550 E	23, 24	FLM-420/4-CON-D (EOL)	257
TSA 160 NT F	23, 24	LSN 0300 A	91
TSA 160 NT F-IS	23, 24	LSN 0300 A (EOL)	222
TSA 160 NT F-IS/TS	23, 24	FCP-500 ->	
FAD-0420		FLM-420/4-CON-D	128, 129
FAA-420-RI-DIN	82	FCS-320-TM ->	
FAD-420-HS-EN ->		CZM 0004 A	54
LSN 0300 A	82, 83	FCS-LWM-1	54
FAP-425		FLM-420/4-CON-D	130
FAA-420-RI-DIN	91, 222, 257	FLM-420/4-CON-D (EOL)	259
FAP-425 ->		FCS-320-TP1 ->	
FLM-420/4-CON-D	154	CZM 0004 A	55
FLM-420/4-CON-D (EOL)	257	FLM-420/4-CON-D	131, 133
LSN 0300 A	91	FLM-420/4-CON-D (EOL)	260
LSN 0300 A (EOL)	221, 222	FCS-320-TP2 ->	
FAP-520 ->		FLM-420/4-CON-D	132
LSN 0300 A	89	FLM-420/4-CON-D (EOL)	261
LSN 0300 A (EOL)	220	FCS-320-TP2->	
FAS-420 ->		CZM 0004 A	56
LSN 0300 A	84	FCS-LHD-2 ->	
LSN 0300 A (EOL)	223, 224	FLM-420/4-CON-D	125
FAS-420-TM ->		FLM-420/4-CON-D (EOL)	248
LSN 0300 A	85	FCS-LHD-2EN ->	
LSN 0300 A (EOL)	225, 226, 227, 228	FLM-420-I8R1-S	158, 159
FAT2002RE ->		FCS-LWM-1	
FPE-5000-UGM	123	FAA-420-RI-DIN	57, 126, 127
FBF 100 LSN ->		FCS-LWM-1 ->	
LSN 0300 A	96	CZM 0004 A	57
LSN 0300 A (EOL)	229, 230, 231, 232	FLM-420/4-CON-D	126, 127
FCA-500		FLM-420/4-CON-D (EOL)	254
FAA-420-RI-DIN	58, 128, 129	Fireray 100 RV ->	
FCA-500 ->		CZM 0004 A	45
CZM 0004 A	58	FLM-420/4-CON-D	138, 144
FCA-500-EU		Fireray 50 RV ->	
FAA-420-RI-DIN	258	CZM 0004 A	45

FLM-420/4-CON-D	138, 144	FCS-320-TP1 (EOL)	260
Fireray 50RV/100RV ->		FCS-320-TP2	132
FLM-420/4-CON-D (EOL)	265	FCS-320-TP2 (EOL)	261
FIRERAY3000 ->		FCS-LHD-2	125
CZM 0004 A	46, 47, 48	FCS-LHD-2 (EOL)	248
FLM-420/4-CON-D	139, 140, 141, 145, 146	FCS-LWM-1	126, 127
FLM-420/4-CON-D (EOL)	266, 267, 268	FCS-LWM-1 (EOL)	254
FIRERAY5000 ->		Fireray 100 RV	138, 144
CZM 0004 A	49, 50, 51	Fireray 50 RV	138, 144
FLM-420/4-CON-D	142, 143, 147, 148	Fireray 50RV/100RV (EOL)	265
FLM-420/4-CON-D (EOL)	269, 270	FIRERAY3000	139, 140, 141, 145, 146
FLM-420/4-CON ->		FIRERAY3000 (EOL)	266, 267, 268
LSN 0300 A	95	FIRERAY5000	142, 143, 147, 148
LSN 0300 A (EOL)	212, 213	FIRERAY5000 (EOL)	269, 270
FLM-420/4-CON-D		FMC-120-DKM	156
016519	134, 135, 136, 137	FMC-120-DKM (EOL)	255
016519 (EOL)	263, 264	FMC-120-EST (EOL)	255
016589	134, 135, 136, 137	FMC-300	152
016589 (EOL)	263, 264	FMC-300 (EOL)	256
2014/2 Ex	155	KMX-5000 (EOL)	272
2014/2 GLU-Ex	155	MS 400/MS 400 B	154
ADW 535-1 (EOL)	246	MS 400/MS 400 B (EOL)	257
ADW 535-2 (EOL)	247	N4387A	153
ALARMLINE II	125	N4387A (EOL)	262
ALARMLINE II (EOL)	248	NO-Relay	157
ASD 532 (EOL)	251	OSID (EOL)	250
ASD 535-1 (EOL)	252	thefirebeam (EOL)	249
ASD 535-2 (EOL)	253	TSZ 0400	36
DC1192, SB3	149, 150	Typ K (EOL)	271
DC1192, SB3 (EOL)	271	UniVario (EOL)	272
DF 1192	151	WMX-5000 (EOL)	272
DF1101-A-EX	149, 150	FLM-420-I2-D ->	
DF1101-A-EX (EOL)	271	FPP-3000	13
DM 1103B-X	149, 150	LSN 0300 A	69
DM 1103B-X (EOL)	271	LSN 0300 A (EOL)	205
DO1101-A-EX	149, 150	FLM-420-I2-E ->	
DO1101-A-EX (EOL)	271	FPP-3000	13
FAP-425	154	FLM-420-I2-E/-W	
FAP-425 (EOL)	257	TSZ 0400	37
FCA-500-EU	128, 129	FLM-420-I2-E/-W ->	
FCA-500-EU (EOL)	258	LSN 0300 A	70
FCH-320	154	LSN 0300 A (EOL)	206
FCH-320 (EOL)	257	FLM-420-I2-W ->	
FCP-320	154	FPP-3000	13
FCP-320 (EOL)	257	FLM-420-I8R1-S	
FCP-500	128, 129	FCS-LHD-2EN	158, 159
FCS-320-TM	130	FLM-420-I8R1-S ->	
FCS-320-TM (EOL)	259	FPP-3000	13
FCS-320-TP1	131, 133	LSN 0300 A	71

LSN 0300 A (EOL)	207	TS 5000 E	33, 34
FLM-420-NAC-D		TS 5000 E-IS	33, 34
FNM-320	170, 171	TS 5000 E-ISM	33, 34
FNS-320	168, 169	TS 550 E	33, 34
FPP-5000	43	TS 73 EMF	29, 30
PA 10	162, 163	TS 93 EMF	29, 30
PA 5	160, 161	TS 93 GSR/EMF1	29, 30
PB 2005	166, 167	TS 93 GSR/EMF2	29, 30
PY X-M-10-SSM R	164, 165	TSA 160 NT F	33, 34
PY X-M-10-SSM W	164, 165	TSA 160 NT F-IS	33, 34
ROLP-R-LX	170, 171	TSA 160 NT F-IS/TS	33, 34
ROLP-W-LX	170, 171	FLM-420-RHV ->	
SOL-LX	168, 169	63 R	27, 28
FLM-420-NAC-D ->		837	27, 28
FPP-3000	14	838	27, 28
FPP-5000	44	858	27, 28
LSN 0300 A	74, 75	GT 40 R	27, 28
LSN 0300 A (EOL)	214, 215	GT 42 R	27, 28
LSN 300 A, BCM 0000 B	76	GT 50 R	27, 28
FLM-420-O1I1-D ->		GT 60 R	27, 28
LSN 0300 A	78, 79	GT 70 R	27, 28
LSN 0300 A (EOL)	205	GT 70 R 050.01 Ex	27, 28
FLM-420-O1I1-E		LSN 0300 A	69
TSZ 0400	38	LSN 0300 A (EOL)	205
FLM-420-O1I1-E ->		FLM-420-RLE-S	
LSN 0300 A	80	LA	184
LSN 0300 A (EOL)	208	FLM-420-RLE-S ->	
FLM-420-O8I2-S ->		LSN 0300 A	77
FPP-3000	13	FLM-420-RLV1-D ->	
LSN 0300 A	72, 73	LSN 0300 A	69
LSN 0300 A (EOL)	209	LSN 0300 A (EOL)	205
FLM-420-RHV		FLM-420-RLV1-E	
ADW 535-1	178, 179	Plena	185
ADW 535-2	180, 181	FLM-420-RLV1-E ->	
ASD 532	176, 177	LSN 0300 A	70
ASD 535-1	172, 173	LSN 0300 A (EOL)	210
ASD 535-2	174, 175	FLM-420-RLV8-S	
ASD 535-3	172, 173	Plena	186
ASD 535-4	174, 175	FLM-420-RLV8-S ->	
BTS EMB	29, 30	LSN 0300 A	81
BTS FLB	29, 30	FLM-I 420-S ->	
ED 100	25, 26	LSN 0300 A	69
ED 250	25, 26	LSN 0300 A (EOL)	211
FRAY-ONE-EN	182, 183	FMC-120->	
Slimdrive EMD-F	31, 32	CZM 0004 A	59
Slimdrive EMD-F-IS	31, 32	FMC-120-DKM ->	
TS 4000 E	33, 34	FLM-420/4-CON-D	156
TS 4000 EFS	33, 34	FLM-420/4-CON-D (EOL)	255
TS 4000 E-IS	33, 34	FMC-120-EST ->	

FLM-420/4-CON-D (EOL)	255	FMF-FBF-FAT ->FMF-ADP-FBF	187
FMC-210-... ->		FMF-FIBS ->	
LSN 0300 A	100	FPE-5000-UGM	122, 123
LSN 0300 A (EOL)	216	IOS 0020 A	121
FMC-210-IP66-R ->		FNM-320 ->	
LSN 0300 A	101	FLM-420-NAC-D	170, 171
FMC-300 ->		NZM 0002 A	114, 115
FLM-420/4-CON-D	152	FNM-420-A/-B ->	
FLM-420/4-CON-D (EOL)	256	LSN 0300 A	86
FMC-300->		LSN 0300 A (EOL)	217
CZM 0004 A	60	FNM-420-A-BS	
FMC-420RW ->		FAA-420-RI-DIN	87, 218
LSN 0300 A	102	FNM-420-A-BS ->	
FMF-ADP ->		LSN 0300 A	87, 88
FPE-5000-UGM	122, 123	LSN 0300 A (EOL)	218, 219
IOS 0020 A	121	FNM-420U-A/-B ->	
FMF-ADP-FAT		LSN 0300 A	86
FMF-FAT	187	LSN 0300 A (EOL)	217
FMF-FBF-FAT	187	FNM-420U-A-BS	
FMF-FAT ->		FAA-420-RI-DIN	87, 218
FPE-5000-UGM	122	FNM-420U-A-BS ->	
IOS 0020 A	121	LSN 0300 A	87, 88
FMF-FAT ->FMF-ADP-FBF	187	LSN 0300 A (EOL)	218, 219
FMF-FBF-FAT ->		FNM-420V-A ->	
FPE-5000-UGM	122, 123	LSN 0300 A	86
IOS 0020 A	121	LSN 0300 A (EOL)	217
		FNS-320 ->	
		FLM-420-NAC-D	168, 169
		NZM 0002 A	111, 112, 113
		FNS-P400RTH ->	
		RMH 0002 A	119
		FNX-425U-RFRD ->	
		LSN 0300 A	98, 99
		LSN 0300 A (EOL)	241, 242
		FNX-425U-RFWH ->	
		LSN 0300 A	98, 99
		LSN 0300 A (EOL)	241, 242
		FNX-425U-WFRD ->	
		LSN 0300 A	98, 99
		LSN 0300 A (EOL)	241, 242
		FNX-425U-WFWH ->	
		LSN 0300 A	98, 99
		LSN 0300 A (EOL)	241, 242
		FPE-5000-UGM	
		FAT2002RE	123
		FMF-ADP	122, 123
		FMF-FAT	122
		FMF-FBF-FAT	122, 123
		FMF-FIBS	122, 123



FPP-3000			
FLM-420-I2-D	13		
FLM-420-I2-E	13		
FLM-420-I2-W	13		
FLM-420-I8R1-S	13		
FLM-420-NAC-D	14		
FLM-420-O8I2-S	13		
FPP-5000			
FLM-420-NAC-D	44		
FPP-5000 ->			
FLM-420-NAC-D	43		
FPP-5000-TI			
BCM-0000-B	11		
FPP-5000-TI13			
BCM-0000-B	12		
FRAY-ONE-EN ->			
FLM-420-RHV	182, 183		
FWI-270 ->			
LSN 0300 A	105		
LSN 0300 A (EOL)	243, 244, 245		
<b>G</b>			
GSME-L3 ->			
LSN 0300 A	92		
GT 40 R ->			
FAA-MSR 420	17, 18		
FLM-420-RHV	27, 28		
GT 42 R ->			
FAA-MSR 420	17, 18		
FLM-420-RHV	27, 28		
GT 50 R ->			
FAA-MSR 420	17, 18		
FLM-420-RHV	27, 28		
GT 60 R ->			
FAA-MSR 420	17, 18		
FLM-420-RHV	27, 28		
GT 63 R ->			
FAA-MSR 420	17, 18		
FLM-420-RHV	27, 28		
GT 70 R ->			
FAA-MSR 420	17, 18		
FLM-420-RHV	27, 28		
GT 70 R 050.01 Ex ->			
FAA-MSR 420	17, 18		
FLM-420-RHV	27, 28		
GÜ 101-B ->			
ENO 0000 A/B	66, 67		
<b>I</b>			
IOS 0020 A			
FMF-ADP		121	
FMF-FAT		121	
FMF-FBF-FAT		121	
FMF-FIBS		121	
Plena		120	
<b>K</b>			
KMX-5000 ->			
FLM-420/4-CON-D (EOL)		272	

<b>L</b>			
LA ->			
FLM-420-RLE-S	184	FLM-420-RLV1-D	69
LSN 0300 A (FLM-420-RLE-S)	97	FLM-420-RLV1-D (EOL)	205
LSN 0300 A		FLM-420-RLV1-E	70
ATB 420 LSNi	93	FLM-420-RLV1-E (EOL)	210
ATB 420 LSNi (EOL)	233, 234, 235, 236	FLM-420-RLV8-S	81
ATG 420 LSNi	94	FLM-I 420-S	69
ATG 420 LSNi (EOL)	237, 238, 239, 240	FLM-I 420-S (EOL)	211
C31B	103, 104	FMC-210-...	100
FAA-500	89	FMC-210-... (EOL)	216
FAA-500 (EOL)	220	FMC-210-IP66-R	101
FAA-500-R (EOL)	220	FMC-420RW	102
FAA-MSR 420	90	FNM-420-A/-B	86
FAA-MSR 420 (EOL)	221	FNM-420-A/-B (EOL)	217
FAD-420-HS-EN	82, 83	FNM-420-A-BS	87, 88
FAP-425	91	FNM-420-A-BS (EOL)	218, 219
FAP-425 (EOL)	221, 222	FNM-420U-A/-B	86
FAP-520	89	FNM-420U-A/-B (EOL)	217
FAP-520 (EOL)	220	FNM-420U-A-BS	87, 88
FAS-420	84	FNM-420U-A-BS (EOL)	218, 219
FAS-420 (EOL)	223, 224	FNM-420V-A	86
FAS-420-TM	85	FNM-420V-A (EOL)	217
FAS-420-TM (EOL)	225, 226, 227, 228	FNX-425U-RFRD	98, 99
FBF 100 LSN	96	FNX-425U-RFRD (EOL)	241, 242
FBF 100 LSN (EOL)	229, 230, 231, 232	FNX-425U-RFWH	98, 99
FCH-320	91	FNX-425U-RFWH (EOL)	241, 242
FCH-320 (EOL)	222	FNX-425U-WFRD	98, 99
FCP-320	91	FNX-425U-WFRD (EOL)	241, 242
FCP-320 (EOL)	222	FNX-425U-WFWH	98, 99
FLM-420/4-CON	95	FNX-425U-WFWH (EOL)	241, 242
FLM-420/4-CON (EOL)	212, 213	FWI-270	105
FLM-420-I2-D	69	FWI-270 (EOL)	243, 244, 245
FLM-420-I2-D (EOL)	205	GSME-L3	92
FLM-420-I2-E/-W	70	LA (FLM-420-RLE-S)	97
FLM-420-I2-E/-W (EOL)	206	MS 400/MS 400 B	91
FLM-420-I8R1-S	71	MS 400/MS 400 B (EOL)	222
FLM-420-I8R1-S (EOL)	207		
FLM-420-NAC-D	74, 75	<b>M</b>	
FLM-420-NAC-D (EOL)	214, 215	MDL-F ->	
FLM-420-O1I1-D	78, 79	ENO 0000 A/B	62
FLM-420-O1I1-D (EOL)	205	MS 400	
FLM-420-O1I1-E	80	TSZ 0400 (FCP-O320 / FCH-T320 FSA)	35
FLM-420-O1I1-E (EOL)	208	MS 400/MS 400 B	
FLM-420-O8I2-S	72, 73	FAA-420-RI-DIN	91, 154, 222, 257
FLM-420-O8I2-S (EOL)	209	MS 400/MS 400 B ->	
FLM-420-RHV	69	FLM-420/4-CON-D	154
FLM-420-RHV (EOL)	205	FLM-420/4-CON-D (EOL)	257
FLM-420-RLE-S	77	LSN 0300 A	91
		LSN 0300 A (EOL)	222

**N**

N4387A ->	
FLM-420/4-CON-D	153
FLM-420/4-CON-D (EOL)	262
NO-Relay ->	
FLM-420/4-CON-D	157
NZM 0002 A	
FNM-320	114, 115
FNS-320	111, 112, 113
NZM 0002 A	110
PA 10	108, 109
PA 5	106, 107
PB 2005	116, 117, 118
ROLP-W-LX	114, 115
SOL-LX	111, 112, 113
NZM 0002 A ->	
NZM 0002 A	110

**O**

OSID ->	
FLM-420/4-CON-D (EOL)	250

**P**

PA 10 ->	
FLM-420-NAC-D	162, 163
NZM 0002 A	108, 109
PA 5 ->	
FLM-420-NAC-D	160, 161
NZM 0002 A	106, 107
PB 2005 ->	
FLM-420-NAC-D	166, 167
NZM 0002 A	116, 117, 118
Plena ->	
FLM-420-RLV1-E	185
FLM-420-RLV8-S	186
IOS 0020 A	120
PY X-M-10-SSM R ->	
FLM-420-NAC-D	164, 165
PY X-M-10-SSM W ->	
FLM-420-NAC-D	164, 165

**R**

Redundancy	
ENO	67
LSN 0300 A	97
NZM 0002 A	110
Panel controller	97

Reset action	204
RMH 0002 A	
FNS-P400RTH	119
ROLP-R-LX ->	
FLM-420-NAC-D	170, 171
ROLP-W-LX ->	
FLM-420-NAC-D	170, 171
NZM 0002 A	114, 115

**S**

Slimdrive EMD-F ->	
FAA-MSR-420	21, 22
FLM-420-RHV	31, 32
Slimdrive EMD-F-IS ->	
FAA-MSR-420	21, 22
FLM-420-RHV	31, 32
SOL-LX ->	
FLM-420-NAC-D	168, 169
NZM 0002 A	111, 112, 113

<b>T</b>			
TF2F ->			
ENO 0000 A	63		
ENO 0000 B	64		
thefirebeam ->			
FLM-420/4-CON-D (EOL)	249		
TS 4000 E ->			
FAA-MSR-420	23, 24		
FLM-420-RHV	33, 34		
TS 4000 EFS ->			
FAA-MSR-420	23, 24		
FLM-420-RHV	33, 34		
TS 4000 E-IS ->			
FAA-MSR-420	23		
FLM-420-RHV	33, 34		
TS 4000 E-IS->			
FAA-MSR-420	24		
TS 5000 E ->			
FAA-MSR-420	23, 24		
FLM-420-RHV	33, 34		
TS 5000 E-IS ->			
FAA-MSR-420	23, 24		
FLM-420-RHV	33, 34		
TS 5000 E-ISM ->			
FAA-MSR-420	23, 24		
FLM-420-RHV	33, 34		
TS 550 E ->			
FAA-MSR-420	23, 24		
FLM-420-RHV	33, 34		
TS 73 EMF ->			
FAA-MSR 420	19, 20		
FLM-420-RHV	29, 30		
TS 93 EMF ->			
FAA-MSR 420	19, 20		
FLM-420-RHV	29, 30		
TS 93 GSR/EMF1 ->			
FAA-MSR 420	19, 20		
FLM-420-RHV	29, 30		
TS 93 GSR/EMF2 ->			
FAA-MSR 420	19, 20		
FLM-420-RHV	29, 30		
TSA 160 NT F ->			
FAA-MSR-420	23, 24		
FLM-420-RHV	33, 34		
TSA 160 NT F-IS ->			
FAA-MSR-420	23, 24		
FLM-420-RHV	33, 34		
TSA 160 NT F-IS/TS ->			
FAA-MSR-420	23, 24		
		FLM-420-RHV	33, 34
		TSZ 0400 ->	
		FLM-420/4-CON-D	36
		FLM-420-I2-E/-W	37
		FLM-420-O1I1-E	38
		MS 400 (FCP-O320 / FCH-T320 FSA)	35
		Typ K ->	
		FLM-420/4-CON-D (EOL)	271
		<b>U</b>	
		UE-F-D/T ->	
		ENO 0000 A/B	65
		UniVario ->	
		FLM-420/4-CON-D (EOL)	272
		<b>W</b>	
		WMX-5000 ->	
		FLM-420/4-CON-D (EOL)	272







**Bosch Sicherheitssysteme GmbH**

Robert-Bosch-Ring 5

85630 Grasbrunn

Germany

**[www.boschsecurity.com](http://www.boschsecurity.com)**

© Bosch Sicherheitssysteme GmbH, 2023

**Building solutions for a better life.**

202307120834